

 
COOKING APPLIANCES

COOKING LINES

TYPE: CT

Accessories
WITHOUT ACCESSORY

Spare parts manual

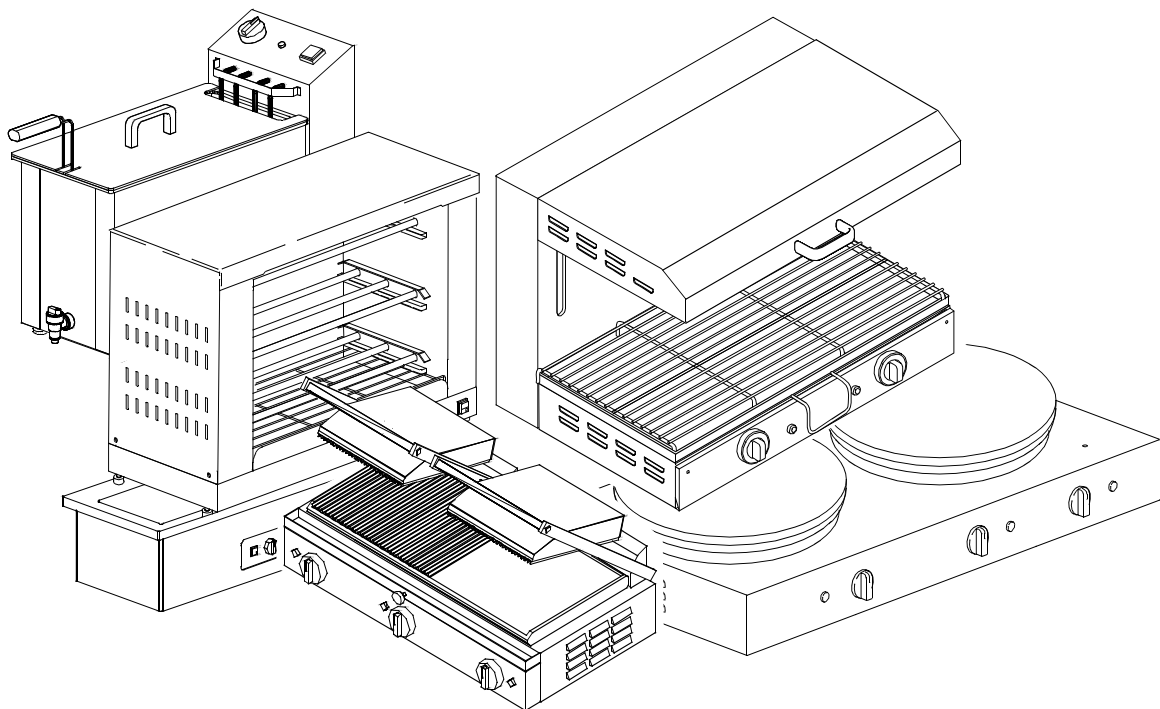

S/N:

Valid from:..10/2003

Rev.: 3.0

1. Spare parts


Toaster F6	7
Toaster F60	9
Toaster F12	11
Toaster F120	13
Crepe-X1	15
Crepe-X2	17
Single grill	19
Double grill.....	21
Salamander S1	23
Salamander S2.....	25
Bain Marie BM100-200-300	27
5M-6M/T-8T deep-fryer	29
5+5M-6+6M/T-8+8T deep-fryer	31

1.1 Voltage codes

Voltage code	Voltage
A	3/N/PE~400/230V 50Hz
B	~250V 16A 50Hz
C	3/N/PE~380/220V 50Hz
D	3/PE~200V 50-60Hz
F	2/PE 220-240V 50Hz
G	3/N/PE~415/240V 50Hz
H	3/PE~230V 50Hz
I	3/PE~220V 60Hz
J	3/PE~380 50Hz
K	3/PE~400V 50Hz
L	3/PE~415V 50Hz
M	3/PE~440V 60Hz
N	3/PE~460V 60Hz
O	3/PE~480V 60Hz
P	1/N/PE~220-240V 50Hz
R	2/PE~220-230V 60Hz
S	3/N/PE~400/230V 50Hz
T	3/PE~230V 60Hz

1.2 Product codes

Product code	Full name
Model codes	
Type codes	
50U	50U
50D	50D
50	50
52S	52S
52D	52D
52	52
53S	53S
53D	53D
53	53
54F	54F
54R	54R
54	54
55	55
59	59
CT	CT
BW	BW
Accessory codes	
wa	WITHOUT ACCESSORY

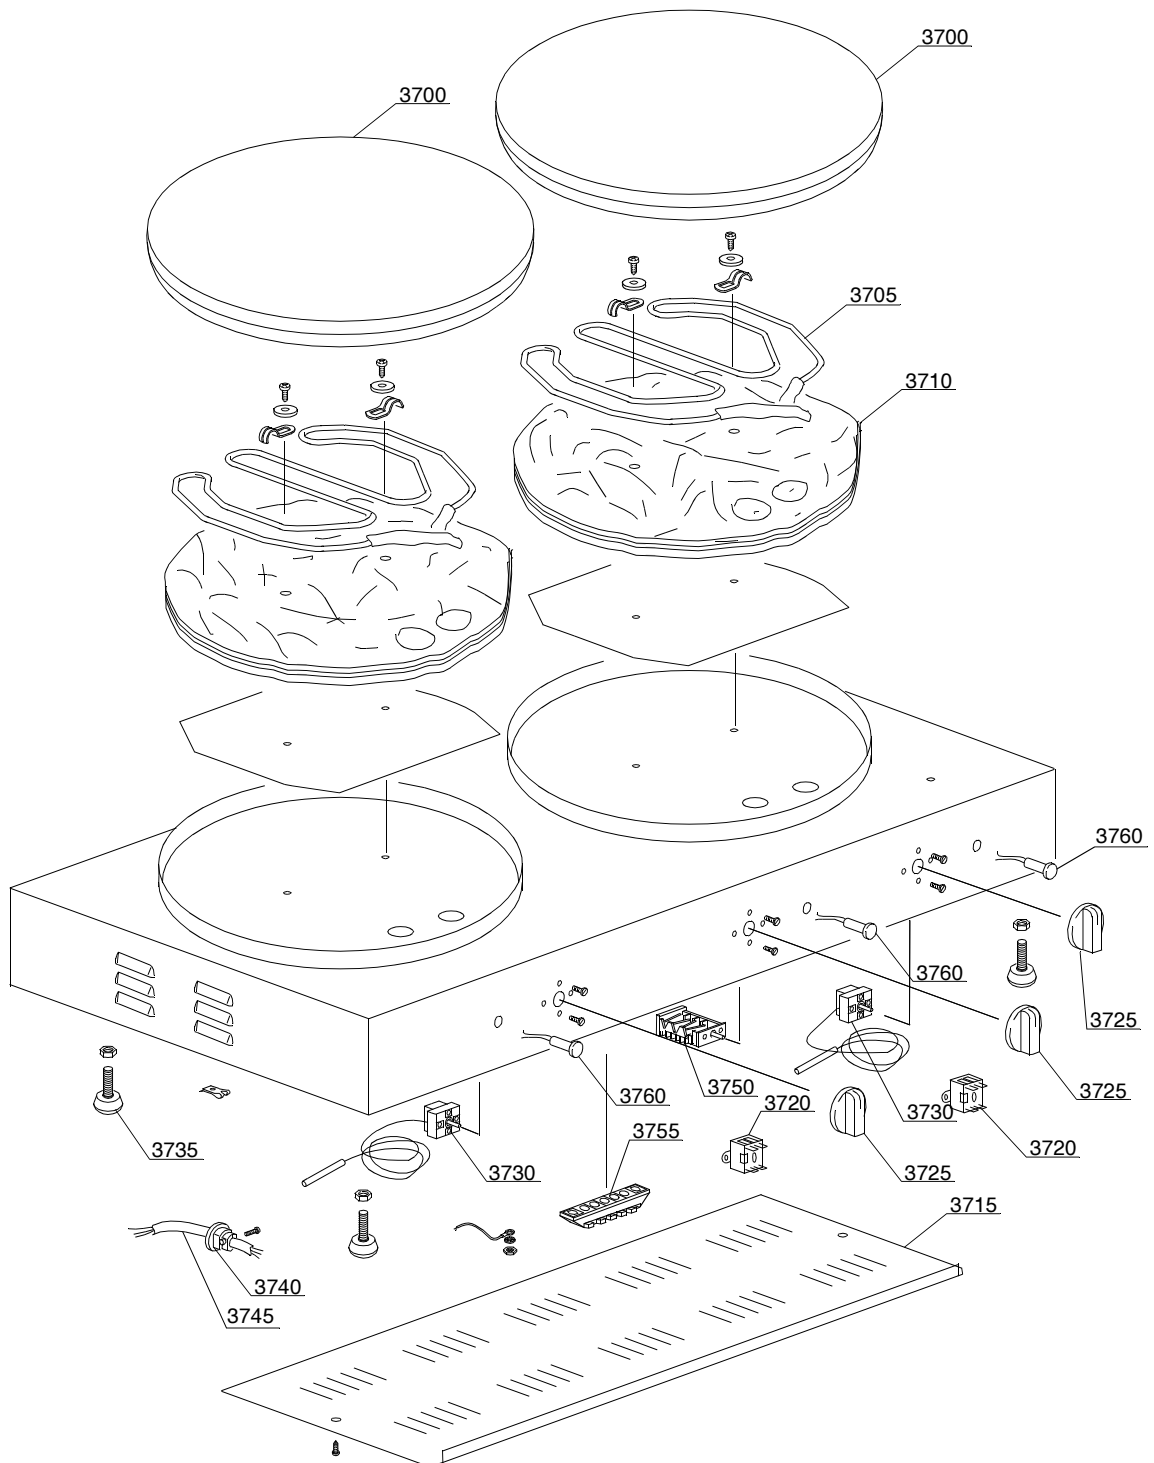 

01_016_e

Spare parts

ID	P-code	Model	Type	Accessory	Voltage	Description
MODULE:Crepe-X2						
3700	6005		BW,CT,52,52D			Polished plate
3705	6006		BW,CT,52,52D			Electrical heating element
3710	6007		BW,CT,52,52D			Insulating thermal panel
3715	6009		BW,CT,52,52D			Bottom protection
3720	6011		BW,CT,52,52D			Safety thermostat
3725	8029		BW,CT,52,52D			Timer knob
3730	9010		BW,CT,52,52D			Plate thermostat
3735	9024		BW,CT,52,52D			Plate small foot
3740	9035		BW,CT,52,52D			Plate cable-fastener
3745	9540		BW,CT,52,52D			Power supply cable
3750	9564		BW,CT,52,52D			Plate switch
3755	500550		BW,CT,52,52D			3 poles terminal board
3760	10711/B		BW,CT,52,52D			Pilot light