



## Snackgeräte Salamander

Artikel-Nr. 221021 (NES4000DG)


---

### Explosionszeichnung / Ersatzteile

---

Bitte bei Ersatzteilbestellung immer Artikelnummer und Seriennummer mit angeben!

# NES 4000 DG

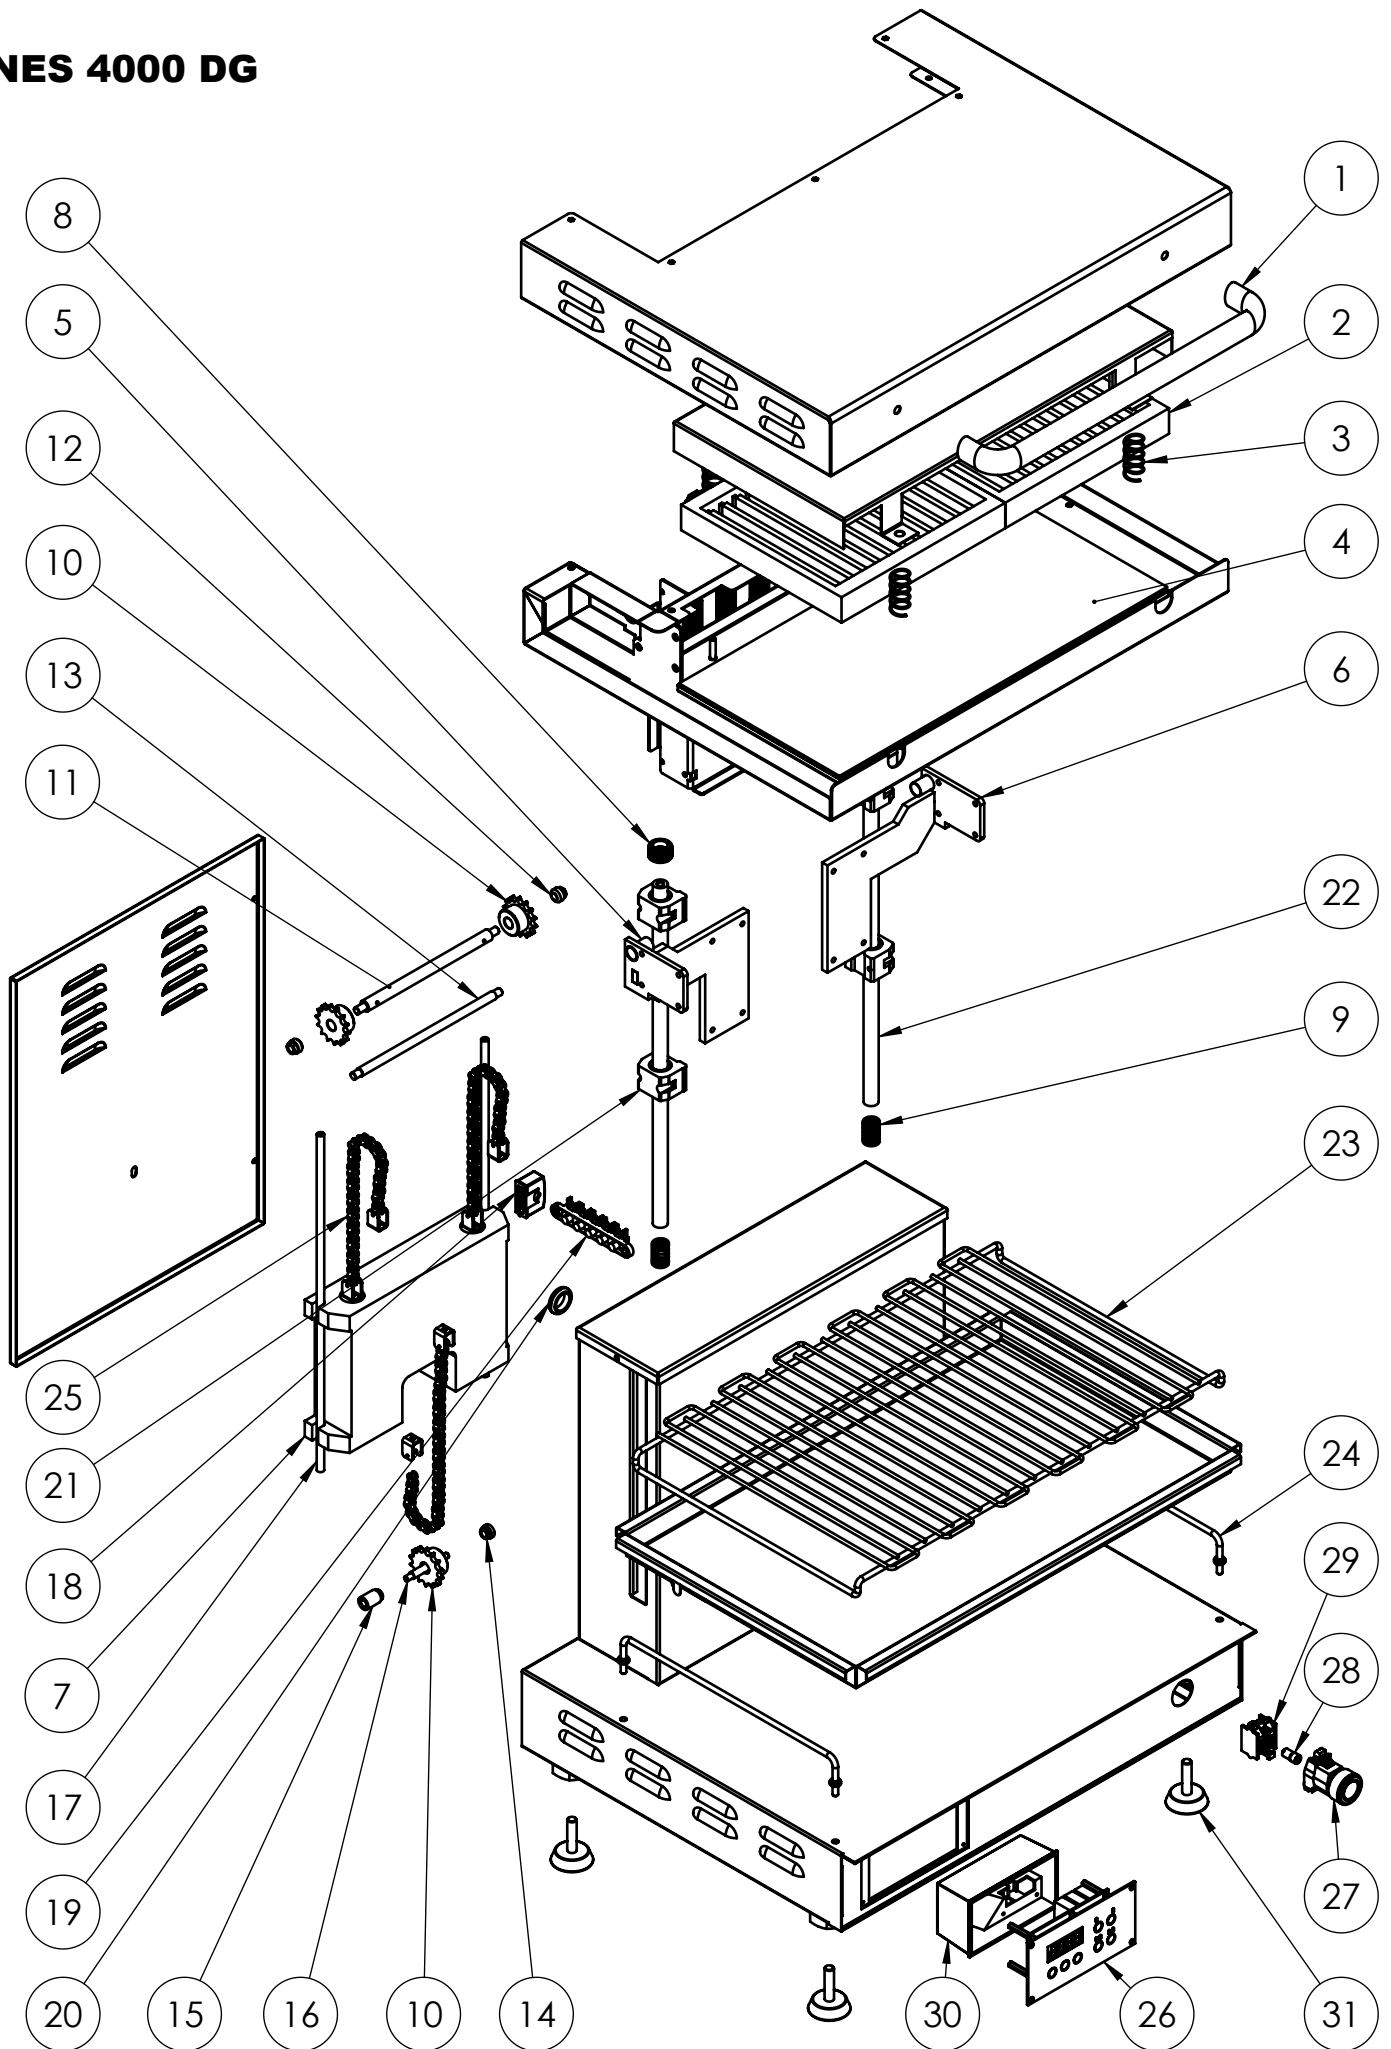

## NES 4000 DG

NO	PART CODE	DESCRIPTION
1	PD.4769B1	PF Oven Handle
2	PD.2454C	Infra Red Heater 2 x1.8 kW/230 V
3	GS.1456	Tension Spring f/NGK (Per Tekan)
4	PD.2460A	Transparent glass ceramic 490x240x4mm
5	PD.4861	Main Arm (Left)
6	PD.4860	Main Arm (Right)
7	PD.J108L	Balancer Block
8	PD.J108B	Top Bumper
9	PD.J108C	Spring
10	PD.J108DA	Sprocket
11	PD.J108EA	Hanging Shaft
12	PD.J108F	Bush
13	PD.J108G	Fix Shaft
14	PD.J108HA	Bottom Bush
15	PD.J108HB	Bottom Bush
16	PD.J108IA	Bottom Shaft
17	PD.J108J	Guide Shaft
18	PD.407K	Klem f/ Power Cable
19	PD.409B	Terminal Power 5Pole
20	PD.407D	Cable Gromet D 25.4 mm
21	PD.0024E	Ball Bearing with Housing for NES 4000
22	PD.0024F	Shaft for NES 4000
23	PD.5082A	Wire Tray
24	PD.5082B	Tray Railing
25	PD.5058	Sprocket Chain type RS 35 L=10"
26	PD.410H	Electric Controller for Salamander
27	PD.410N	Illuminated pushbutton actuator
28	PD.410P	Single LED green
29	PD.410Q	Snap Action switching element
30	PD.1307	Case for Slamander
31	PD.2456	Adjustable Feet with Zinc-Plated Screw