


E3R v... Hz

<ul style="list-style-type: none"> — INCREASE THE VOLTAGE — REDUCER LA TENSION — PLUS GIVE VOLTAGE — DIE SPANNUNG MITTELN 	<ul style="list-style-type: none"> — INDICARE LA FREQUENZA — INDICUER LA FREQUANCE — PLUS GIVE FREQUENCY — DIE FREQUENZ MITTELEN
---	--

COMPONENTI ELETTROVALVOLE
COMPONENTS OF SOLENOID VALVES

COMPOSANTS DES ELECTROVALVES
BESTANDTEILE DER MAGNETVENTILE

TAB. N° 11-1

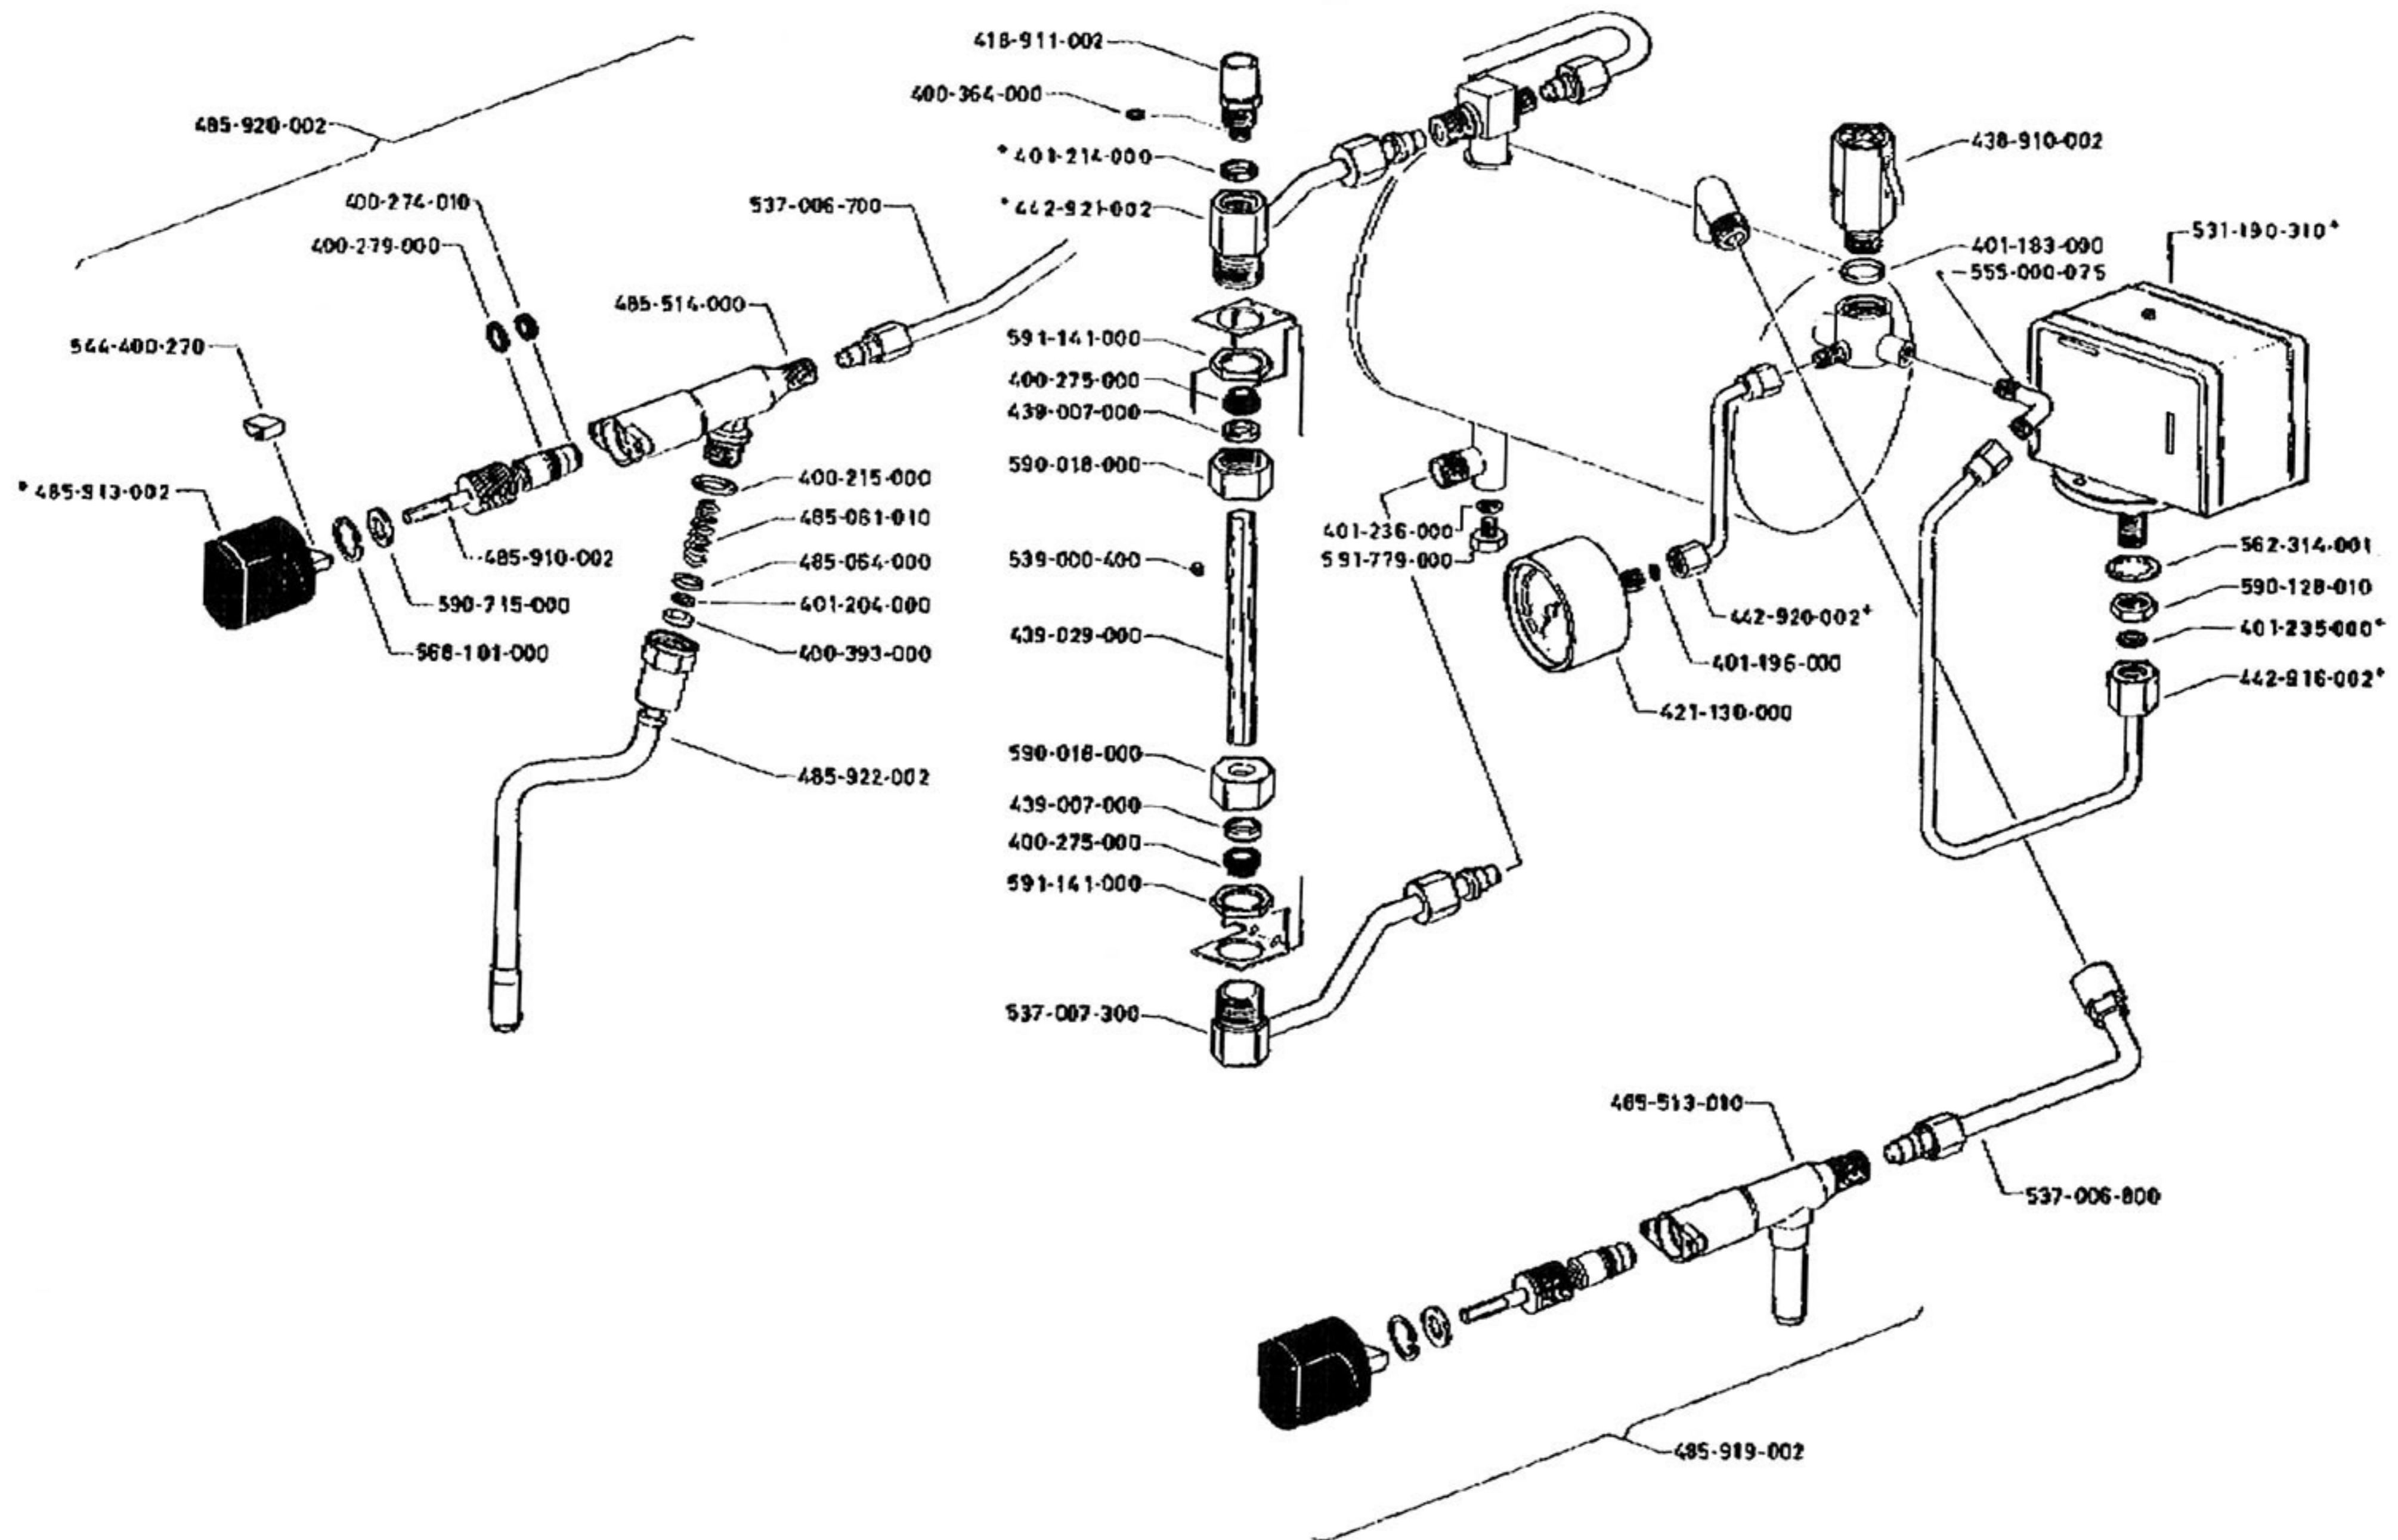

E2Rv...

- INDICARE IL VOLTAGGIO
- INDICHER LA TENSION
- PLUS OUVRE VOLTAGE
- DIE STROMSPANNUNG MITTEILEN




Hz...

- INDICARE LA FREQUENZA
- INDICHER LA FREQUENCE
- PLUS OUVRE FREQUENCY
- DIE FREQUENZ MITTEILEN


COMPONENTI ELETTROVALVOLE
COMPONENTS OF SOLENOID VALVES

COMPOSANTS DES ELECTROVANNES
BESTANDTEILE DER MAGNETVENTILE

TAB. N° 11-1

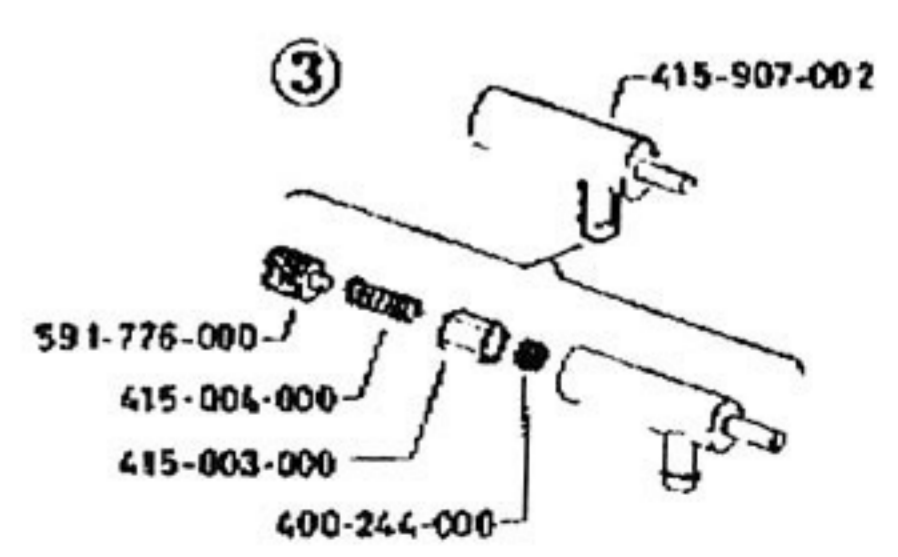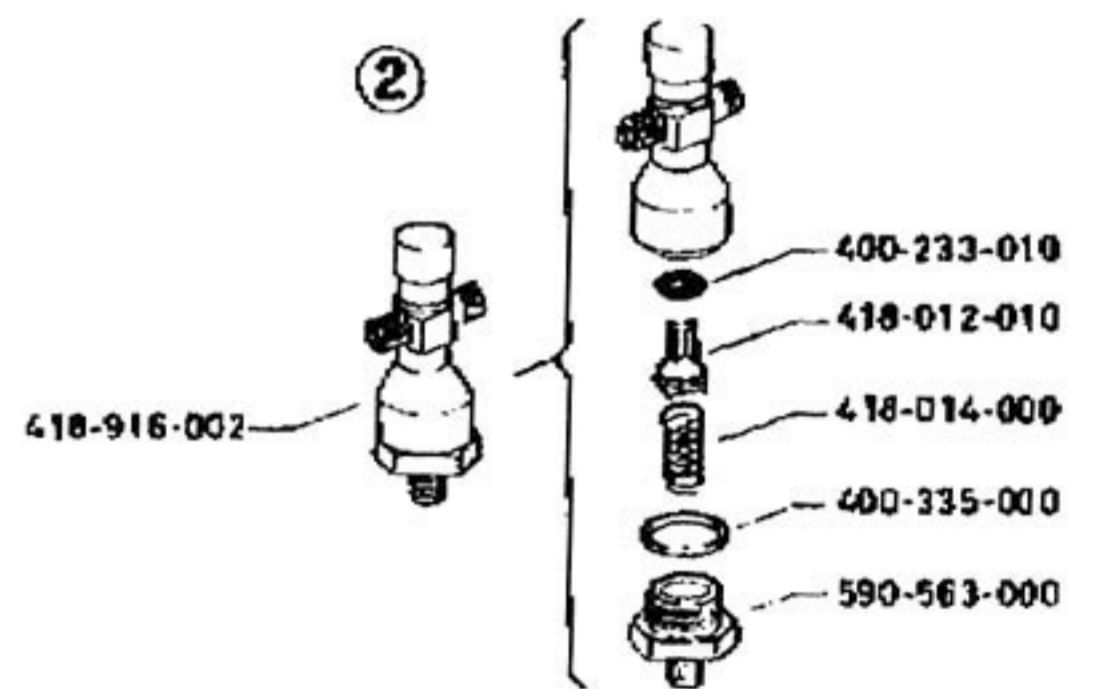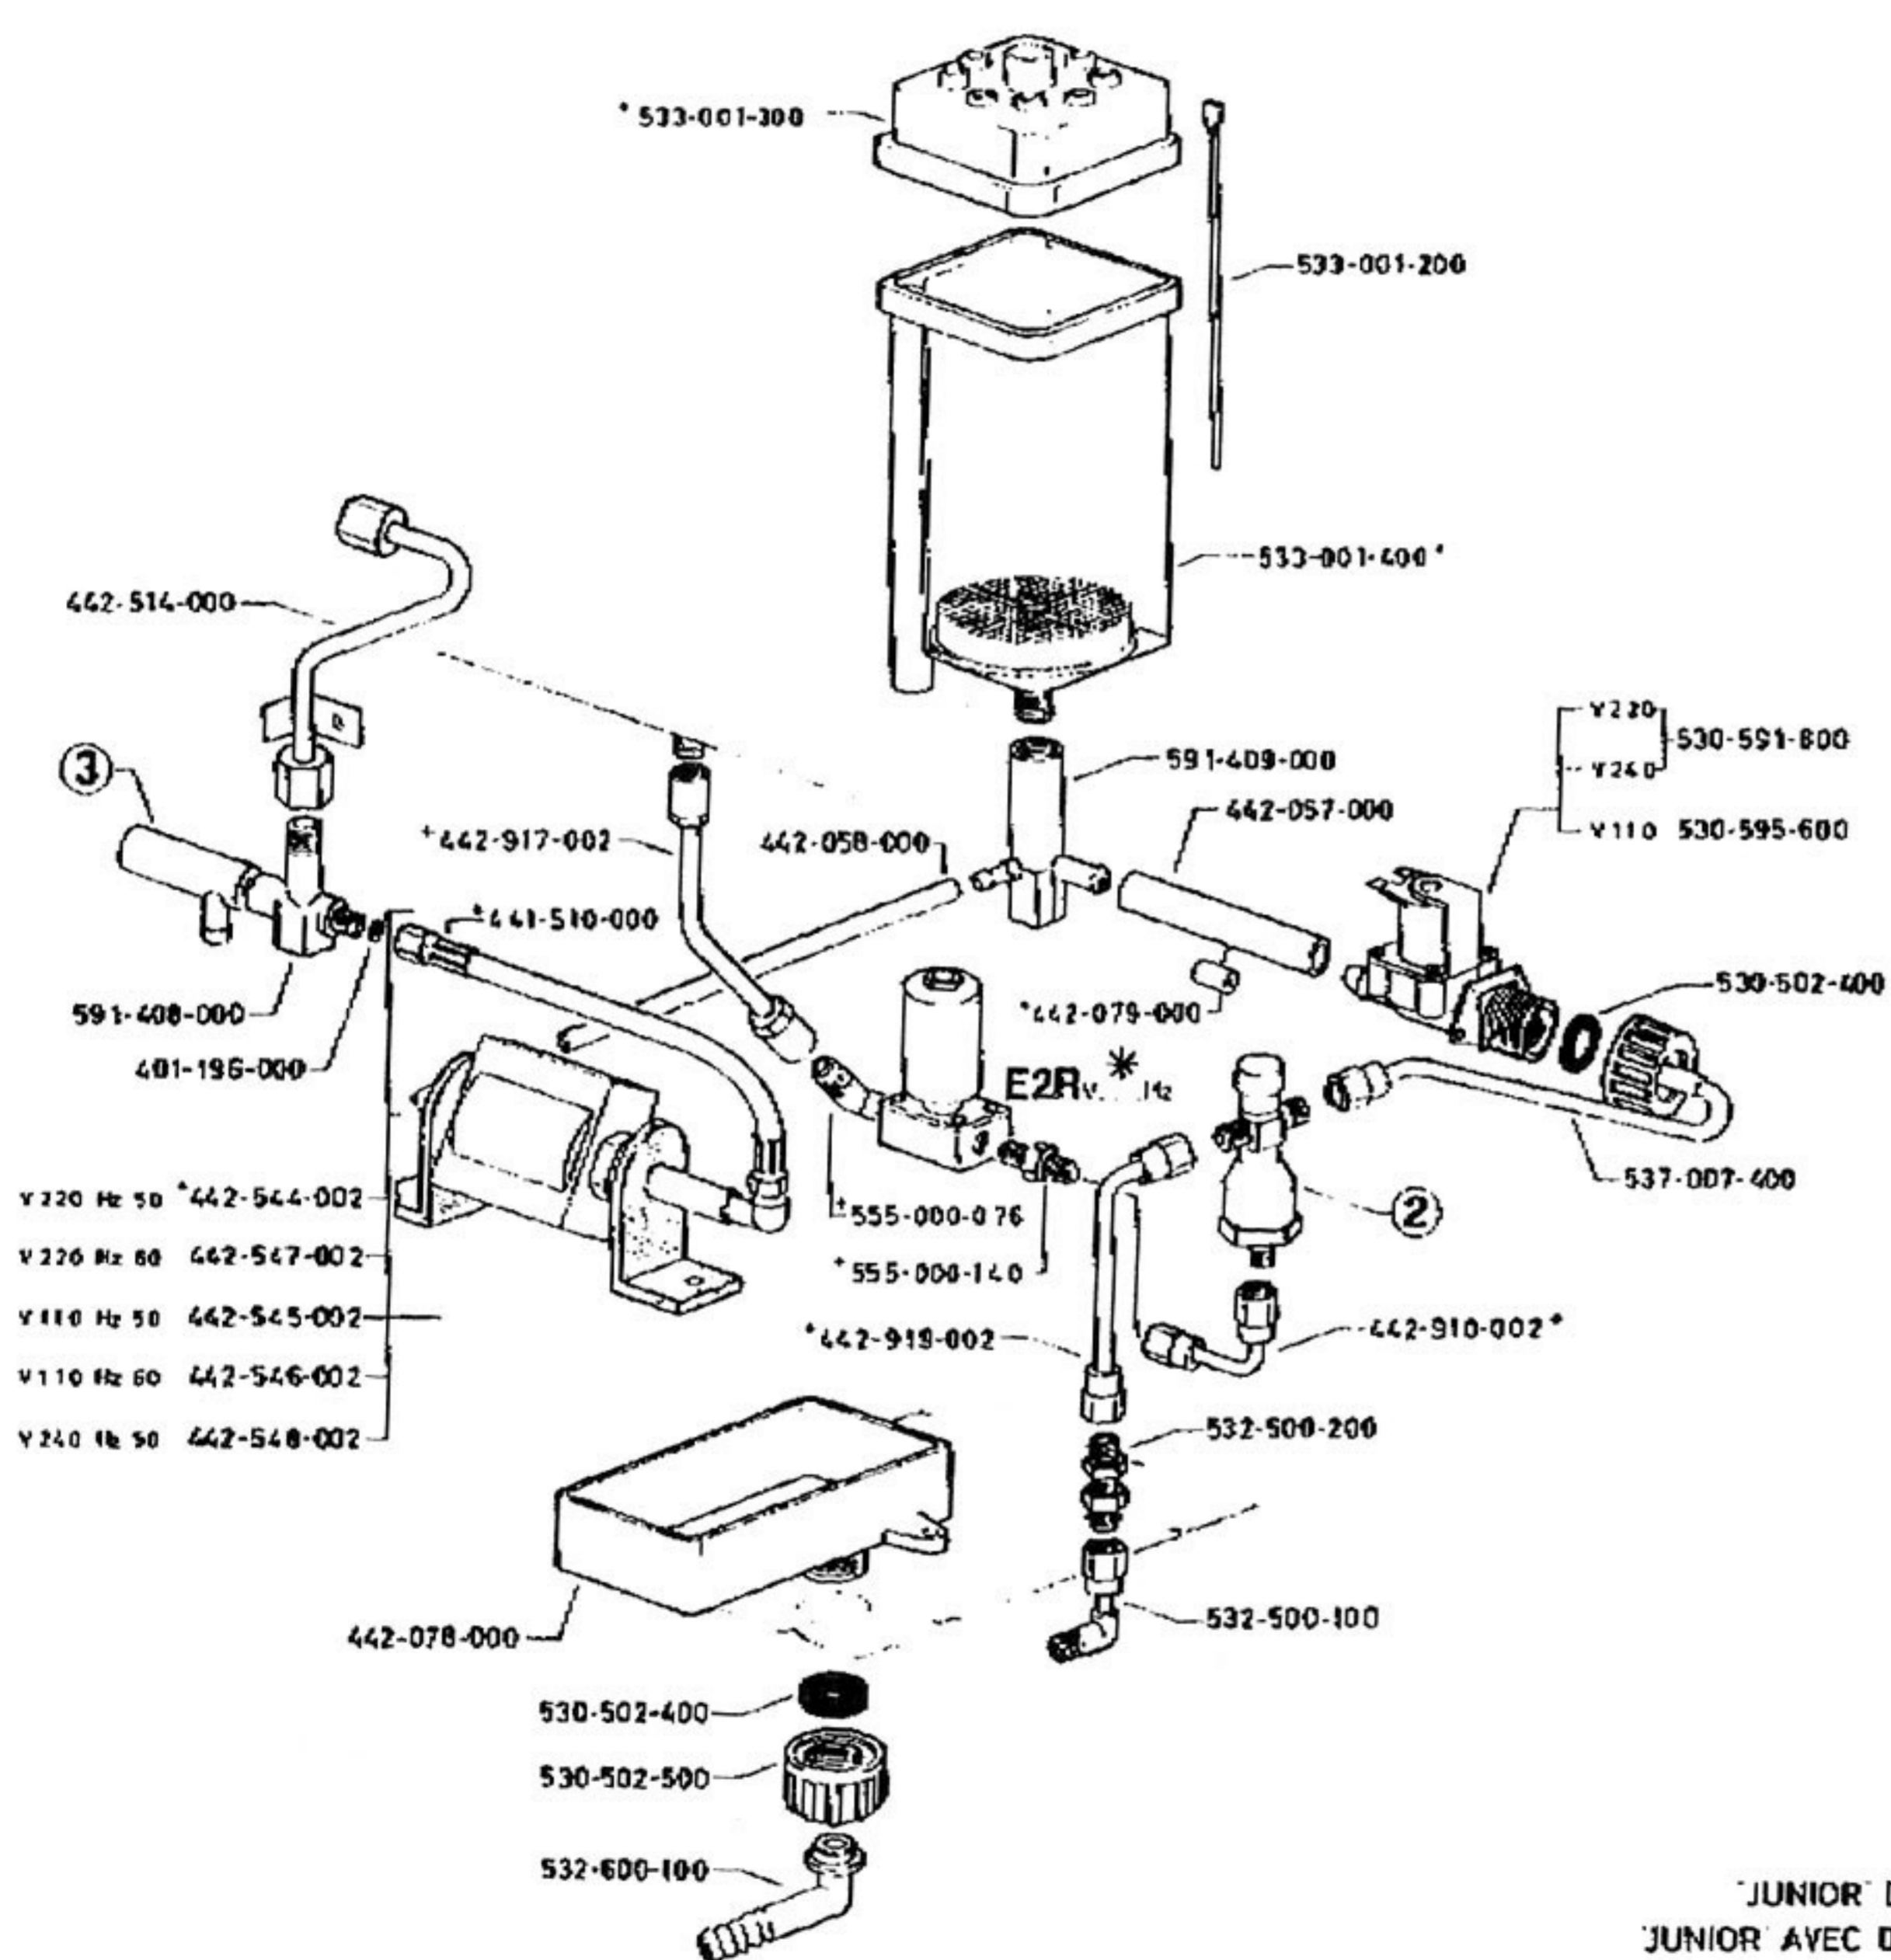


'JUNIOR' DOSATA
'JUNIOR' AVEC DOSEUR
'JUNIOR' WITH DOSING-DEVICE
'JUNIOR' DOSIERT

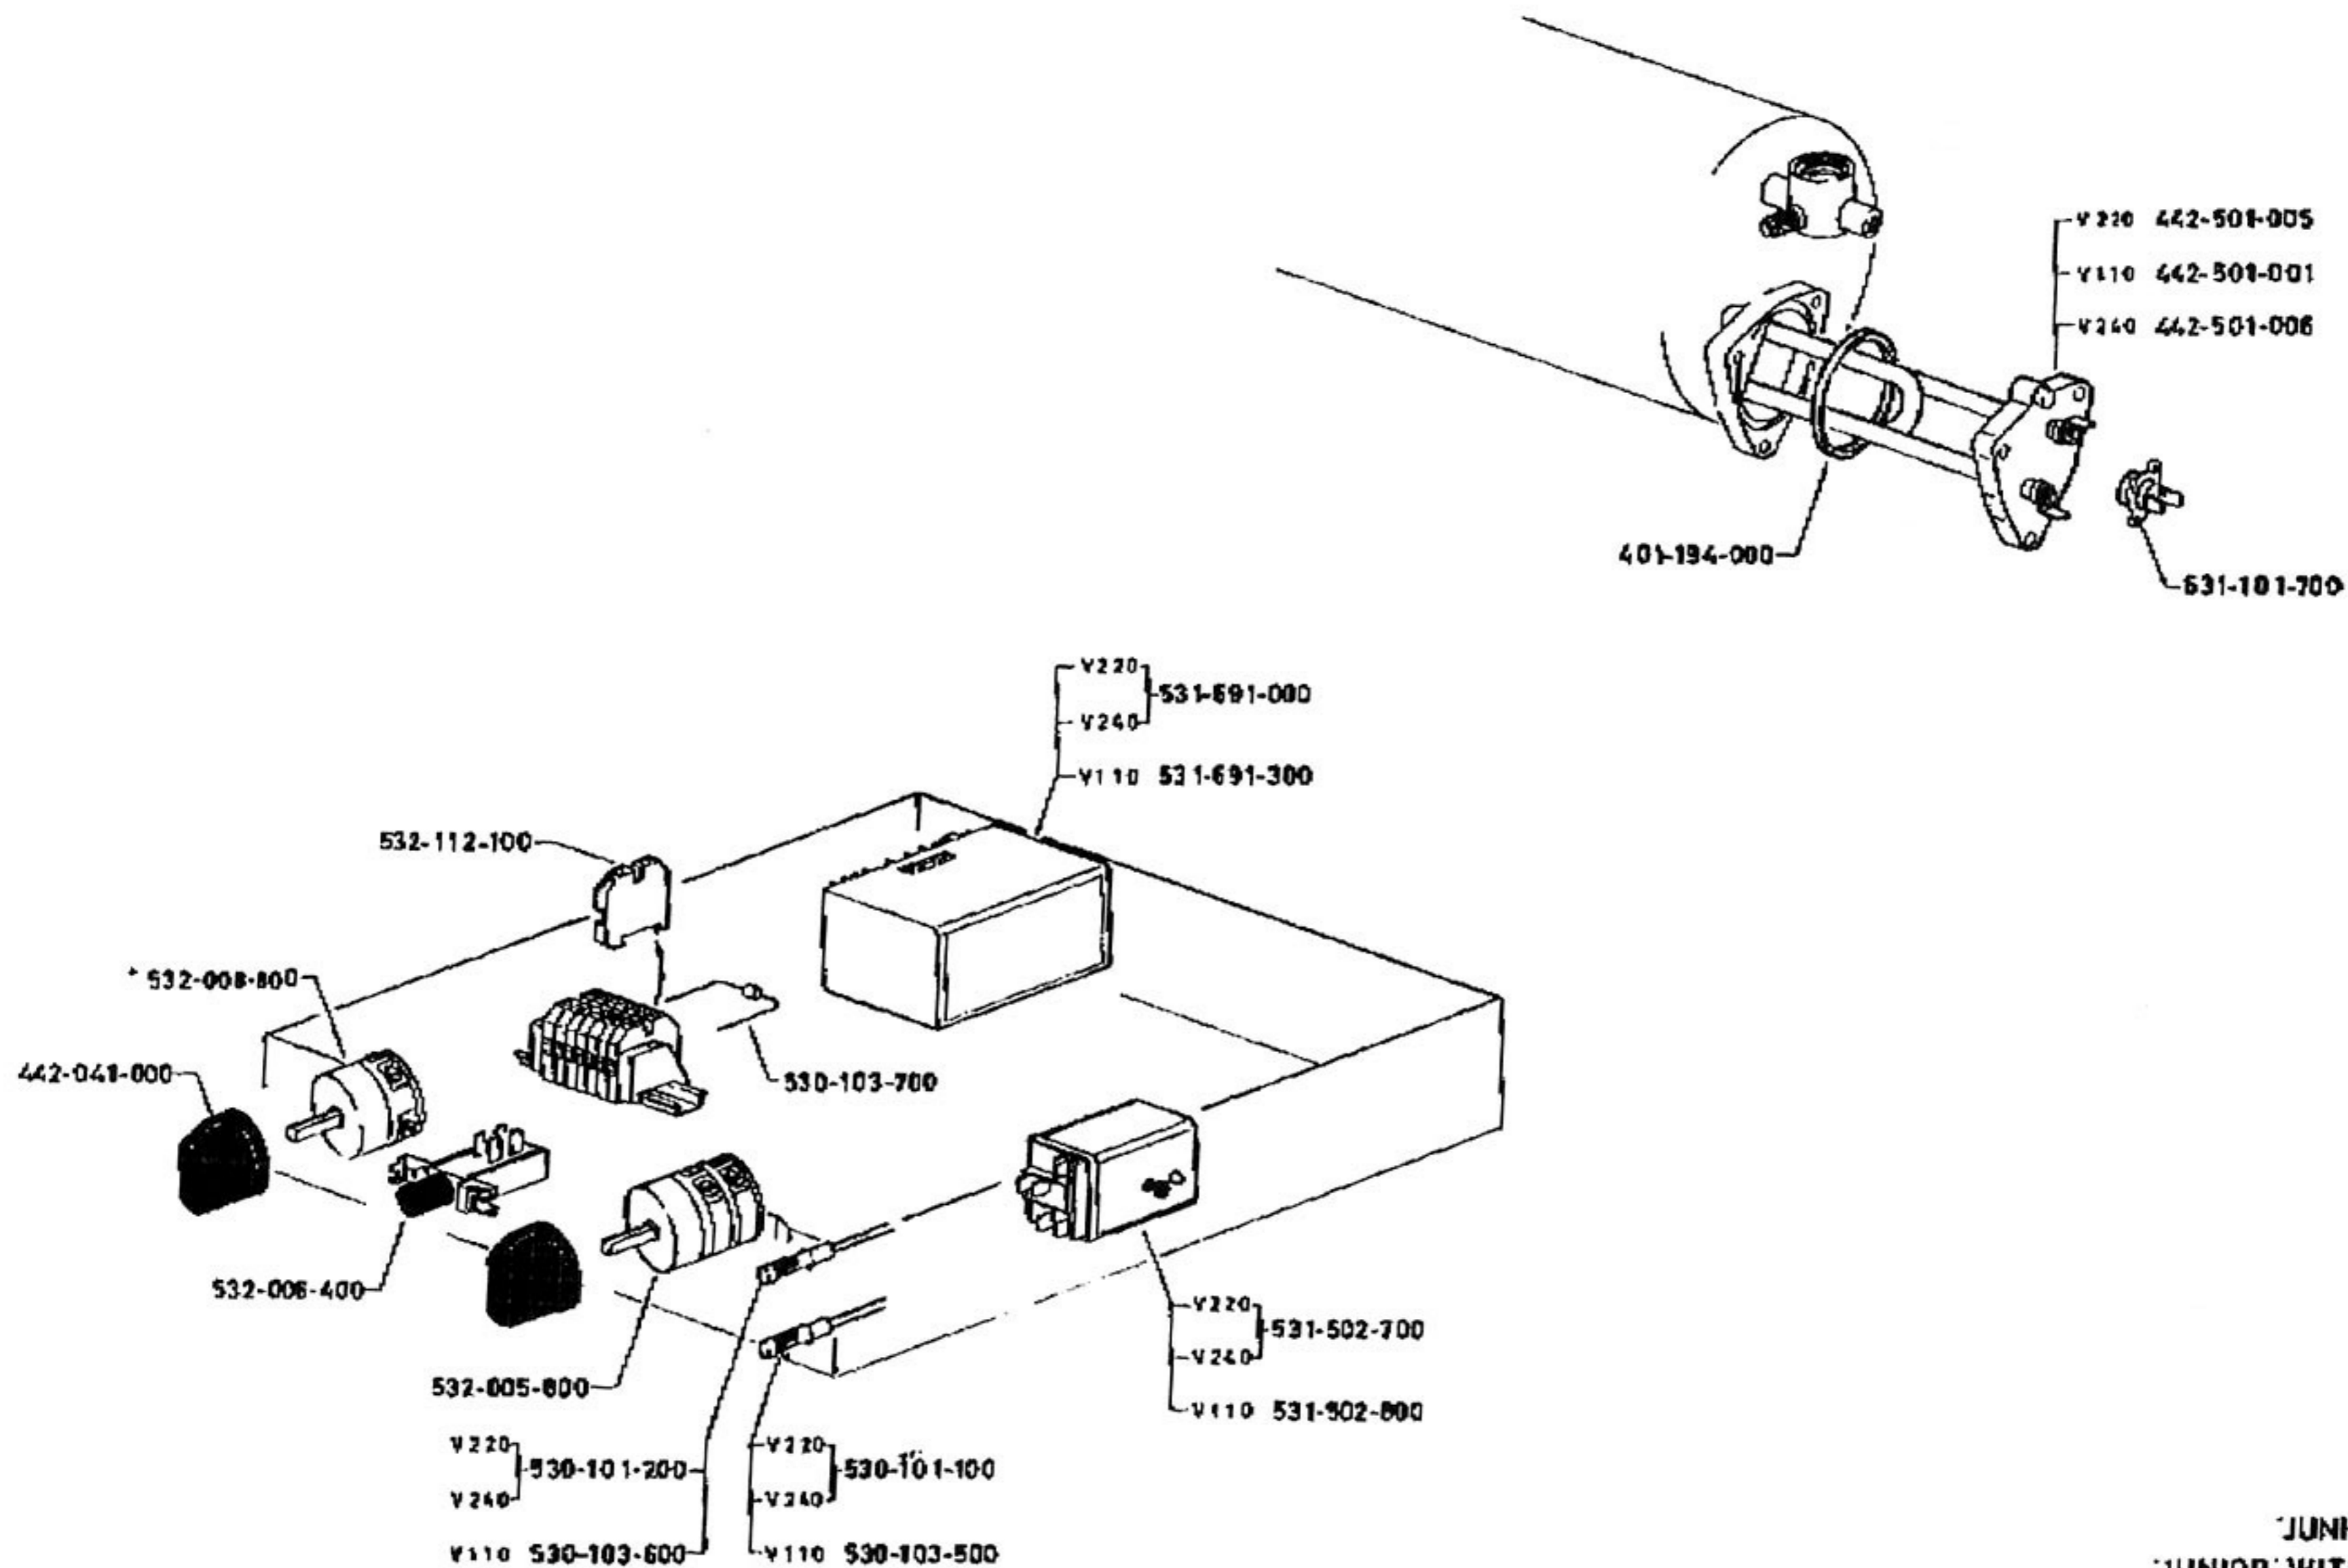

'JUNIOR' DOSATA
 'JUNIOR' AVEC DOSEUR
 'JUNIOR' WITH DOSING-DEVICE
 'JUNIOR' DOSIERT

	SILVER	GOLD
①	421-997-002	421-590-018
②	421-996-002	421-591-018
③	442-032-004	442-032-008
④	442-066-004	442-066-008
⑤	442-026-004	442-026-008
⑥	442-511-000	442-543-000

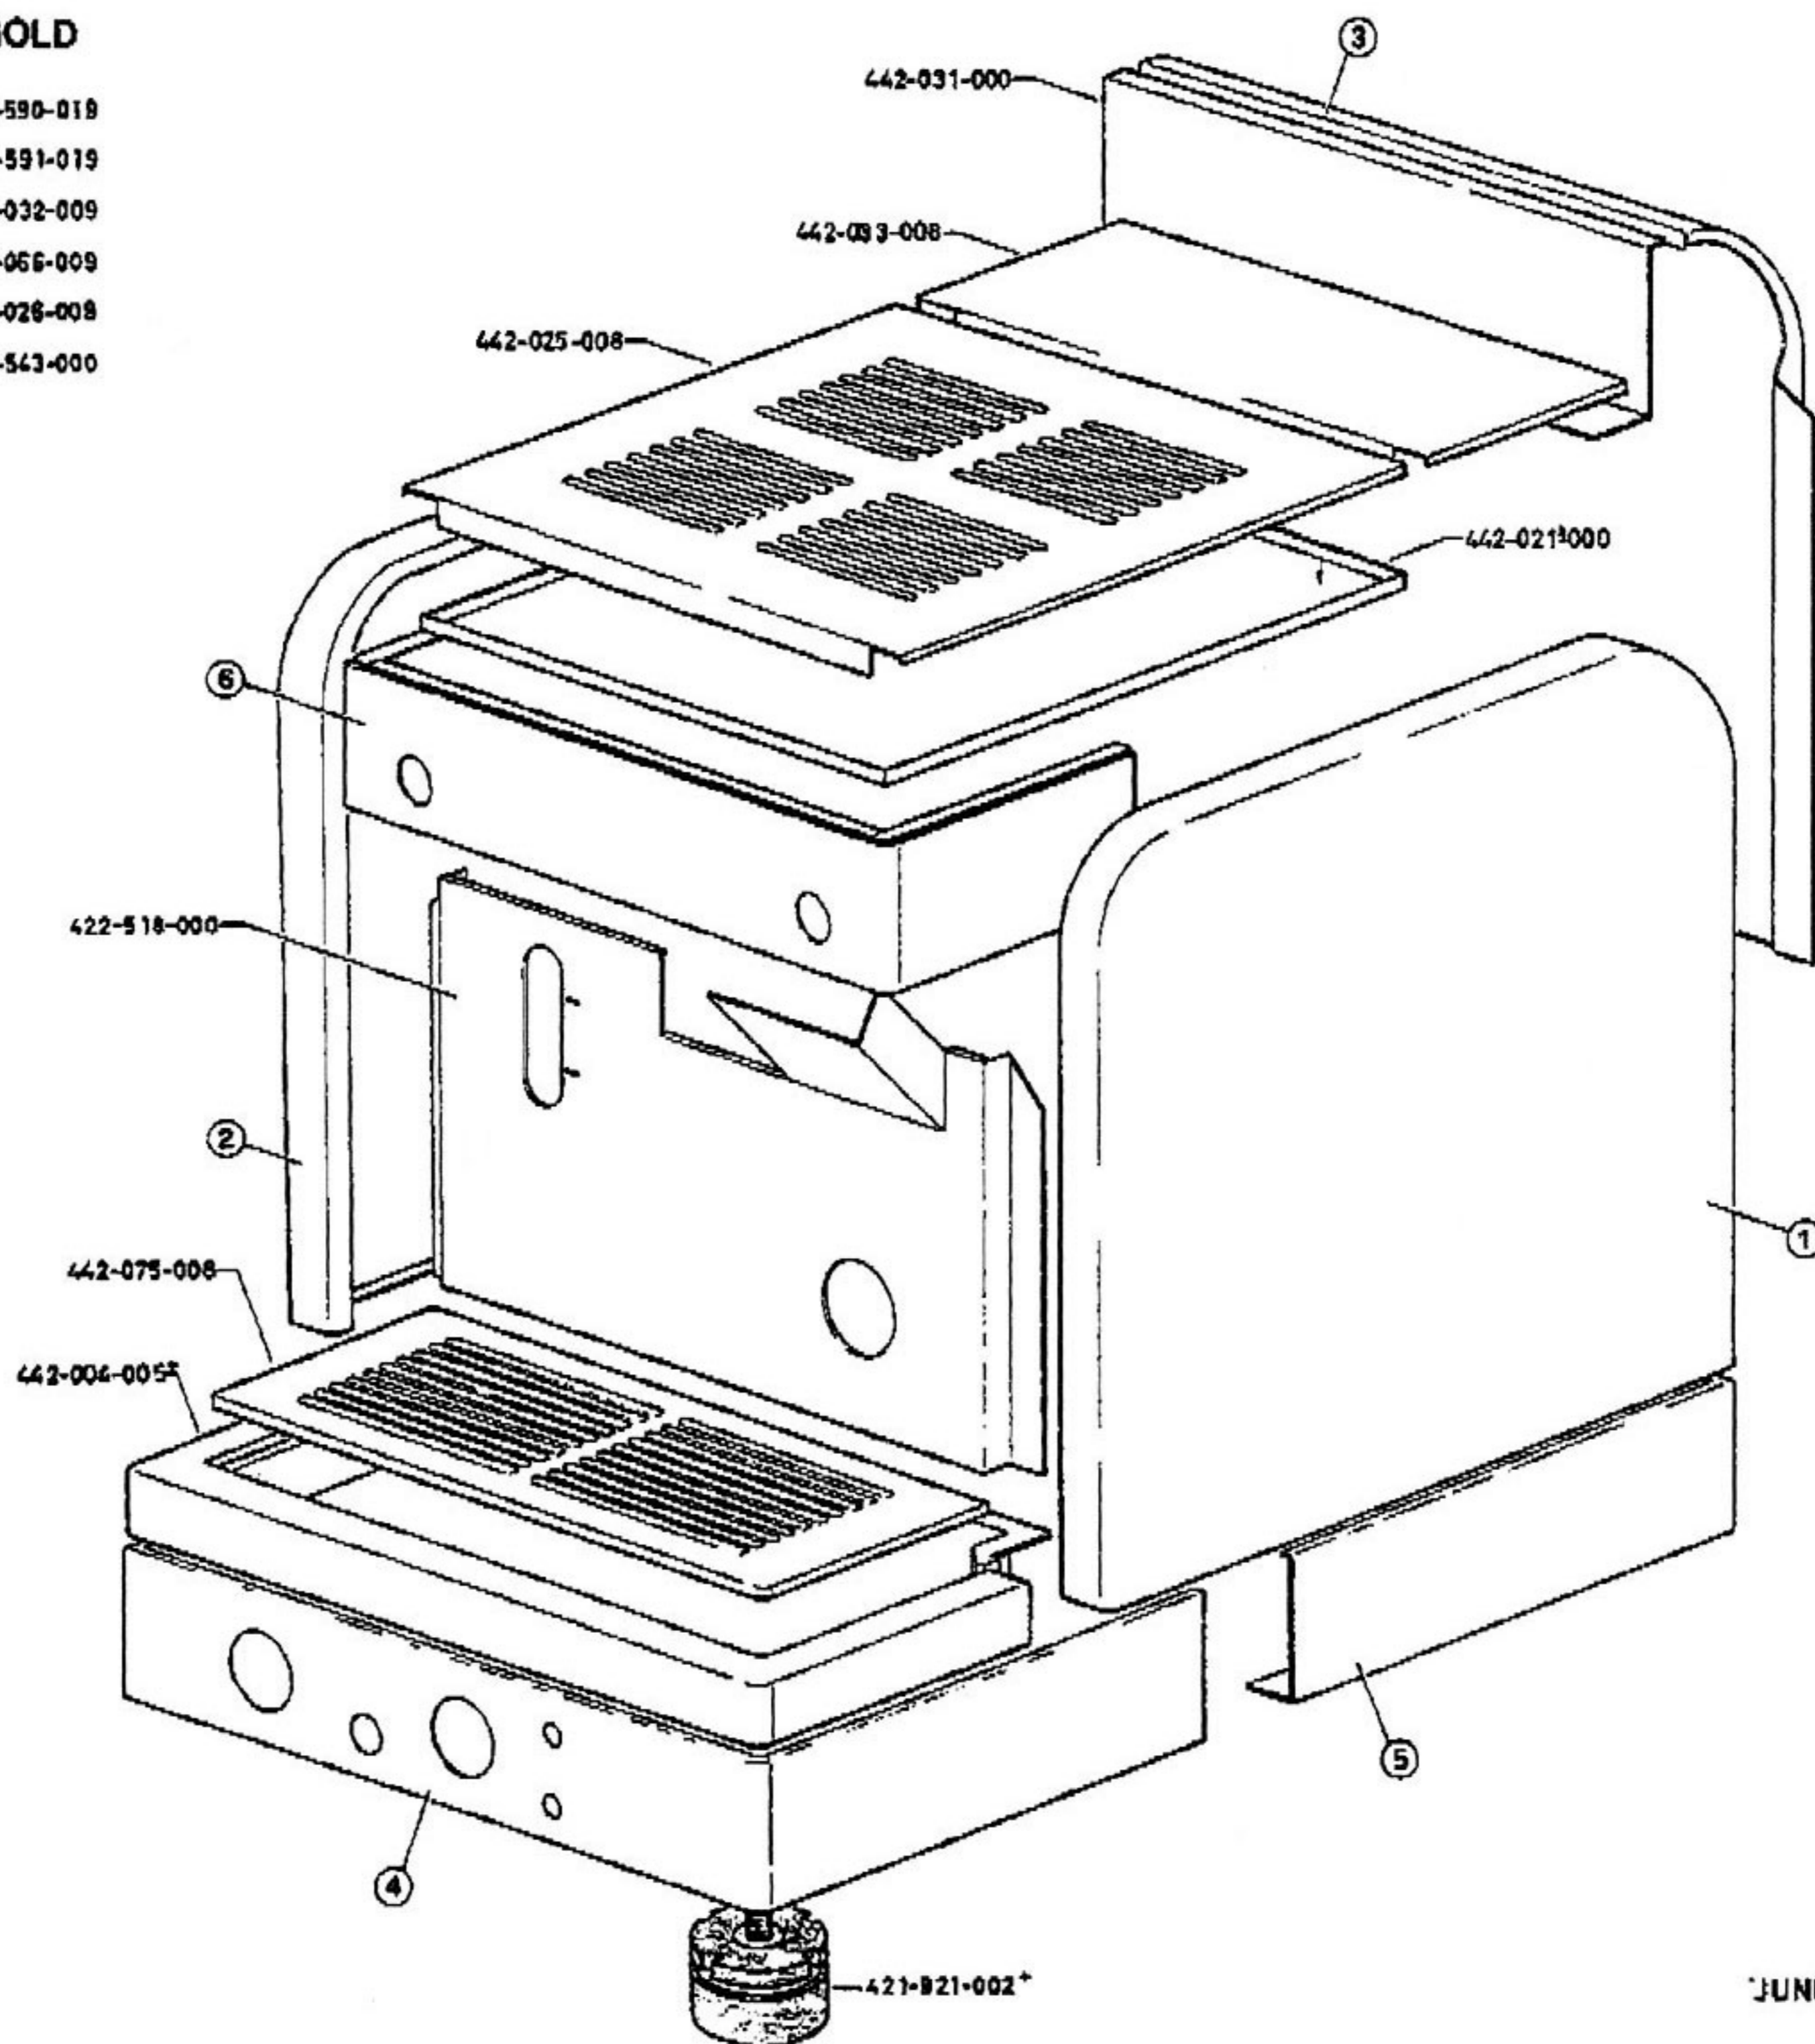

'JUNIOR' DOSATA
 'JUNIOR' AVEC DOSEUR
 'JUNIOR' WITH DOSING-DEVICE
 'JUNIOR' DOSIERT



*
E2Rv.....
 INDICARE IL VOLTAGGIO
 INDICER LA TENSION
 PLUS GIVE VOLTAGE
 DIE SPANNUNG MITTEILEN

HZ.....
 INDICARE LA FREQUENZA
 INDICER LA FREQUENCE
 PLUS GIVE FREQUENCY
 DIE FREQUENZ MITTEILEN

COMPONENTI ELETTROVALVOLE
 COMPONENTS OF SOLENOID VALVES


COMPOSANTS DES ELECTROVANNES
 BESTANDTEILE DER MAGNETVENTILE

TAB. N° IV-1

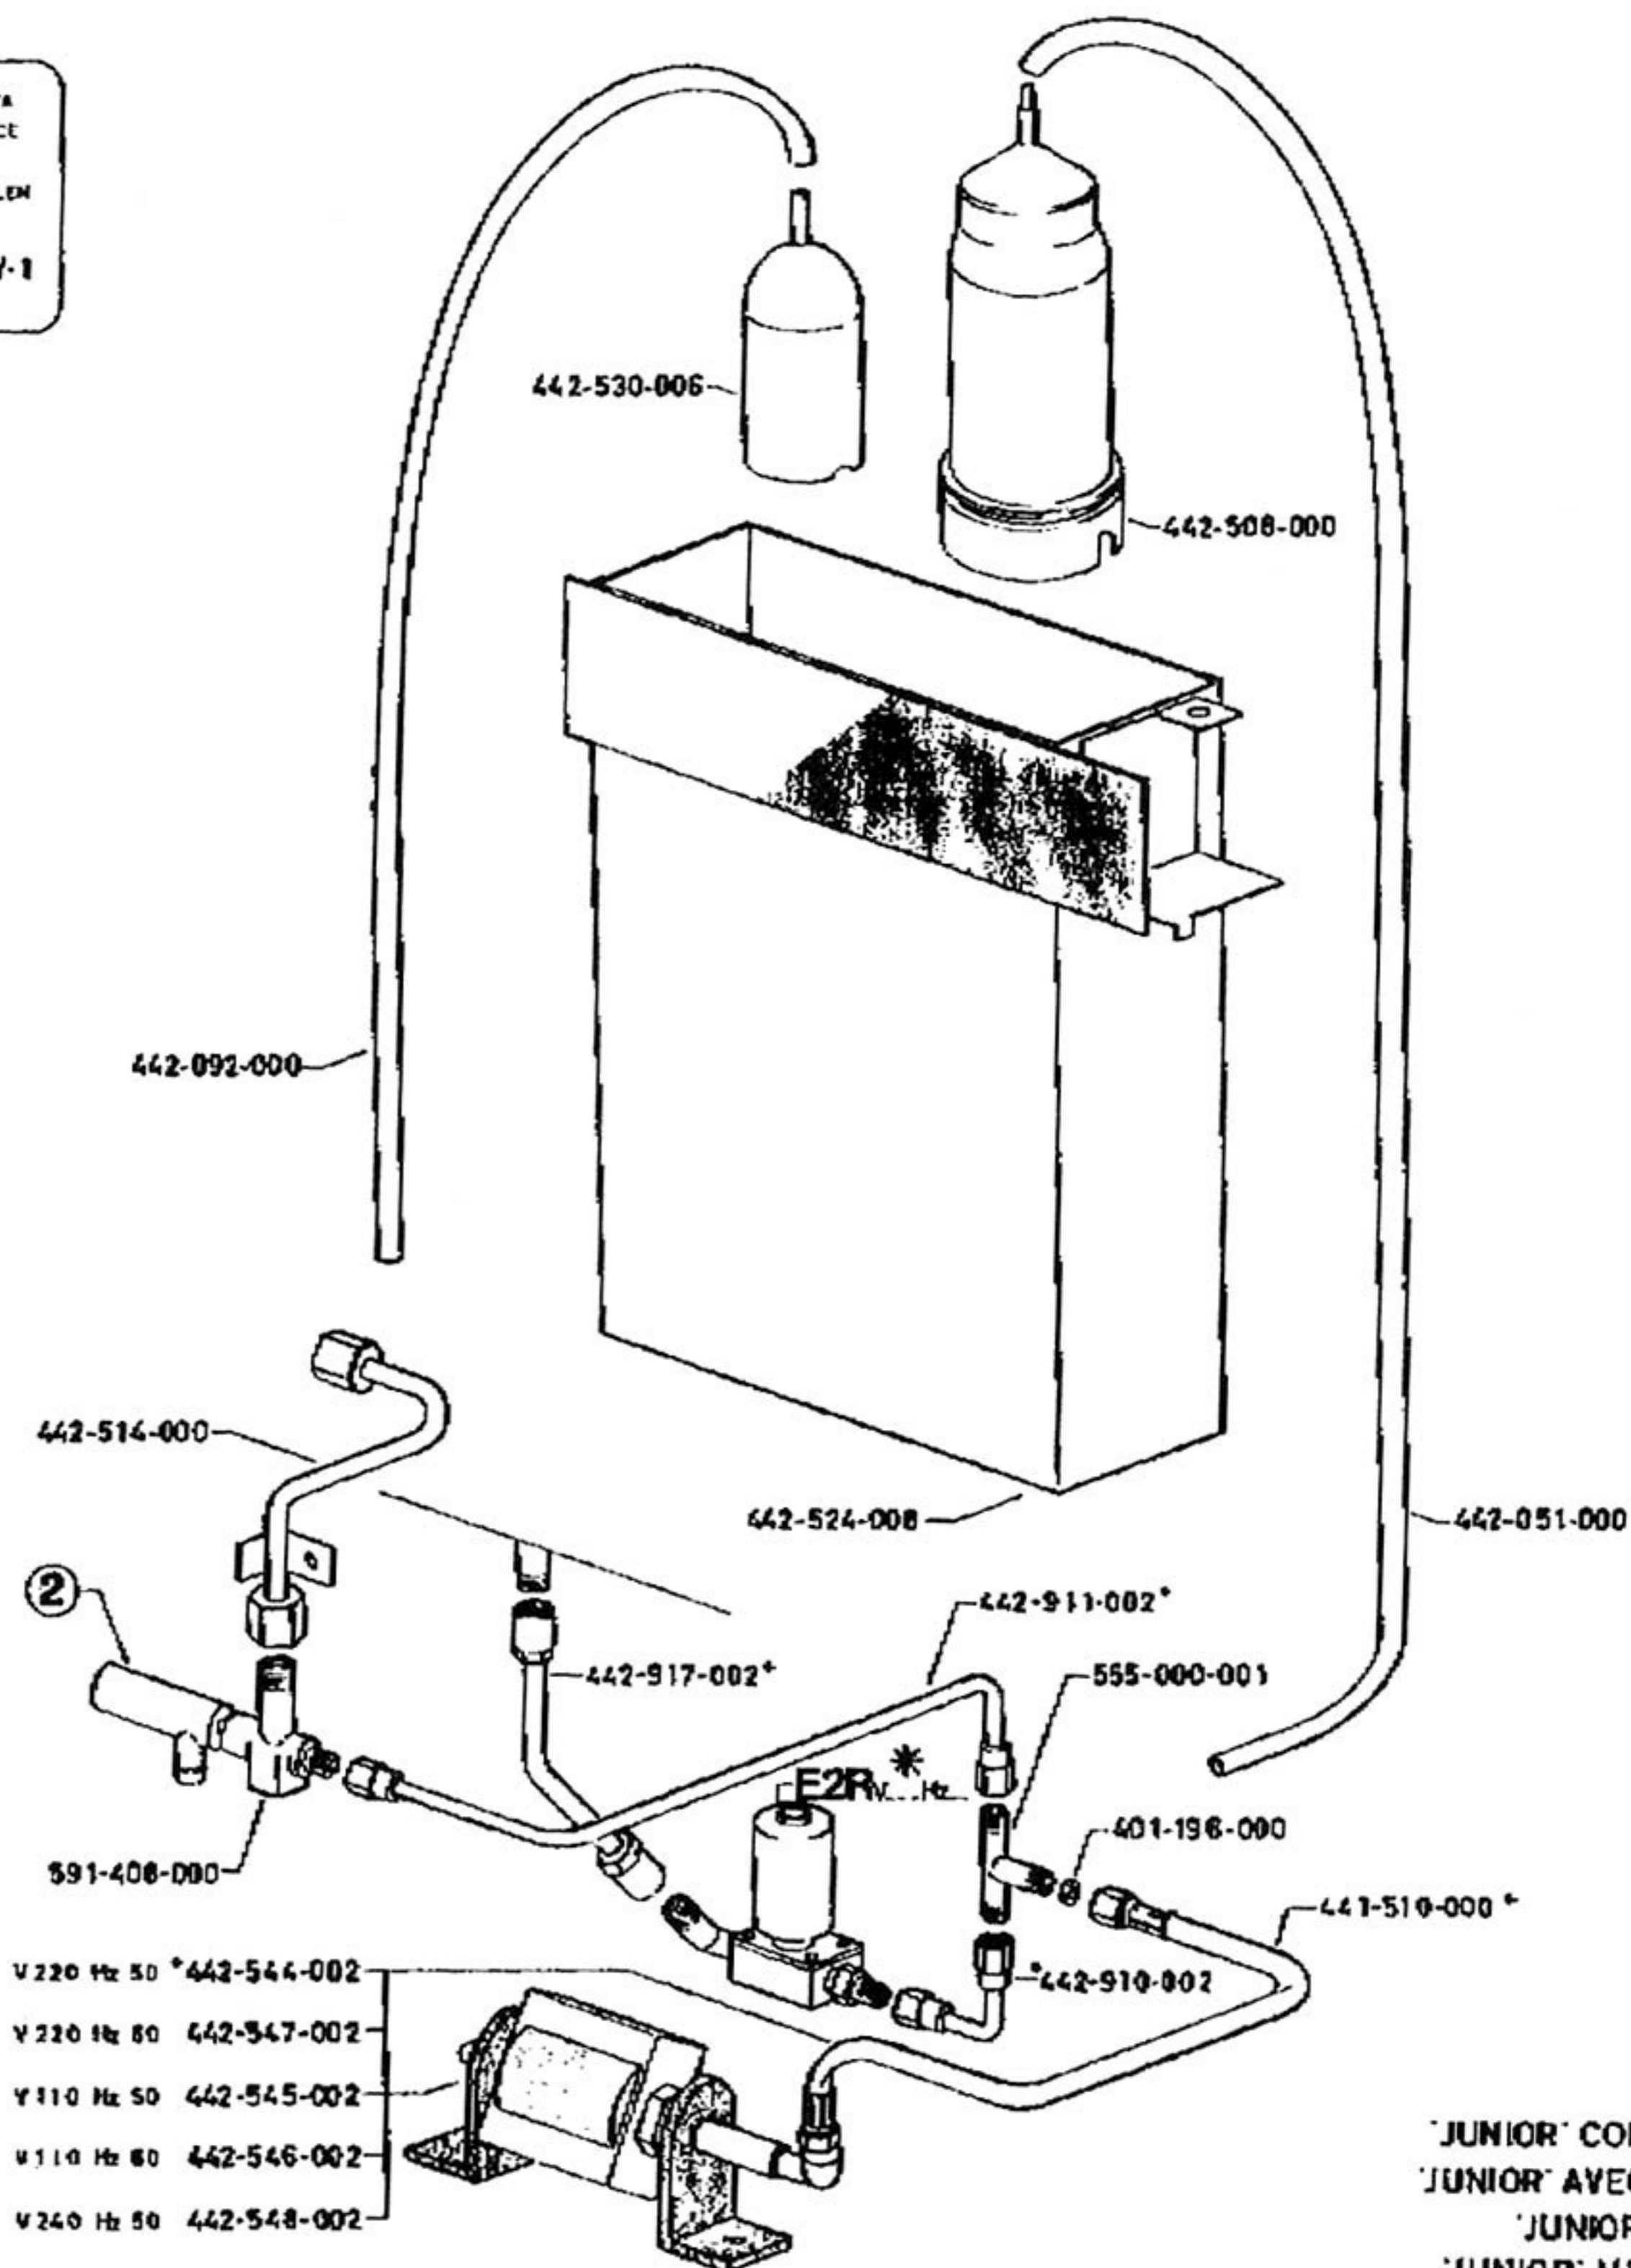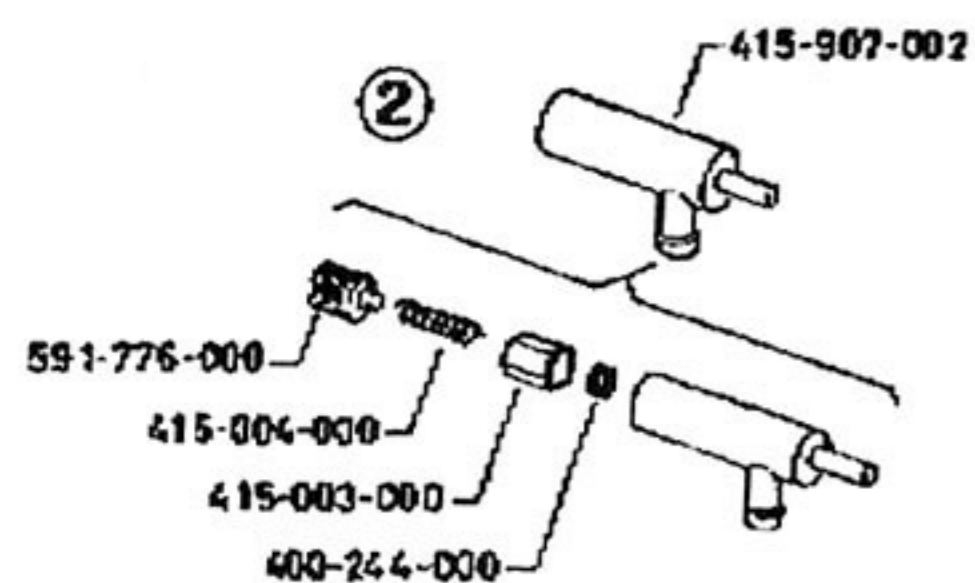


- V 220 Hz 50 *442-544-002
- V 220 Hz 60 442-547-002
- V 110 Hz 50 442-545-002
- V 110 Hz 60 442-546-002
- V 240 Hz 50 442-548-002

'JUNIOR' CON SERBATOIO
 'JUNIOR' AVEC RESERVOIR
 'JUNIOR' WITH TANK
 'JUNIOR' MIT BEHÄLTNER

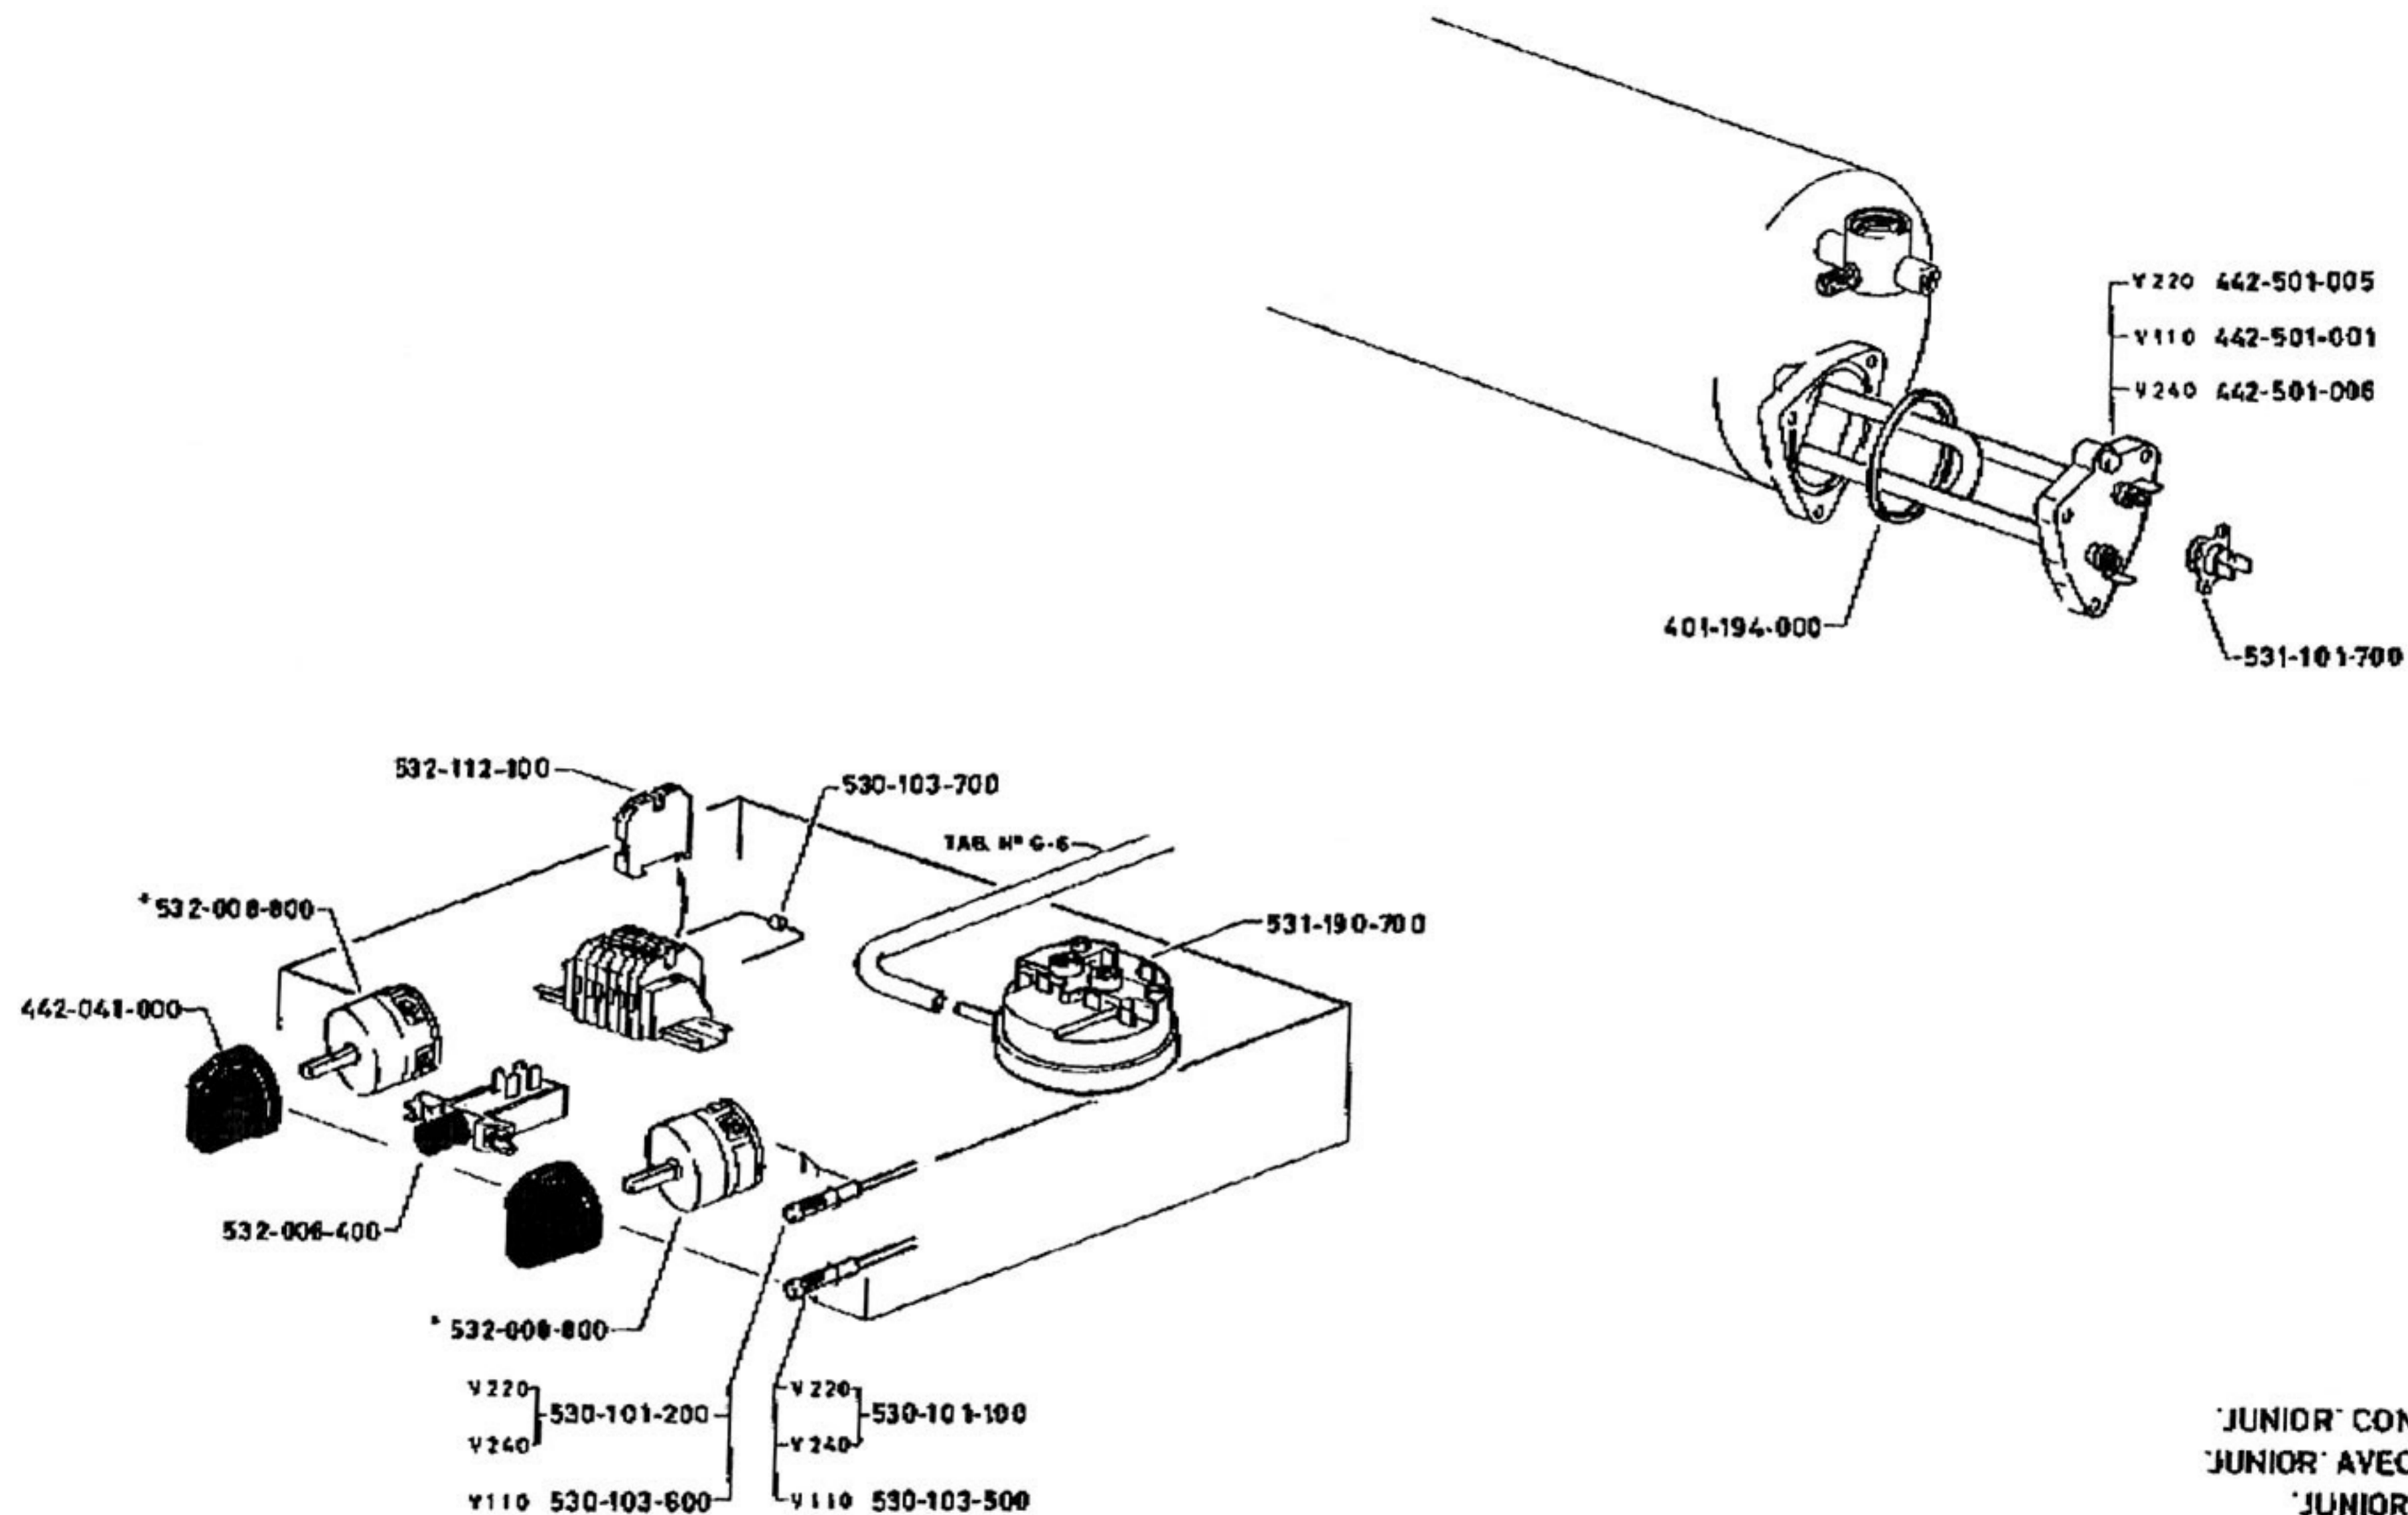

'JUNIOR' CON SERBATOIO
'JUNIOR' AVEC RESERVOIR
'JUNIOR' WITH TANK
'JUNIOR' MIT BEHÄLTER

	SILVER	GOLD
①	421-997-002	421-590-018
②	421-998-002	421-581-018
③	442-097-004	442-097-008
④	442-026-004	442-026-008
⑤	442-511-000	442-511-000
⑥	442-076-004	442-076-008
⑦	442-052-004	442-052-008

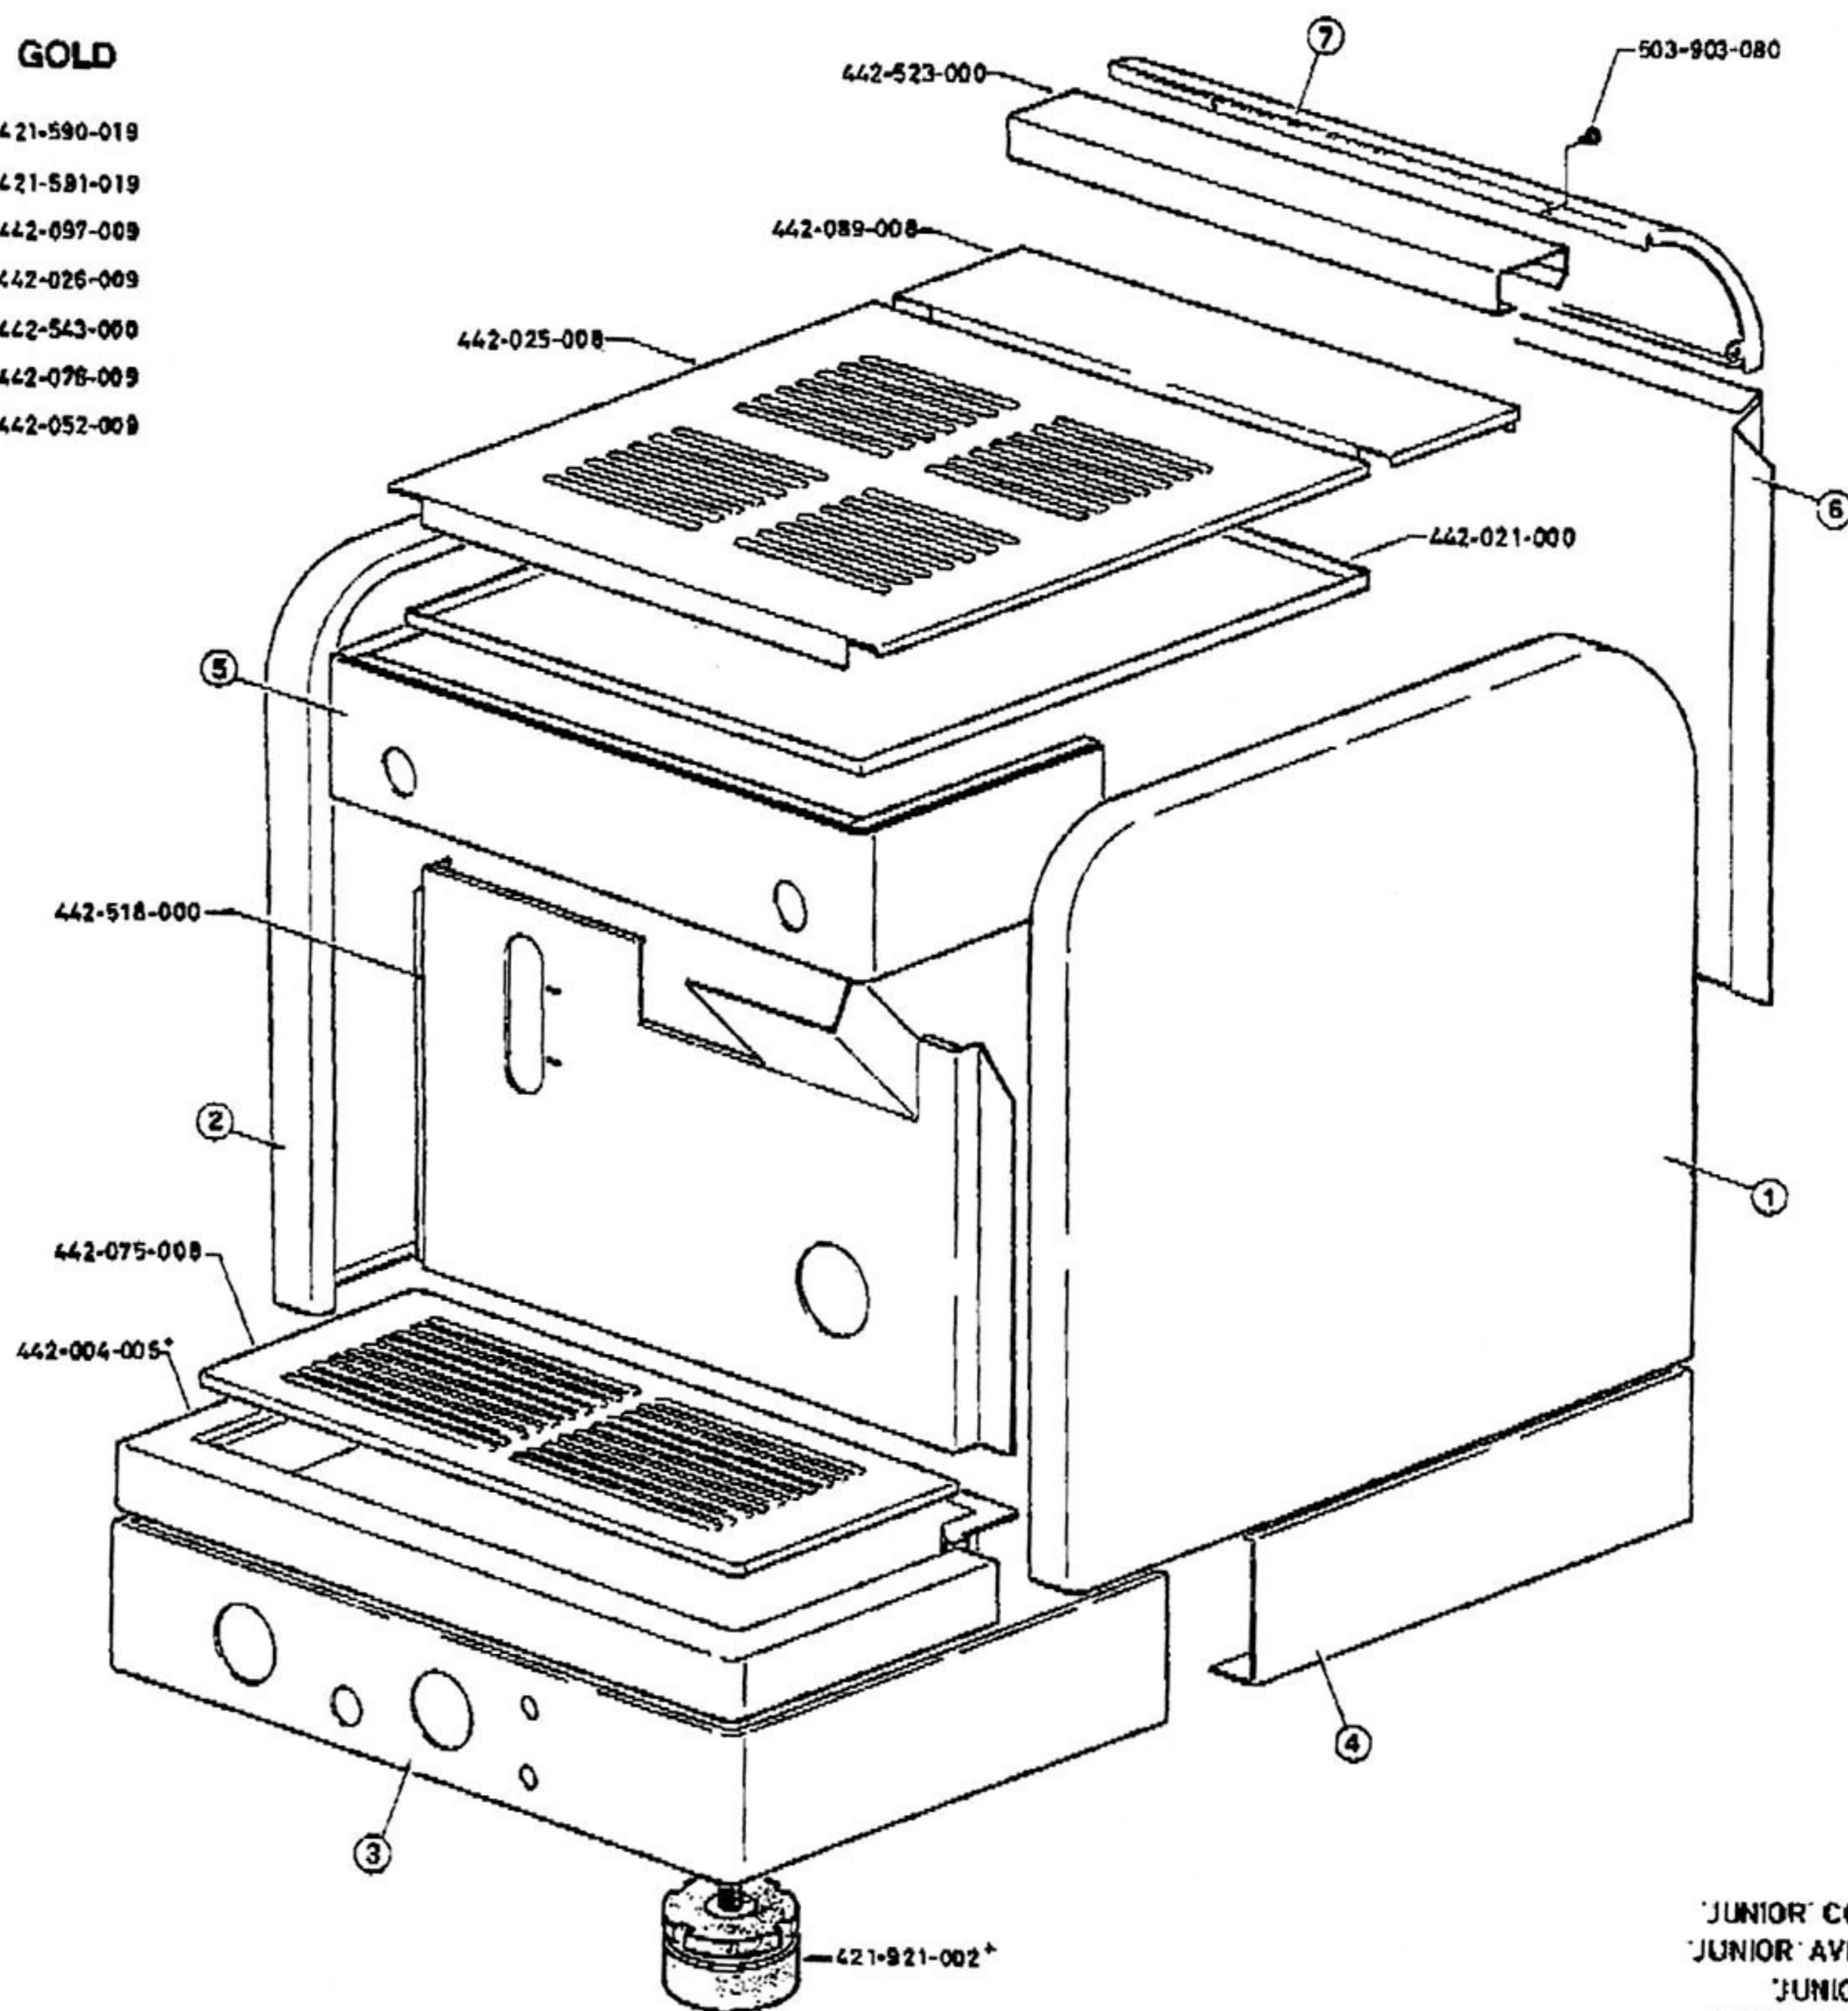

'JUNIOR' CON SERBATOIO
 'JUNIOR' AVEC RESERVOIR
 'JUNIOR' WITH TANK
 'JUNIOR' MIT BEHÄLTER