

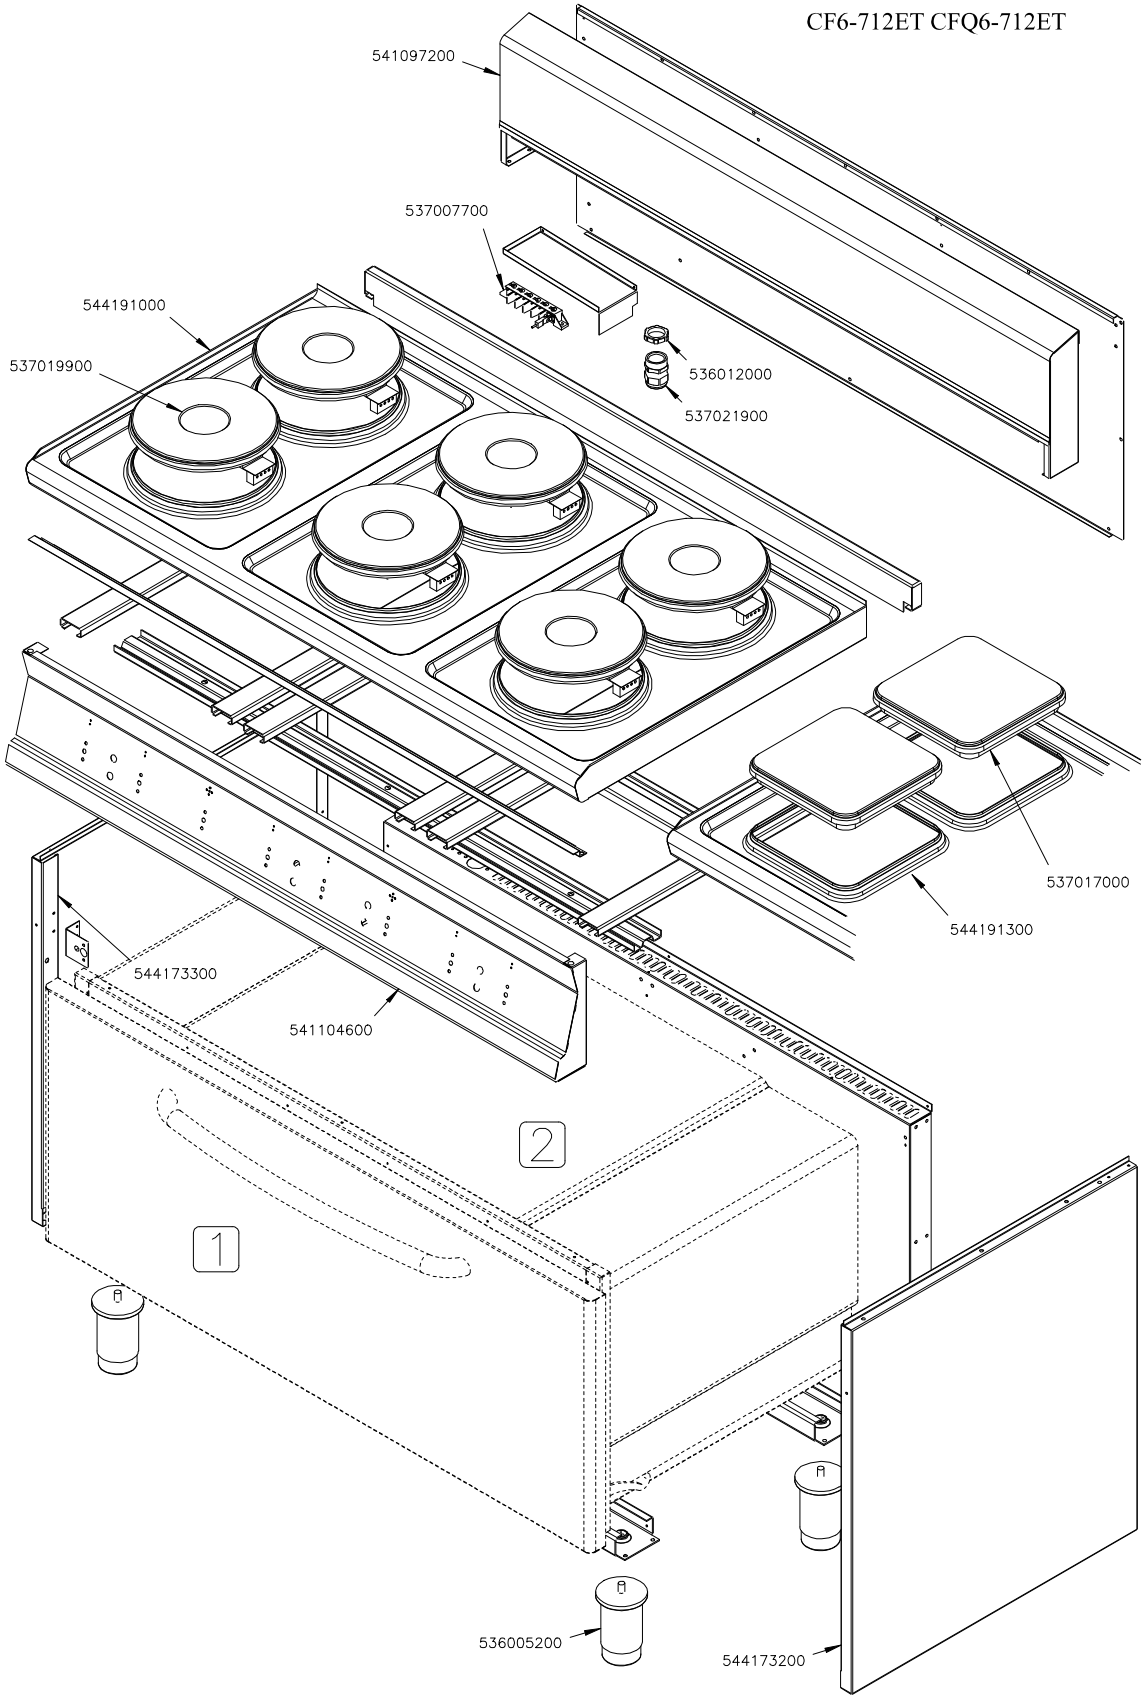


CF6-712ET CFQ6-712ET

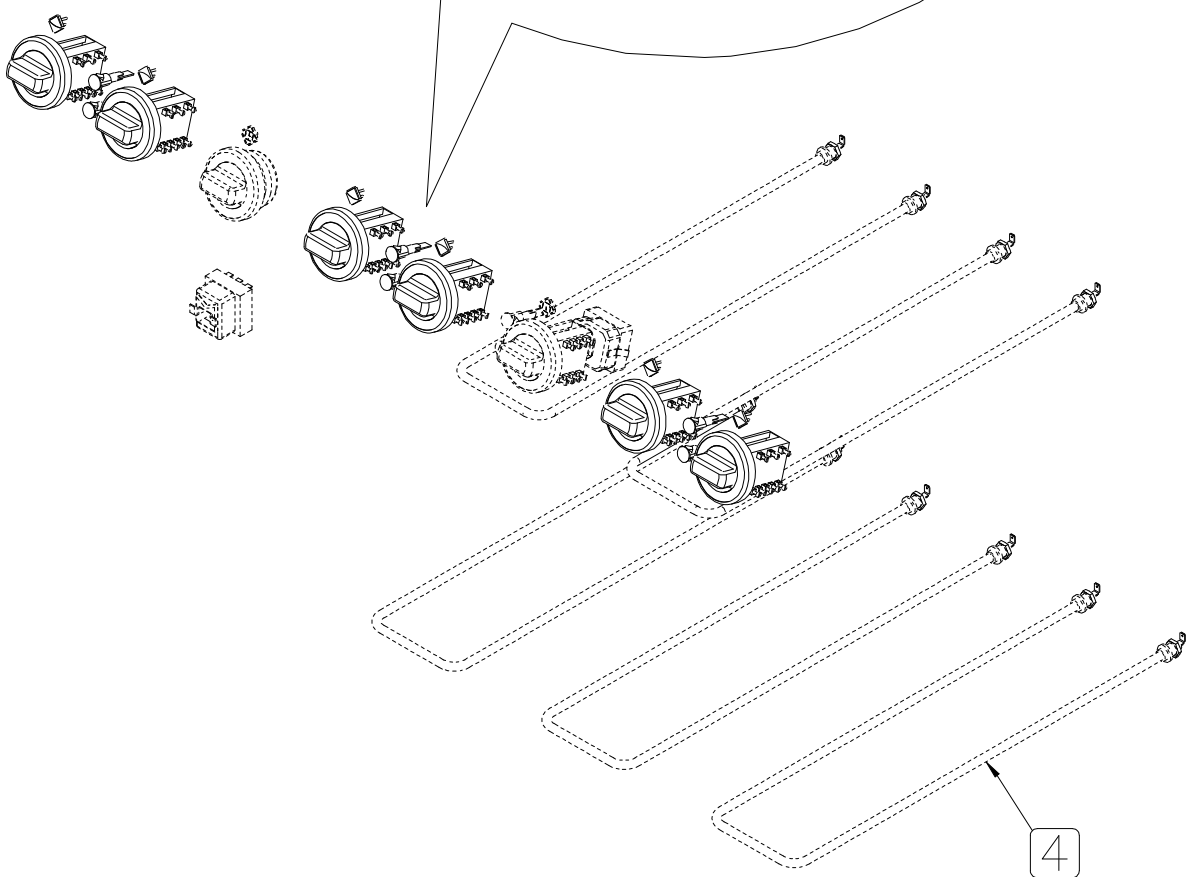


CF6-712ET CFQ6-712ET

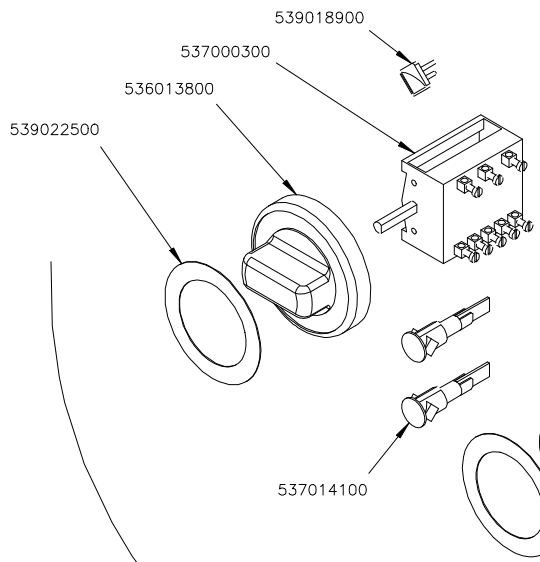


PORTE FORNO GN 2/1 GN 3/1  
DOORS OF THE OVEN GN 2/1 GN 3/1  
TUREN DES BACKOFEN GN 2/1 GN 3/1  
PORTES DU FOUR GN 2/1 GN 3/1



GN 2/1

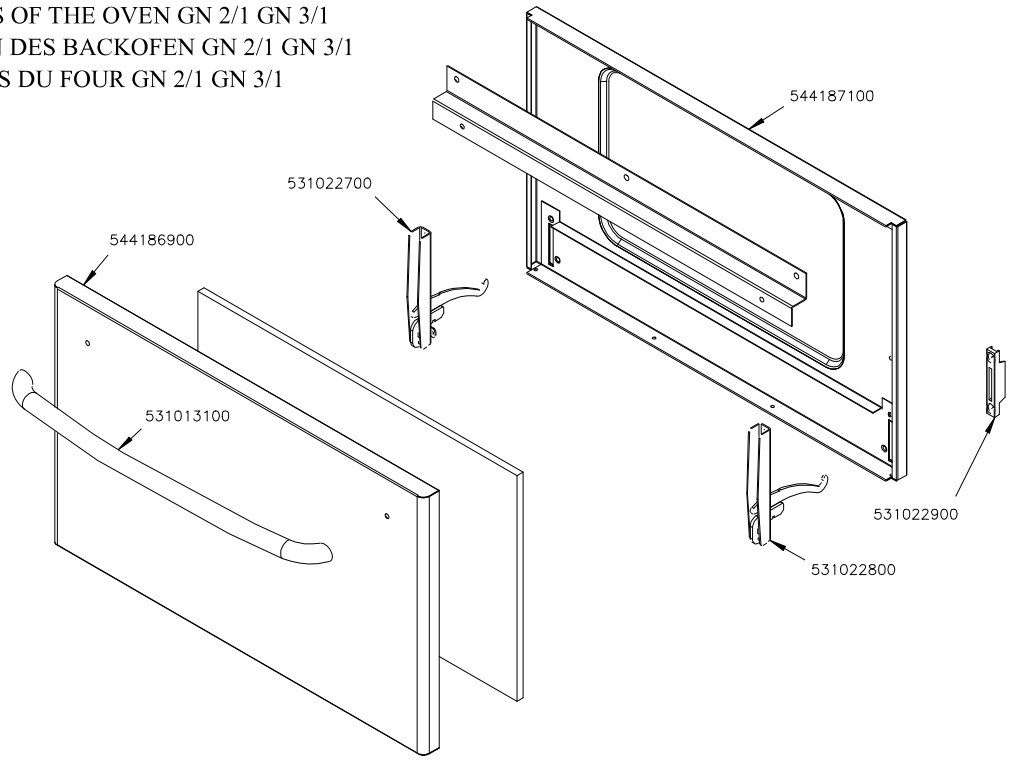



GN 3/1

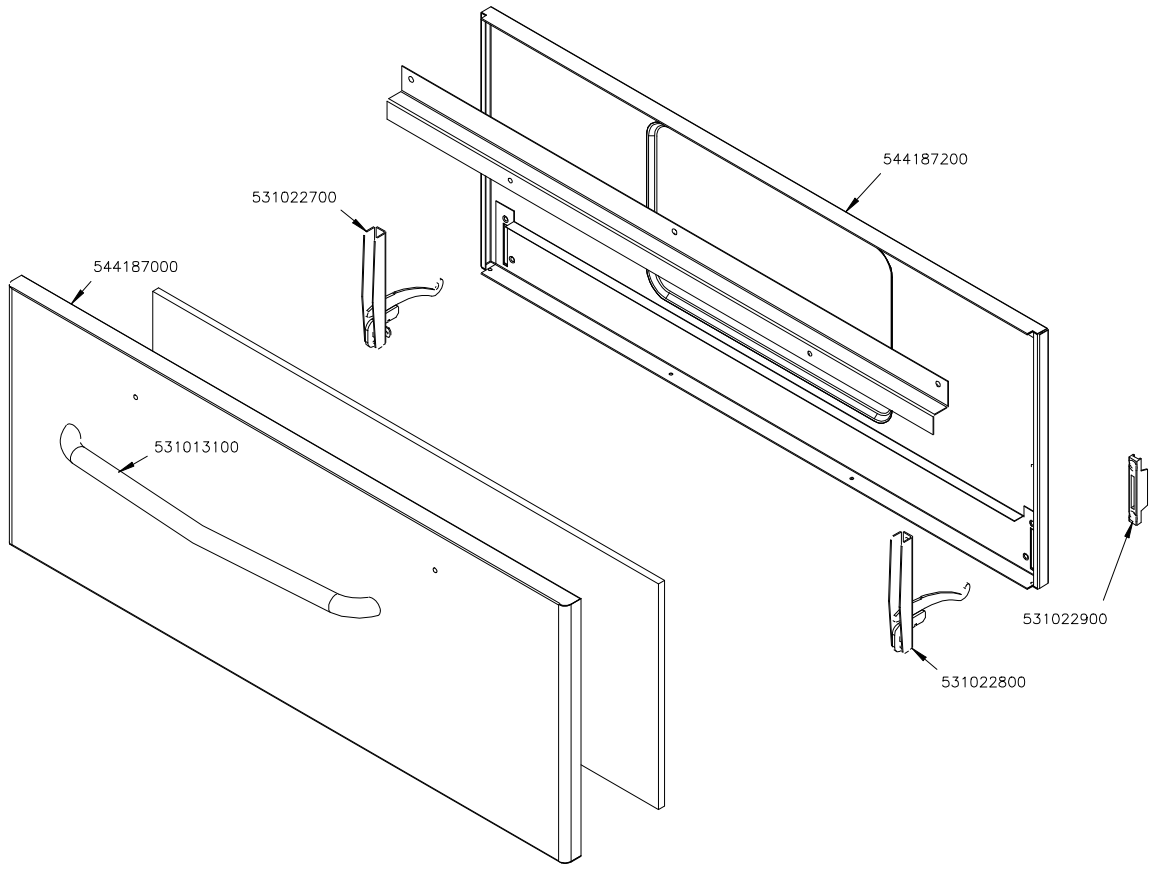

FORNO GN3/1 ELETTRICO CARCASSA  
FRAME OF THE ELECTRICAL OVEN GN 2/1  
GEHAUSE DES ELEKTROBACKOFEN GN 2/1  
CHASSIS DU FOUR A ELECTRIQUE GN 2/1

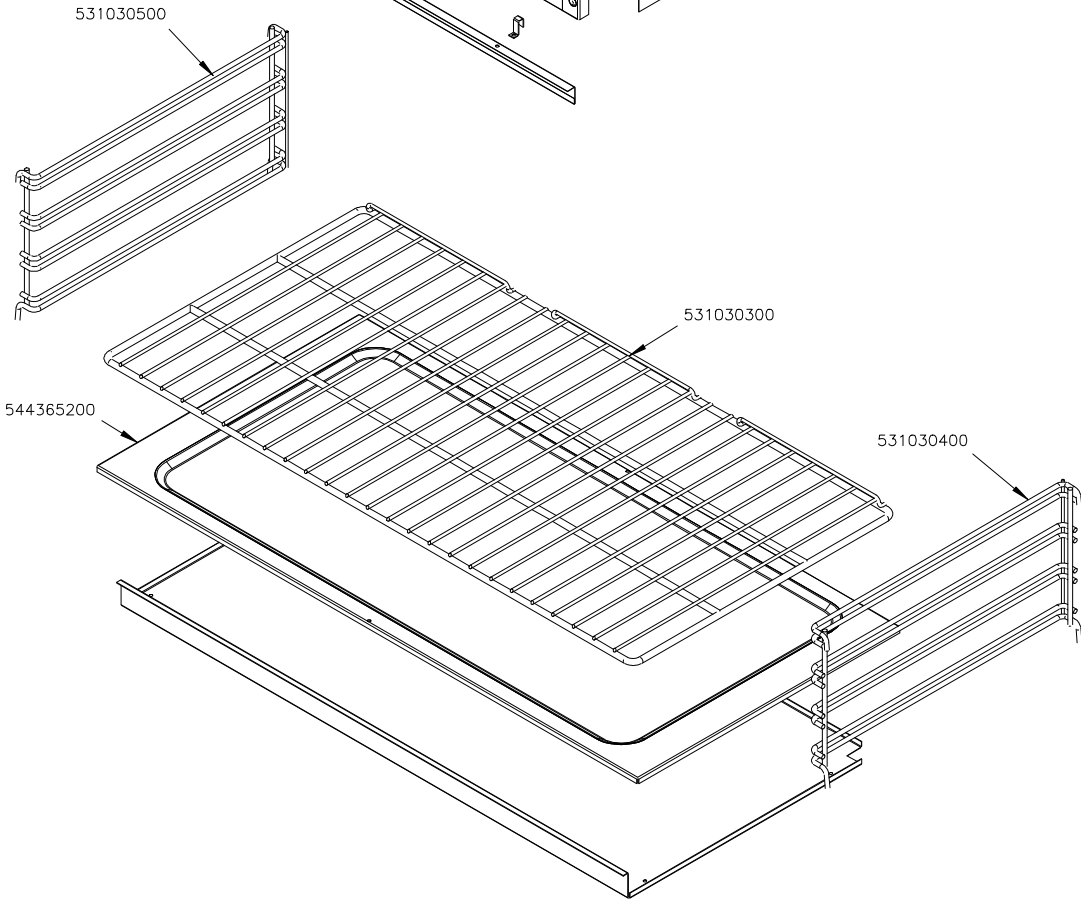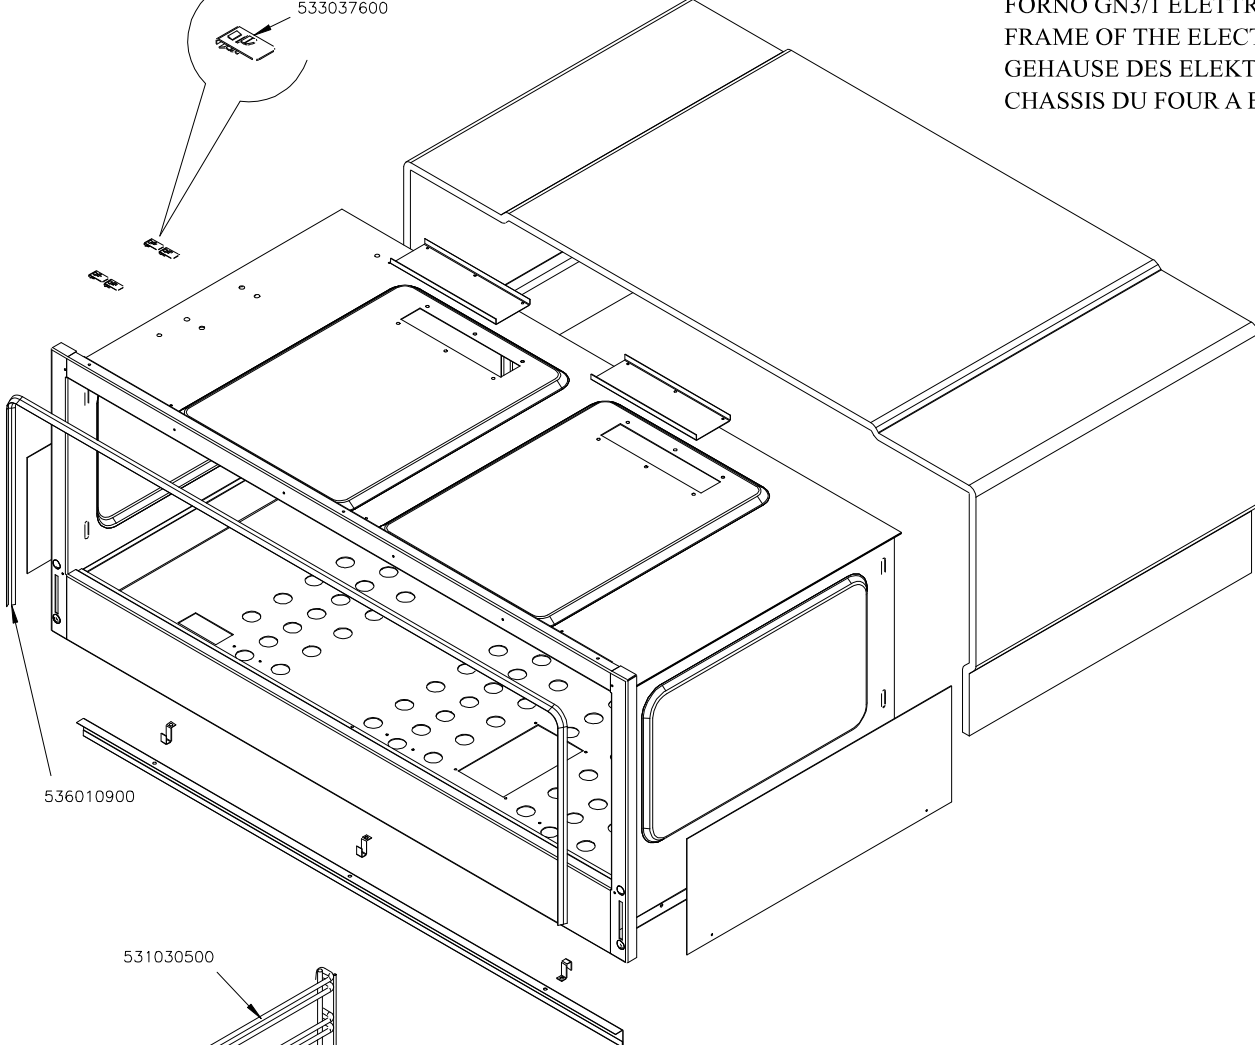

FORNO GN3/1 ELETTRICO IMPIANTO  
SYSTEM OF THE ELECTRICAL OVEN GN 2/1  
EINRICHTUNG DES ELEKTROBACKOFEN GN 2/1  
INSTALLATION DU FOUR A ELECTRIQUE GN 2/1

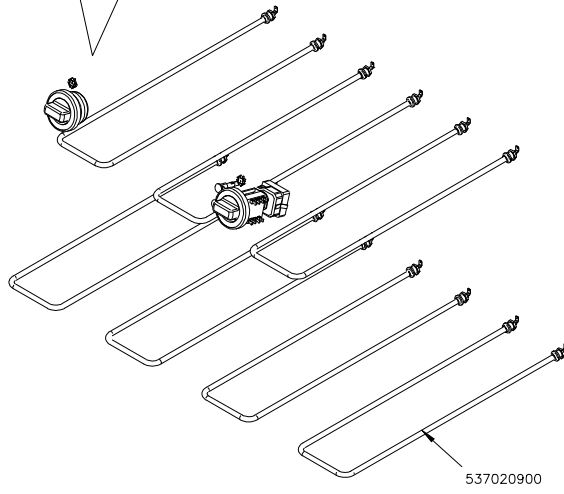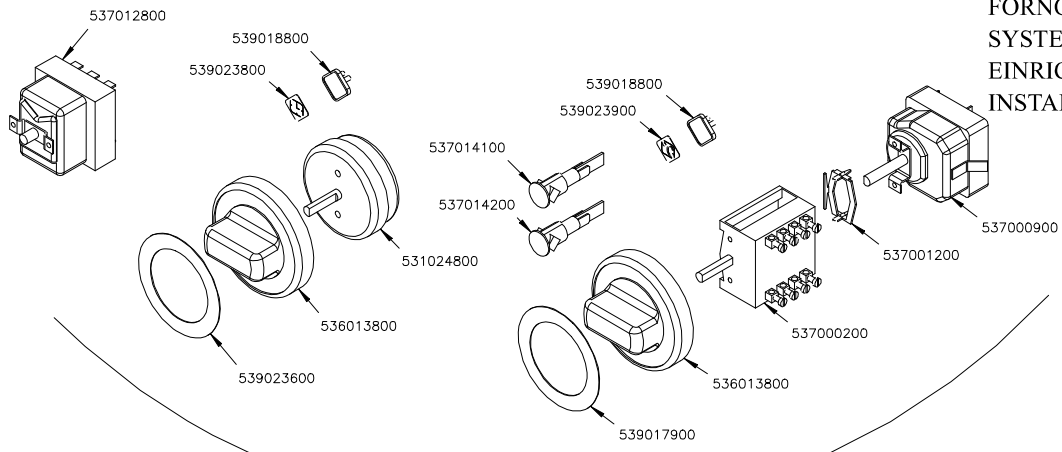

Page	Pos	Code	Description
001		541097200	NEUTRAL SPACER 712
001		537007700	TERMINAL BLOCK THREEPHASE 40A
001		536012000	HEXAGONAL LOCK NUT PG-21
001		537021900	CABLE SECURING CLAMP V.TEC 21 D.24
001		544191000	UPPER PLATE PC-712E ROUND PLATE
001		537019900	PLATE D.220 W2600 V230
001		537017000	PLATE 220X220 W2600 V230
001		544191300	UPPER PLATE PC-712E SQUARE PLATE
001		544173300	LEFT SIDE PANEL RANGE S.70
001		541104600	CONTROL PANEL CF6-712EV
001		536005200	INOX LEG 2" 120-180 M10
001		544173200	RIGHT SIDE PANEL RANGE S.70
002		539018900	INDEX FOR KNOB
002		537000300	COMMUTATOR 7 POSITIONS S.49 16A
002		536013800	KNOB D.70 BLACK 6*5 WITH SPRING
002		539022500	ADHESIVE GRADUATED DISC FOR KNOB
002		537014100	WHITE WARNING LIGHT 250V
003		544187100	OVEN INNER DOOR GN 2/1 S.70
003		531022900	HINGE DOOR WHEEL HOLDER S.70
003		531022800	LEFT OVEN DOOR HINGE S.70
003		531022700	RIGHT OVEN DOOR HINGE 70LINE
003		544186900	OVEN DOOR GN 2/1 S.70
003		531013100	OVEN DOOR HANDLE OF 70/90-LINE
003		544187200	
003		544187000	OVEN DOOR GN 3/1 S.70
004		533037600	LOCK SPRING FOR BULB
004		536010900	GAS OVEN GASKET GN 3/1 (1620)
004		531030500	LHD SUPPORT GRID FOR OVEN OF 70LINE
004		531030300	OVEN GRID GN 3/1 FOR 70 LINE
004		531030400	RHD SUPPORT GRID FOR OVEN OF 70LINE
004		544365200	70 ELECTRICAL OVEN BOTTOM GN3/1
005		537012800	SAFETY THERMOSTAT 420°C THREEPHASE
005		539018800	INDEX FOR OVEN KNOB
005		539023800	SIGN PLATE FOR OVEN TIMER
005		539023900	SIGN PLATE FOR OVEN TEMPERATURE
005		537014100	WHITE WARNING LIGHT 250V
005		537014200	GREEN WARNING LIGHT 250V
005		531024800	TIMER 120'- 360°
005		536013800	KNOB D.70 BLACK 6*5 WITH SPRING
005		539023600	ADHESIVE GRADUATED DISC FOR KNOB
005		537000900	THERMOSTAT 50-320°C THREEPHASE
005		537001200	FIXING BRACKET FOR THERMOSTAT/COMM.
005		537000200	COMMUTATOR 1 POS. 3PHASE S.49 16A
005		539017900	ADHESIVE GRADUATED DISC FOR KNOB
005		537020900	HEATING ELEMENT 1000W 230V OVEN S70