


MAGIC SNACK 60

CUCINE / RANGES / HERDE / CUISINIÈRES / N° 20310
CF-62

CFC-62EM CFC-62ET

	1
Vedi Pagina See Page Siehe Seite Voir Page Ver Pàgina	116

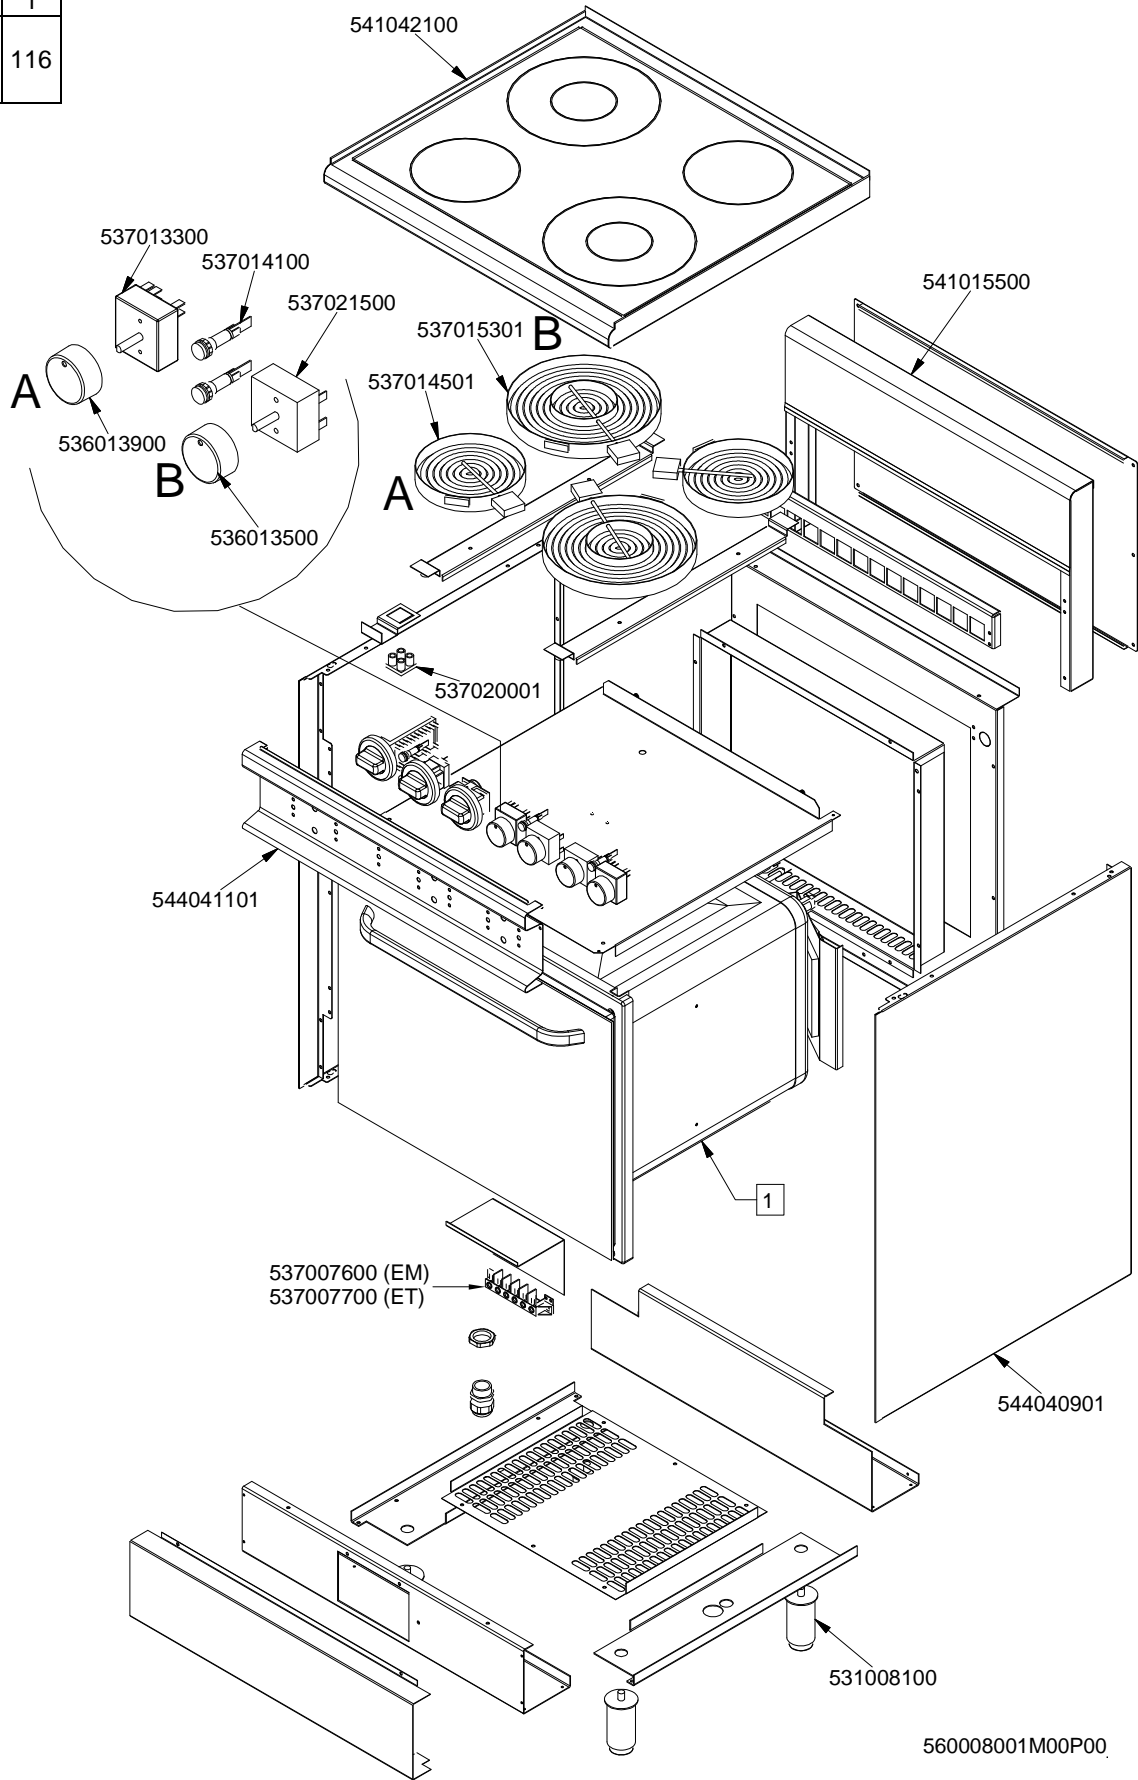


MAGIC SNACK 60

CUCINE / RANGES / HERDE / CUISINIÈRES / N° 0310

FORNO / OVEN / BACKOFEN / FOUR / CF-62

ELETTORICO MULTIFUNZIONE / MULTIFUNCTION ELECTRIC / MULTIFUNKTIONS
ELEKTRO / ELECTRIQUE A FONCTIONS MULTIPLES ≤0706

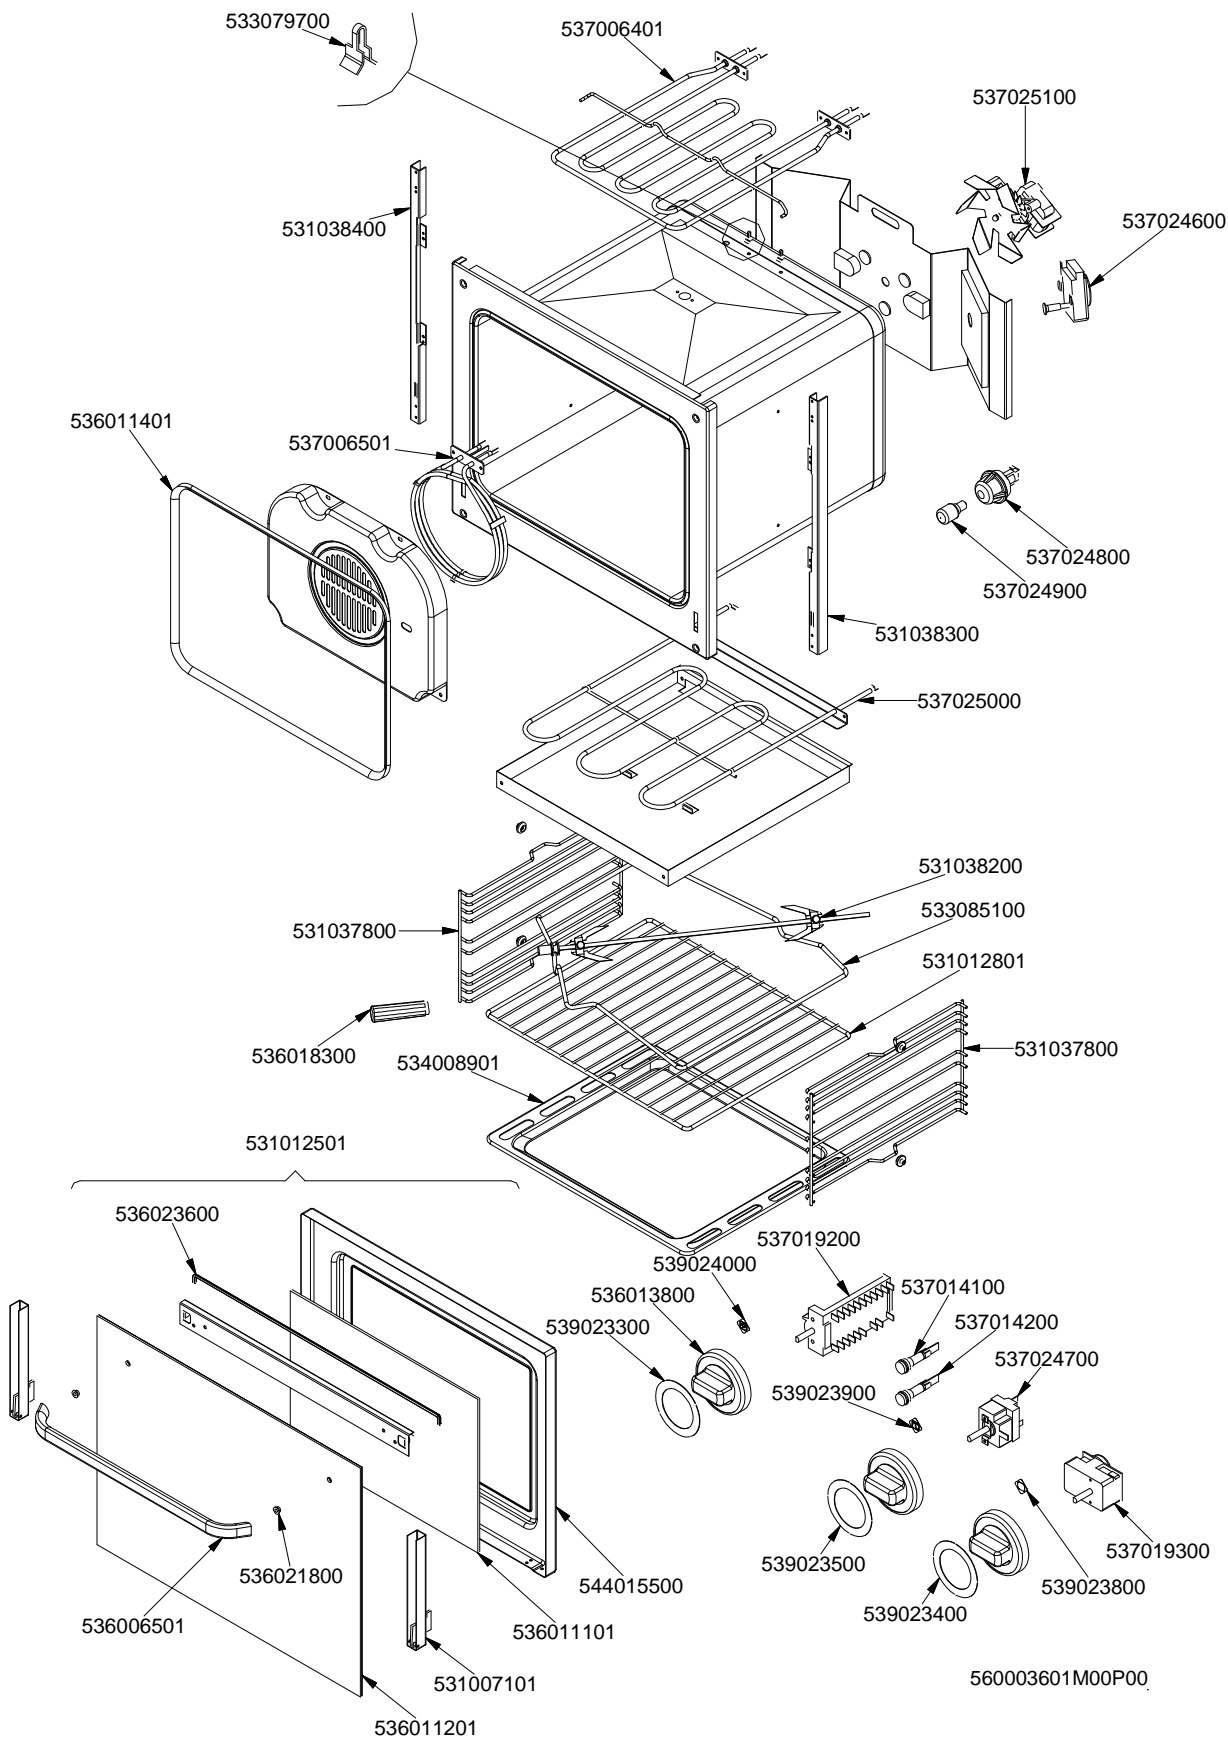

Page	Pos	Code	Description
001		541042100	UPPER PLATE PCC-74E
001		537013300	CURRENT REGULATOR FOR ELEC. PLATE
001		537014100	WHITE WARNING LIGHT 250V
001		541015500	NEUTRAL SPACER 62
001		537021500	REGULATOR FOR EL.PLATE 2CIRC.230V
001		537015301	EL. PLATE PCC D.230 700+1400W 230V
001		536013500	KNOB 7 POSITIONS PCC-60E
001		537014501	EL. PLATE PCC-60 D.165 1200W 230V
001		536013900	KNOB 7 POSITIONS PCC-60E
001		537020001	REMAINING HEAT 4 PILOT LIGHTS UNIT
001		544041101	CONTROL PANEL CF-62E
001		537007600	TERMINAL BLOCK SINGLEPHASE 40A
001		544040901	SIDE RANGE CF-62
001		531008100	ADJUSTABLE LEG H9 CHROME
002		533079700	LOCK SPRING FOR BULB §3/§4
002		537006401	GRILL HEATING EL.W3100 V230 CF-62
002		537025100	FAN FOR MULTIF.OVEN CF-62E
002		537024600	SPIT MOTOR FOR CF-8/10E V230
002		531038400	LHD DOOR WHEEL HOLDER MUL.OVEN CF62
002		536011401	OVEN GASKET CF-62
002		537006501	CIRC.HEATING EL. W2400 V230 CF-62
002		537024800	OVEN BULB-SOCKET CF-62E
002		537024900	OVEN BULB 15W 300°C MAXI OVEN
002		531038300	RHD DOOR WHEEL HOLDER F.MULTIF-OVEN
002		537025000	OVEN LOW.HEATING EL.W1200 V230 CF62
002		531038200	SPIT FOR MULTIF. NEW OVEN CF-62
002		533085100	GRID FOR SPIT SUPPORT MULT.OV.CF-62
002		531012801	OVEN GRID CF-62
002		531037800	SUPPORT GRID OVEN NEW CF-62E
002		536018300	GRIP FOR ROTATING SPIT
002		534008901	OVEN DRIPPING-PAN CF-62
002		531012501	COMPLETE OVEN DOOR CF-62
002		536023600	GASKET FOR GLASS DOOR CF-62E
002		539023500	ADHESIVE GRAD.DISC *E.MULTIF.TERM.
002		536006501	NEW OVEN DOOR HANDLE CF-62
002		536021800	DOOR HANDLE SPACER FOR MAXI OVEN
002		536011101	INTERNAL GLASS FOR OVEN DOOR CF-62
002		531007101	OVEN DOOR HINGE FOR CF-62
002		536011201	EXTERNAL GLASS FOR OVEN DOOR CF-62
002		537019200	SELECTOR FOR MULTIFUNCTION OVEN
002		539024000	SIGN PLATE FOR OVEN SELECTOR
002		536013800	KNOB D.70 BLACK 6*5 WITH SPRING
002		537014100	WHITE WARNING LIGHT 250V
002		539023300	ADHESIVE GRADUATED DISC FOR KNOB
002		537014200	GREEN WARNING LIGHT 250V
002		537024700	SINGLEPH.THERMOST.45-250°C MULTI.OV
002		539023900	SIGN PLATE FOR OVEN TEMPERATURE
002		537019300	TIMER FOR MULTIFUNCTION OVEN
002		544015500	INNER DOOR OF OVEN CF-62
002		539023800	SIGN PLATE FOR OVEN TIMER
002		539023400	ADHESIVE GRADUATED DISC F.KNOB