


MAGIC SNACK 60

CUCINE / RANGES / HERDE / CUISINIÈRES / N° 0309

CF-62

CF-62EM CF-62ET CF-62EM/A CF-62ET/A

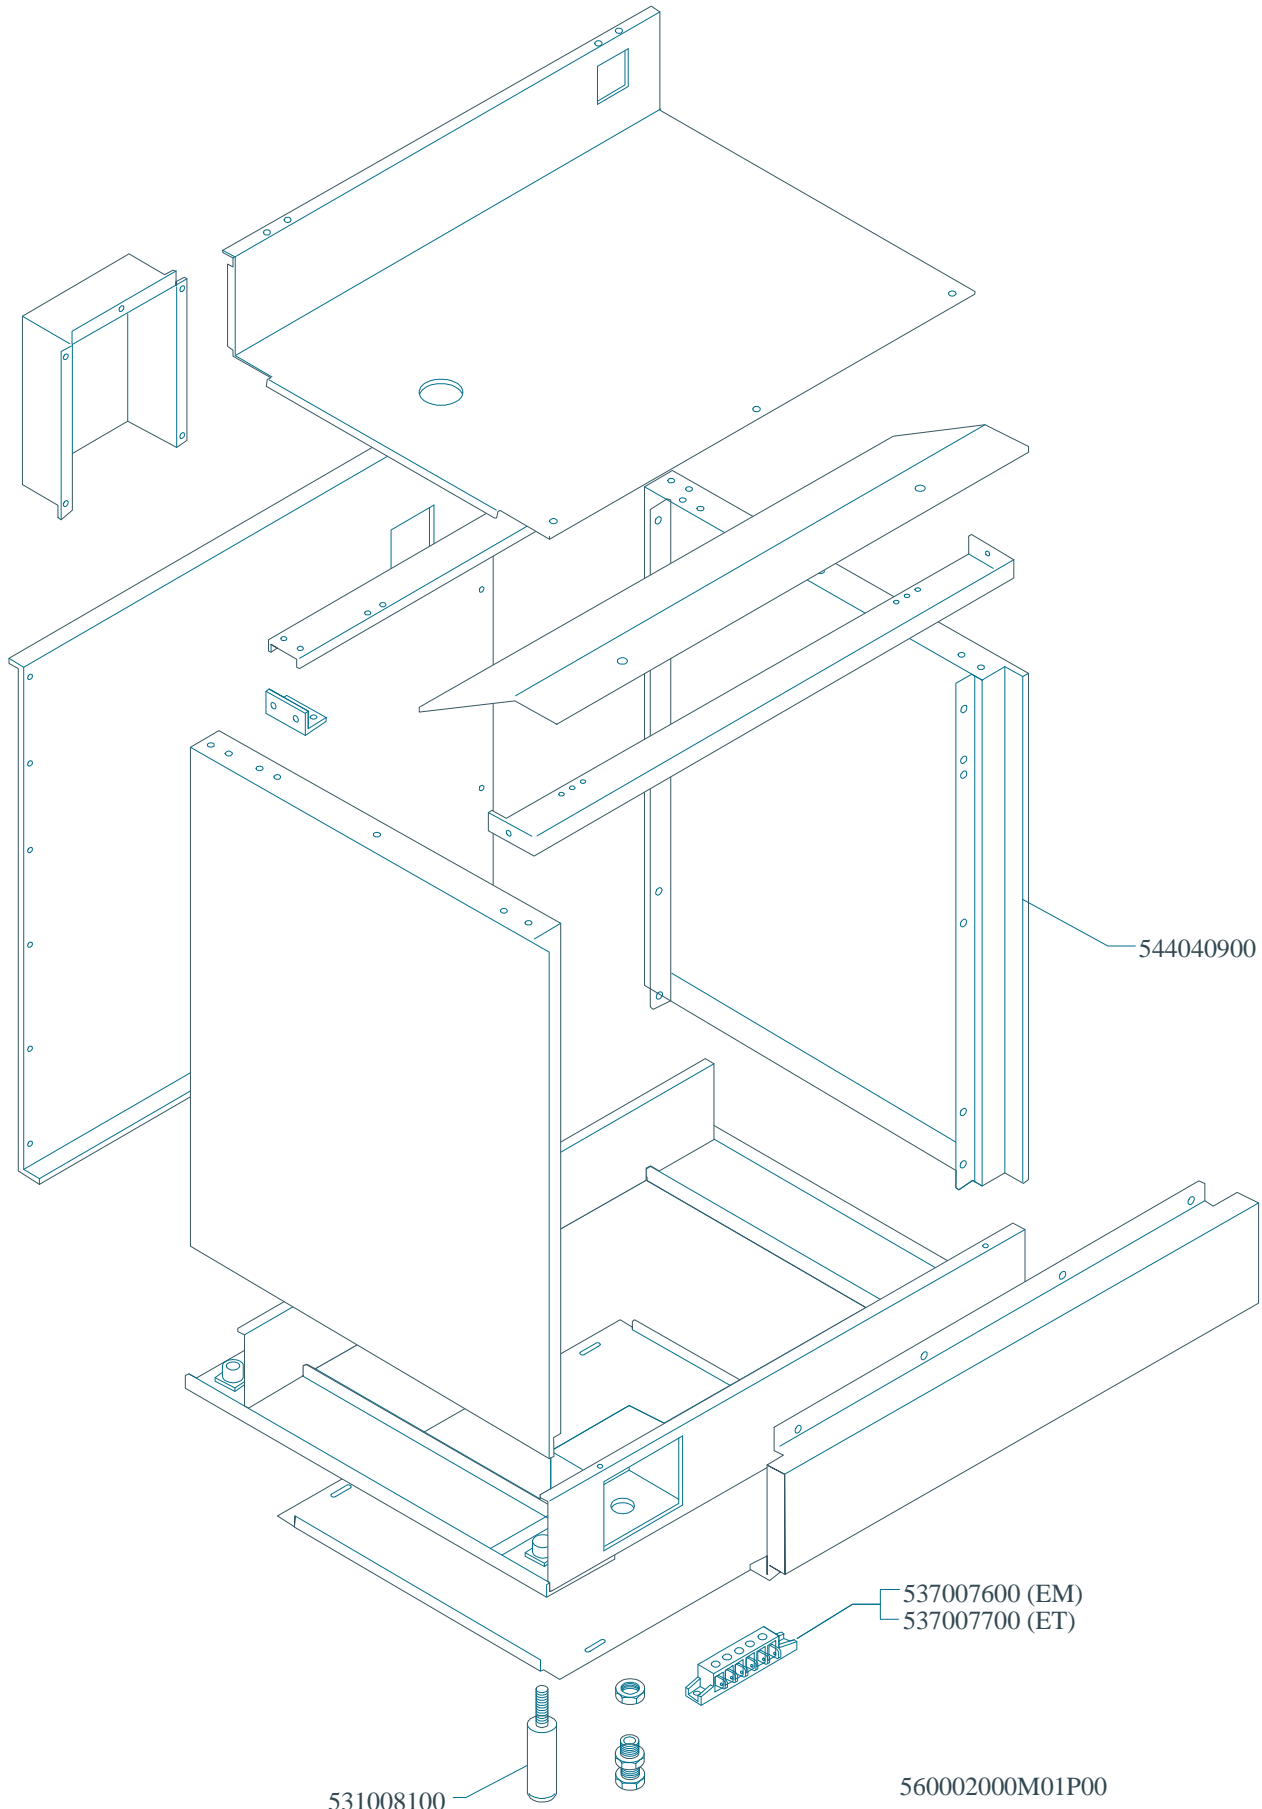


MAGIC SNACK 60

CUCINE / RANGES / HERDE / CUISINIÈRES / N° 0309
CF-62

CF-62EM CF-62ET CF-62EM/A CF-62ET/A

Vedi Pagina See Page Siehe Seite Voir Page Ver Pàgina	1 90
---	---

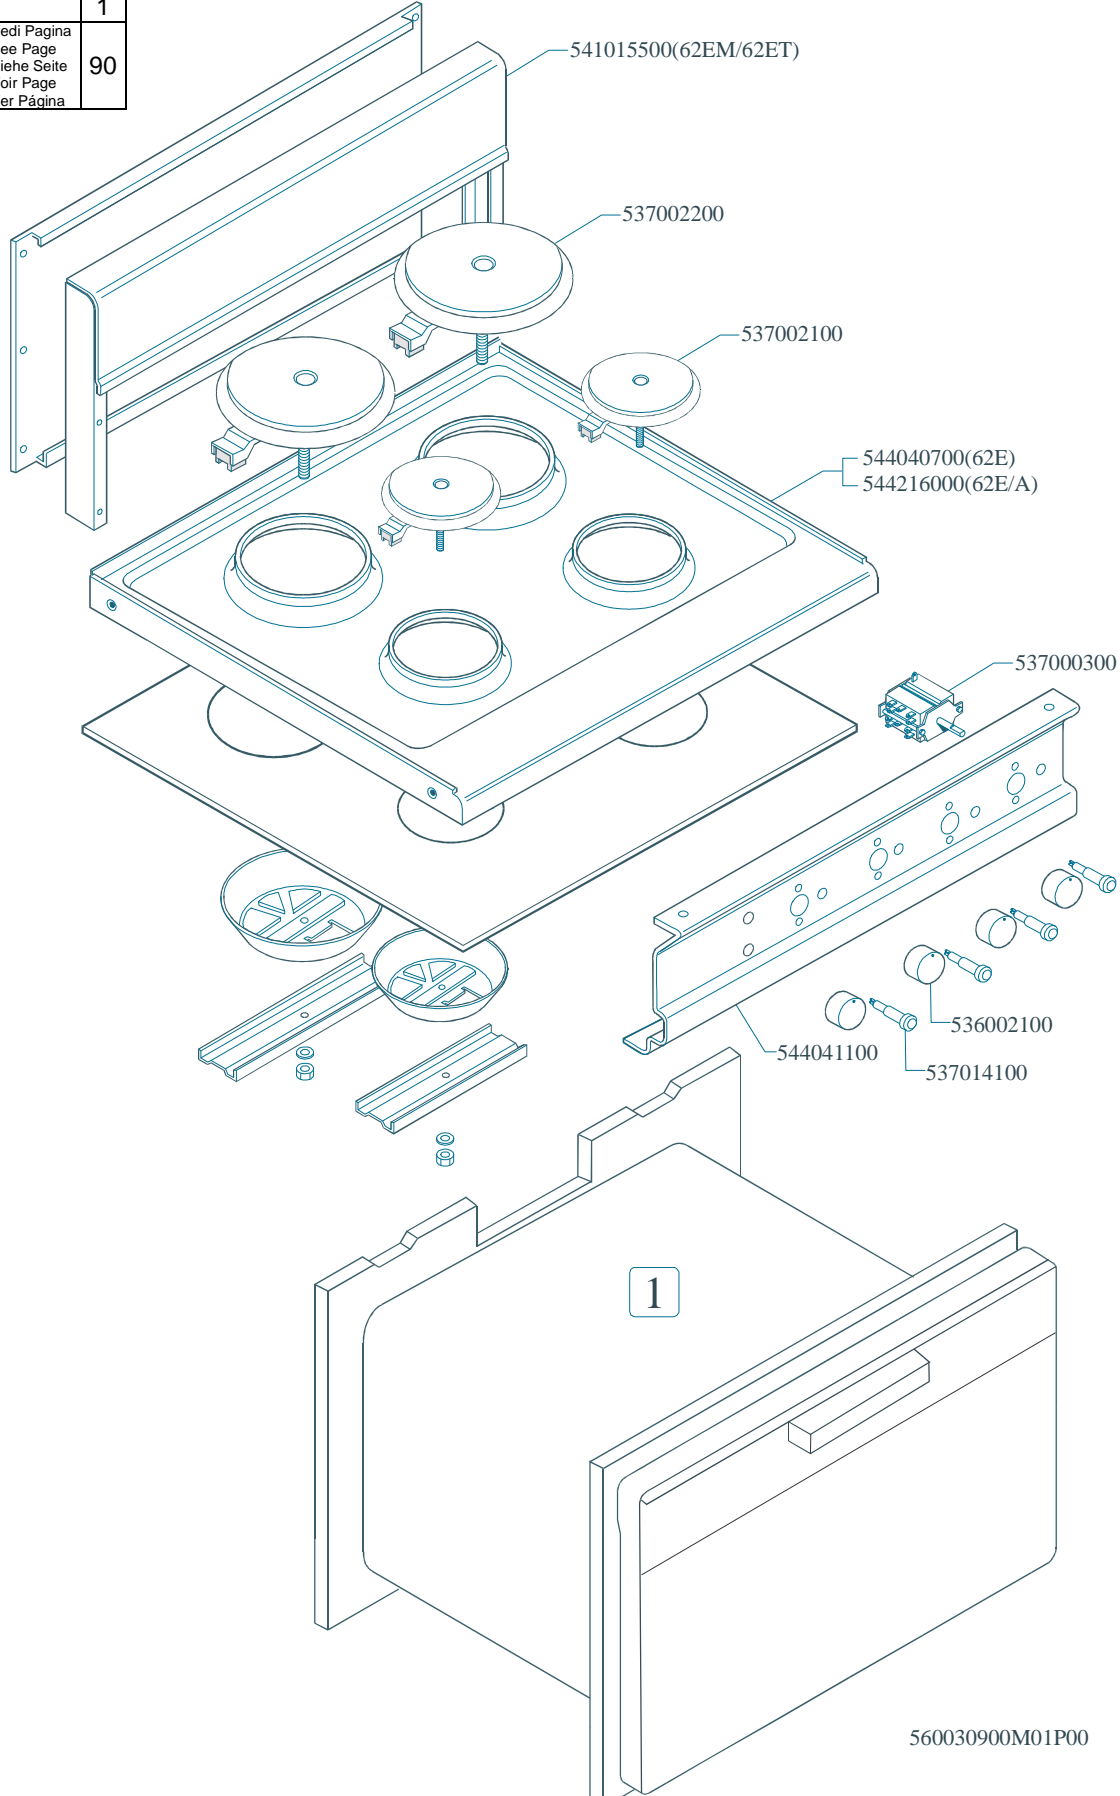


560030900M01P00

MAGIC SNACK 60

CUCINE / RANGES / HERDE / CUISINIÈRES / N° 0309
FORNO / OVEN / BACKOFEN / FOUR / CF-62

ELETTRICO MULTIFUNZIONE / MULTIFUNCTION ELECTRIC / MULTIFUNKTIONS
ELEKTRO / ELECTRIQUE A FONCTIONS MULTIPLES

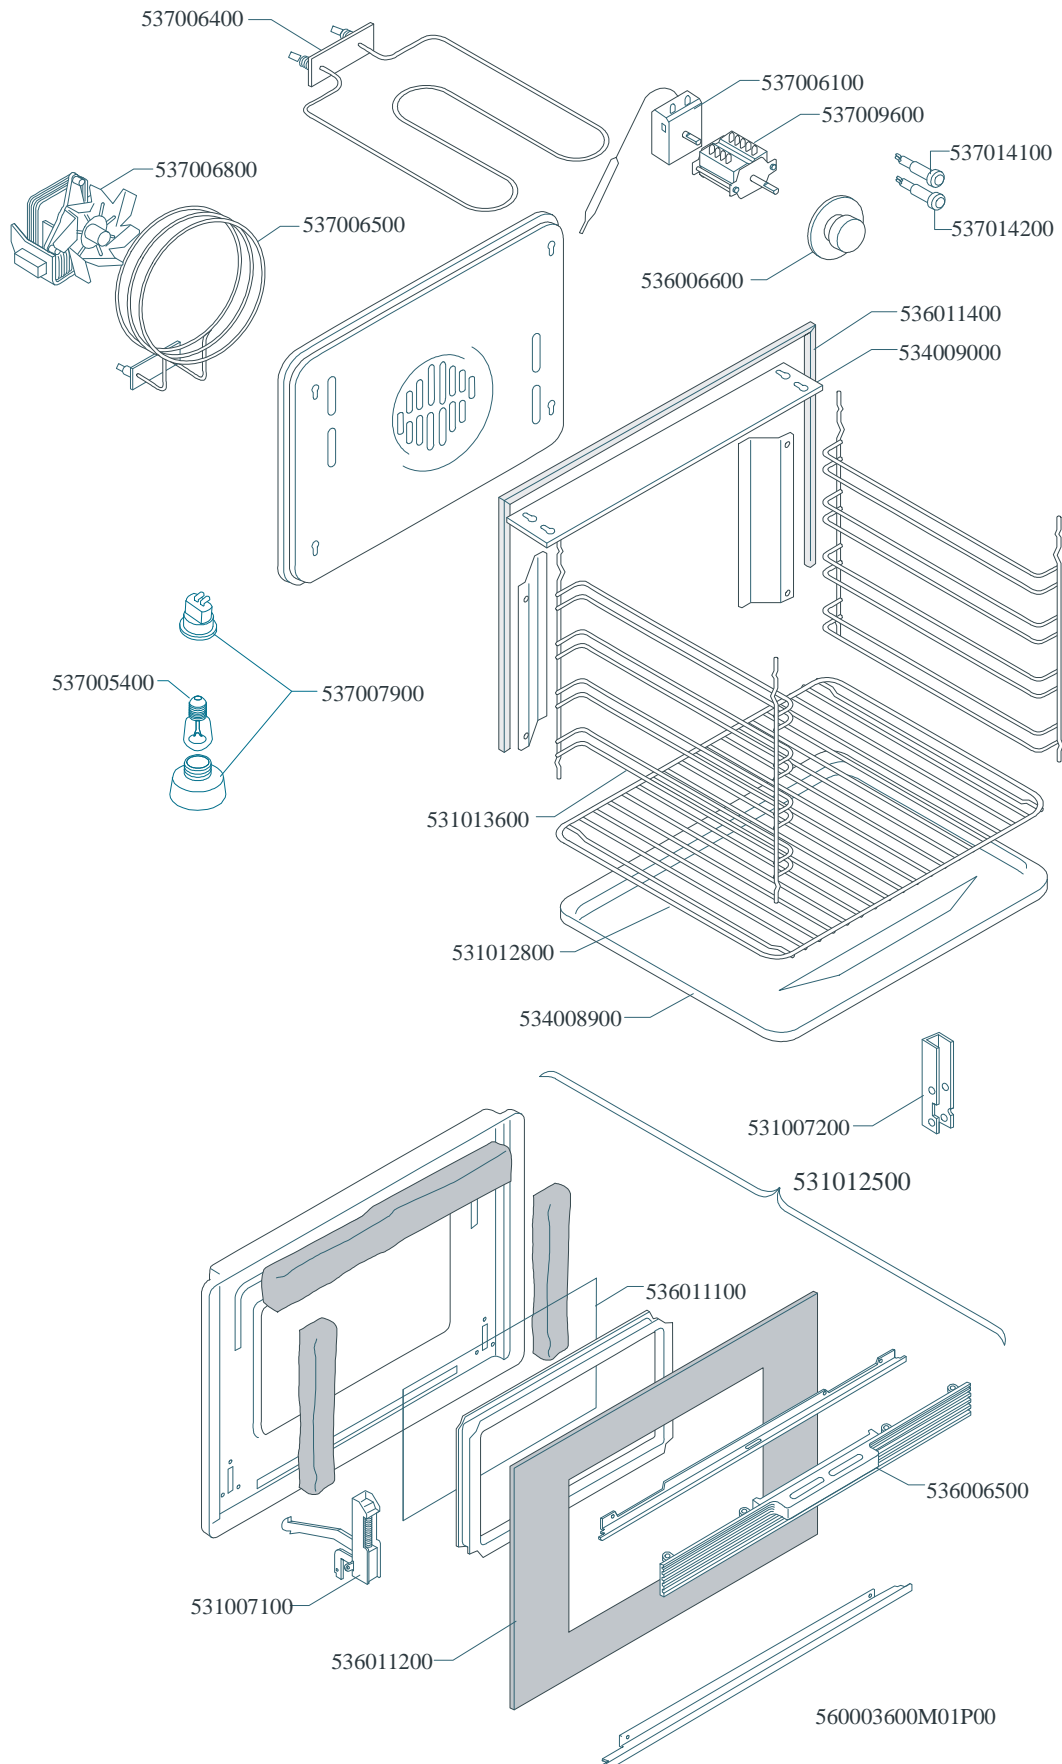

Page	Pos	Code	Description
001		544040900	SIDE RANGE CF-62
001		531008100	ADJUSTABLE LEG H9 CHROME
001		537007600	TERMINAL BLOCK SINGLEPHASE 40A
002		541015500	NEUTRAL SPACER 62
002		537002200	ELECTRICAL PLATE D.180 W1500 V230
002		537002100	ELECTRICAL PLATE D.145 W1000 V230
002		544040700	UPPER PLATE CF-62E
002		537000300	COMMUTATOR 7 POSITIONS S.49 16A
002		536002100	KNOB 7 POSITIONS SNACK
002		544041100	CONTROL PANEL CF-62E
002		537014100	WHITE WARNING LIGHT 250V
003		537006400	OVEN HEATING EL.W1500 V220 CF-62
003		537006800	FAN 240V CF-62
003		537006500	HEATING ELEMENT W2000 V230 CF-62
003		537006100	OVEN THERMOSTAT CF-62/8/10
003		537009600	OVEN COMMUTATOR CF-62E
003		537014100	WHITE WARNING LIGHT 250V
003		537014200	GREEN WARNING LIGHT 250V
003		536006600	OVEN KNOB CF-62
003		536011400	OVEN GASKET CF-62
003		534009000	GRILL PROTECTION CF-62
003		537007900	OVEN BULB-SOCKET
003		537005400	OVEN BULB 15W 300°C
003		531013600	SIDE GRID FOR MAXI/VENTILATED OVEN
003		531012800	OVEN GRID CF-62
003		534008900	OVEN DRIPPING-PAN CF-62
003		531007200	DOOR WHEEL HOLDER CF-62
003		531012500	COMPLETE OVEN DOOR CF-62
003		536011100	INTERNAL GLASS FOR OVEN DOOR CF62
003		536006500	OVEN DOOR HANDLE CF-62
003		531007100	OVEN DOOR HINGE FOR CF-62
003		536011200	EXTERNAL GLASS FOR OVEN DOOR CF-62