



7,8 Kw
4,0 Kw

C2FZ
T2FZ
C2FZP
T2FZP

4,0 Kw	7,8 Kw	7,8 Kw	7,8 Kw
7,8 Kw	4,0 Kw	7,8 Kw	7,8 Kw

C4FZ
T4FZ
C4FZP
T4FZP

C4FZSP

4,0 Kw	4,0 Kw	7,8 Kw
7,8 Kw	4,0 Kw	4,0 Kw

C6FZ
T6FZ
C6FZP
T6FZP

C6FZ-C6FZP
T6FZ-T6FZP

C4FZ-C4FZP
C4FZSP
T4FZ-T4FZP

C2FZ-C2FZP
T2FZ-T2FZP

A = GPL / LP gas / Gaz liquide / Flüssiggas
B = Gas metano / Natural gas / Gaz naturel / Erdgas

3E05-002

C2FZ - C4FZ - C6FZ
C2FZP - C4FZP - C6FZP - C4FZSP
T2FZ - T4FZ - T6FZ
T2FZP - T4FZP - T6FZP



Pezzi/Pieces Pieces/Anzahl							Pos.	Validità dalla matricola Validité du numéro matricule Validity from serial number Gültigkeit ab der (Seriennummer)	Validità alla matricola Validity up to serial number Validité au numéro matricule Gültigkeit bis zur (Seriennummer)	Codice Code Artikel Nummer	Descrizione	Description	Description	Beschreibung
C2FZ* ¹ T2FZ	C4FZ* ² T4FZ	C6FZ* ³ T6FZ	C2FZP* ⁴ T2FZP	C4FZP* ⁵ T4FZP	C6FZP* ⁶ T6FZP	C4FZSP								
			2	4	6	4	1		X13200	Dado fissaggio iniettore	Injector fastening nut	Ecrou de fixation injecteur	Befestigungsmutter Einspritzung	
1	2	3	1	2	3	2	2		1550Y63000	Griglia	Grid	Grille	Rost	
1	2	4	1	2	4		3		V00300	Spartifiamma 4,0 kW	Flame spreader 4,0 kW	Diffuseur de flamme 4,0 kW	Flammenverteiler 4,0 kW	
1	2	4	1	2	4		4		V00100	Corpo bruciatore 4,0 kW	Burner body 4,0 kW	Corps bruleur 4,0 kW	Brennerkörper 4,0 kW	
1	2	2	1	2	2	4	5		V00400	Spartifiamma 6/7,8 kW	Flame spreader 6/7,8 kW	Diffuseur de flamme 6/7,8 kW	Flammenverteiler 6/7,8kW	
1	2	2	1	2	2	4	6		V00200	Corpo bruciatore 6/7,8 kW	Burner body 6/7,8 kW	Corps bruleur 6/7,8 kW	Brennerkörper 6/7,8 kW	
			1	2	4		7P		V01800	Coppa bruciatore 4,0 kW P	Scoop burner 4,0 kW P	Godet bruleur 4,0 kW P	Brennerschale 4,0 kW P	
1	2	4					7N		V02000	Coppa bruciatore 4,0 kW S/P	Scoop burner 4,0 kW S/P	Godet bruleur 4,0 kW S/P	Brennerschale 4,0 kW S/P	
			1	2	3	2	8		X13300	Termocoppia fuoco poster.	Rear ring thermocouple	Thermocouple feu poster.	Thermoelem. Hintere kochst.	
			1	2	3	2	9		X14200	Termocoppia fuoco anter.	Front ring thermocouple	Thermocouple feu anter.	Thermoel. Vordere kochst.	
			1	2	2	4	10P		V01900	Coppa bruciatore 6/7,8 kW P	Cup burner 6/7,8 kW P	Coupelle bruler 6/7,8 kW P	Brennerkappe 6/7,8 kW P	
1	2	2					10N		V02100	Coppa bruciatore 6/7,8 kW S/P	Cup burner 6/7,8 kW S/P	Coupelle bruler 6/7,8 kW S/P	Brennerkappe 6/7,8 kW S/P	
1	2	4	1	2	4		11A		X33700	Iniettore gpl fuoco 4,0 kW	Ring lpg injector 4,0 kW	Injecteur gpl feu 4,0 kW	Gasdüse gpl kochst. 4,0 kW	
1	2	4	1	2	4		11B		X34600	Iniettore metano fuoco 4,0 kW	Ring natural gas inject. 4,0 kW	Injecteur methane feu 4,0 kW	Gasdüse methan kochst. 4,0 kW	
2	4	6	2	4	6	4	12		V01100	Porta iniettore	Injector-holder	Porte-injecteur	Düsenträger	
						4	13A		X34400	Iniettore 7,8 kW /GPL	LPG injector 7,8 kW	Injecteur gaz GPL 7,8 kW	Gasdüse GPL 7,8 kW	
						4	13B		X35700	Iniettore 7,8 kW/metano	Natural gas injector 7,8 kW	Injecteur gaz methane 7,8 kW	Gasdüse Methan 7,8 kW	
1	2	2	1	2	2	4	14A		X34200	Iniettore 6,0 kW /GPL	LPG injector 6,0 kW	Injecteur gaz GPL 6,0 kW	Gasdüse GPL 6,0 kW	
1	2	2	1	2	2	4	14B		X35400	Iniettore 6,0 kW/metano	Natural gas injector 6,0 kW	Injecteur gaz methane 6,0 kW	Gasdüse Methan 6,0 kW	
2	4	6					15		X08000	Rubinetto fuoco 4,0 kW	Gas ring cock 4,0 kW	Robinet feu 4,0 kW	Gashan kochstelle 4,0 kW	
			2	4	6	4	16		X08100	Rubinetto fuoco 6,0/7,8 kW	Gas ring cock 6,0/7,8 kW	Robinet feu 6,0/7,8 kW	Gashan kochstelle 6,0/7,8 kW	
1	2	4	1	2	2		17X		X11000	By pass 4,0 kW	By pass 4,0 kW	By pass 4,0 kW	By pass 4,0 kW	
1	2	2	1	2	4	4	17Y		X04800	By pass 7,8 kW	By pass 7,8 kW	By pass 7,8 kW	By pass 7,8 kW	
			2	4	6	4	18A		X30000	Iniettore pilota/GPL	LPG injector	Injecteur gaz GPL	Gasdüse GPL	
			2	4	6	4	18B		X30300	Iniettore pilota/metano	Natural gas injector	Injecteur gaz methane	Gasdüse Methan	
2	4	6					19P		0000Y65103	Manopola per fuoco	Gas ring knob	Cle de commande pour feu	Drehknopf für kochstelle	
			2	4	6	4	19N		0000Y65101	Manopola per fuoco	Gas ring knob	Cle de commande pour feu	Drehknopf für kochstelle	
1	2	3	1	2	3	2	20		1550Y63500	Griglia scarico fumi	Smoke discharge grid	Grille évacuation des fumées	Rauchblässgitter	
2	4	6	2	4	6	4	21		V01500	Regolazione aria bruciatore	Burner air regulation	Règlage air bruler	Luftregelung Brenner	
			2	4	6	4	22		X14400	Pilota	Pilot	Veilleuse d'allumage	Zündflammenbrenner	
4	4	4	4	4	4	4	23C		X61000	Piedino	Foot	Pied	Fuss	
*4	*4	*4	*4	*4	*4	*4	23T		M06400	Piedino	Foot	Pied	Fuss	
2	4	6					24		V00900	Supporto candela e T.C.	Support	Appui	Unterstützung	
2	4	6					25		X14500	Candeletta	Ignition plu	Bouge	Glühkerze	
2	4	6					26		M02100	Piezo elettrico	Piezo-electric ignition	Piezo électrique	Piezoelektrischer Zünder	
1	2	3					27		X13900	Termocoppia fuoco poster.	Rear ring thermocouple	Thermocouple feu poster.	Thermoelem. Hintere kochst.	
1	2	3					28		X14100	Termocoppia fuoco anter.	Front ring thermocouple	Thermocouple feu anter.	Thermoel. Vordere kochst.	
			2	4	6	4	29		X13100	Bicono	Bicone	Bicône	Bicône	