


IPERLOTUS 90


ELETTRICO / ELECTRIC / ELEKTRO / ELECTRIQUE

BRF-94ET BRF-98ET


1	
Vedi Pagina See Page Siehe Seite Voir Page Ver Página	130

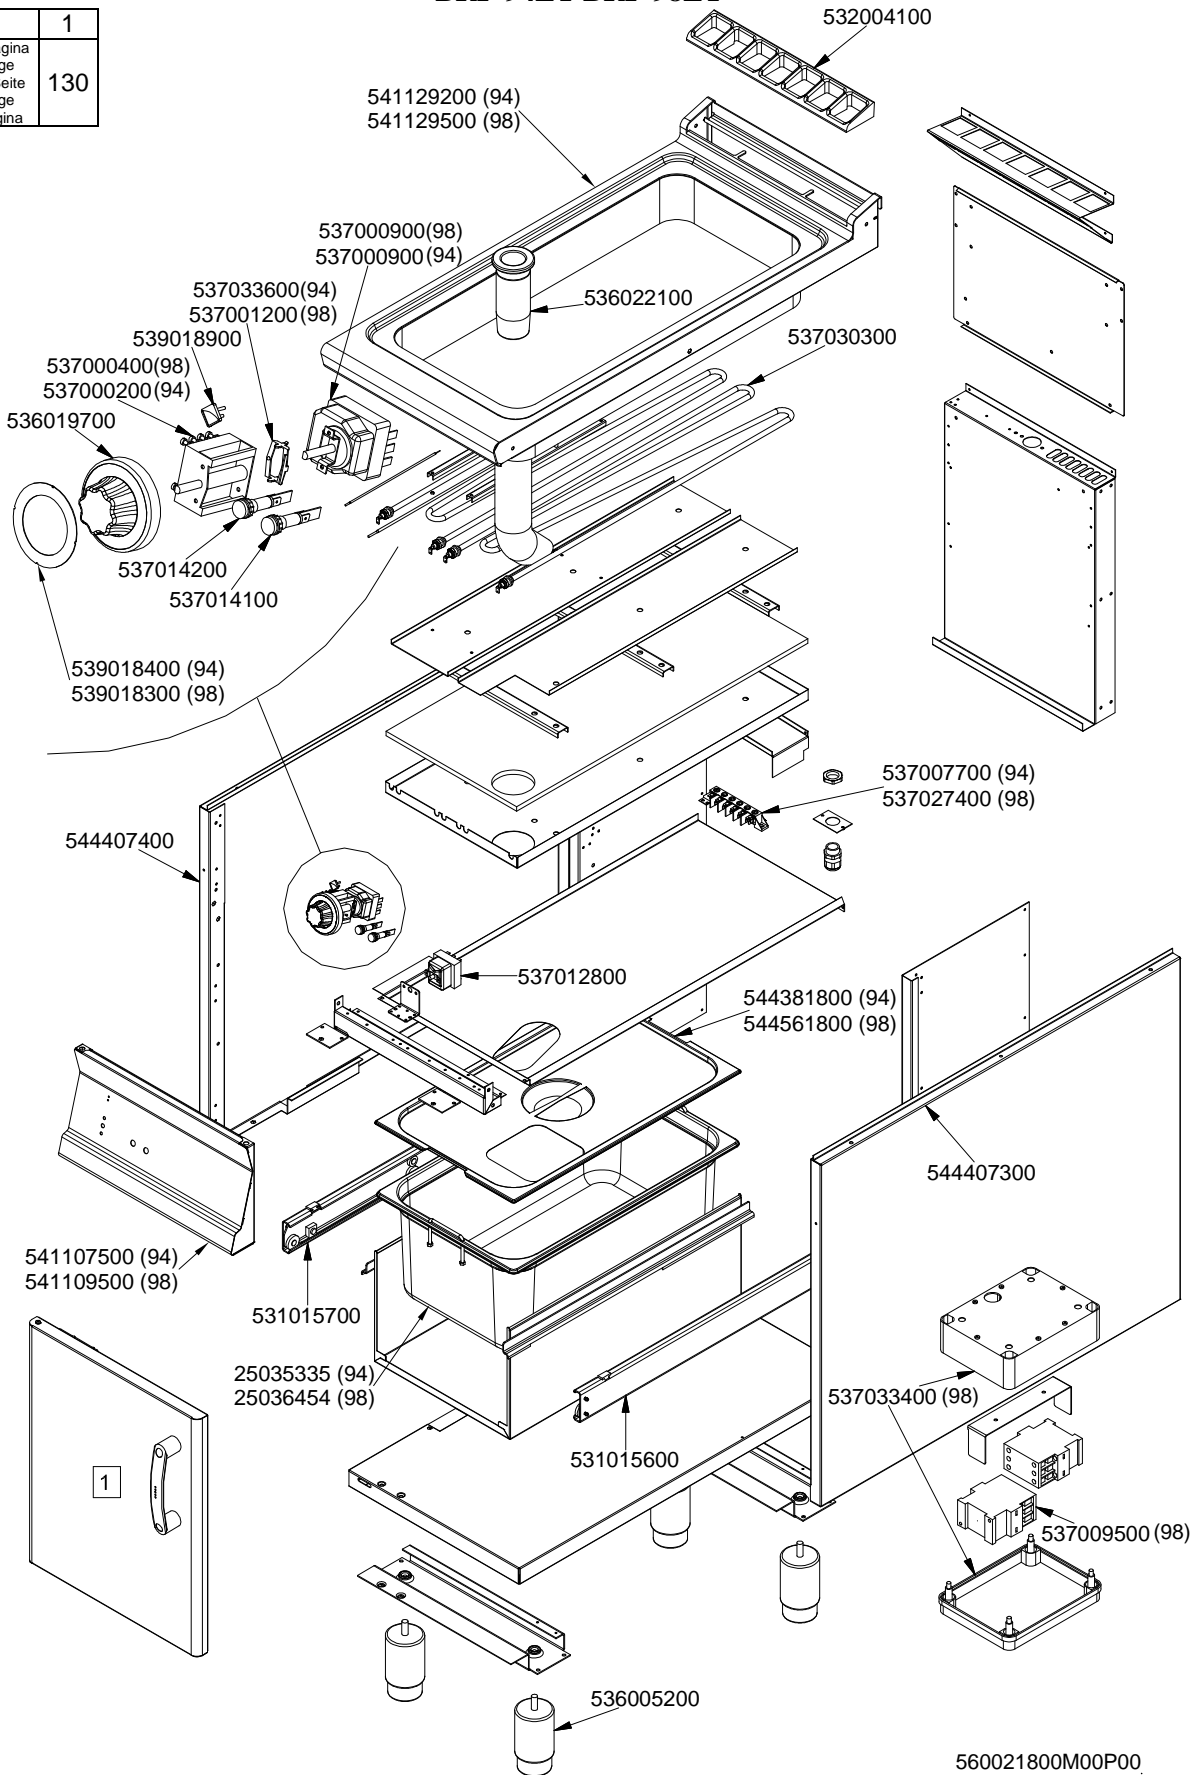


PORTE / DOORS / FLÜGELÜREN / PORTES N°≤0601

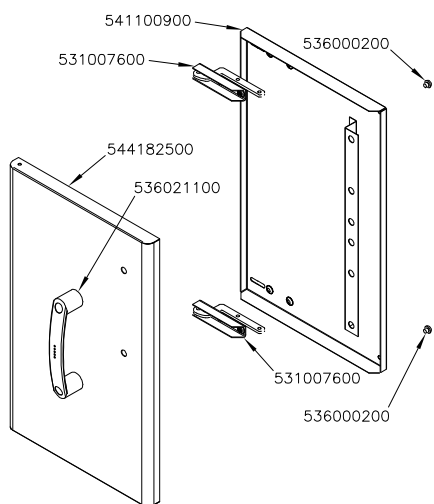


P-73/93 SX

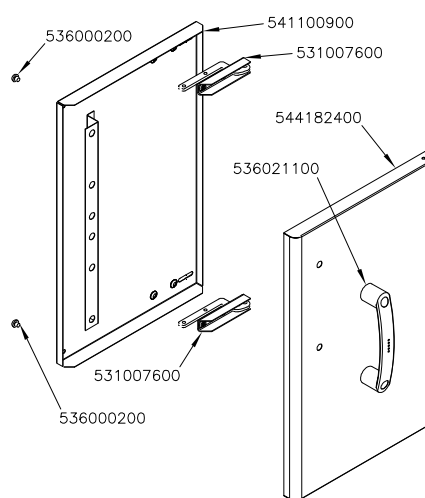


P-73/93 DX

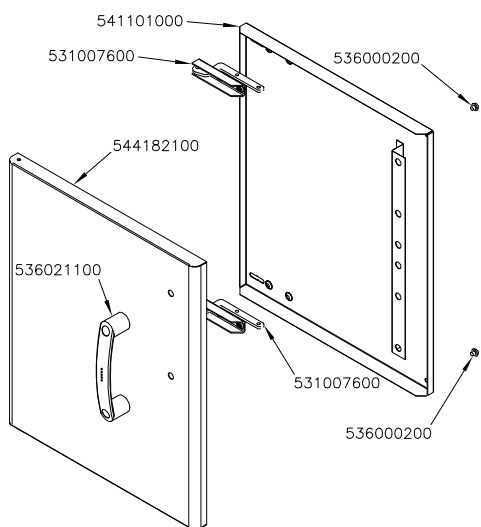

P-74/94 SX

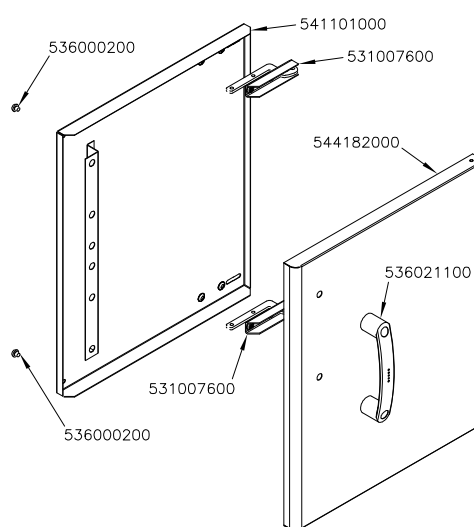

P-74/94 DX

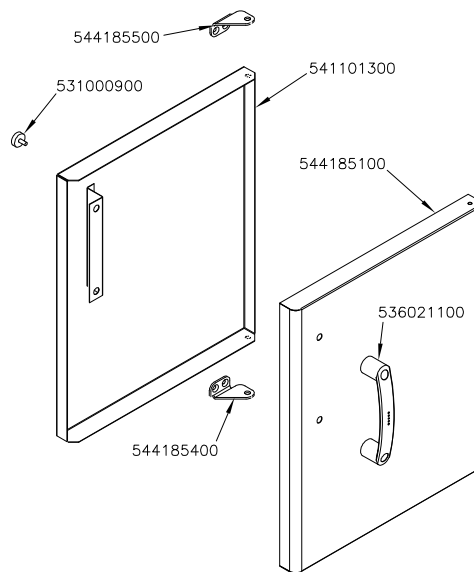

P-74/94 DX CF

560012800M00P00

Page	Pos	Code	Description
001		532004100	FLUE GRID L=370 70LINE (RAF)
001		536022100	PLUG FOR BRF BASIN
001		544381800	GN1/1 LID BRF W/MANUAL DISCHARGE
001		531015600	RHD TELESCOPIC GUIDE RS50 L=570
001		531015700	LHD TELESCOPIC GUIDE RS50 L=570
001		537012800	SAFETY THERMOSTAT 420°C THREEPHASE
001		541129200	UPPER PLATE BRF-94E
001		541107500	CONTROL PANEL F13/18-74E
001		25035335	
001		537030300	HEATING EL. BRF 90 W2600 V230
001		537014200	GREEN WARNING LIGHT 250V
001		537014100	WHITE WARNING LIGHT 250V
001		539018400	ADHESIVE GRADUATED DISC FOR KNOB
001		537033400	EL.BOX 195X150+HOLE FOR BRF-78/98E
001		537009500	REMOTE CONTROL SWITCH 3RT102 35A 23
001		536005200	INOX LEG 2" 120-180 M10
001		544407300	RIGHT SIDE PANEL 90 LINE
001		544407400	LEFT SIDE PANEL 70 LINE
001		537007700	TERMINAL BLOCK THREEPHASE 40A
001		536019700	BLACK KNOB §70 PIN §6*5
001		537000200	COMMUTATOR 1 POS. 3PHASE S.49 16A
001		539018900	INDEX FOR KNOB
001		537001200	FIXING BRACKET FOR THERMOSTAT/COMM.
001		537000900	THERMOSTAT 50-320°C THREEPHASE
001		537033600	FIXING BRACKET FOR THERMOSTAT/COMM.
002		541100900	INNER DOOR 73
002		531007600	DOOR HINGE
002		536000200	D.12 H.4 BUMPER
002		544182500	RIGHT DOOR 73
002		536021100	BLACK HANDLE 70LINE + 2RED POINTS
002		531007800	
002		544182400	RIGHT DOOR 73
002		541101000	INNER DOOR 74
002		544182100	LEFT DOOR 74
002		544182000	RIGHT DOOR 74
002		544185500	UPPER DOOR HINGE FOR COMPARTME CF70
002		531000900	MAGNET §22 KG.3 WITH DISK
002		541101300	RIGHT INNER DOOR 74 CF
002		544185100	RIGHT DOOR 74
002		544185400	LOWER DOOR HINGE FOR COMPARTME CF70