


COOKING APPLIANCES

COOKING LINES

TYPE: CT

Accessories
WITHOUT ACCESSORY

Spare parts manual

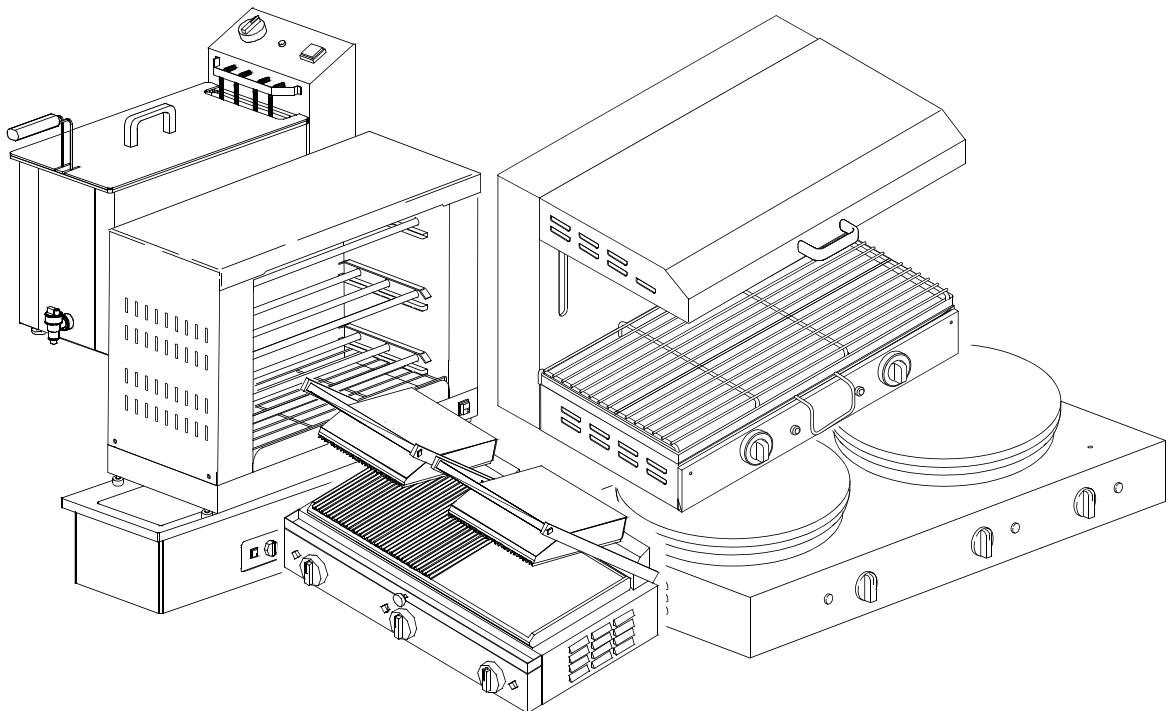

S/N:

Valid from:..04/2004

Rev.: 4.0

1. Spare parts


Toaster F6	7
Toaster F60	9
Toaster F60	11
Toaster F12	13
Toaster F120	15
Toaster F120	17
Crepe-X1	19
Crepe-X2	21
Single grill	23
Double grill.....	25
Salamander S1	27
Salamander S2.....	29
Bain Marie BM100-200-300	31
5M-6M/T-8T deep-fryer	33
5+5M-6+6M/T-8+8T deep-fryer	35

1.1 Voltage codes

Voltage code	Voltage
A	3/N/PE~400/230V 50Hz
B	~250V 16A 50Hz
C	3/N/PE~380/220V 50Hz
D	3/PE~200V 50-60Hz
F	2/PE 220-240V 50Hz
G	3/N/PE~415/240V 50Hz
H	3/PE~230V 50Hz
I	3/PE~220V 60Hz
J	3/PE~380 50Hz
K	3/PE~400V 50Hz
L	3/PE~415V 50Hz
M	3/PE~440V 60Hz
N	3/PE~460V 60Hz
O	3/PE~480V 60Hz
P	1/N/PE~220-240V 50Hz
R	2/PE~220-230V 60Hz
S	3/N/PE~400/230V 50Hz
T	3/PE~230V 60Hz

1.2 Product codes

Product code	Full name
Model codes	
Type codes	
50U	50U
50D	50D
50	50
52S	52S
52D	52D
52	52
53S	53S
53D	53D
53	53
54F	54F
54R	54R
54	54
55	55
59	59
CT	CT
BW	BW
Accessory codes	
wa	WITHOUT ACCESSORY

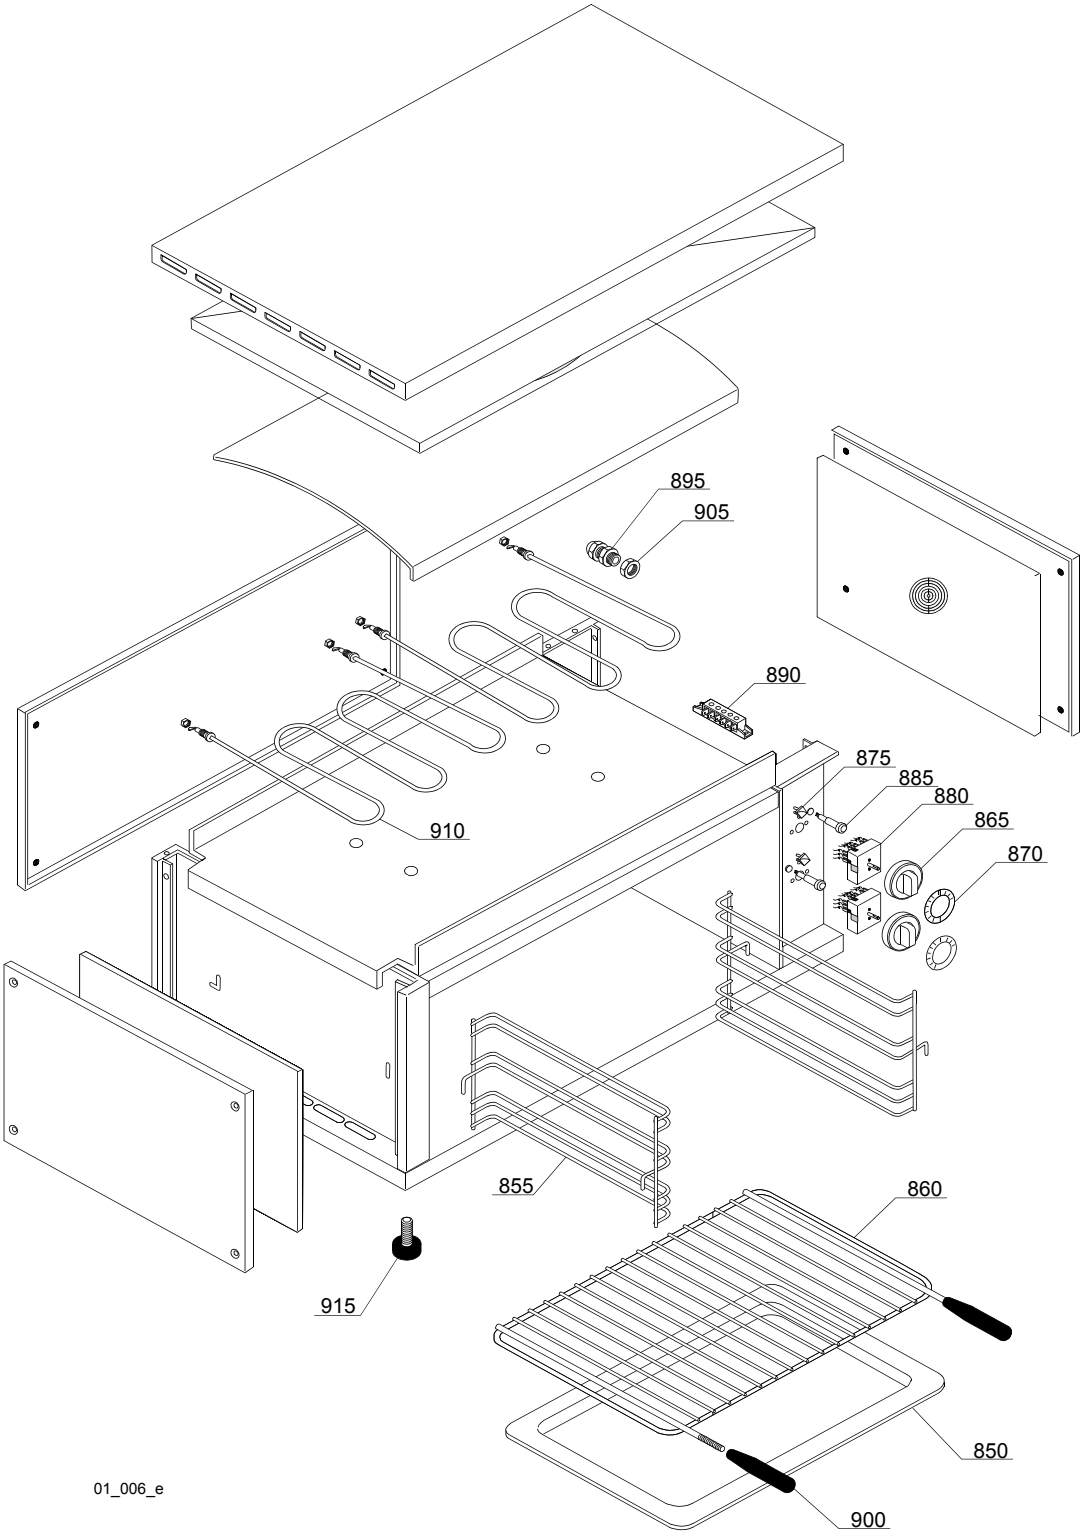 

01_006_e

Spare parts

ID	P-code	Model	Type	Accessory	Voltage	Description
MODULE:Salamander S1						
850	9101		BW,CT,54,54F			T-1/1 H20 tray
855	9102		BW,CT,54,54F			Grid holder
860	9103		BW,CT,54,54F			Grid
865	9104		BW,CT,54,54F			Black knob
870	9105		BW,CT,54,54F			Silk-screen processed disk
875	9106		BW,CT,54,54F			Knob index
880	9107		BW,CT,54,54F			Energy regulator
885	9108		BW,CT,54,54F			White light
890	9109		BW,CT,54,54F			3 phase terminal board
895	9110		BW,CT,54,54F			Cable holder
900	9111		BW,CT,54,54F			Handle
905	9112		BW,CT,54,54F			Hexagon lock nut
910	9113		BW,CT,54,54F			Heating element
915	9114		BW,CT,54,54F			Small foot