


# SUPERLOTUS 70<sub>2</sub>0601


ELETTRICO / ELECTRIC / ELEKTRO / ELECTRIQUE

## BRF-74ET BRF-78ET


	1
Vedi Pagina See Page Siehe Seite Voir Page Ver Página	94

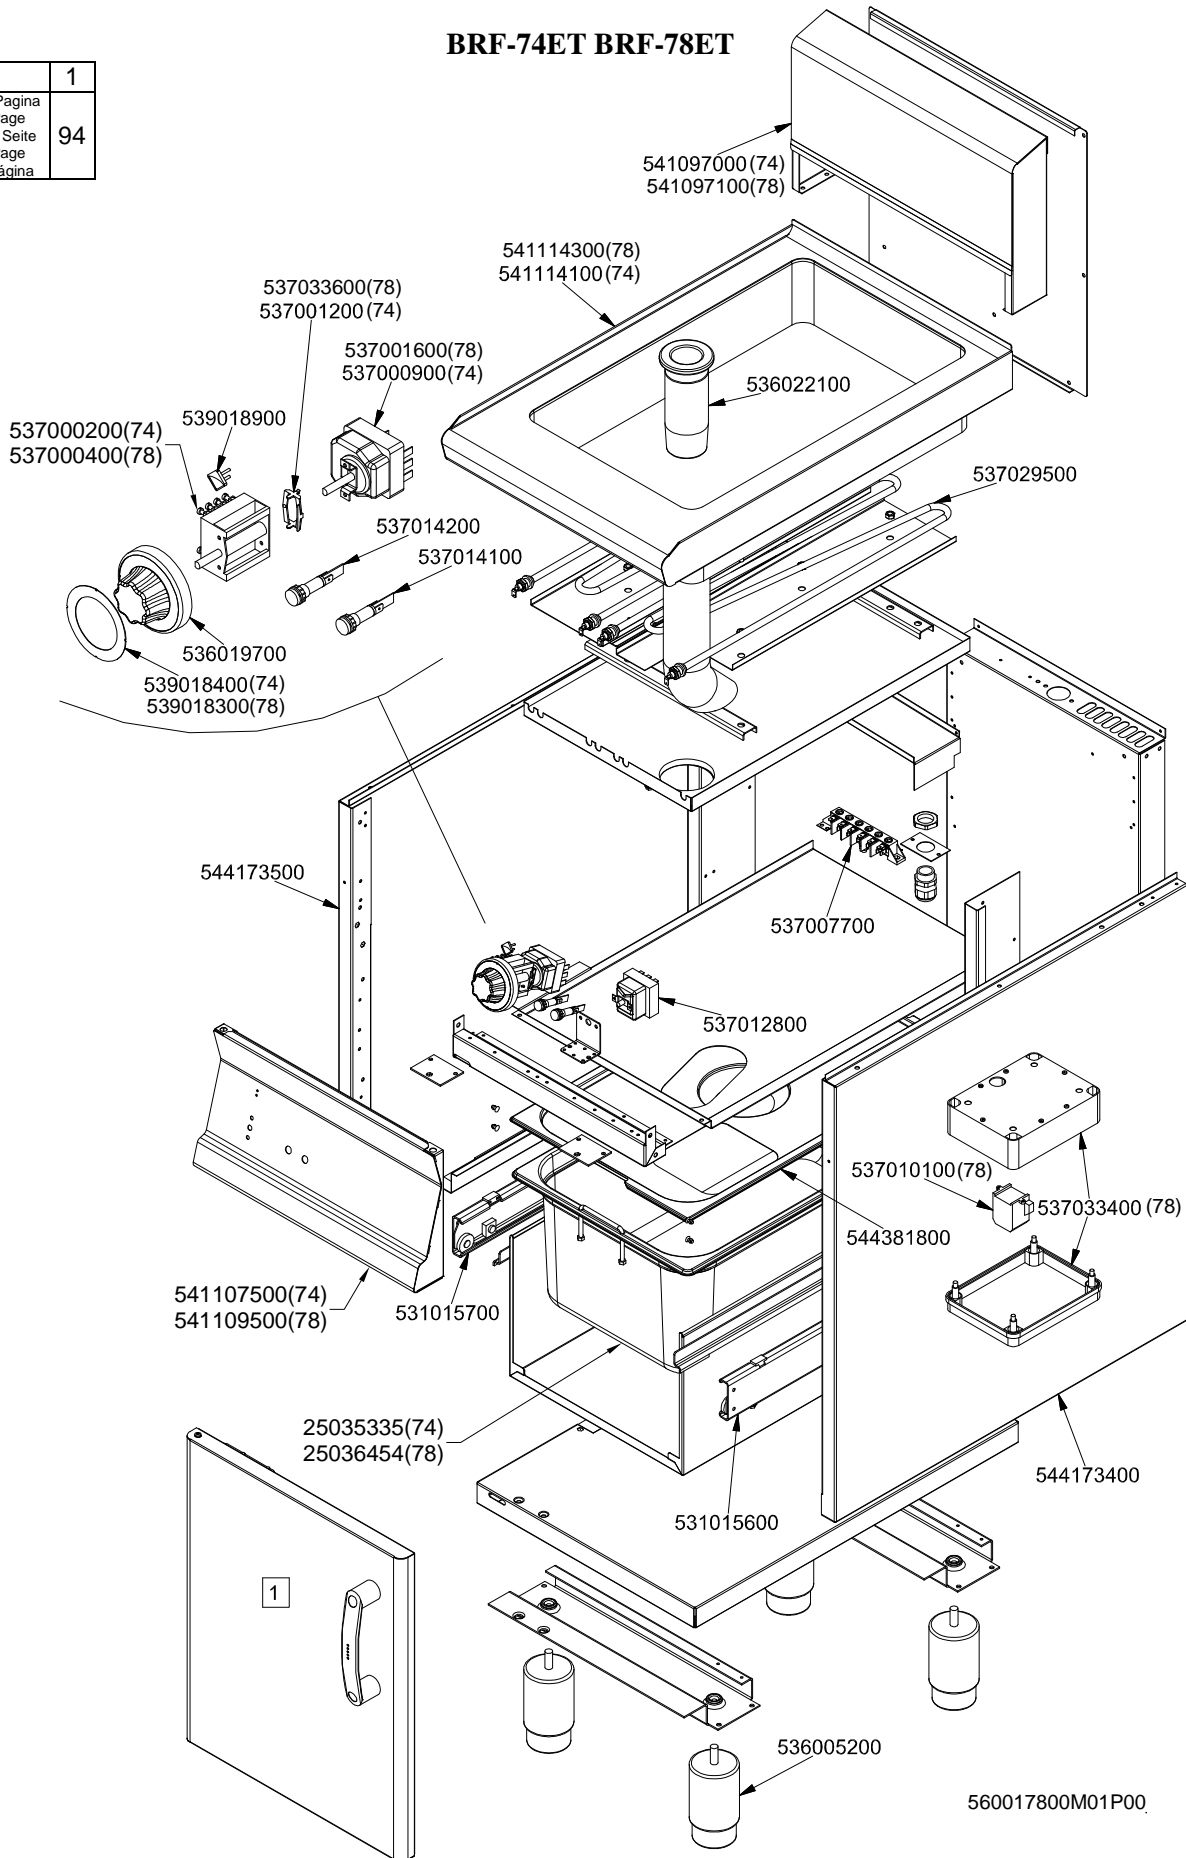


**PORTE / DOORS / FLÜGELÜREN / PORTES**

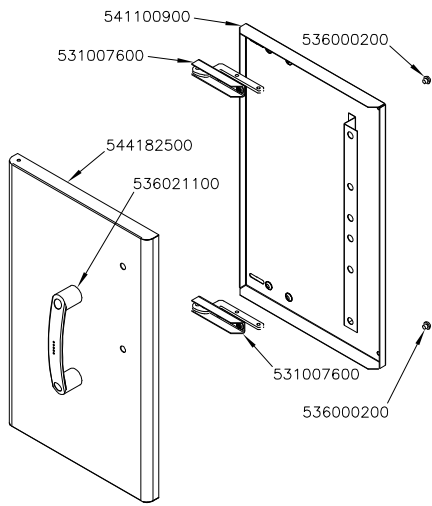


P-73/93 SX

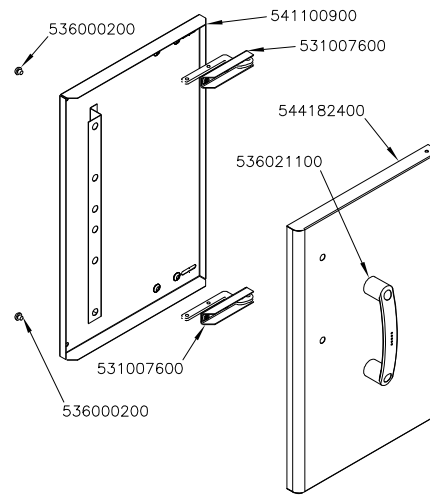

P-73/93 DX

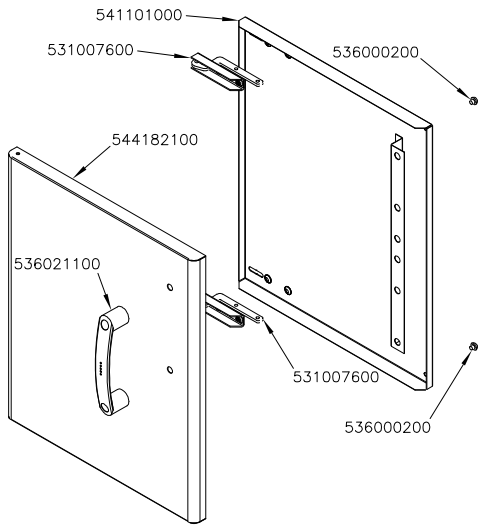


P-74/94 SX

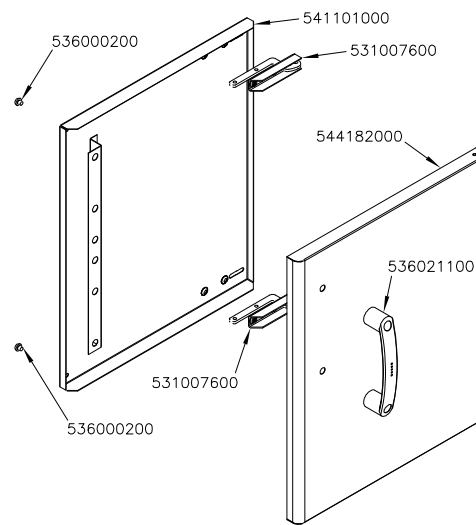

P-74/94 DX

560012800M00P00

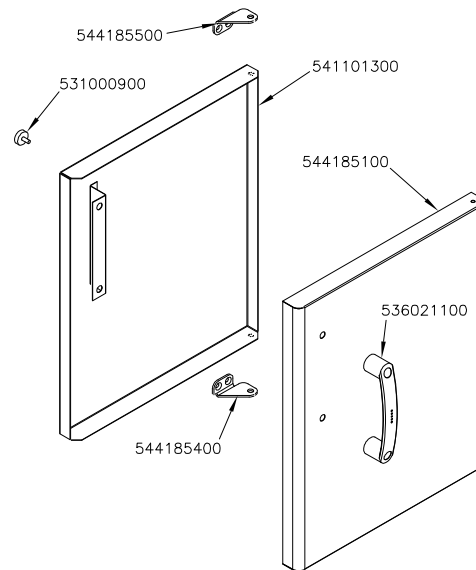

P-74/94 DX CF

Page	Pos	Code	Description
001		541097100	NEUTRAL SPACER 78
001		541114300	UPPER PLATE BRF-78E
001		537033600	FIXING BRACKET FOR THERMOSTAT/COMM.
001		537001600	THERMOSTAT 50-320°C SINGLEPHASE
001		539018900	INDEX FOR KNOB
001		537000400	COMMUTATOR 1POS.SINGLEPHASE S49 16A
001		537014200	GREEN WARNING LIGHT 250V
001		537014100	WHITE WARNING LIGHT 250V
001		536019700	BLACK KNOB §70 PIN §6*5
001		539018300	ADHESIVE GRADUATED DISC FOR KNOB
001		536022100	PLUG FOR BRF BASIN
001		537029500	HEATING EL. BRF 70 W2000 V230
001		544173500	LEFT SIDE PANEL S.70
001		537007700	TERMINAL BLOCK THREEPHASE 40A
001		537012800	SAFETY THERMOSTAT 420°C THREEPHASE
001		541109500	CONTROL PANEL BOILING PAN 70 EL.
001		531015700	LHD TELESCOPIC GUIDE RS50 L=570
001		25036454	
001		531015600	RHD TELESCOPIC GUIDE RS50 L=570
001		544173400	RIGHT SIDE PANEL S.70
001		536005200	INOX LEG 2" 120-180 M10
001		537010100	REMOTE CONTROL SWITCH 20A 230V
001		537033400	EL.BOX 195X150+HOLE FOR BRF-78/98E
001		544381800	GN1/1 LID BRF W/MANUAL DISCHARGE
002		541100900	INNER DOOR 73
002		536000200	D.12 H.4 BUMPER
002		531007600	DOOR HINGE
002		544182500	RIGHT DOOR 73
002		536021100	BLACK HANDLE 70LINE + 2RED POINTS
002		544182400	RIGHT DOOR 73
002		541101000	INNER DOOR 74
002		544182100	LEFT DOOR 74
002		544182000	RIGHT DOOR 74
002		544185500	UPPER DOOR HINGE FOR COMPARTME CF70
002		541101300	RIGHT INNER DOOR 74 CF
002		531000900	MAGNET §22 KG.3 WITH DISK
002		544185100	RIGHT DOOR 74
002		544185400	LOWER DOOR HINGE FOR COMPARTME CF70