

Rif./Ref.	Codice/Code	Sigla /Features	Descrizione/Description
+ 1	SL0134		Pusher
2	SL0136	(AB12T)	Hopper
2	SL0135	(AB12L)	Hopper
+ 3	SL0138		Knob
4	SL0140		Shaft
5	SL0139	ø25xø40x7	Oil seal
6	SL0131	6203 2RS	Bearing
7	SL3980		Sleeve
+ 8	SL2917		Tap
9	SL0132	ø40	Seeger
10	SL0130		Gear
11	SA3710	Assembly	Sleeve
12	SL0125		Gear
13	SL0124		Shaft
14	SA1014	400V/1Ph/50Hz	Stator
14	SA1015	230V/1Ph/50Hz	Stator
15	SL0128		Gear
16	SL0127	ø17xø40x7	Oil seal
17	SA6700	400V/1Ph/50Hz	Rotor
17	SA6600	230V/1Ph/50Hz	Rotor
18	SL0121	ø5x10	Pin
19	SL0119	ø52	Seeger
20	SL0118	6205 2RS	Bearing
21	SL0117		Calotte
22	SL1841	3Ph+Gnd	Electric cable
22	SL1671	1Ph+N+Gnd	Electric cable
+ 23	SL0106		Grip
24	SA1113		Lever press
25	SL3140		Washer
26	SL3138		Covering
+ 27	SL0885		Microswitch
28	SL0258		Stud

+ : ricambio consigliato / spare part suggested

Rif./Ref.	Codice/Code	Sigla /Features	Descrizione/Description
29	SL0108		Nut
30	SL2833		Cover
31	SL2573		Tap
32	SA1012	Assembly	Casing
33	SA2800		Roller
34	SL0174	(AB12T)	Container
34	SL0175	(AB12L)	Container
35	SL2988	(AB12T)	Base
35	SL0179	(AB12L)	Base
36	SL1668	PG11	Cable clamp
37	SL0142	Stainless-steel	Sleeve
37	SL3078	Food stuff treated steel	Sleeve
38	SL0180	(AB12T)	Container
38	SL0175	(AB12L)	Container
+ 39	SA5300	Stainless-steel	Screw shaft
39	SA5350	Food stuff treated cast-iron	Screw shaft
40	SL2521		Pivot
+ 41	//////////		Cutter
+ 42	//////////		Plate
43	SL0171	Stainless-steel	Handwheel
43	SL3327R0	Aluminium	Handwheel
+ 44	SL0891	Start-stop	Push button
45	SL0177	16µF	Condenser
46	SL0176		Bracket
+ 47	SL0883		Electronic card
48	SL2651	(AB12T)	Bottom
48	SL0226	(AB12L)	Bottom
49	SL0235		Foot
50	SL0054		Switch
51	SA1119	Assembly - 15/05/05 f.p.(*)	Casing

