


MAGIC SNACK 60

CUCINE / RANGES / HERDE / CUISINIÈRES / N° 0309

CF-62

CF-62EM CF-62ET CF-62EM/A CF-62ET/A

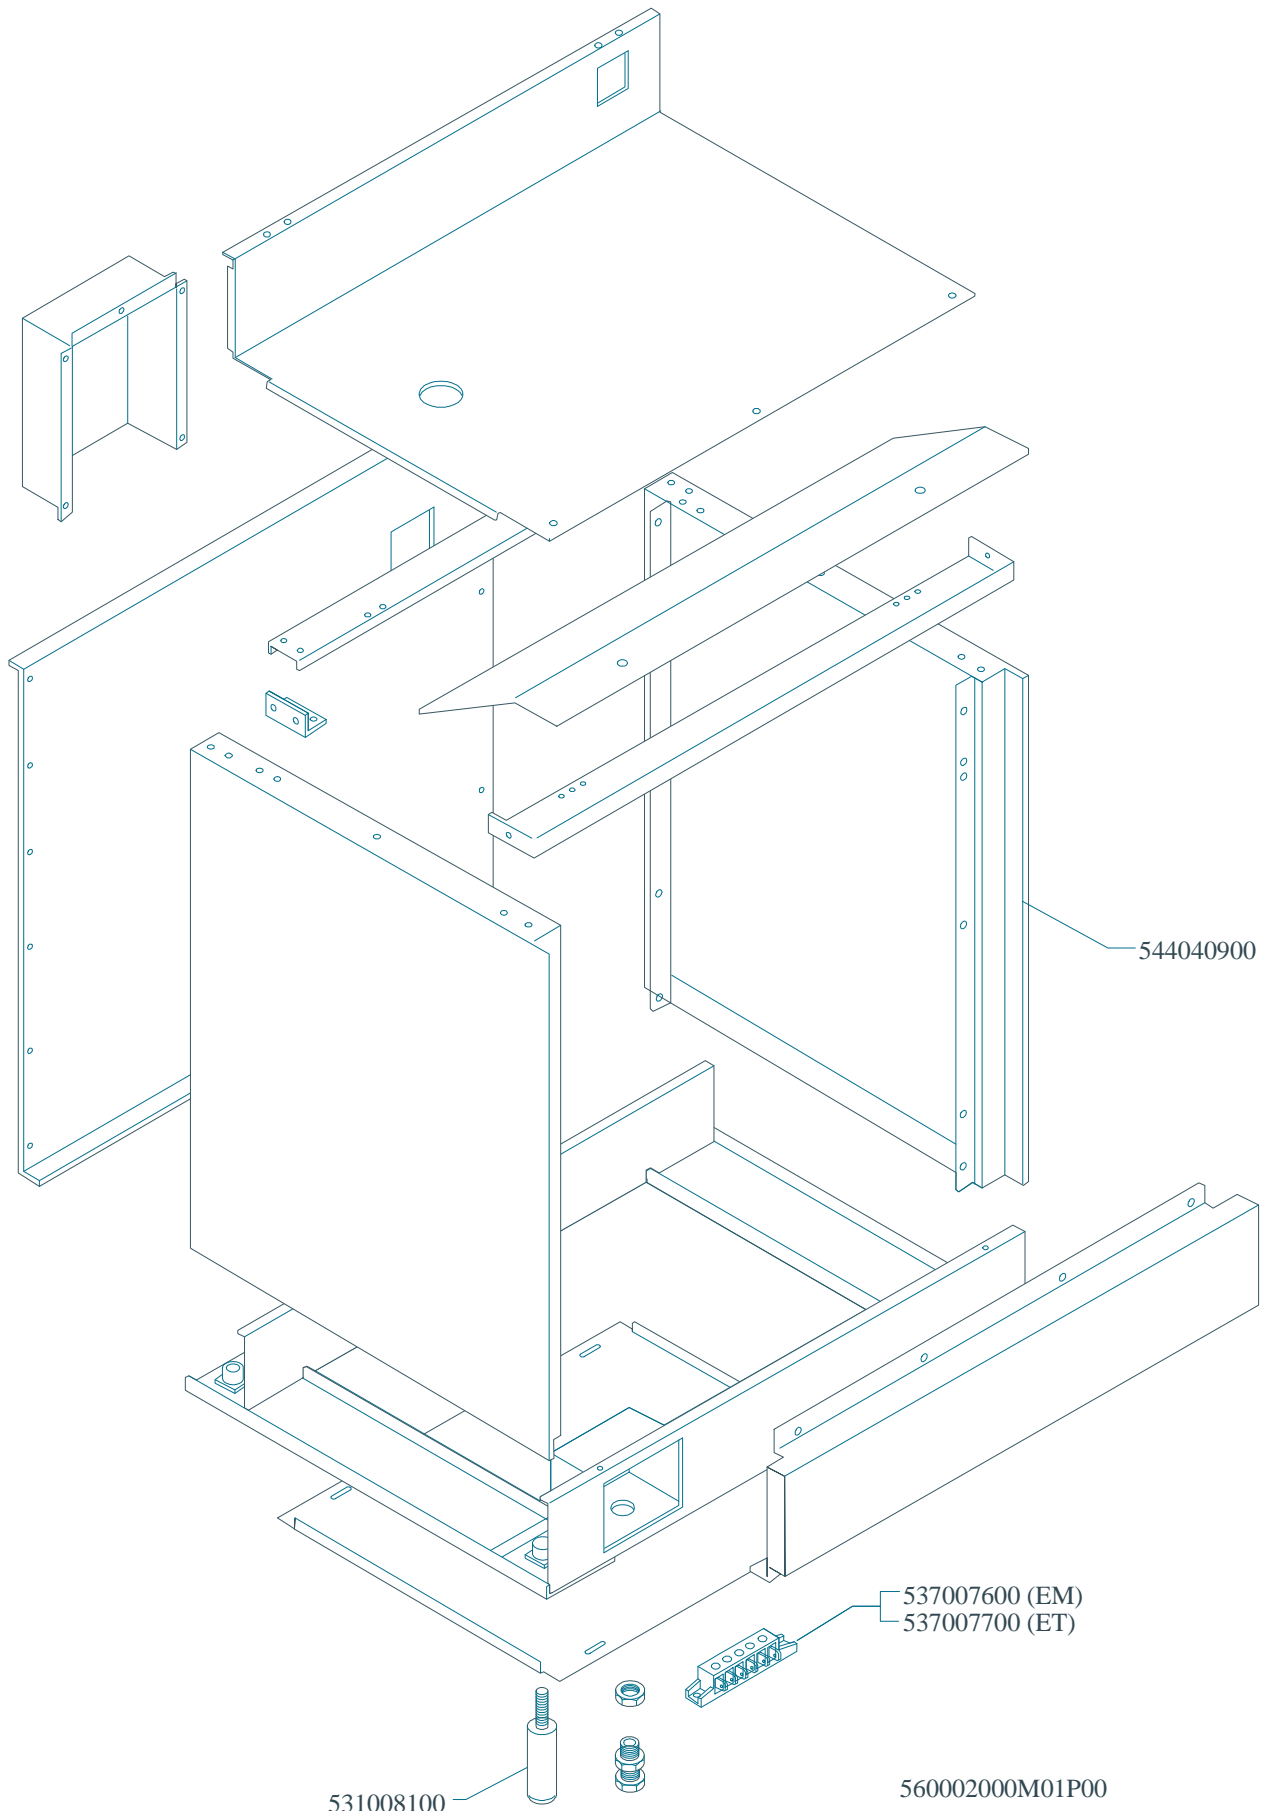


MAGIC SNACK 60

CUCINE / RANGES / HERDE / CUISINIÈRES / N° 0309
CF-62

CF-62EM CF-62ET CF-62EM/A CF-62ET/A

Vedi Pagina See Page Siehe Seite Voir Page Ver Pàgina	1 90
---	---

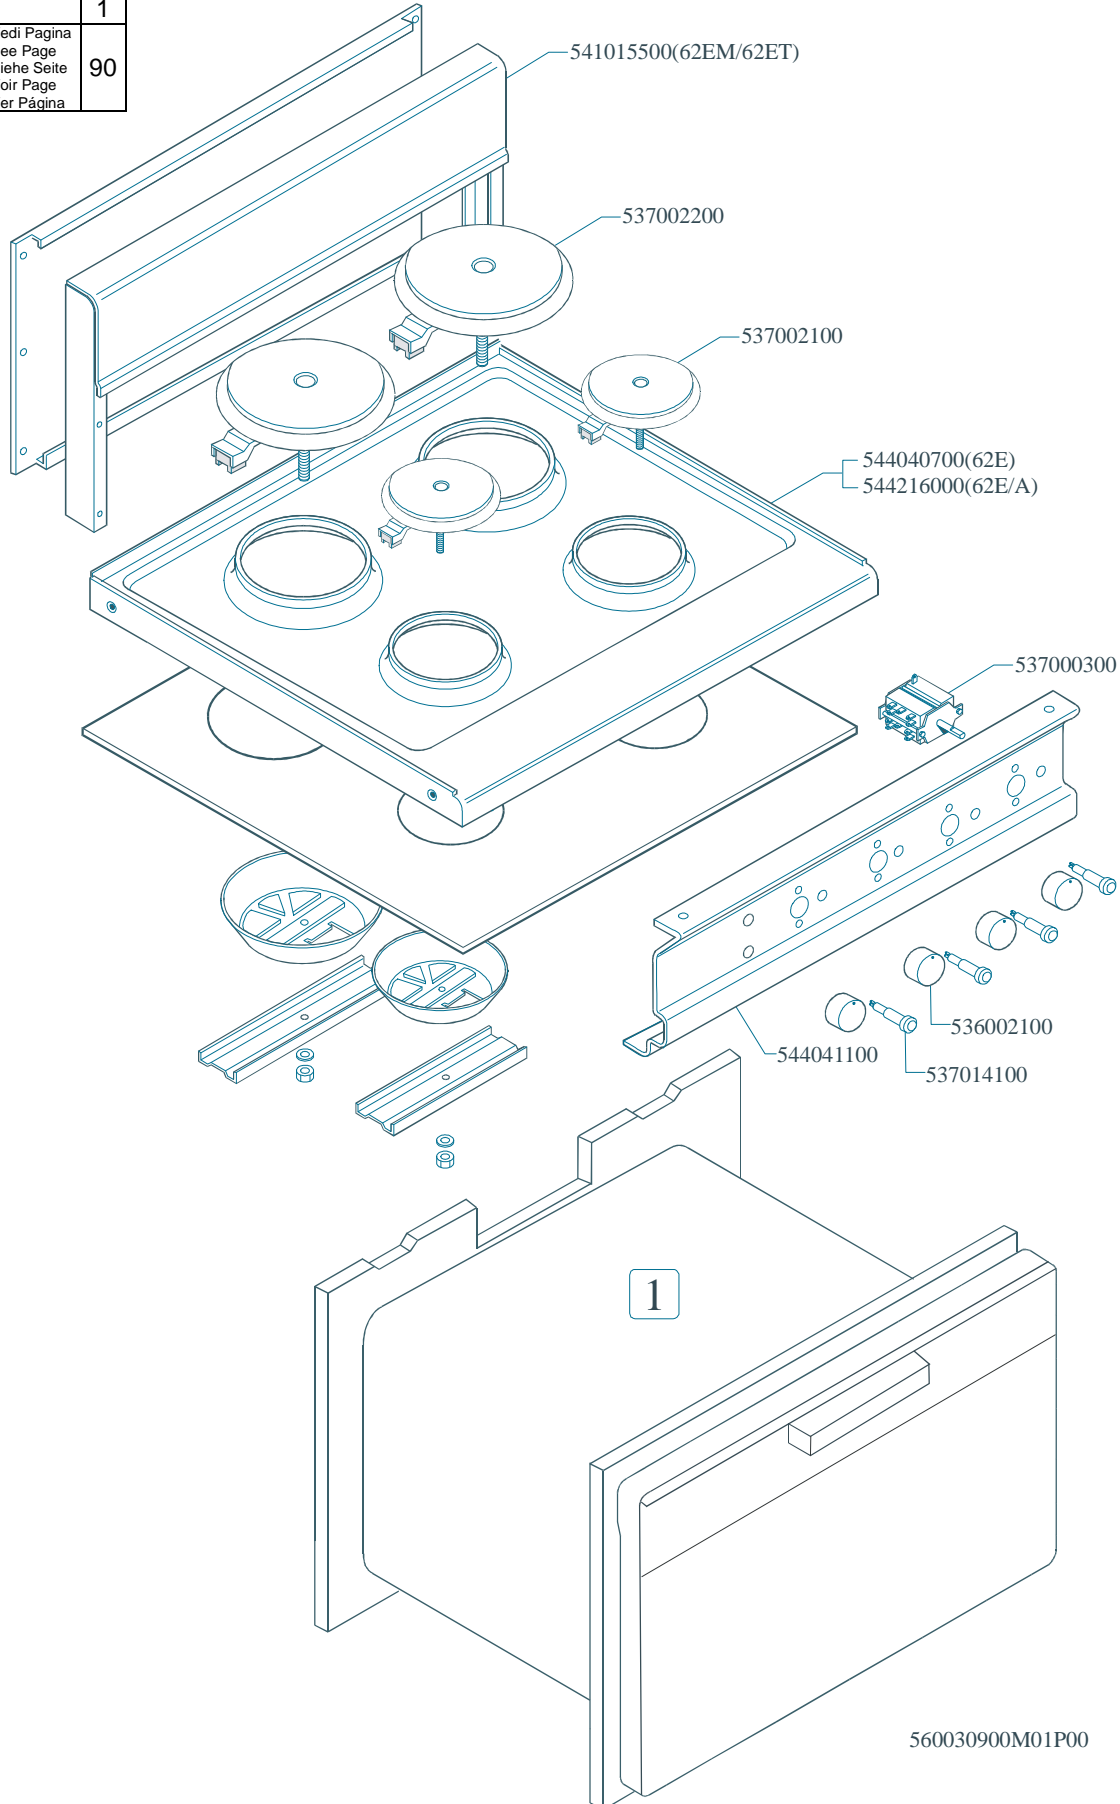


560030900M01P00

MAGIC SNACK 60

CUCINE / RANGES / HERDE / CUISINIÈRES / N° 0309
FORNO / OVEN / BACKOFEN / FOUR / CF-62

ELETTRICO MULTIFUNZIONE / MULTIFUNCTION ELECTRIC / MULTIFUNKTIONS
ELEKTRO / ELECTRIQUE A FONCTIONS MULTIPLES

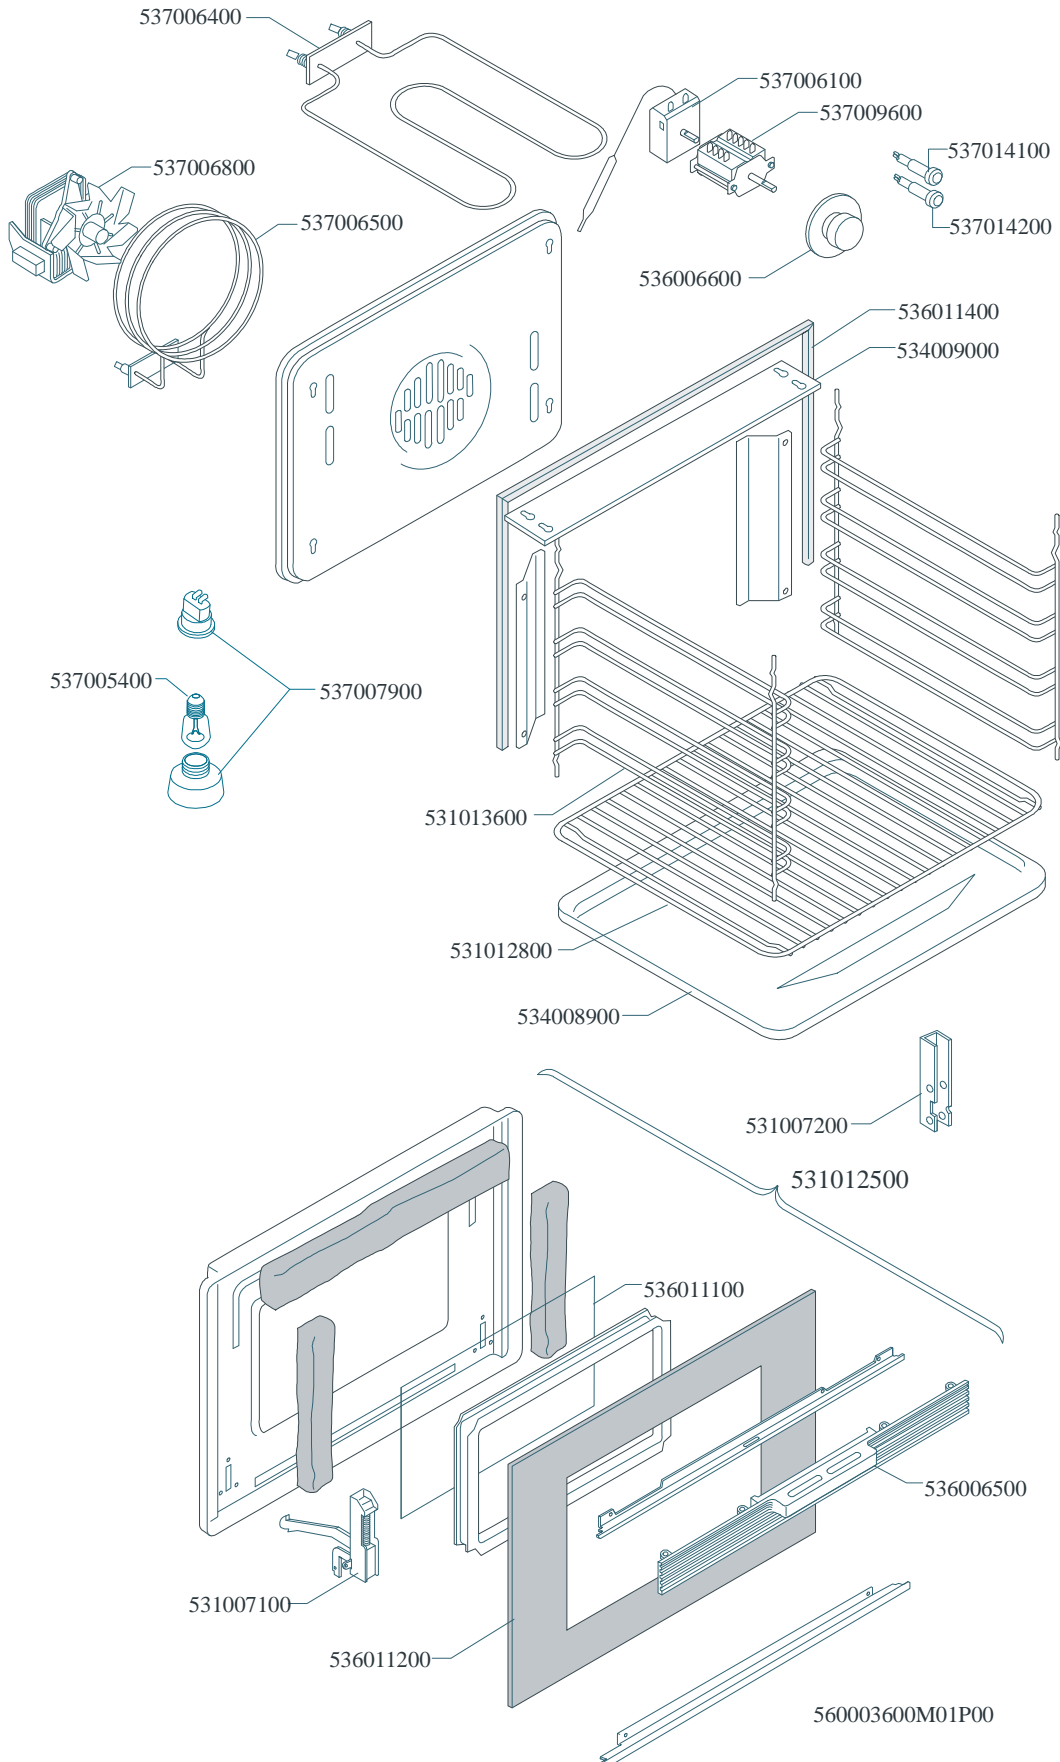

Page	Pos	Code	Description
001		544040900	SIDE RANGE CF-62
001		531008100	ADJUSTABLE LEG H9 CHROME
002		537002200	ELECTRICAL PLATE D.180 W1500 V230
002		537002100	ELECTRICAL PLATE D.145 W1000 V230
002		544040700	UPPER PLATE CF-62E
002		544216000	UPPER PLATE CF-62E/A (OLD MOD.)
002		537000300	COMMUTATOR 7 POSITIONS S.49 16A
002		536002100	KNOB 7 POSITIONS SNACK
002		544041100	CONTROL PANEL CF-62E
002		537014100	WHITE WARNING LIGHT 250V
003		537006400	OVEN HEATING EL.W1500 V220 CF-62
003		537006800	FAN 240V CF-62
003		537006500	HEATING ELEMENT W2000 V230 CF-62
003		537006100	OVEN THERMOSTAT CF-62/8/10
003		537009600	OVEN COMMUTATOR CF-62E
003		537014100	WHITE WARNING LIGHT 250V
003		537014200	GREEN WARNING LIGHT 250V
003		536006600	OVEN KNOB CF-62
003		536011400	OVEN GASKET CF-62
003		534009000	GRILL PROTECTION CF-62
003		537007900	OVEN BULB-SOCKET
003		537005400	OVEN BULB 15W 300°C
003		531013600	SIDE GRID FOR MAXI/VENTILATED OVEN
003		531012800	OVEN GRID CF-62
003		534008900	OVEN DRIPPING-PAN CF-62
003		531007200	DOOR WHEEL HOLDER CF-62
003		531012500	COMPLETE OVEN DOOR CF-62
003		536011100	INTERNAL GLASS FOR OVEN DOOR CF62
003		536006500	OVEN DOOR HANDLE CF-62
003		531007100	OVEN DOOR HINGE FOR CF-62
003		536011200	EXTERNAL GLASS FOR OVEN DOOR CF-62