



**Sparepart list for
M-1, M-2, DM-2, DM-4 and Office.**

Description	Article No.	Detail No.in Exploded view	M-1	M-2	DM-2	DM-4
			(Amount per unit)			
Hotplate	130300 round	1	1	2	2	4
Hotplate	1303001 quadrangular	1	1	2	2	4
Hotplate heater	160101	2	1	2	2	4
Support plate	130301	3	1	2	2	4
Support plate	251109-01 quadrangular	3	1	2	2	4
Cover and strainer	120404 round	4	1	1	2	2
Cover and strainer	1204041 quadrangular	4	1	1	2	2
Main switch	160801-04	5	1	0	2	0
Main switch	160802-04	5	0	1	0	2
Brewing lamp	160804-03	6	1	1	2	2
Plastic tank	120400	7	1	1	2	2
Spray nozzle	120412-01	8	1	1	2	2
Boiler compl.	120501-02	9	1	1	2	2
Non return valve	120612-02	10	1	1	2	2
Trip switch	160212-03	11	1	1	2	2
Cold water hose	150502	12	1	1	2	2
Hot water hose	150504	13	1	1	2	2
Pin	180170	14	1	1	2	2
Float	120402	15	1	1	2	2
Microswitch	160821	16	1	1	2	2
Timer	160205	17	1	1	2	2
Feet	120320-03	18	4	4	4	4
Solenoid single	120620-01	19	1	1	0	0
Solenoid dubble	120621-01	19	0	0	1	1
Connection lead	160522	20	1	1	0	0
Connection lead	160523	20	0	0	1	1
Connection tube	150503	not shown	1	1	1	1
Glass pot	110303	not shown	1	1	2	2
Filterholder/plastic	110200	not shown	1	1	2	2
Filterholder/stainless	1102001	not shown	1	1	2	2

Instructions

Coffee machine for manual water filling.
 In the tank there is a float which activates a microswitch when water is filled.
 Microswitch activates element unit and brewing starts.
 During brewing the brewlamp is lit.
 When the tank is empty the current to the boiler is cut and the brewlamp is switched off.
 The bottom hot plate is always heated when the machine is switched on.
 The upper hot plate is turned on with a separate switch.
 The machine is equipped with an overheating protection which is manually restored when the current has been cut.

