 


MAGIC SNACK 60

CUCINE / RANGES / HERDE / CUISINIÈRES / N° 0310
CF-62

CF-62EM CF-62ET CF-62EM/A CF-62ET/A

	1	2
Vedi Pagina See Page Siehe Seite Voir Page Ver Página	116	130

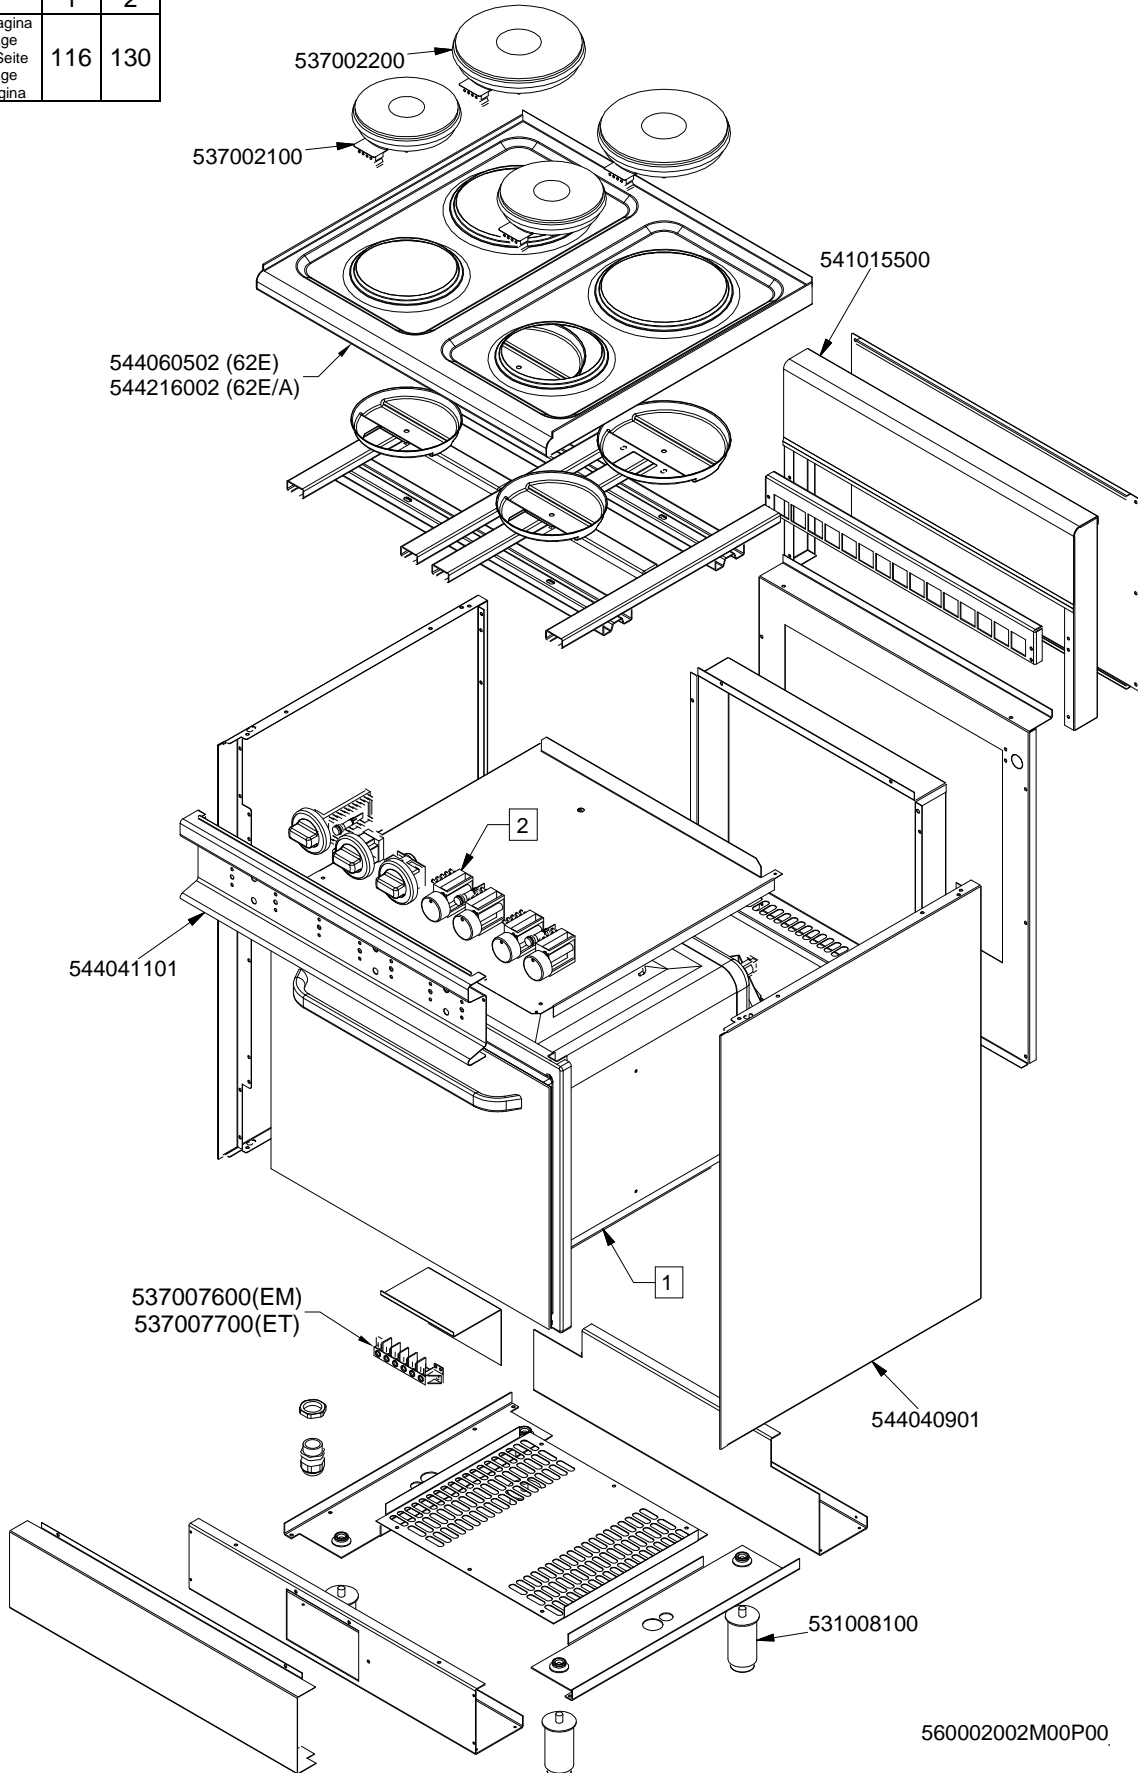

 
560002002M00P00

MAGIC SNACK 60


CUCINE / RANGES / HERDE / CUISINIÈRES / N° 0310

FORNO / OVEN / BACKOFEN / FOUR / CF-62

ELETTORICO MULTIFUNZIONE / MULTIFUNCTION ELECTRIC / MULTIFUNKTIONS
ELEKTRO / ELECTRIQUE A FONCTIONS MULTIPLES ≤0706

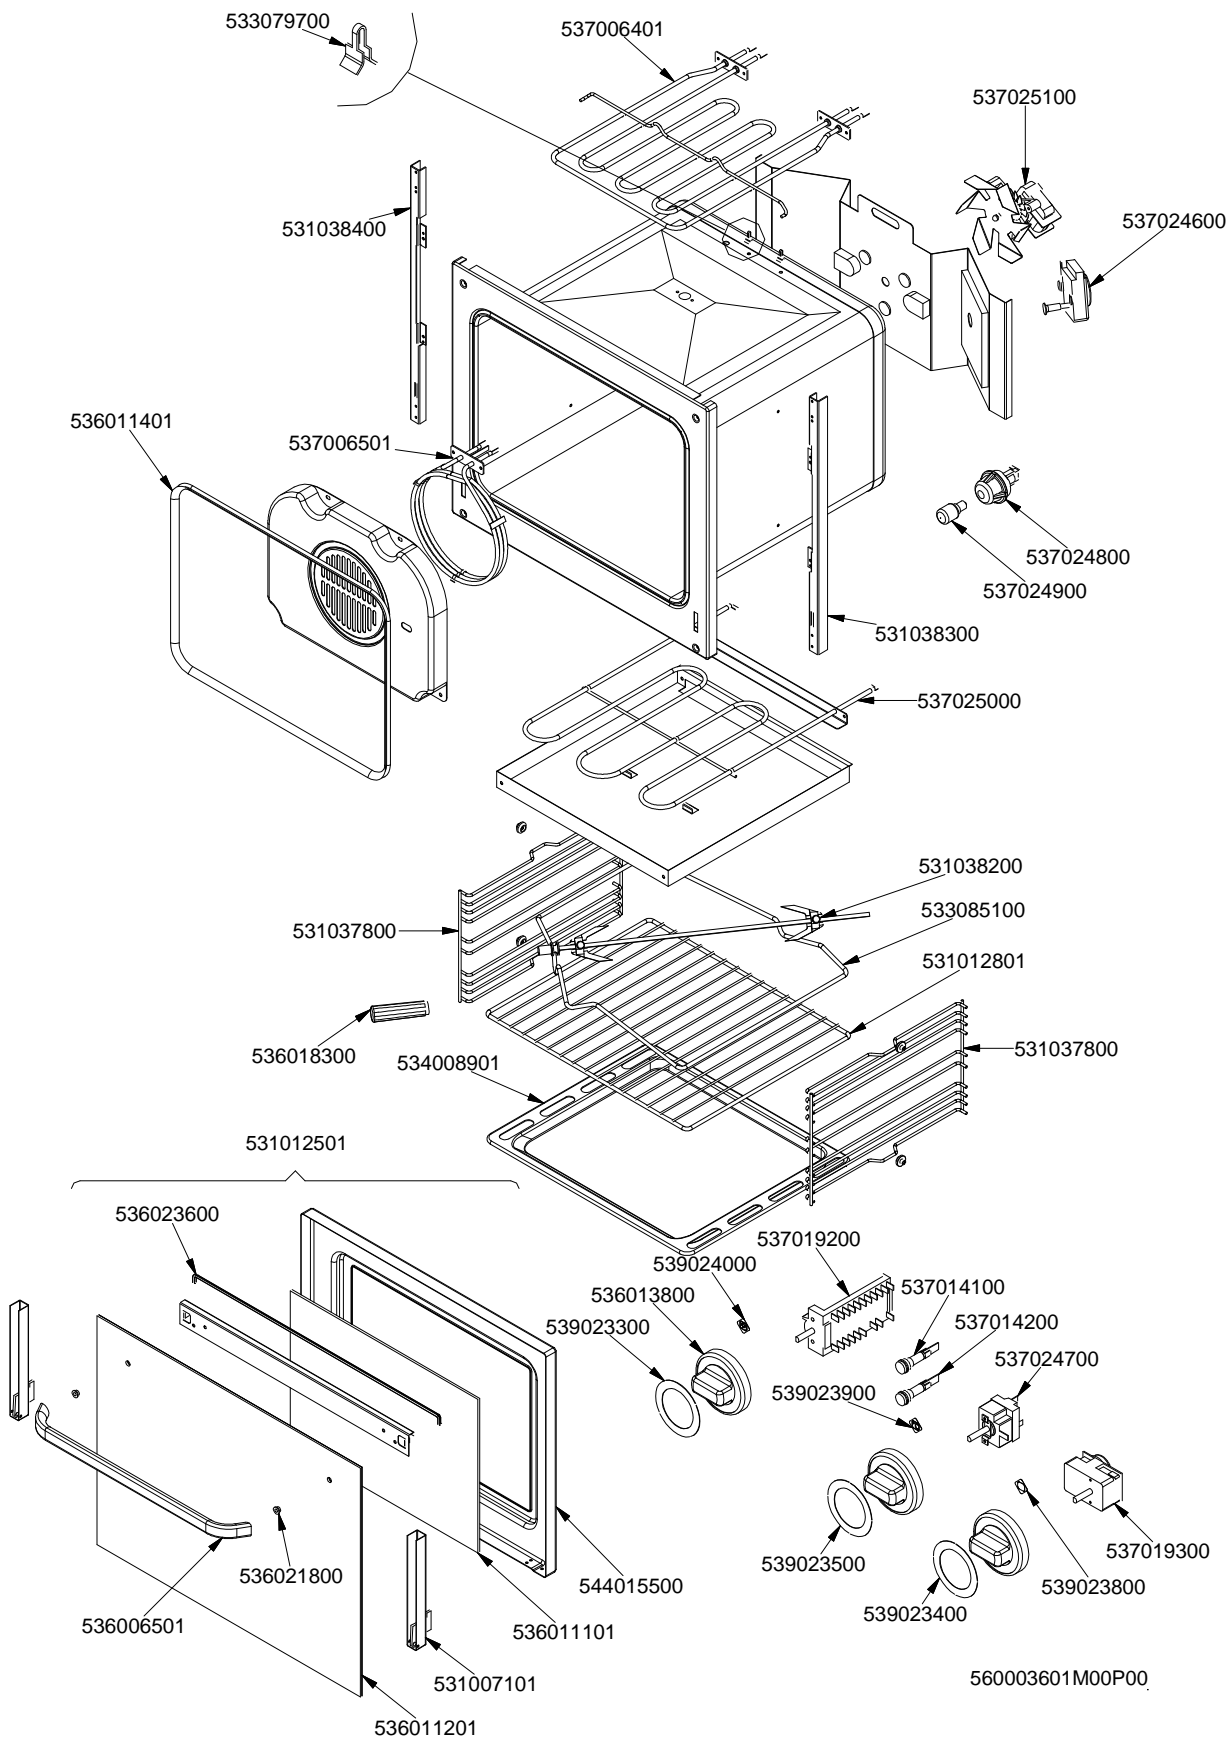

PC-E

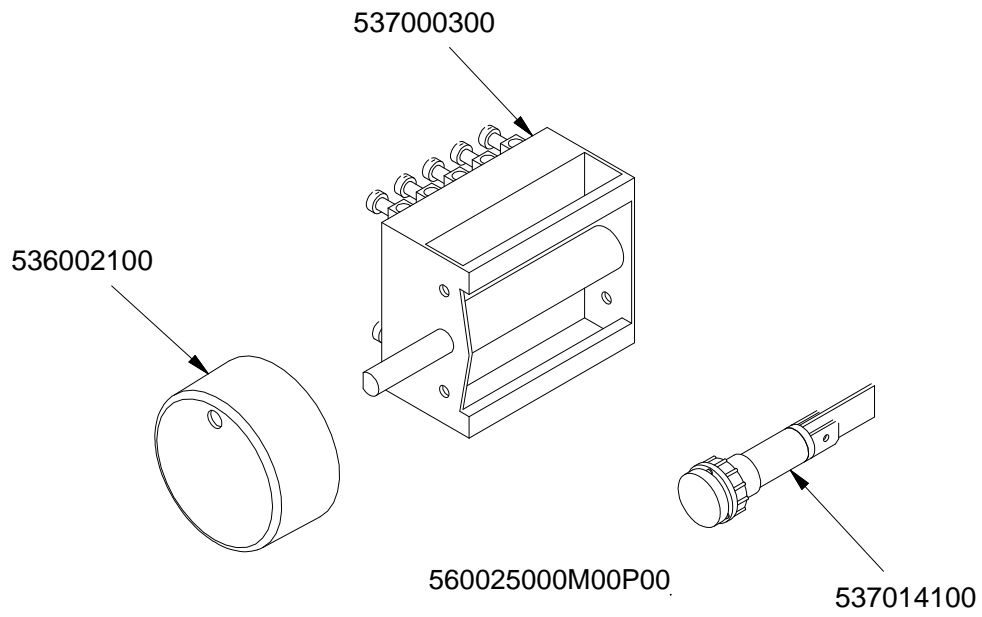 

Page	Pos	Code	Description
001		537002200	ELECTRICAL PLATE D.180 W1500 V230
001		537002100	ELECTRICAL PLATE D.145 W1000 V230
001		541015500	NEUTRAL SPACER 62
001		544060502	UPPER PLATE NEW PC-62E CF-62E
001		544041101	CONTROL PANEL CF-62E
001		537007600	TERMINAL BLOCK SINGLEPHASE 40A
001		544040901	SIDE RANGE CF-62
001		531008100	ADJUSTABLE LEG H9 CHROME
002		533079700	LOCK SPRING FOR BULB §3/§4
002		537006401	GRILL HEATING EL.W3100 V230 CF-62
002		537025100	FAN FOR MULTIF.OVEN CF-62E
002		537024600	SPIT MOTOR FOR CF-8/10E V230
002		531038400	LHD DOOR WHEEL HOLDER MUL.OVEN CF62
002		536011401	OVEN GASKET CF-62
002		537006501	CIRC.HEATING EL. W2400 V230 CF-62
002		537024800	OVEN BULB-SOCKET CF-62E
002		537024900	OVEN BULB 15W 300°C MAXI OVEN
002		531038300	RHD DOOR WHEEL HOLDER F.MULTIF-OVEN
002		537025000	OVEN LOW.HEATING EL.W1200 V230 CF62
002		531038200	SPIT FOR MULTIF. NEW OVEN CF-62
002		533085100	GRID FOR SPIT SUPPORT MULT.OV.CF-62
002		531012801	OVEN GRID CF-62
002		531037800	SUPPORT GRID OVEN NEW CF-62E
002		536018300	GRIP FOR ROTATING SPIT
002		534008901	OVEN DRIPPING-PAN CF-62
002		531012501	COMPLETE OVEN DOOR CF-62
002		536023600	GASKET FOR GLASS DOOR CF-62E
002		539023500	ADHESIVE GRAD.DISC *E.MULTIF.TERM.
002		536006501	NEW OVEN DOOR HANDLE CF-62
002		536021800	DOOR HANDLE SPACER FOR MAXI OVEN
002		536011101	INTERNAL GLASS FOR OVEN DOOR CF-62
002		531007101	OVEN DOOR HINGE FOR CF-62
002		536011201	EXTERNAL GLASS FOR OVEN DOOR CF-62
002		537019200	SELECTOR FOR MULTIFUNCTION OVEN
002		539024000	SIGN PLATE FOR OVEN SELECTOR
002		536013800	KNOB D.70 BLACK 6*5 WITH SPRING
002		537014100	WHITE WARNING LIGHT 250V
002		539023300	ADHESIVE GRADUATED DISC FOR KNOB
002		537014200	GREEN WARNING LIGHT 250V
002		537024700	SINGLEPH.THERMOST.45-250°C MULTI.OV
002		539023900	SIGN PLATE FOR OVEN TEMPERATURE
002		537019300	TIMER FOR MULTIFUNCTION OVEN
002		544015500	INNER DOOR OF OVEN CF-62
002		539023800	SIGN PLATE FOR OVEN TIMER
002		539023400	ADHESIVE GRADUATED DISC F.KNOB
003		537000300	COMMUTATOR 7 POSITIONS S.49 16A
003		536002100	KNOB 7 POSITIONS SNACK
003		537014100	WHITE WARNING LIGHT 250V