


FE-04E, FE-07E

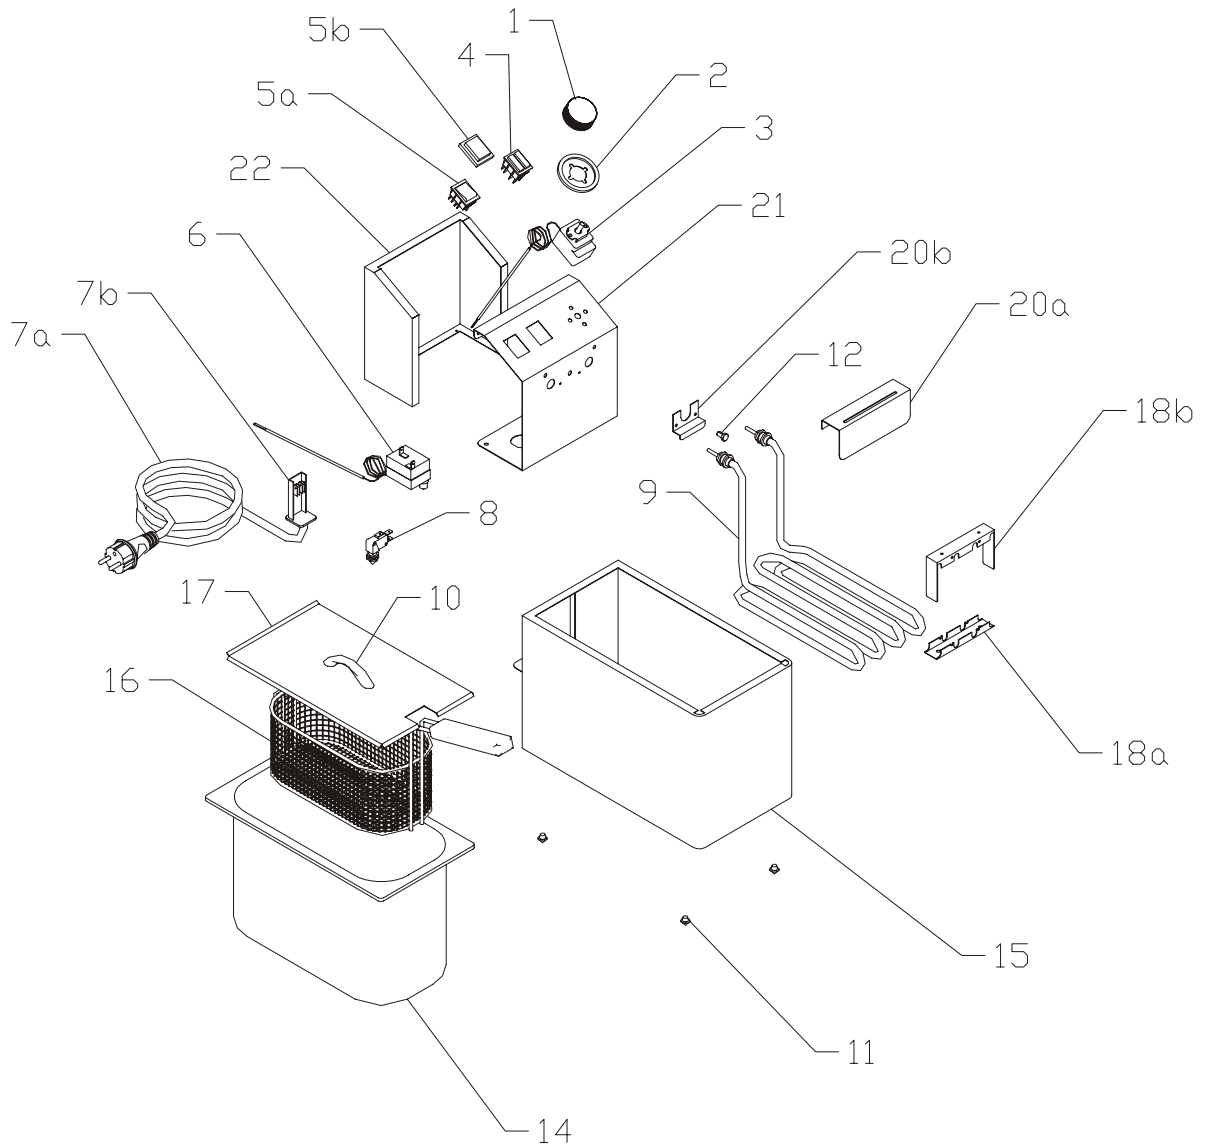

FE-04E

	CODE		CODE		CODE		CODE
1	402592000	7b	402085500	15	500103502	21	500104000
2	402595000	8	401520000	16	408000101	22	405101000
3	402502000	9	401001000	17	450101502		
4	401510000	10	407801500	18a	450150000		
5a	401500500	11	407810100	18b	450147000		
5b	401509000	12	408703100	19	-----		
6	402511000	13	-----	20a	450151500		
7a	402010000	14	408730520	20b	450153000		



FE-07E

	CODE		CODE		CODE		CODE
1	402592000	7b	402085500	15	500105002	21	500105500
2	402595000	8	401520000	16	408000501	22	405116500
3	402502000	9	401002000	17	450117002		
4	401510000	10	407801500	18a	450150000		
5a	401500500	11	407810100	18b	450147000		
5b	401509000	12	408703100	19	-----		
6	402511000	13	-----	20a	450151500		
7a	402010000	14	408730620	20b	450153000		