


# E7202E SPARES INFORMATION

# FITMENTS

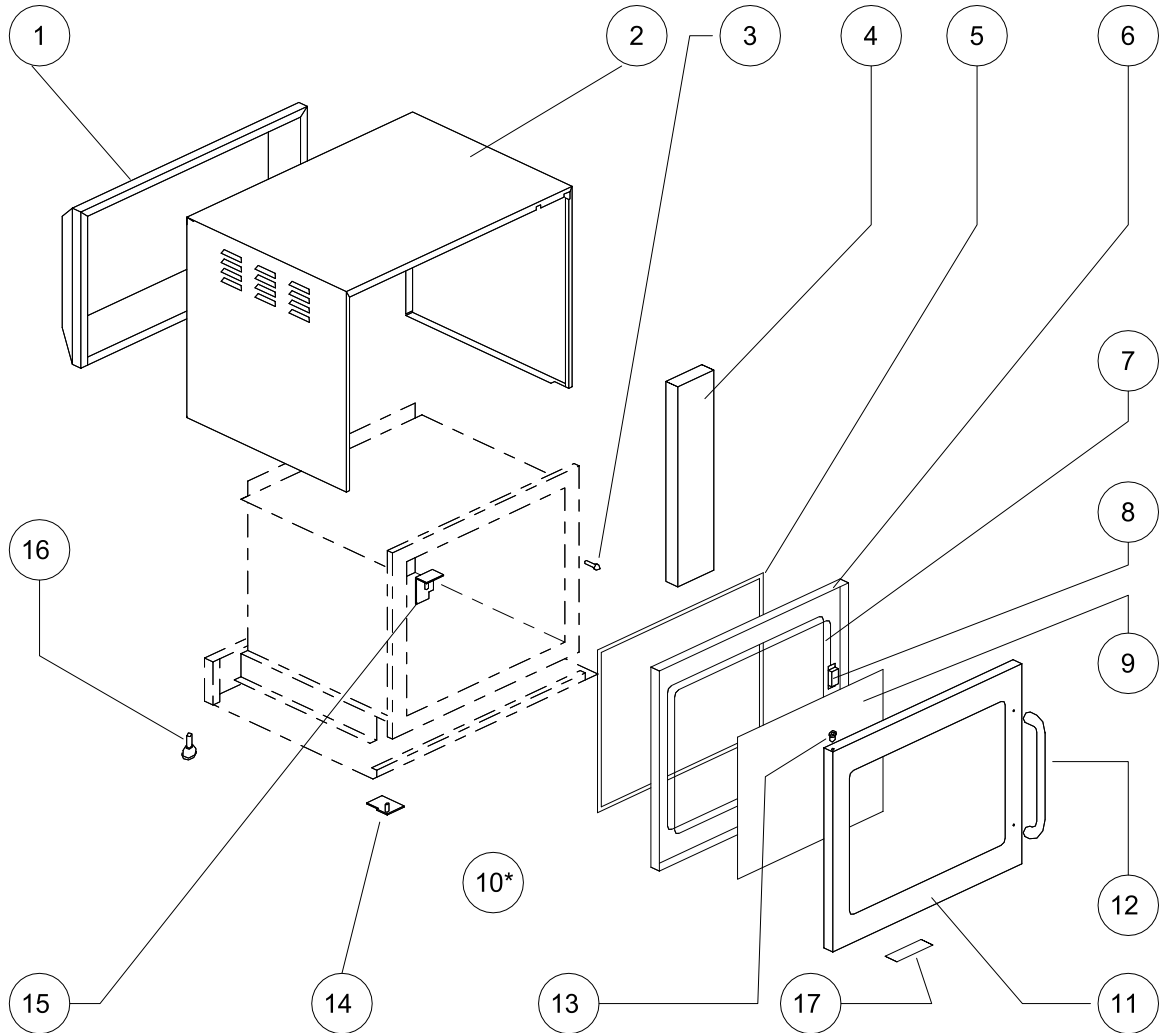


Item	Spares No.	Description
1.	732910220	Outer Back Panel
2.	732910180	Outer Cover
3.	732910670	Door Keeper Stud
4.	732910230	Control Panel
5.	732910000	Door Seal
6.	732910240	Inner Door
7.	732910250	Spacer Frame
8.	732910370	Door Catch

Item	Spares No.	Description
9.	732910260	Inner Door Glass
10*.	732910270	Glass Seal (not illustrated)
11.	732910020	Outer Door c/w Glass
12.	731910050	Door Handle
13.	732910040	Hinge Bush
14.	731910070	Bottom Door Hinge
15.	732910060	Top Door Hinge
16.	731910190	Foot
17.	732910280	Control Panel Hinge

# E7202E SPARES INFORMATION

# CONTROLS

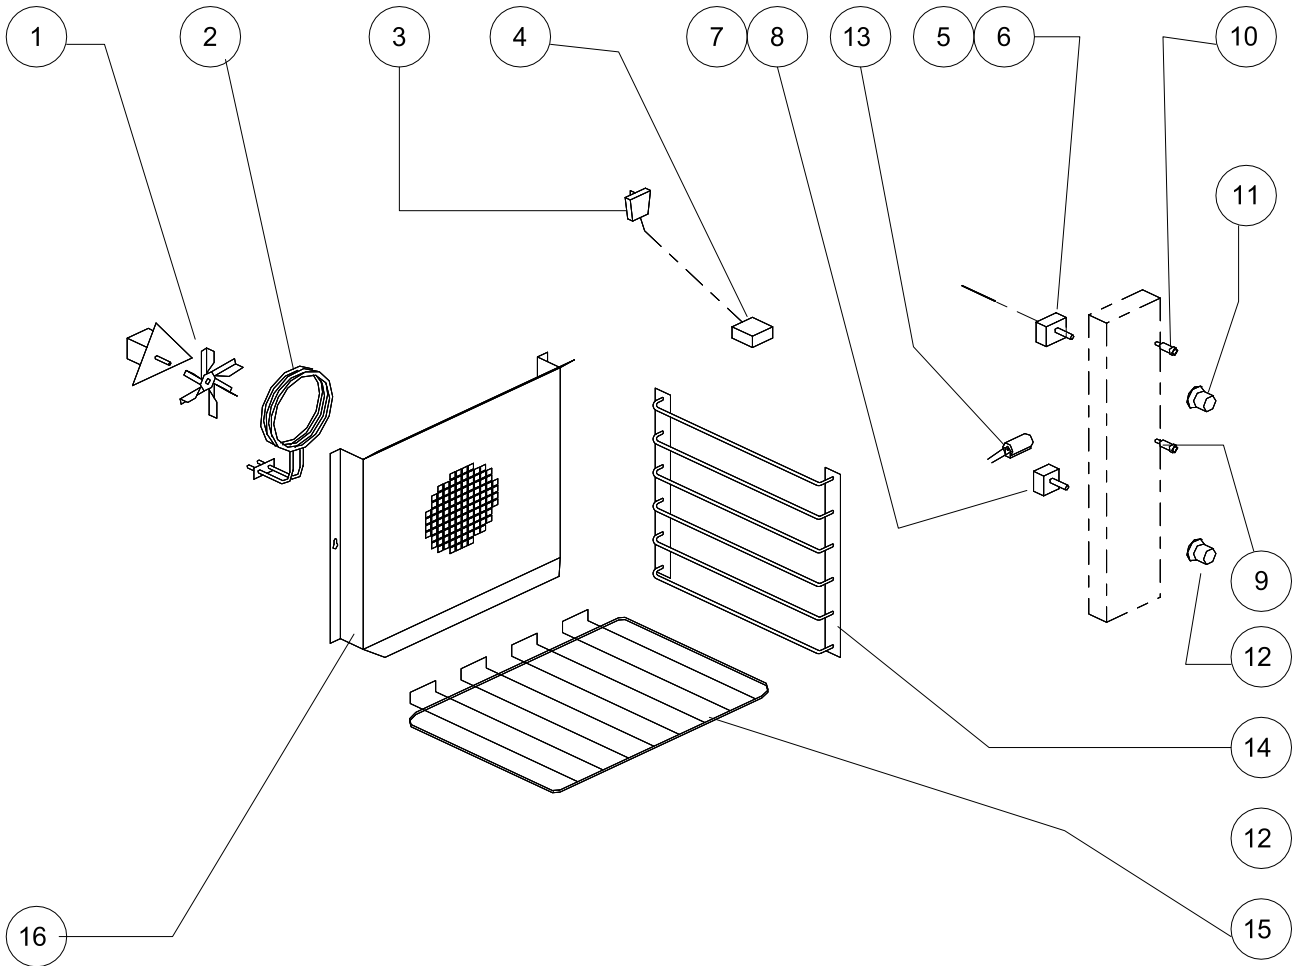

Item	Spares No.	Description
1.	732910130	Oven Fan
2.	732910290	Oven Element
3.	732910200	Moulded Plug
4.	732910390	Terminal Block
5.	732910210	Operating Thermostat
6.	732910080	Operating T'stat c/w Knob
7.	732910460	Timer
8.	732910100	Timer c/w Knob
9.	732910110	Indicator Neon (Amber)

Item	Spares No.	Description
10.	732910120	Indicator Neon (Red)
11.	732910095	Knob for Operating T'stat
12.	732910105	Knob for Timer
13.	732910560	Buzzer
14.	732910160	Shelf Hanger
15.	732910170	Shelf
16.	732910300	Back Baffle