


* E3Rv.....	— INCREASE THE VOLTAGE	Hz.....	— INDICARE LA FREQUENZA
	— REDUCE THE TENSION		— TROUVER LA FREQUENCE
	— PLUS GIVE VOLTAGE		— PLUS GIVE FREQUENCY
	— DIE SPANNUNG ERHOEHEN		— DIE FREQUENZ MITTEILEN
COMPONENTI ELETTROVALVOLE		COMPOSANTS DES ELECTROVALVES	
COMPONENTS OF SOLENOID VALVES		BESTANDTEILE DER MAGNETVENTILE	
TAB. N° AN-1			

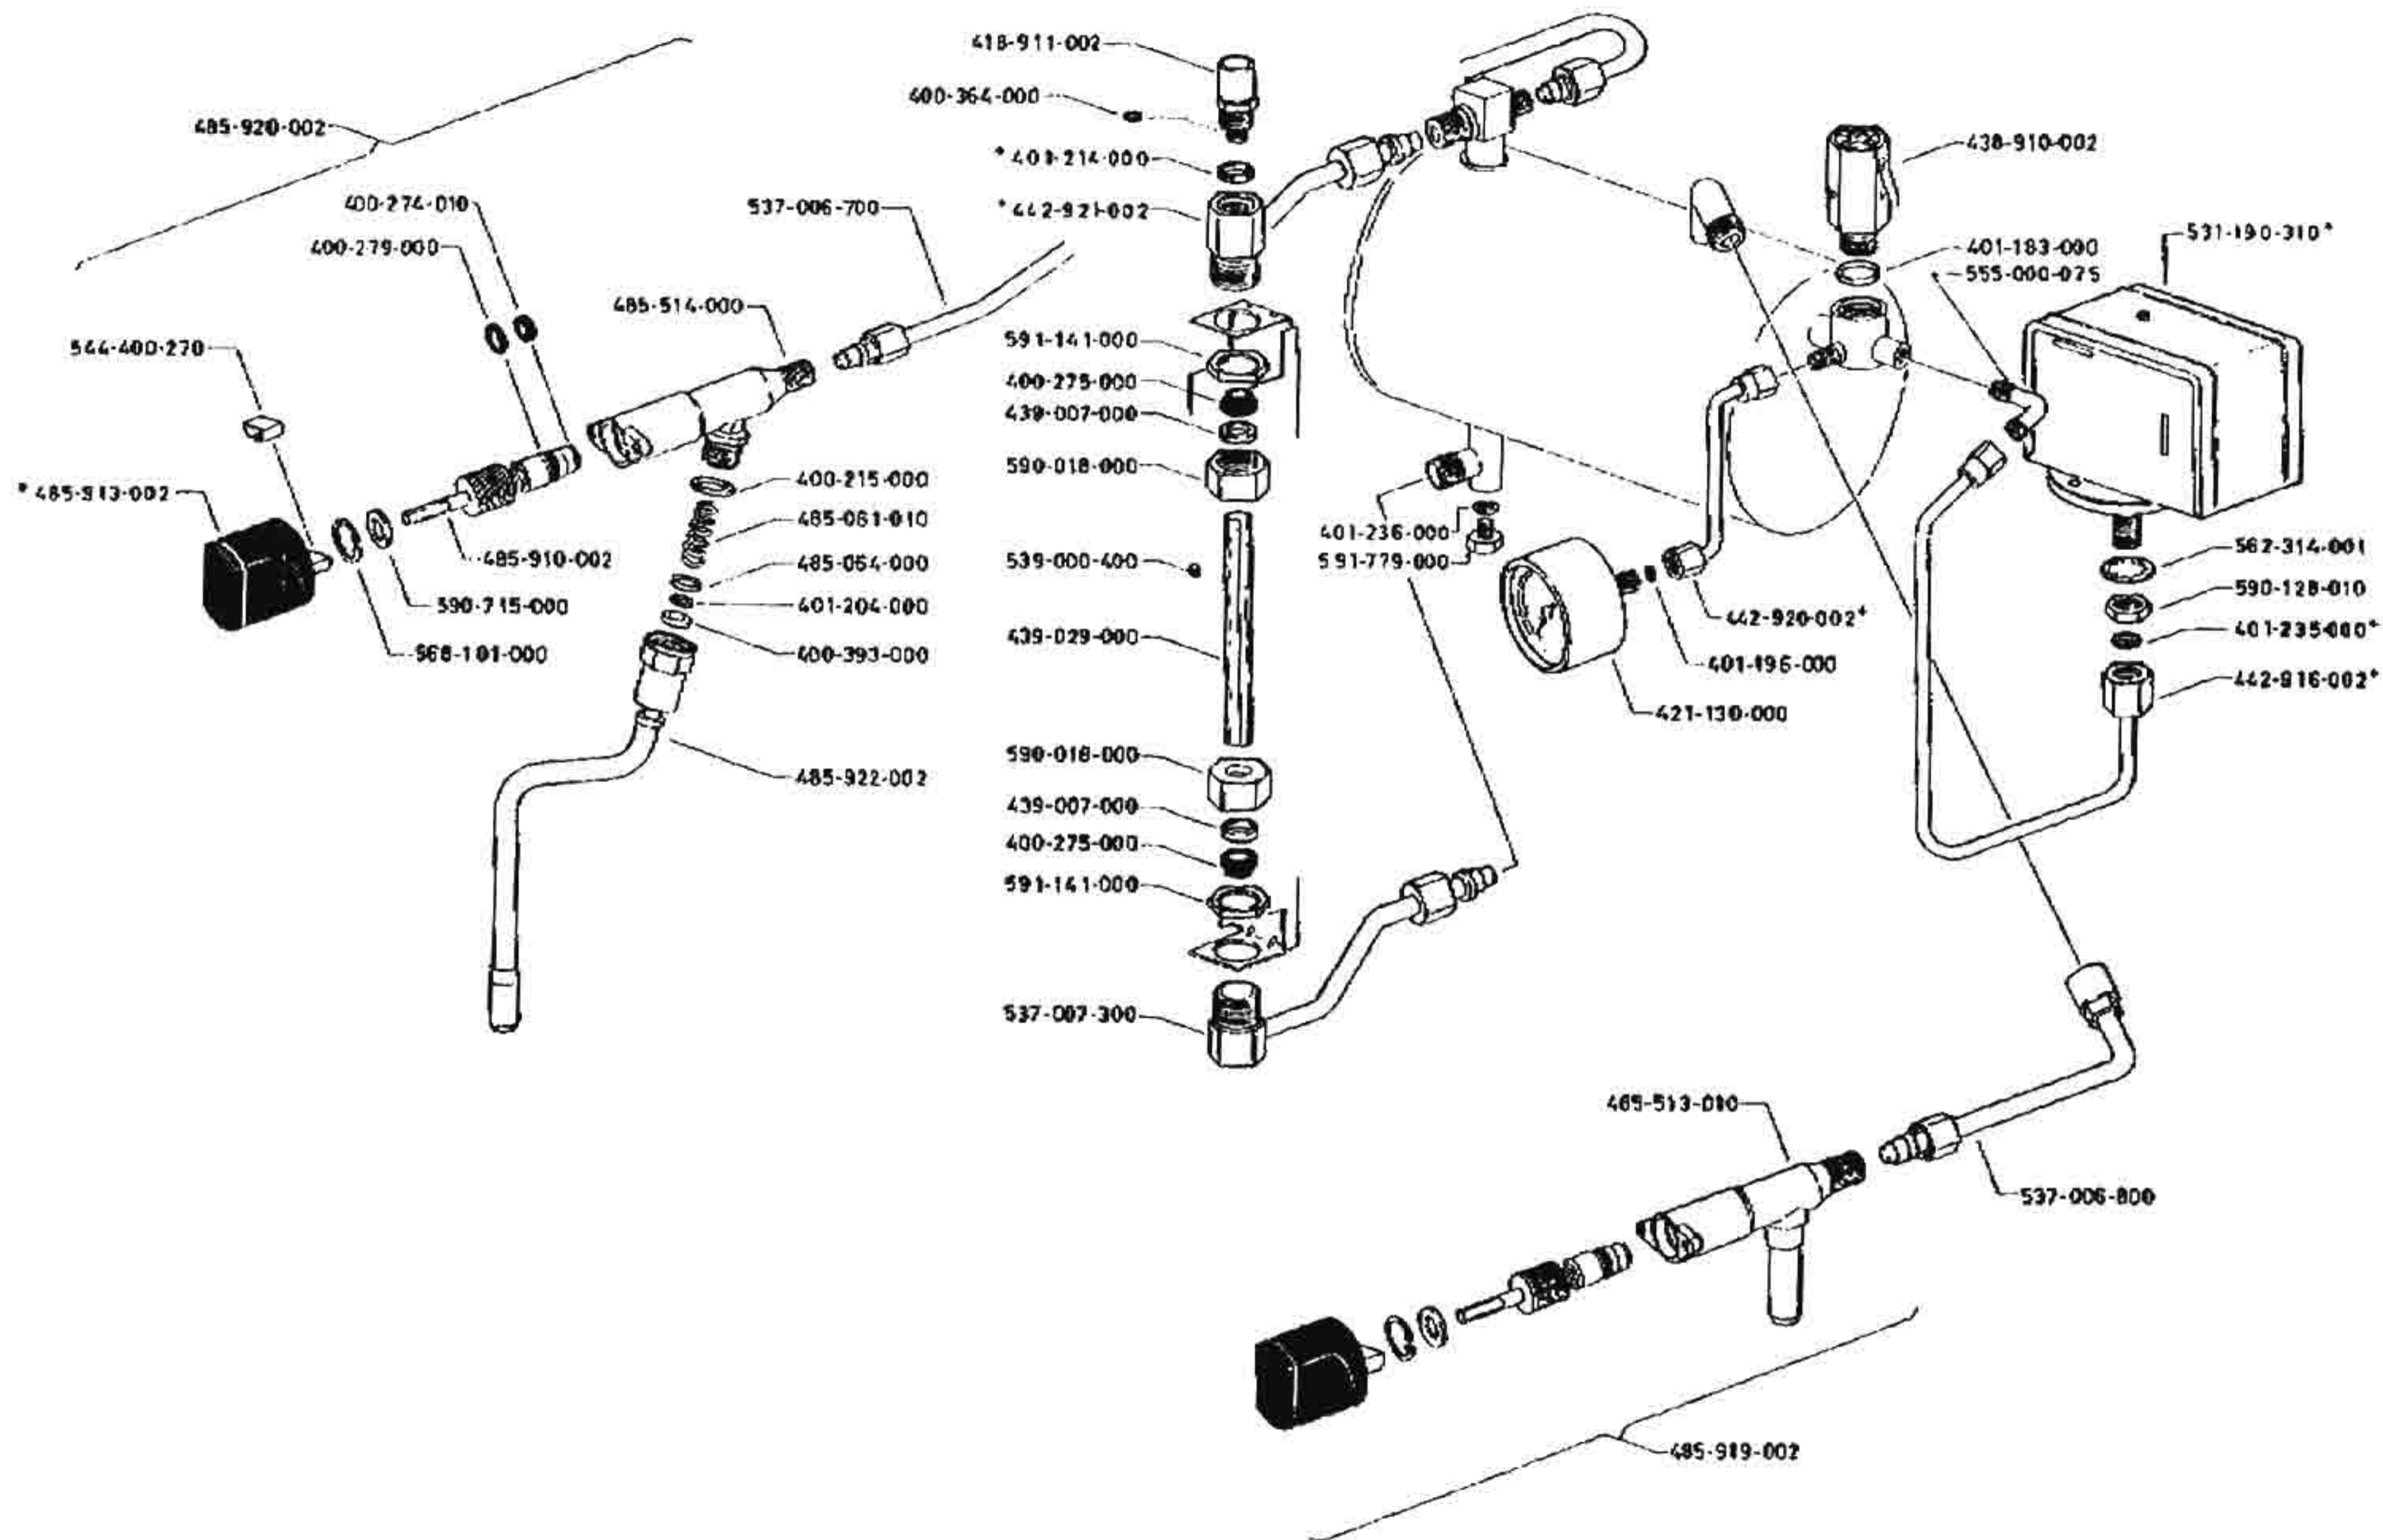




**E2Rv** \*  
 INDICARE IL VOLTAGGIO  
 INDICHER LA TENSION  
 PLUS DIVE VOLTAGE  
 DIE STROMUNG MITTELEN

**Rz** \*  
 INDICARE LA FREQUENZA  
 INDICHER LA FREQUENCE  
 PLUS DIVE FREQUENCY  
 DIE FREQUENZ MITTELEN


COMPONENTI ELETTROVALVOLE  
 COMPONENTS OF SOLENOID VALVES

COMPOSANTS DES ELECTROVANNES  
 BESTANDTEILE DER MAGNETVENTILE

TAB. N° H-1

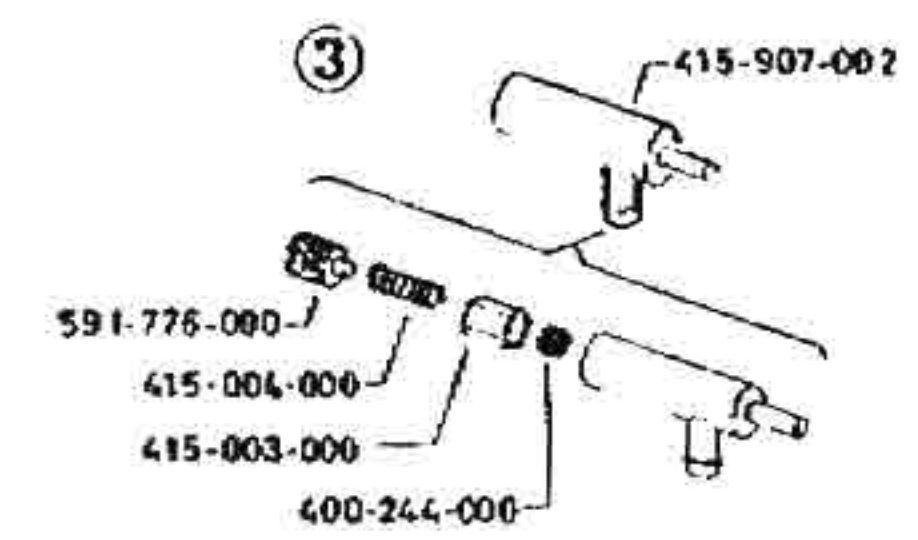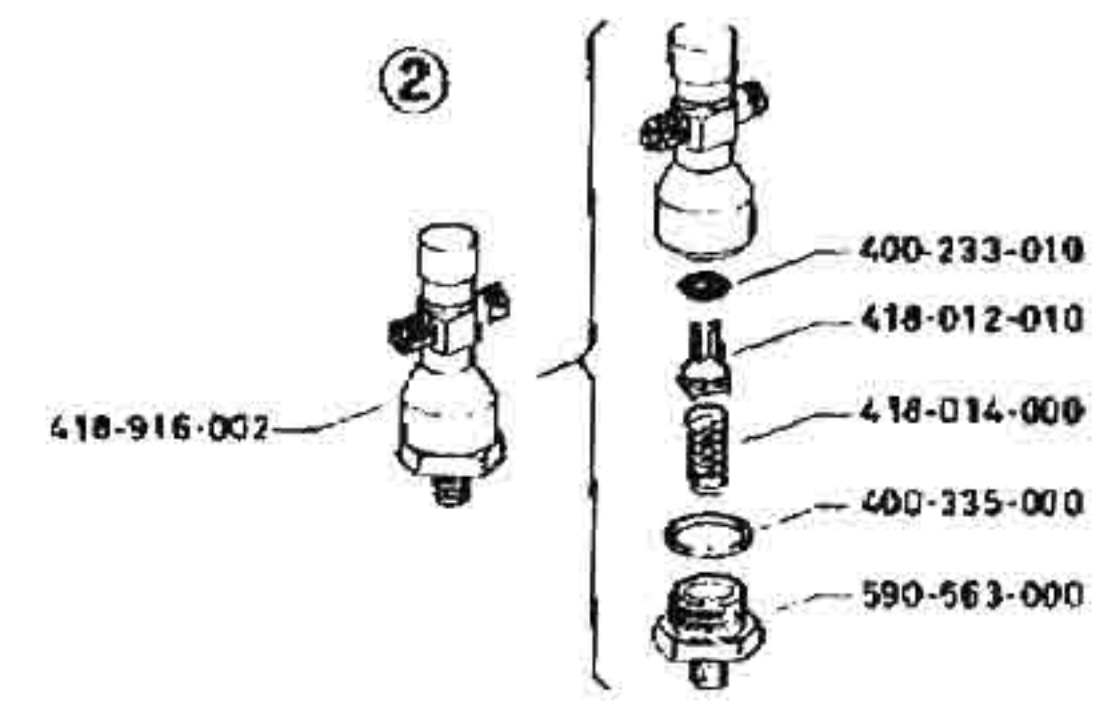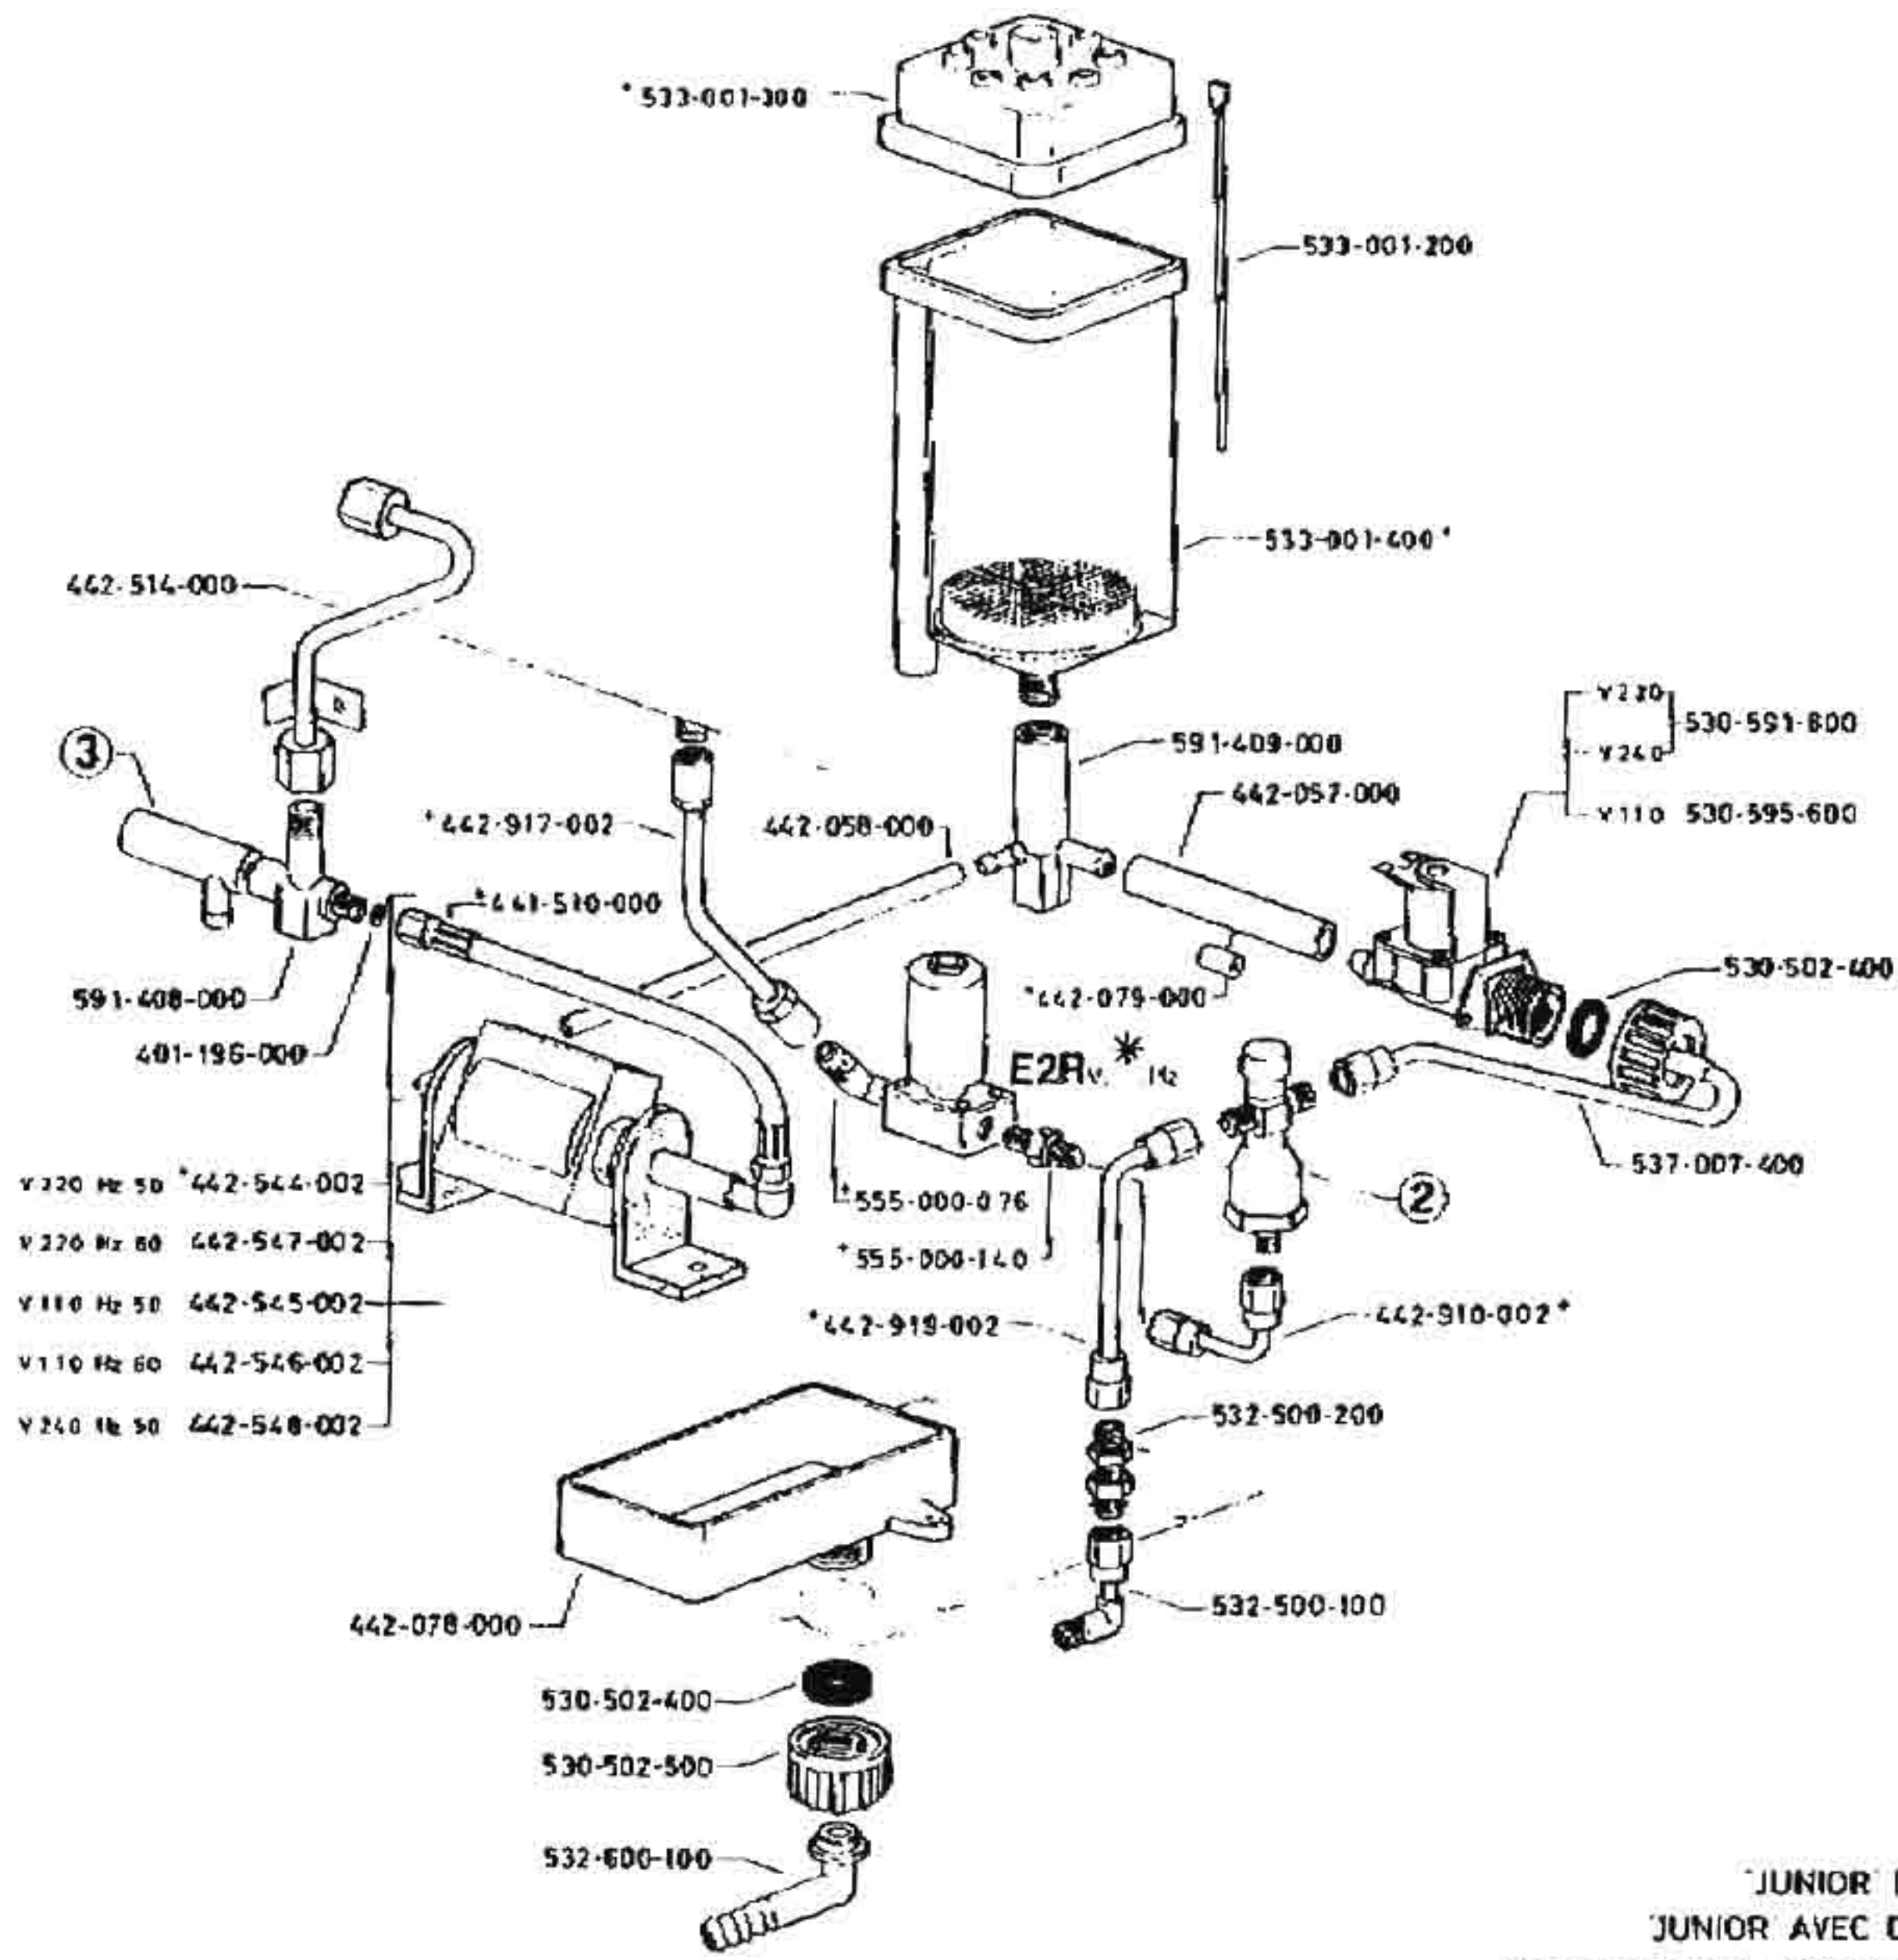


JUNIOR DOSATA  
 JUNIOR AVEC DOSEUR  
 JUNIOR WITH DOSING-DEVICE  
 JUNIOR DOSIERT

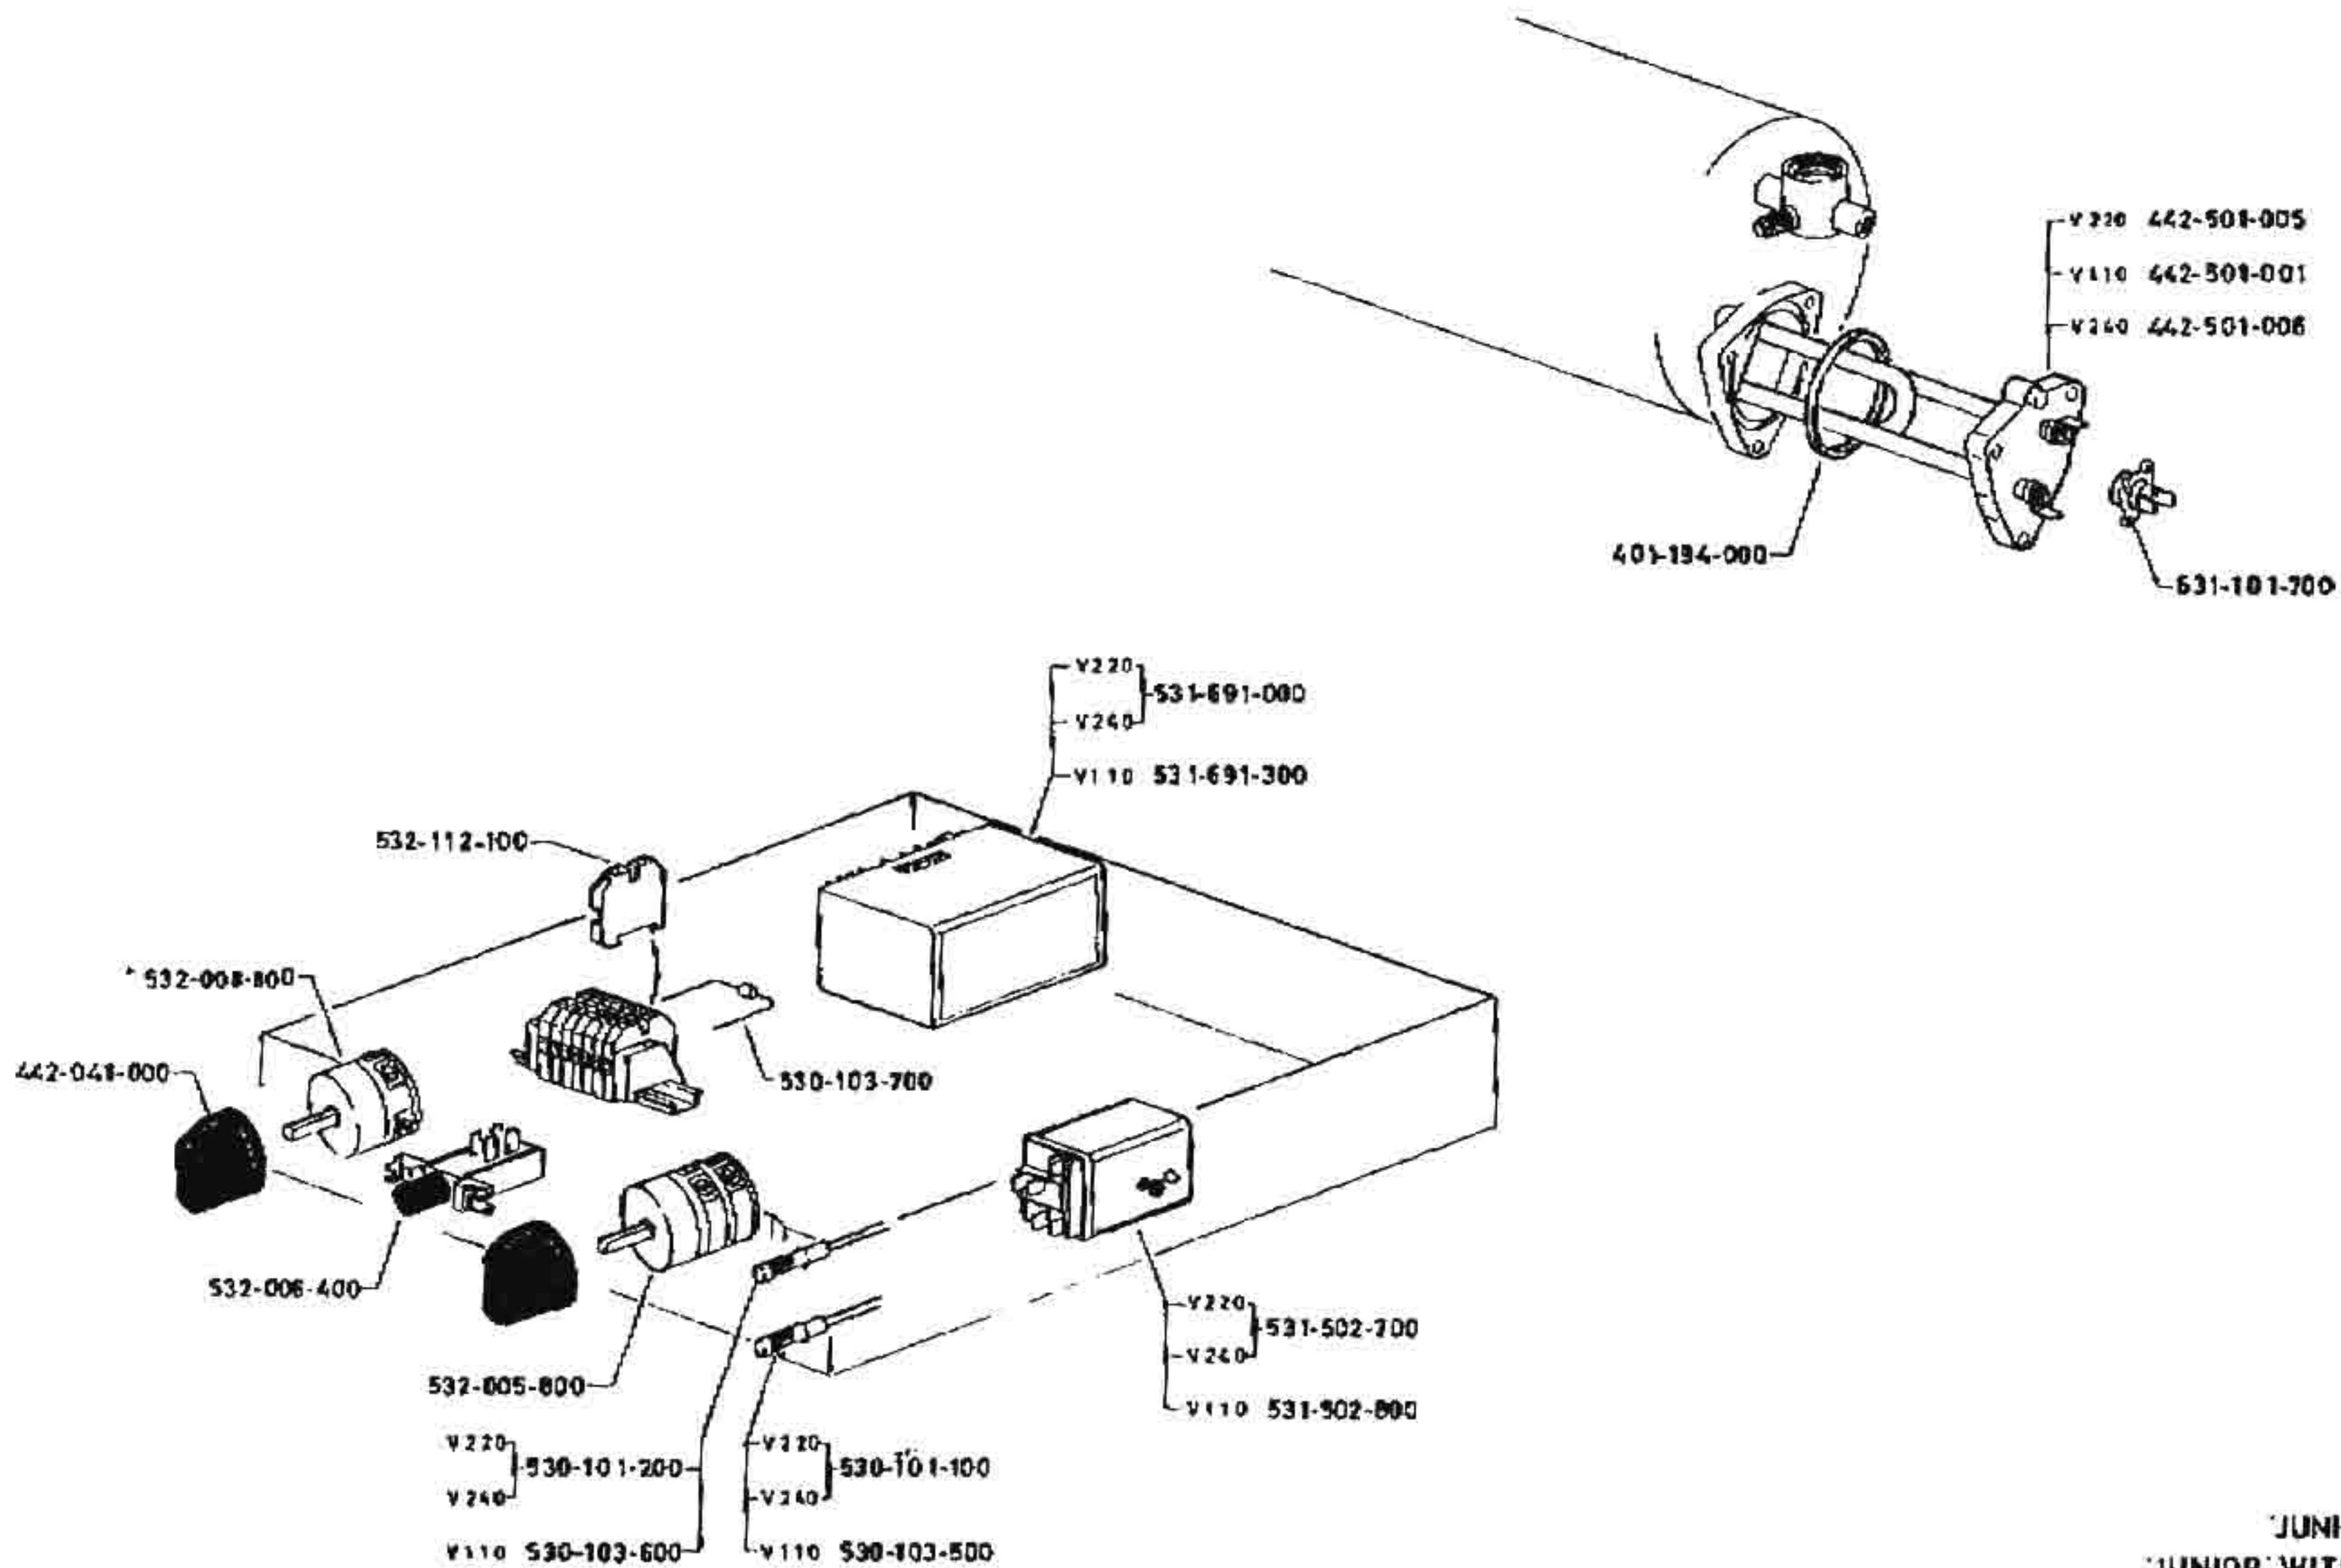

'JUNIOR' DOSATA  
 'JUNIOR' AVEC DOSEUR  
 'JUNIOR' WITH DOSING-DEVICE  
 'JUNIOR' DOSIERT

	SILVER	GOLD
①	421-997-002	421-590-018
②	421-998-002	421-591-018
③	442-032-004	442-032-008
④	442-066-004	442-066-008
⑤	442-026-004	442-026-008
⑥	442-511-000	442-543-000

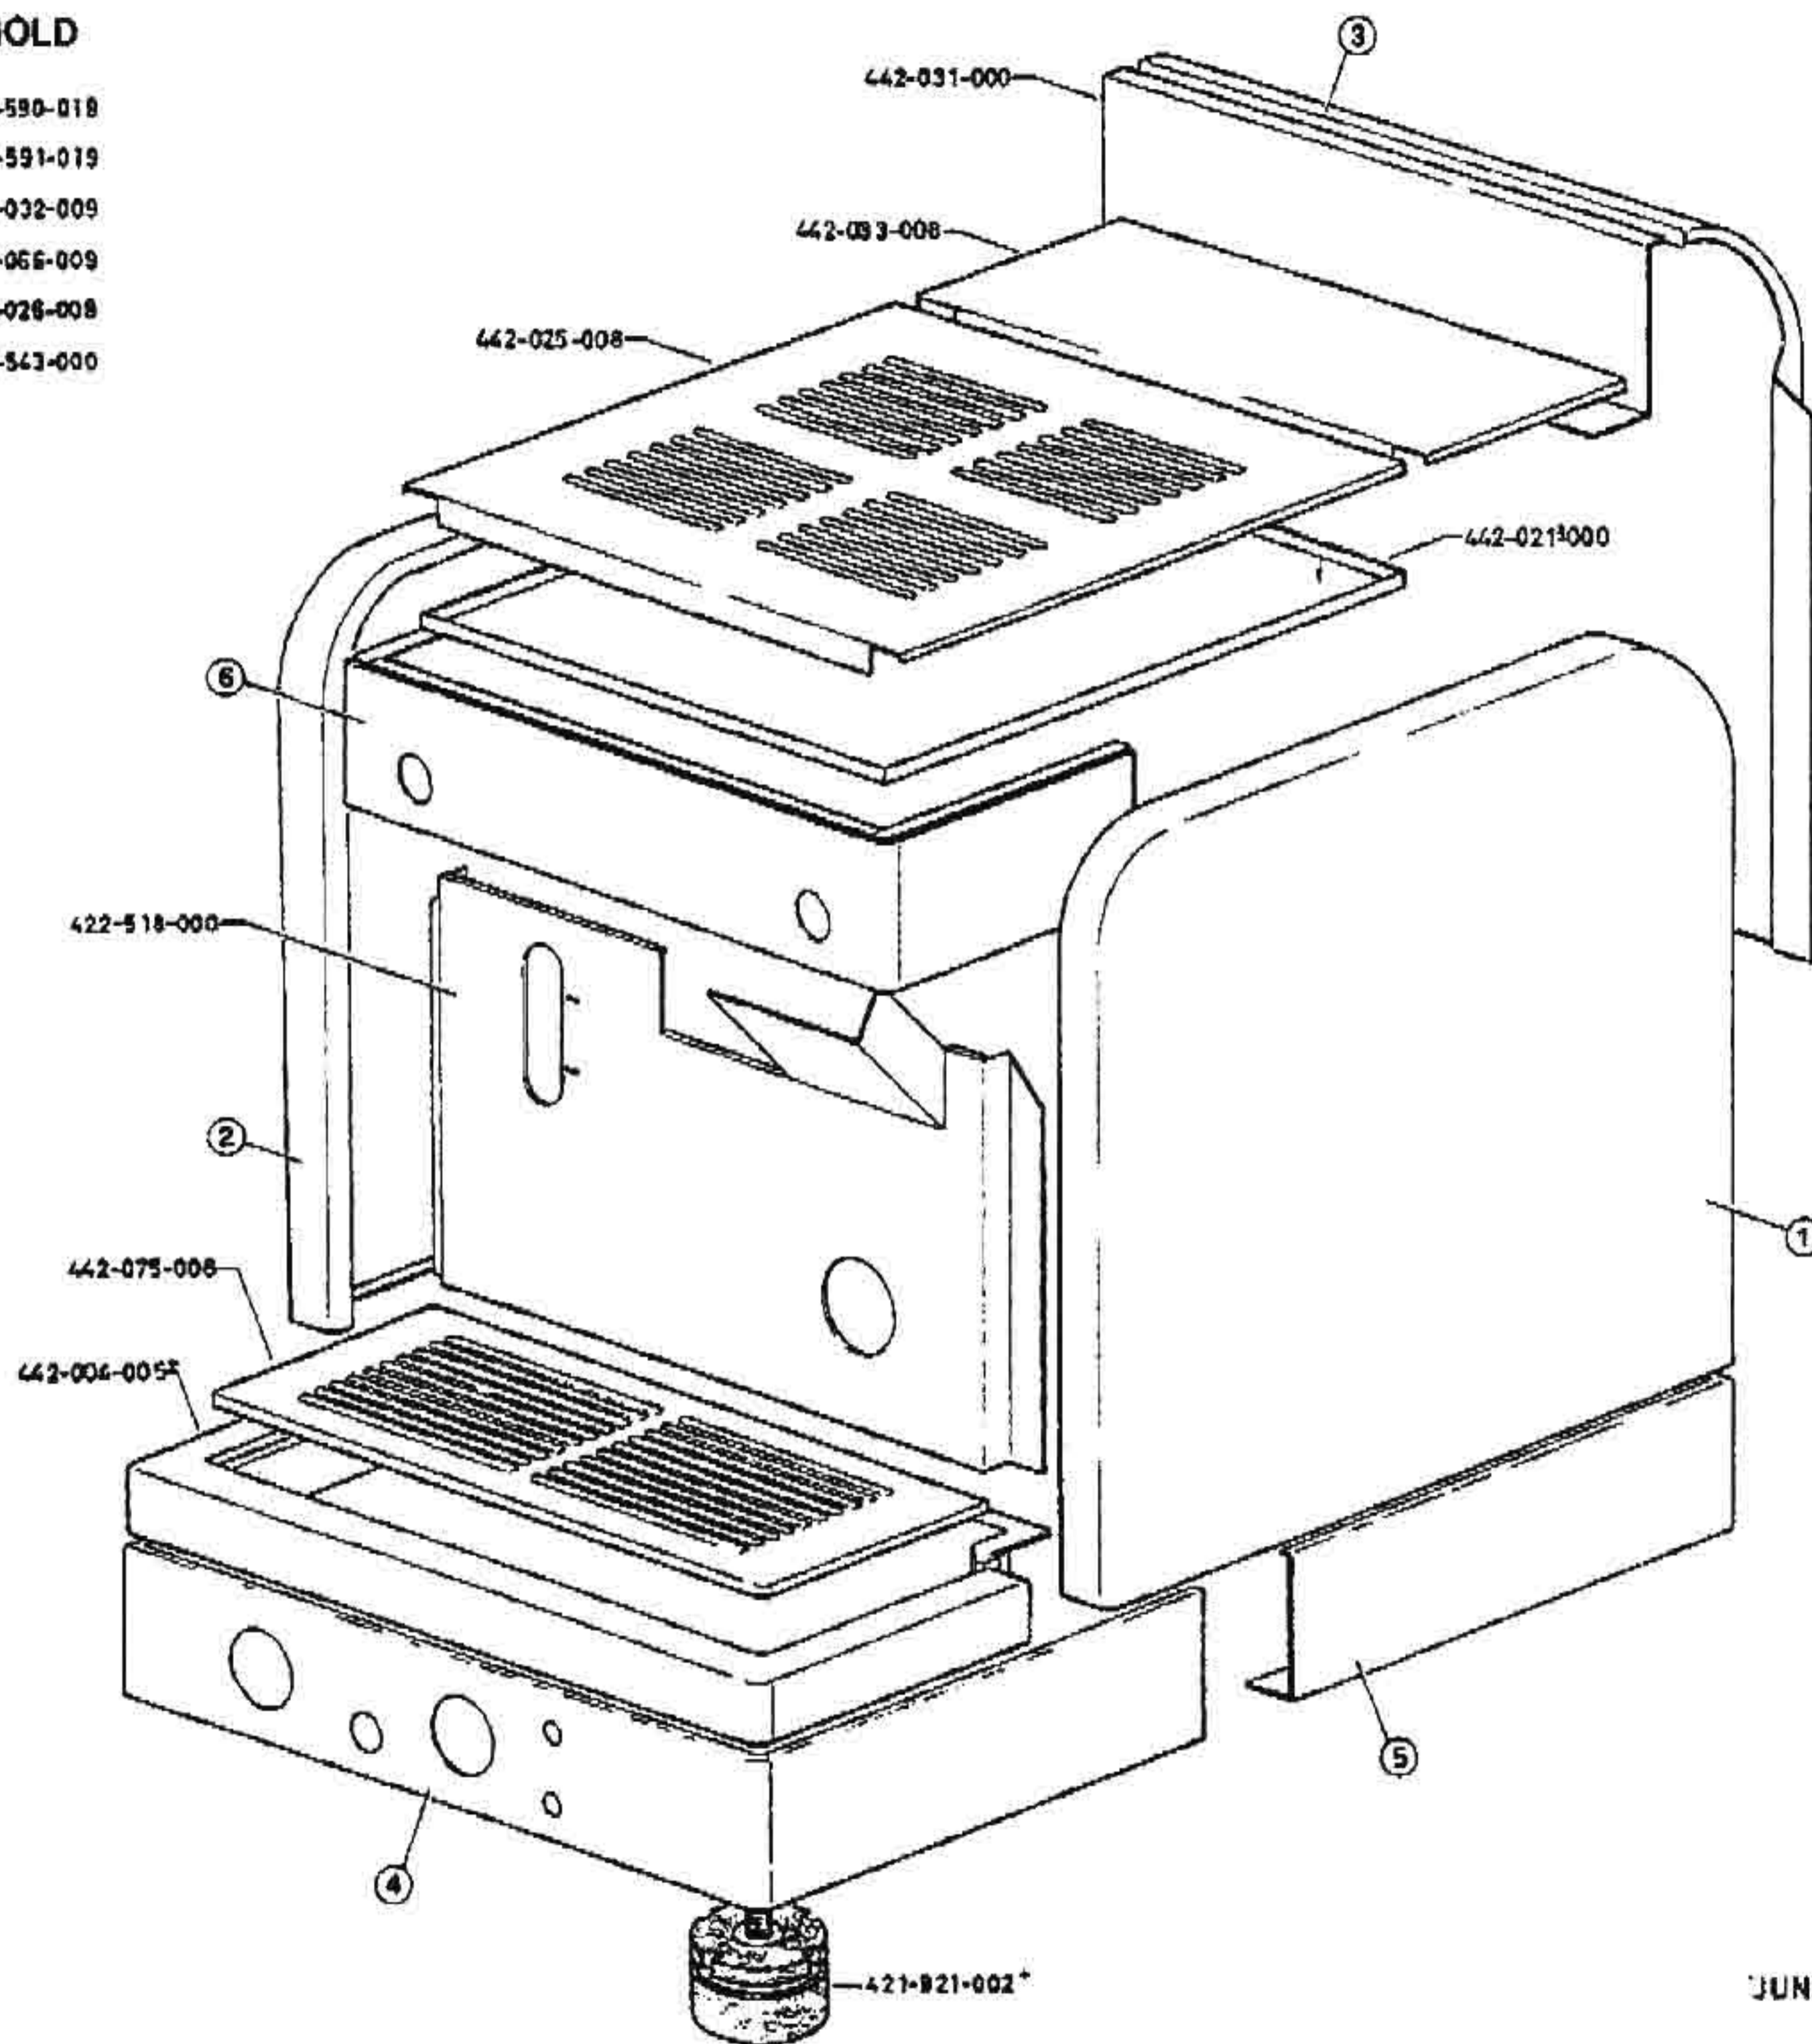

'JUNIOR' DOSATA  
 'JUNIOR' AVEC DOSEUR  
 'JUNIOR' WITH DOSING-DEVICE  
 'JUNIOR' DOSIERT

\*  
E2Rr.....

- INDICARE IL VOLTAGGIO
- INDICARE LA TENSION
- PLUS QUE VOLTAGE
- DIE SPANNUNG MITTEILEN



HZ.....

- INDICARE LA FREQUENZA
- INDICER LA FREQUENCE
- PLUS QUE FREQUENCY
- DIE FREQUENZ MITTEILEN

COMPONENTI ELETTROVALVOLE  
COMPONENTS OF SOLENOID VALVES


COMPOSANTS DES ELECTROVANNES  
BESTANDTEILE DER MAGNETVENTILE

TAB. N° IV-1

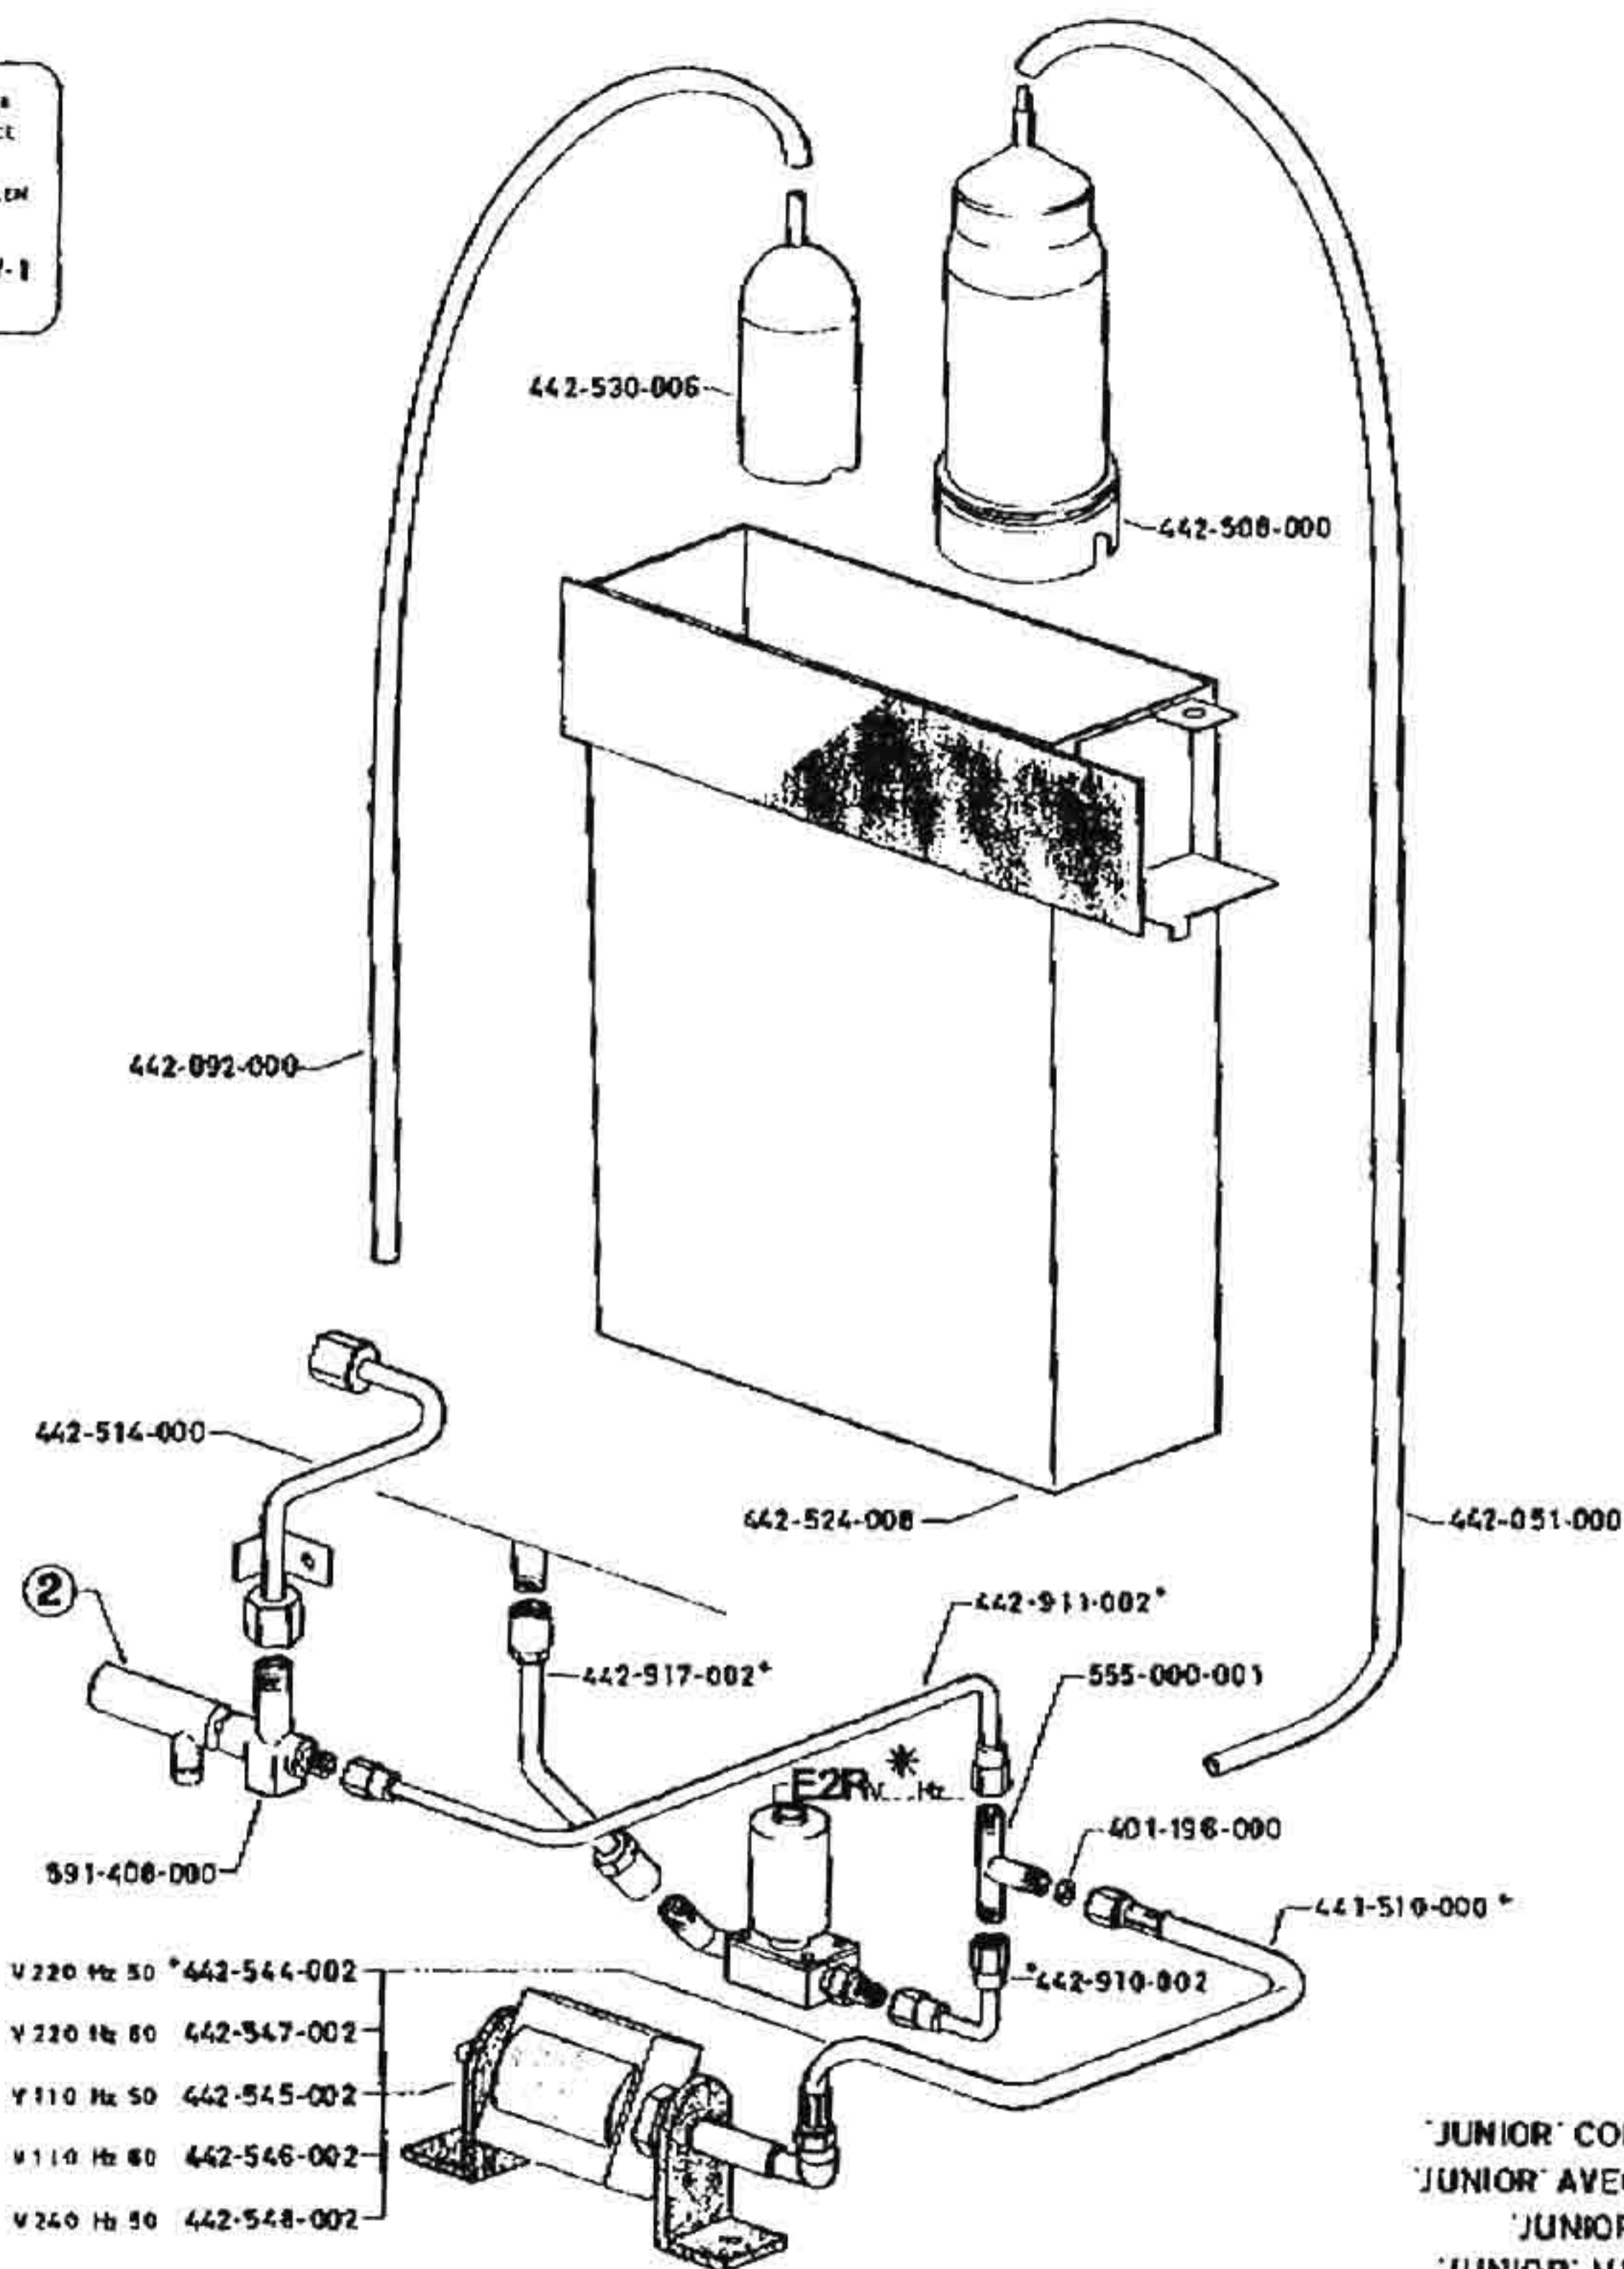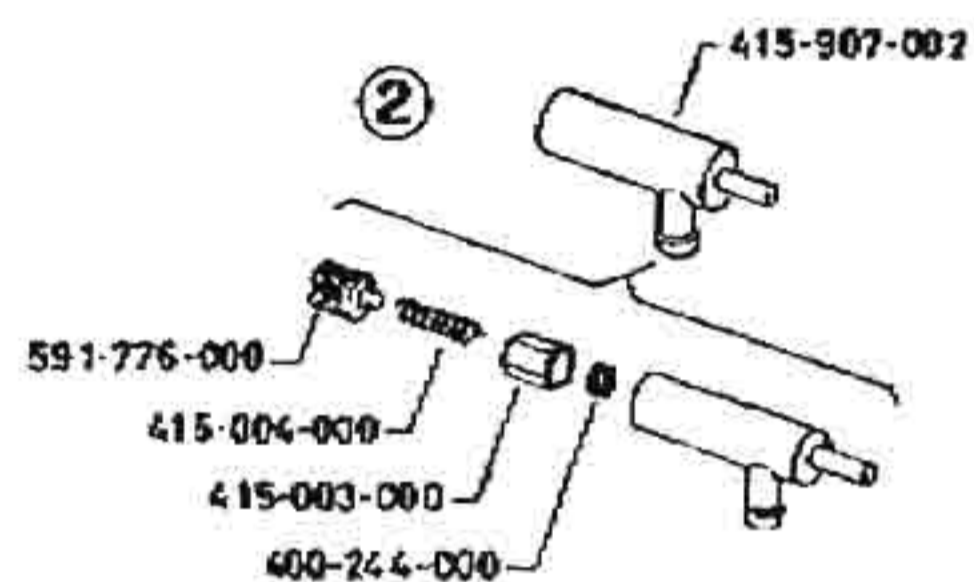


- V 220 Hz 50 \*442-544-002
- V 220 Hz 60 442-547-002
- V 110 Hz 50 442-545-002
- V 110 Hz 60 442-546-002
- V 240 Hz 50 442-548-002

'JUNIOR' CON SERBATOIO  
'JUNIOR' AVEC RESERVOIR  
'JUNIOR' WITH TANK  
'JUNIOR' MIT BEHÄLTNER

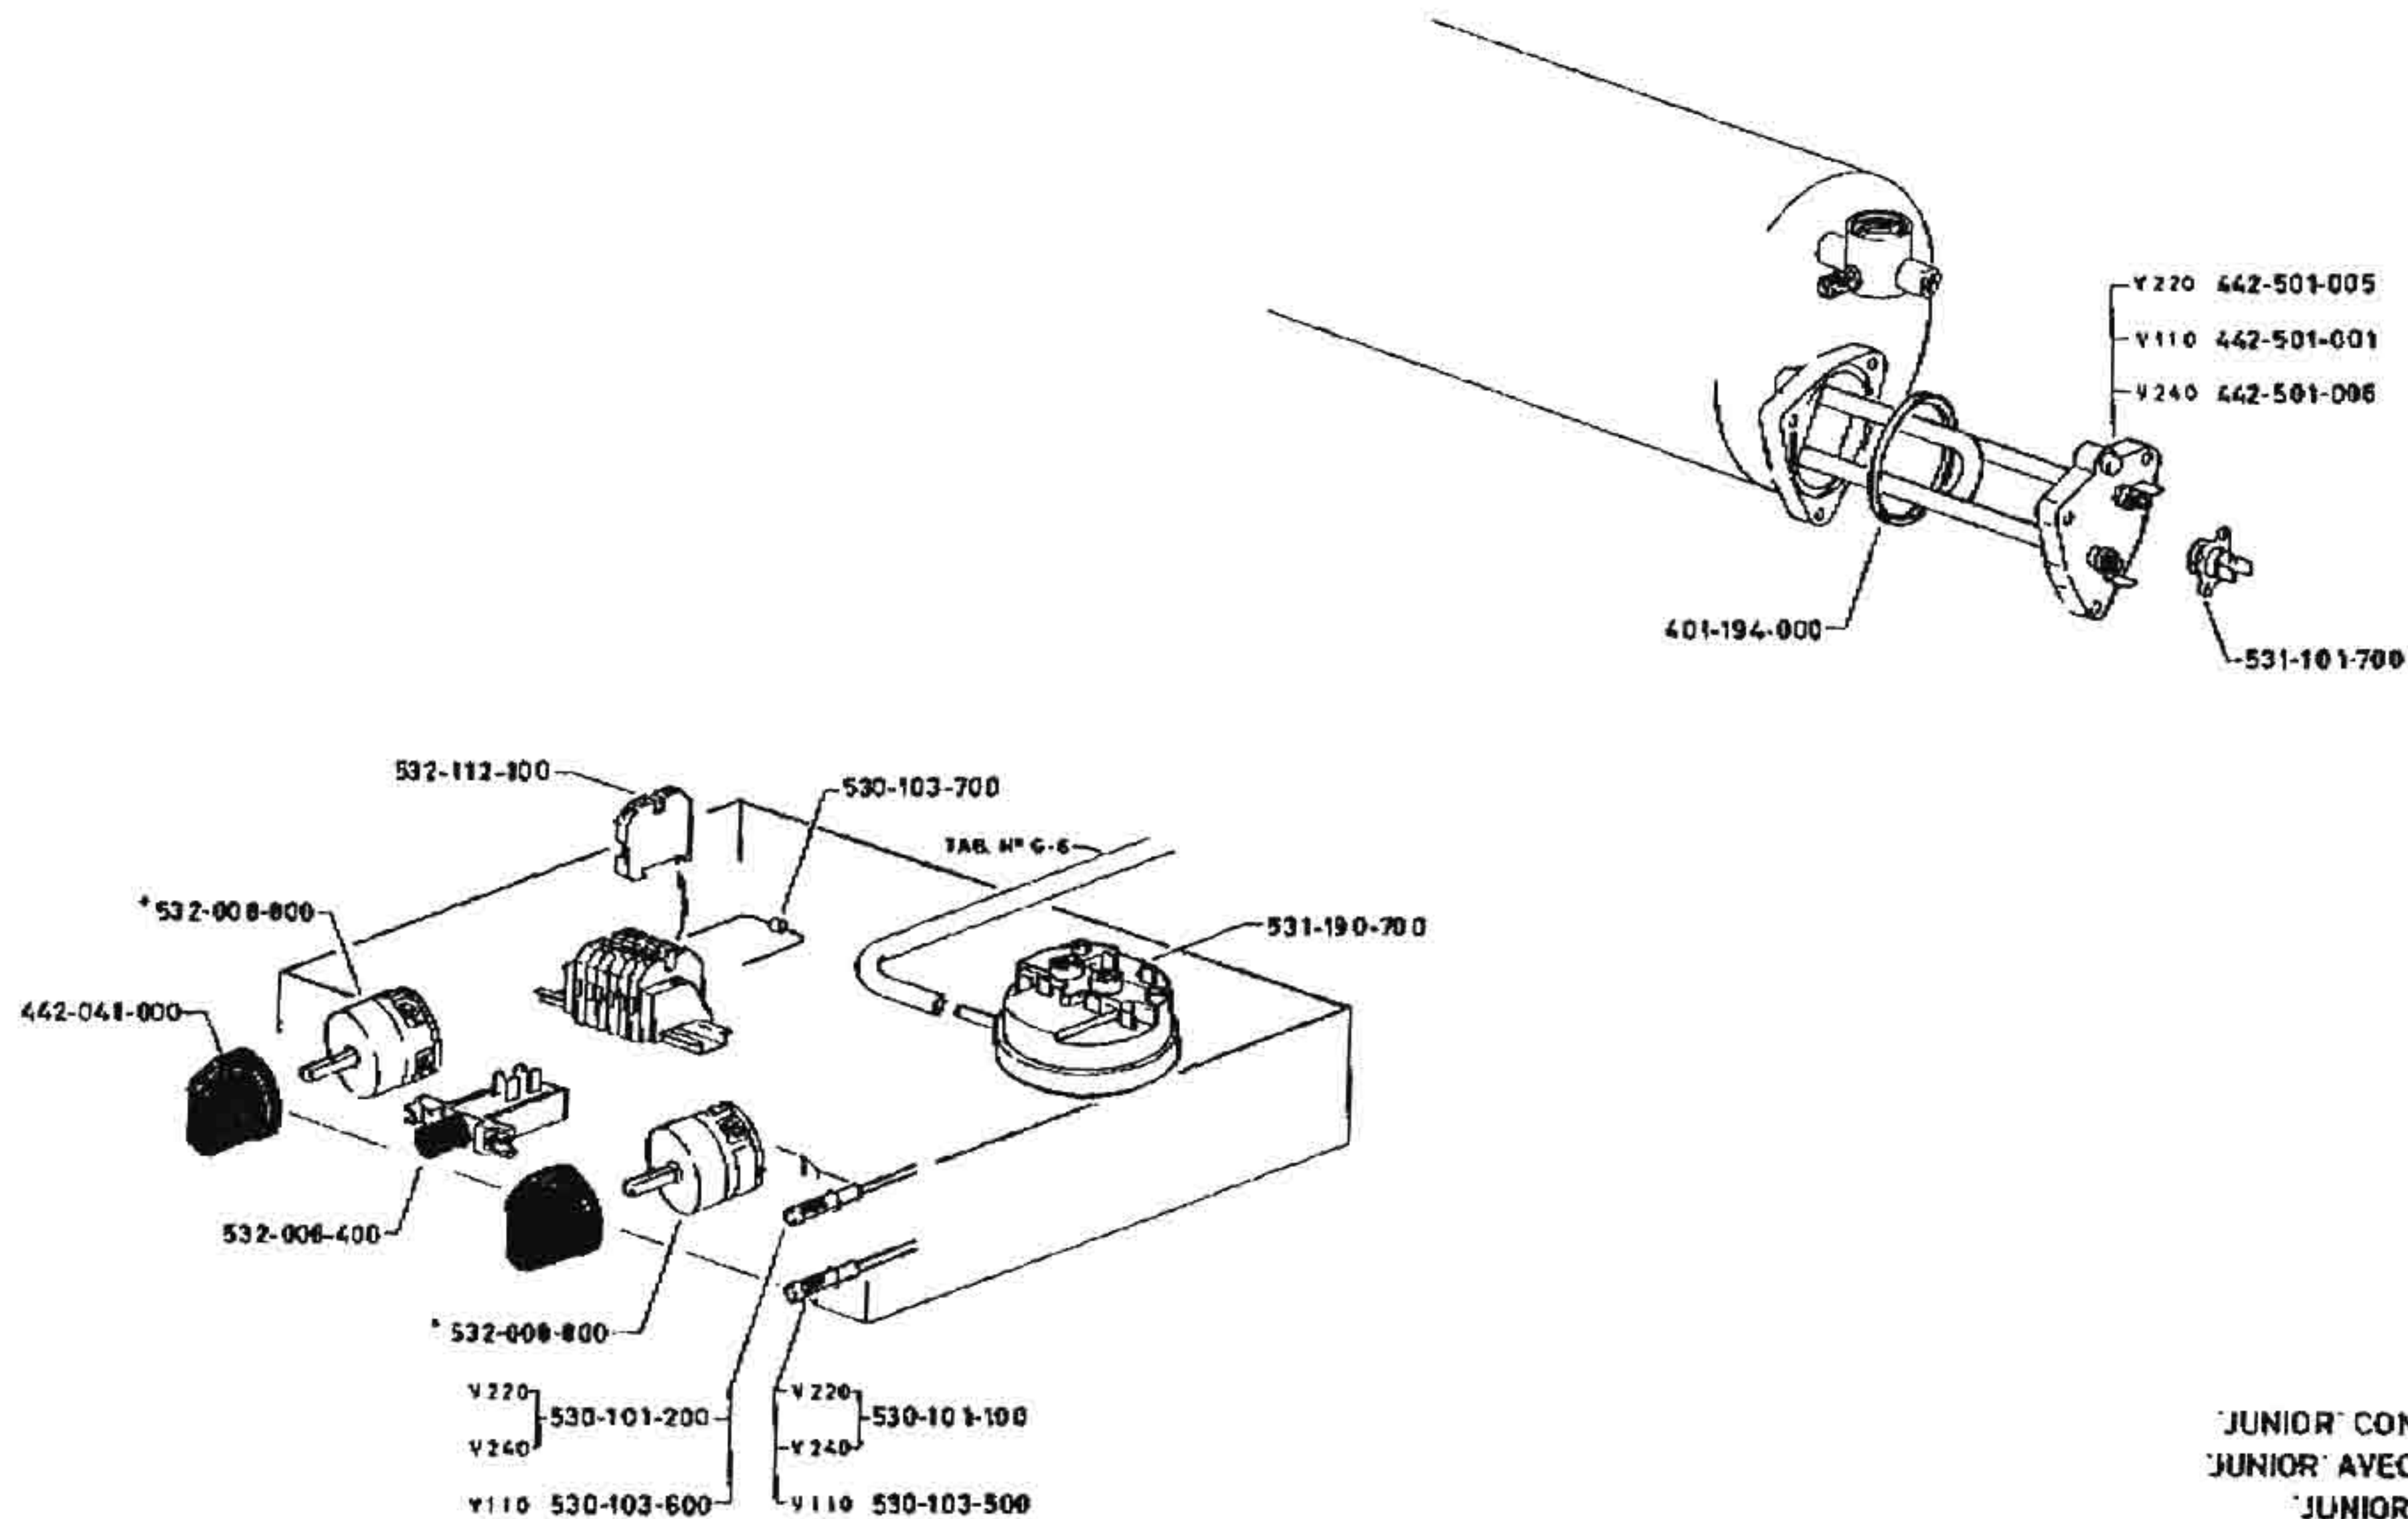

JUNIOR CON SERBATOIO  
 JUNIOR AVEC RESERVOIR  
 JUNIOR WITH TANK  
 JUNIOR MIT BEHÄLTER

	SILVER	GOLD
①	421-997-002	421-590-018
②	421-998-002	421-581-018
③	442-097-004	442-097-008
④	442-026-004	442-026-008
⑤	442-511-000	442-511-000
⑥	442-076-004	442-076-008
⑦	442-052-004	442-052-008

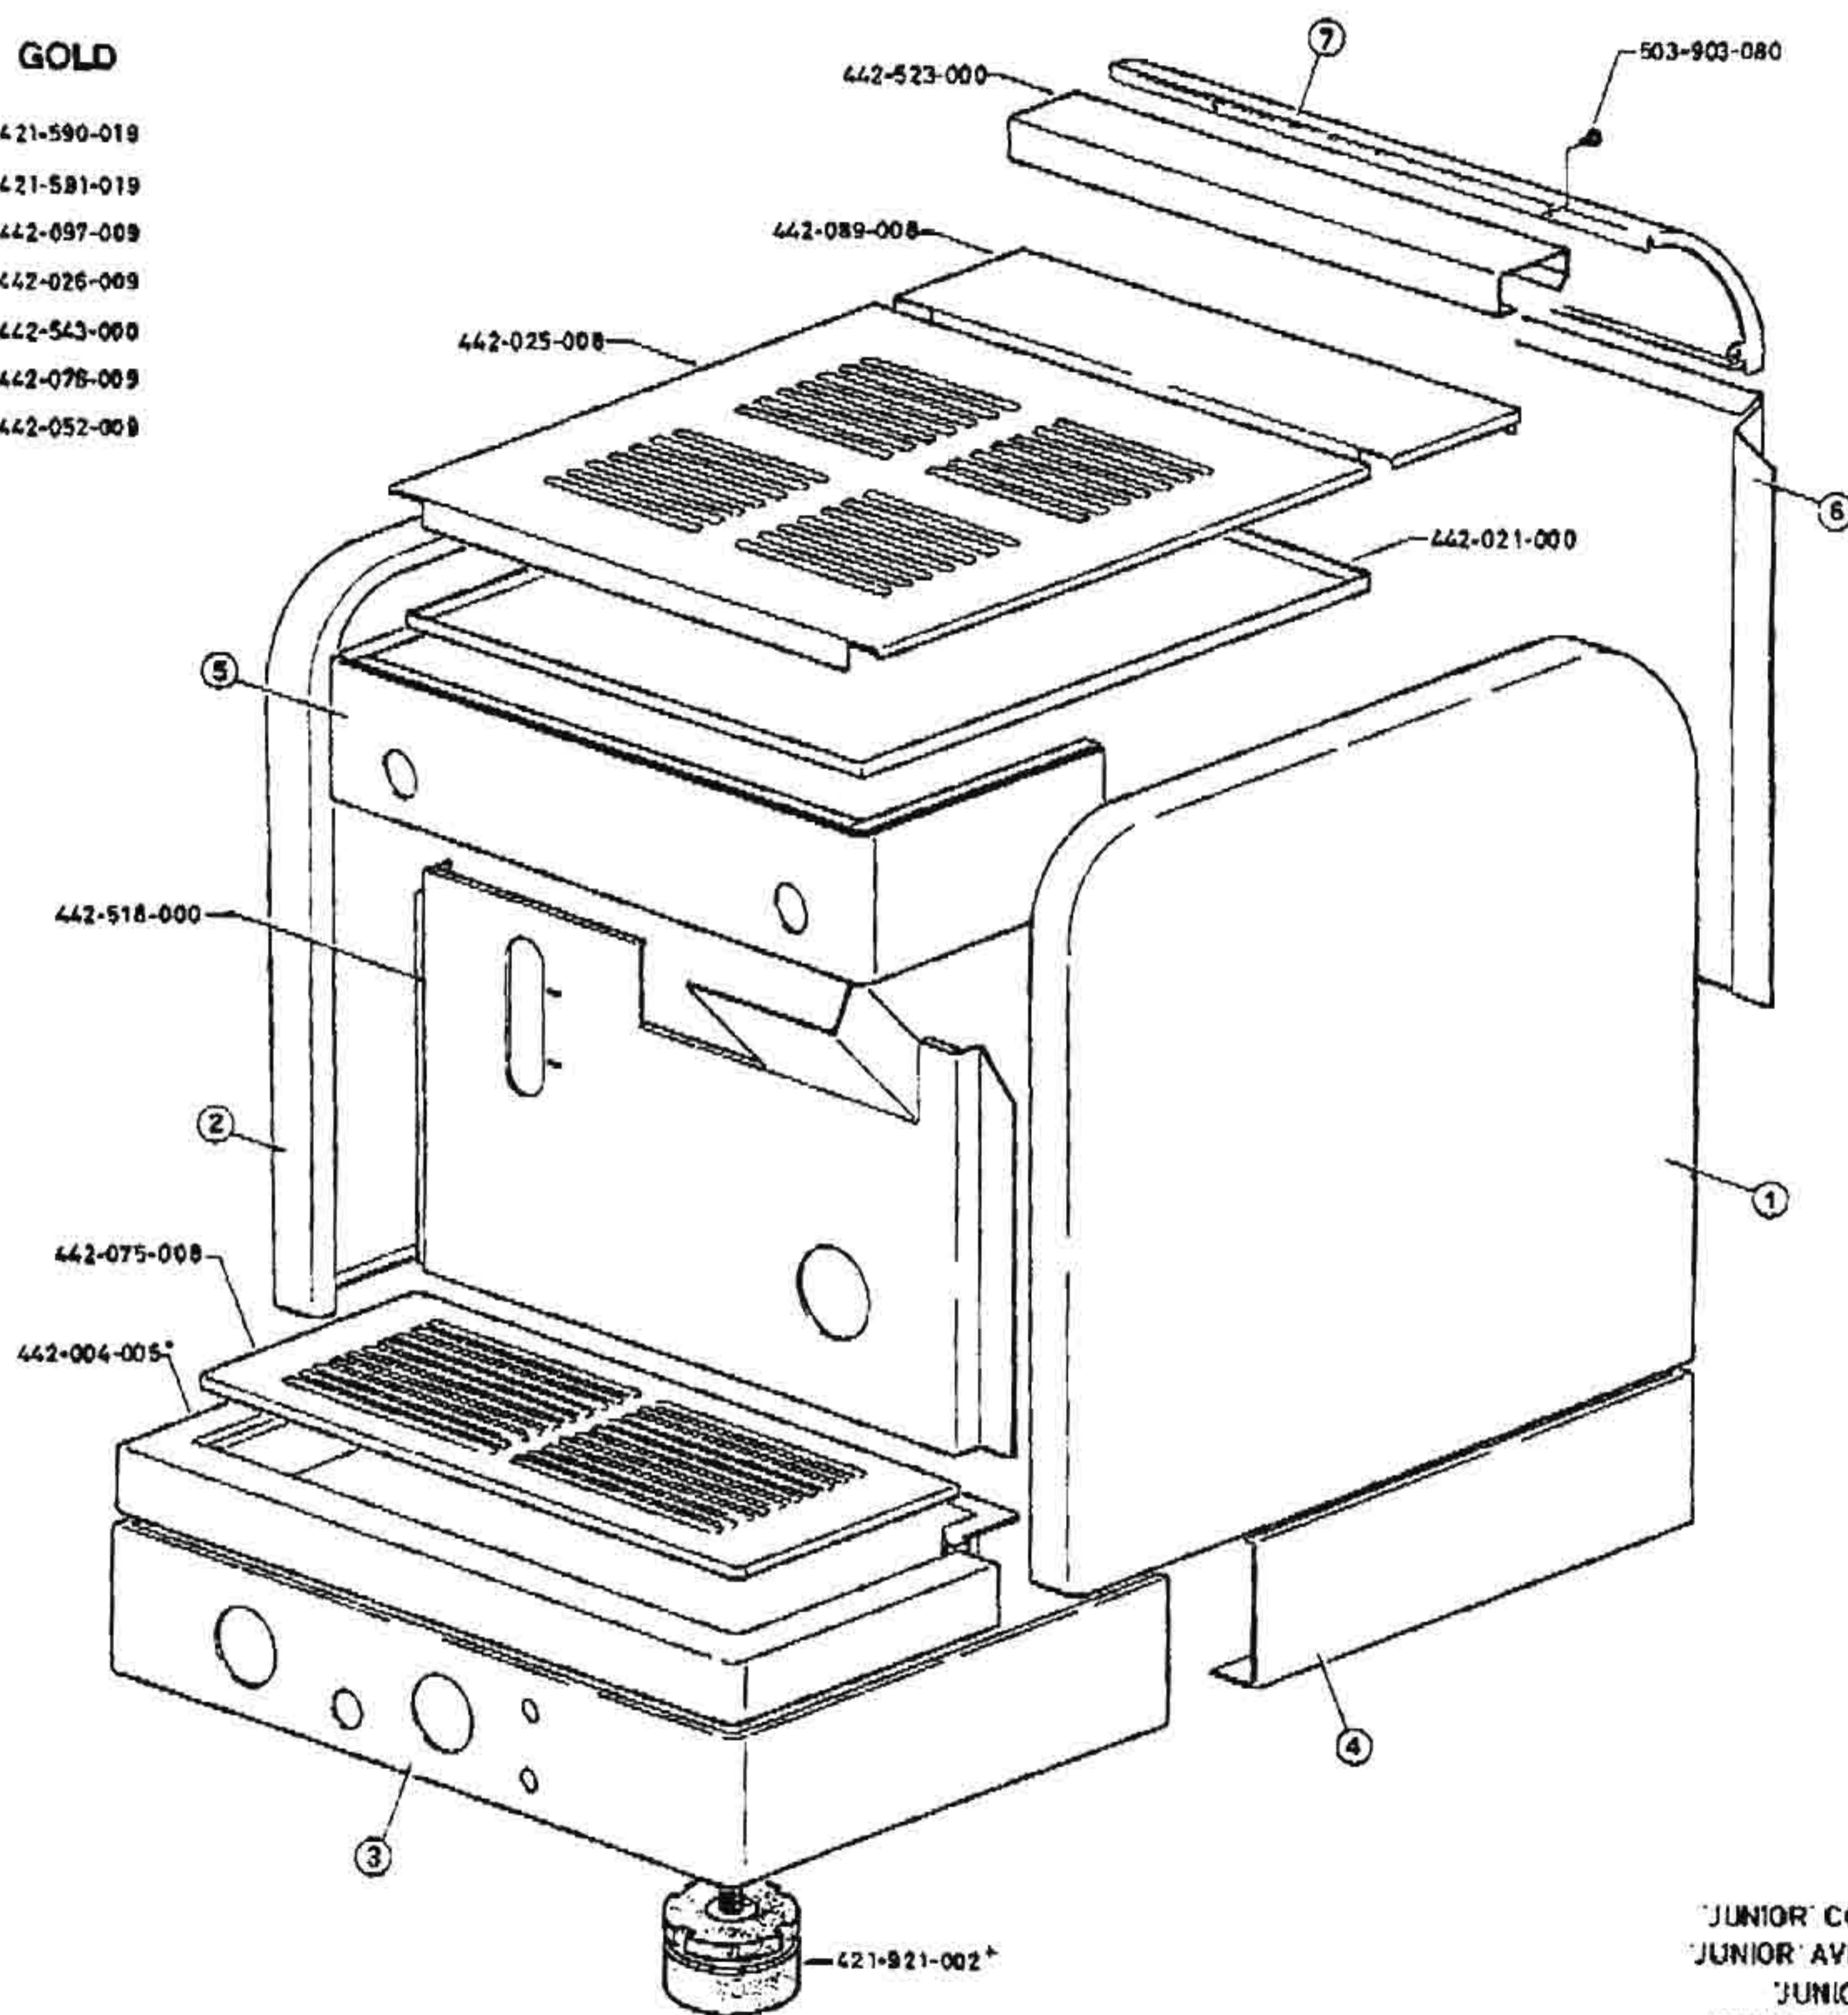

'JUNIOR' CON SERBATOIO  
 'JUNIOR' AVEC RESERVOIR  
 'JUNIOR' WITH TANK  
 'JUNIOR' MIT BEHÄLTER