


E1160 DOMINATOR FOUR

3 Hotplat. Fitments

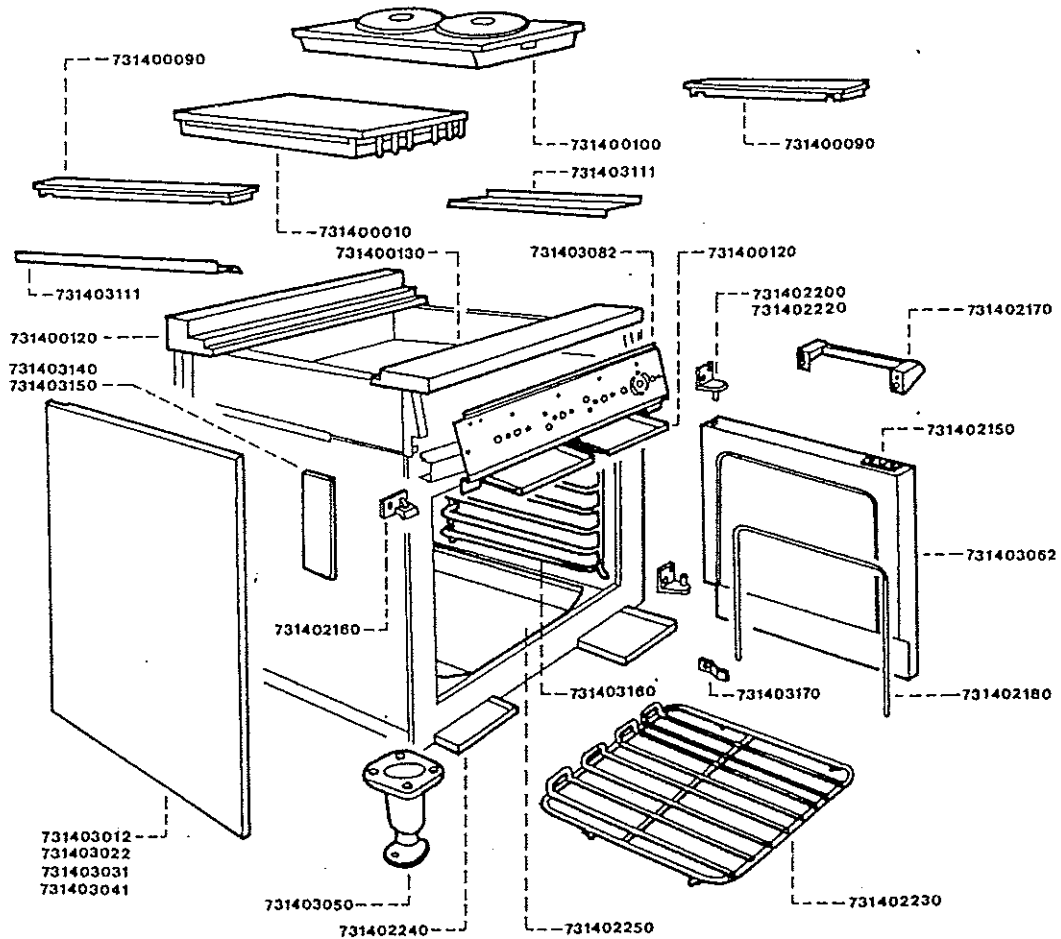


Code	No.	Description	Code	No.	Description
9L	731400010	Hotplate Assembly (Complete)	1F	731403031	Outer Side—Left Hand; Black
*	731400090	Hob Filling	1F	731403041	Outer Side—Right Hand; Black
5E	731400100	Round Hotplate Assembly	9B	731403050	Leg c/w Adjustable Foot
3E	731400120	Top Drip Tray	12K	731403062	Door Assembly
6E	731400130	Front Hob Rail	5D	731403082	Control Panel
11E	731400140	Rear Hob Rail	10C	731403111	Side Drip Shed
8B	731402150	Door Catch	12C	731403140	Cheek—Left Hand
6B	731402160	Door Catch Keeper	12C	731403150	Cheek Right Hand
2B	731402170	Door Handle c/w Gaskets	10C	731403160	Oven Shelf Hanger
11C	731402183	Door Seal Set	6A	731403170	Oven Hanger Bracket
5C	731402200	Hinge—Top Right Hand			
5C	731402220	Hinge—Bottom Right Hand			
3E	731402230	Oven Grid Shelf			
3E	731402240	Oven Drip Tray			
10E	731402250	Oven Bottom Plate			
5G	731403012	Outer Side—Left Hand; S/S			
5G	731403022	Outer Side—Right Hand; S/S			

Sheet Reference Number

E1160/1182/001




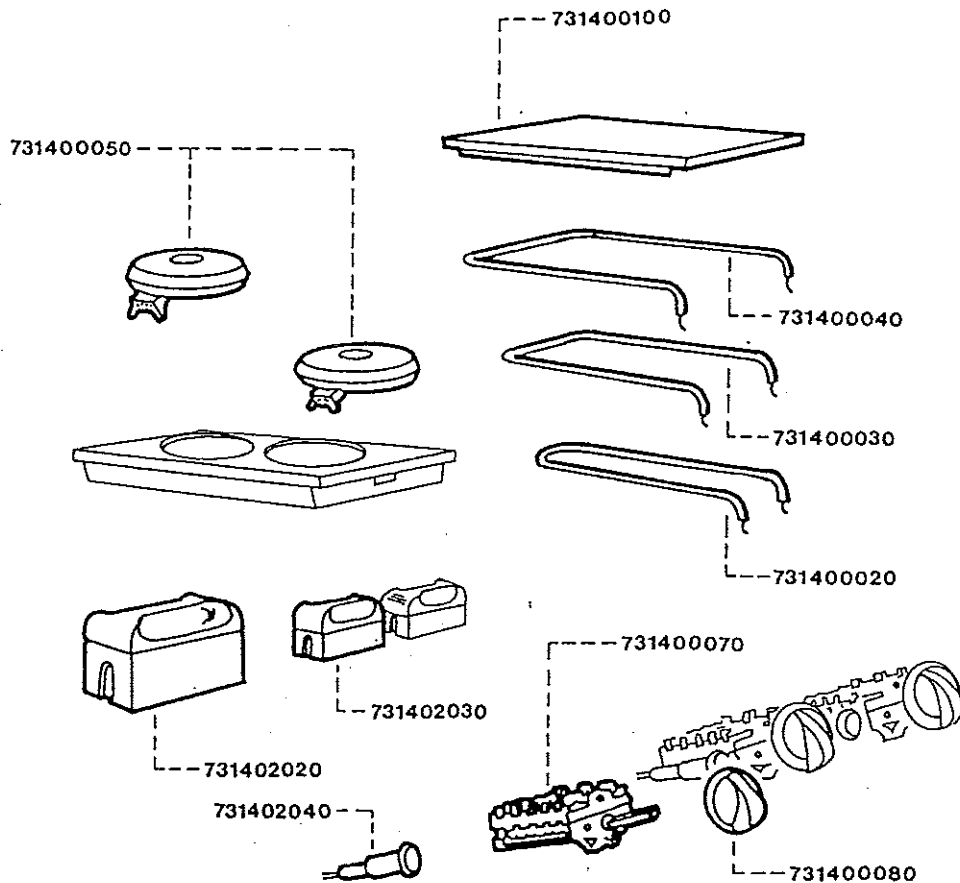

Code	No.	Description
6E	731400020	Inner Hotplate Element
8E	731400030	Intermediate Hotplate Element
10E	731400040	Outer Hotplate Element
5E	731400050	Round Hotplate
8C	731400070	Control Switch
1B	731400080	Control Knob
5E	731400100	Hotplate (Casting Only)
11C	731402020	30 Amp Fuse Assembly
9C	731402030	20 Amp Fuse Assembly
7B	731402040	Pilot Lamp (Amber)

Sheet Reference Number

E1160/1182/002

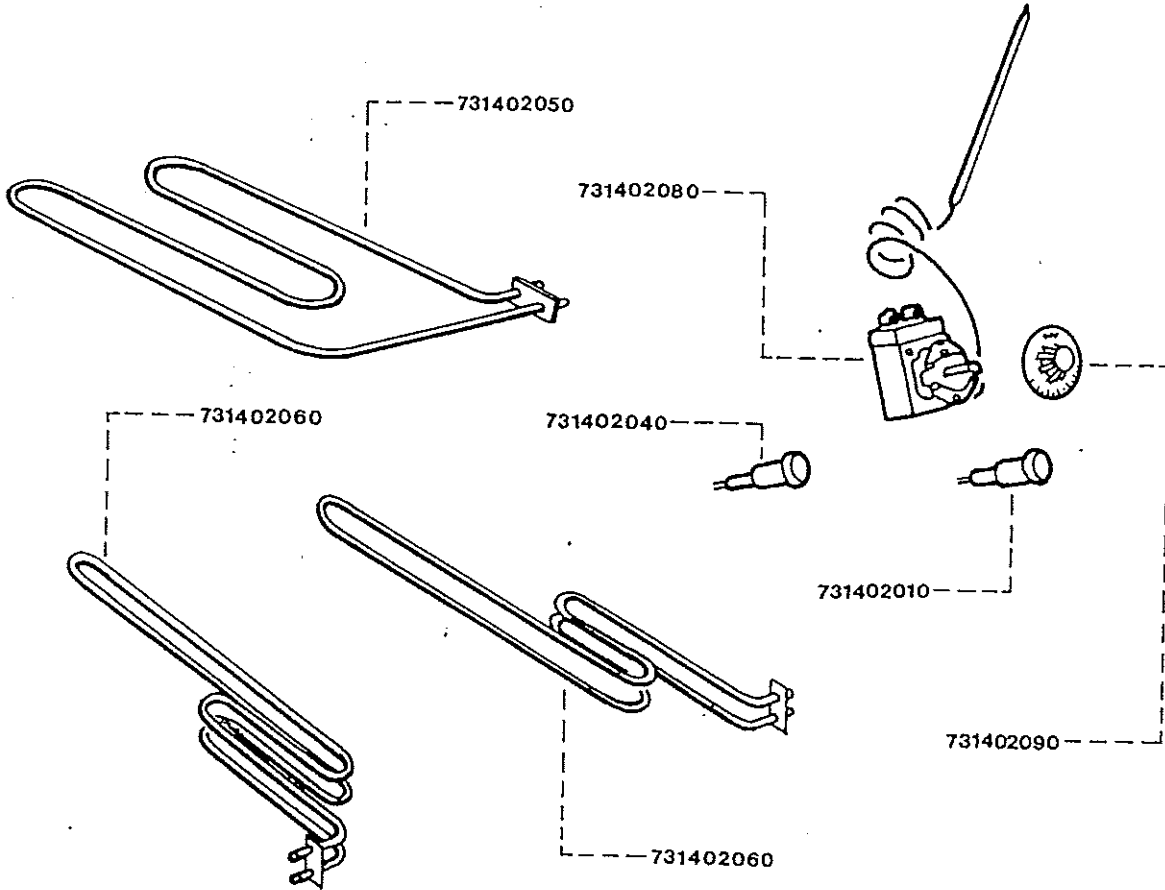

<u>Code</u>	<u>No.</u>	<u>Description</u>
7B	731402010	Mains Pilot Lamp (Red)
7B	731402040	Pilot Lamp (Amber)
3F	731402050	Top Oven Element
6F	731402060	Bottom Oven Element
1F	731402080	Thermostat
10B	731402090	Thermostat Knob

Sheet Reference Number

E1160/1182/006

