# Service part catalogue

## iVario® as of 03/2020 Pro L (211) - 39 dm², 100 L


**E21PK2406XXXXXXX**



10/1/2024
3NAC400 V 50/60Hz

© Copyright by RATIONAL Technical Service
All Rights reserved


# Overview

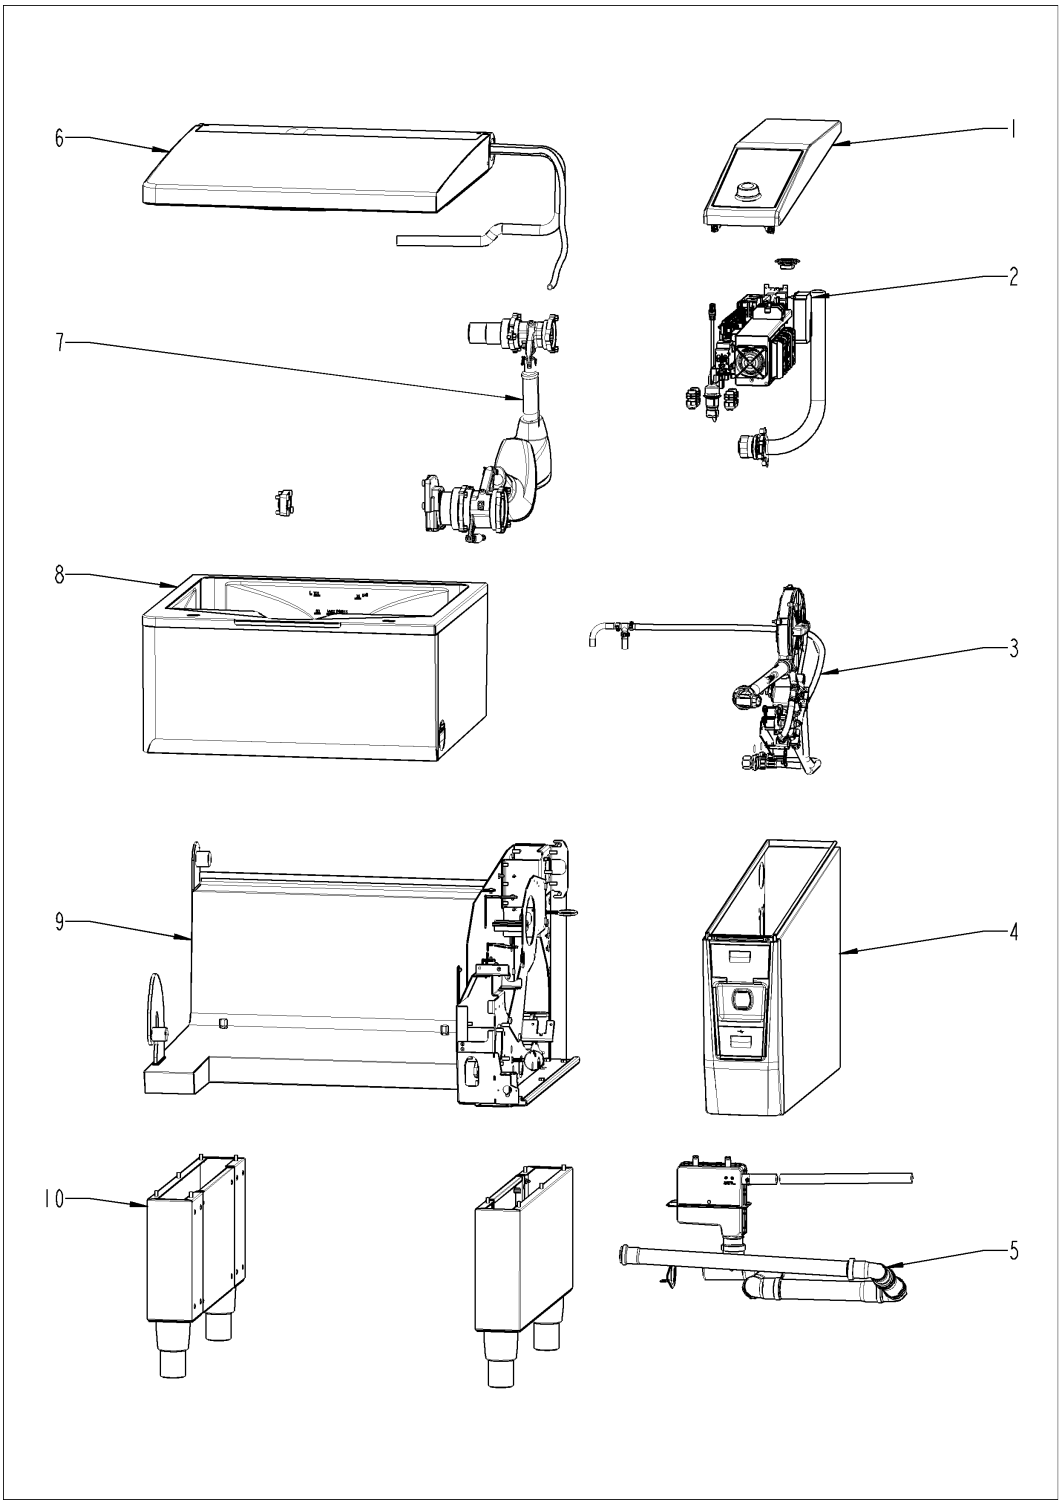

# Overview

Pos. 1 Control panel **4**
Pos. 2 Electrical installation **6**
Pos. 3 Water distribution **9**
Pos. 4 Console **11**
Pos. 5 Water drain **13**
Pos. 6 Lid **15**
Pos. 7 Kinematic **17**
Pos. 8 Pan **19**
Pos. 9 Base structure **22**
Pos. 10 Underframe **24**
Pos. 20 Accessories **26**
Pos. 30 Repair and retrofit kit **49**


# Pos. 1 Control panel

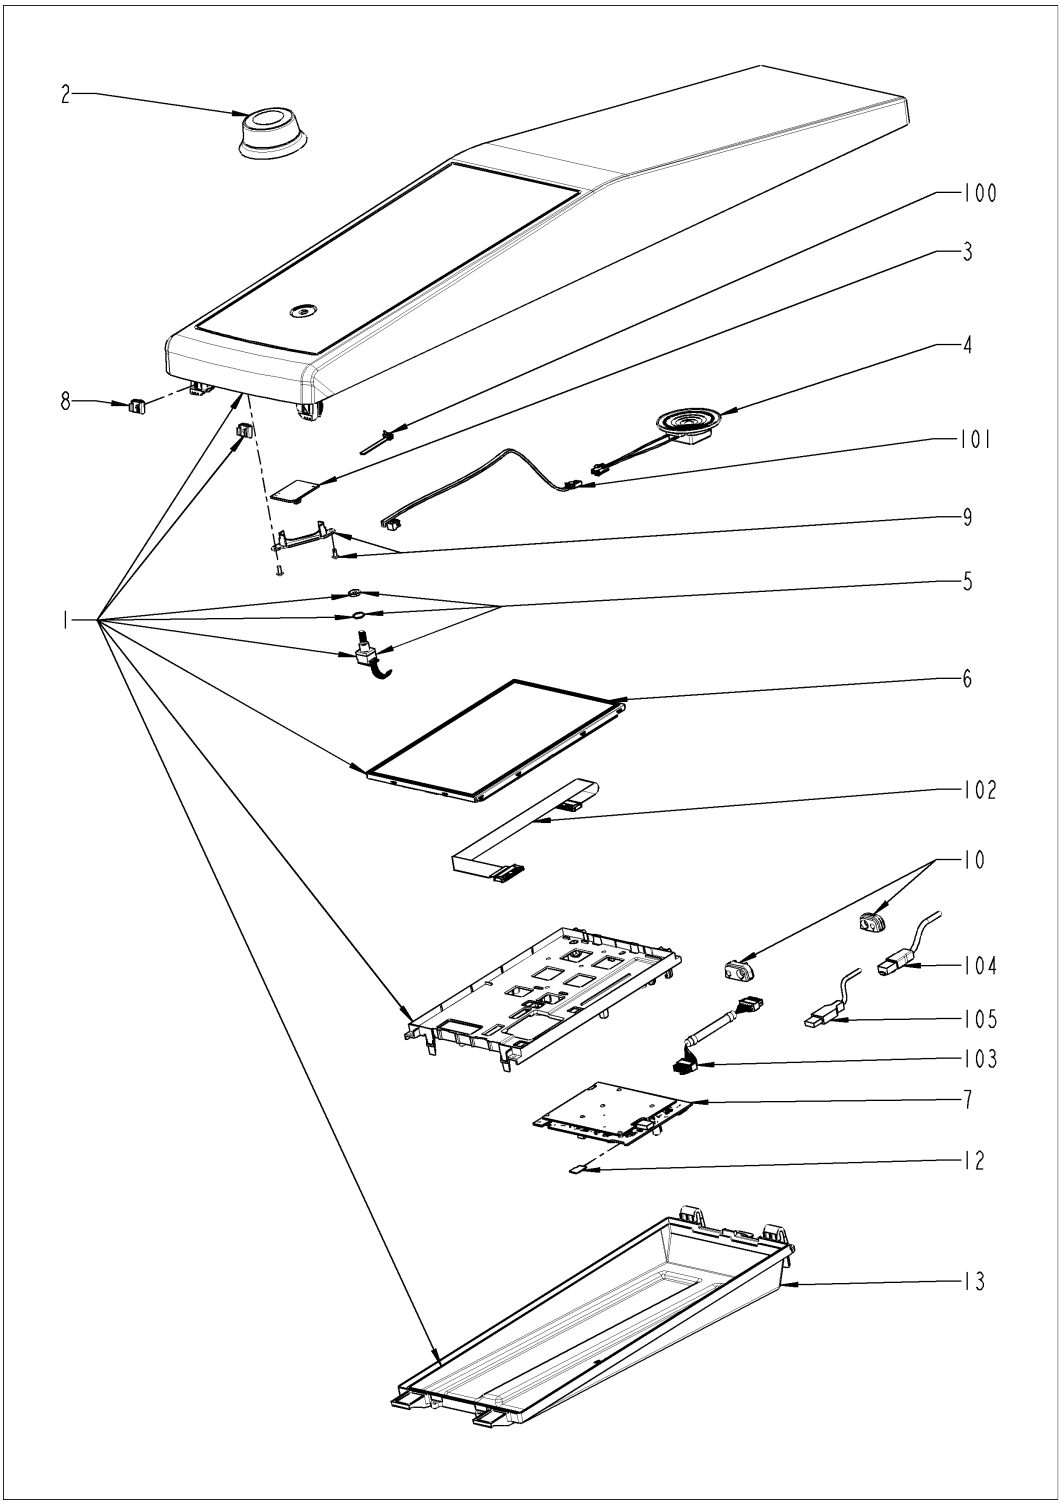

# Pos. 1 Control panel

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 16.03.565P | Control panel RATIONAL | 1 |
| 2 | 16.03.756P | Dial f. pulse generator | 1 |
| 3 | 42.00.346P | Sensor on / off | 1 |
| 4 | 40.07.746P | Loudspeaker SL 64 FR 8W | 1 |
| 5 | 40.07.493P | Pulse generator | 1 |
| 6 | 42.00.287P | Display *TFT* | 1 |
| 7 | 42.00.251P | Control pcb (w/o SD-Card) | 1 |
| 8 | 10.01.862P | Cage nut M5 for 1.7 up to 2.5mm | 2 |
| 9 | 16.04.204S | On-Off sensor support | 1 |
| 10 | 87.01.774S | Gasket kit for control panel cable | 1 |
| 12 | 42.00.359P | Micro SD card | 1 |
| 13 | 16.04.064P | Inner protective cover of the control panel | 1 |
| 100 | 40.06.760P | Cable control pcb - capacitive switch | 1 |
| 101 | 40.06.076P | Loudspeaker cable | 1 |
| 102 | 40.06.569P | Cable CPU - TFT | 1 |
| 103 | 40.06.103P | Bus cable 0,7m | 1 |
| 104 | 40.06.409P | Interface cable LAN 1.5m | 1 |
| 105 | 40.06.583P | Interface cable USB 1,4m | 1 |

# Pos. 2 Electrical installation

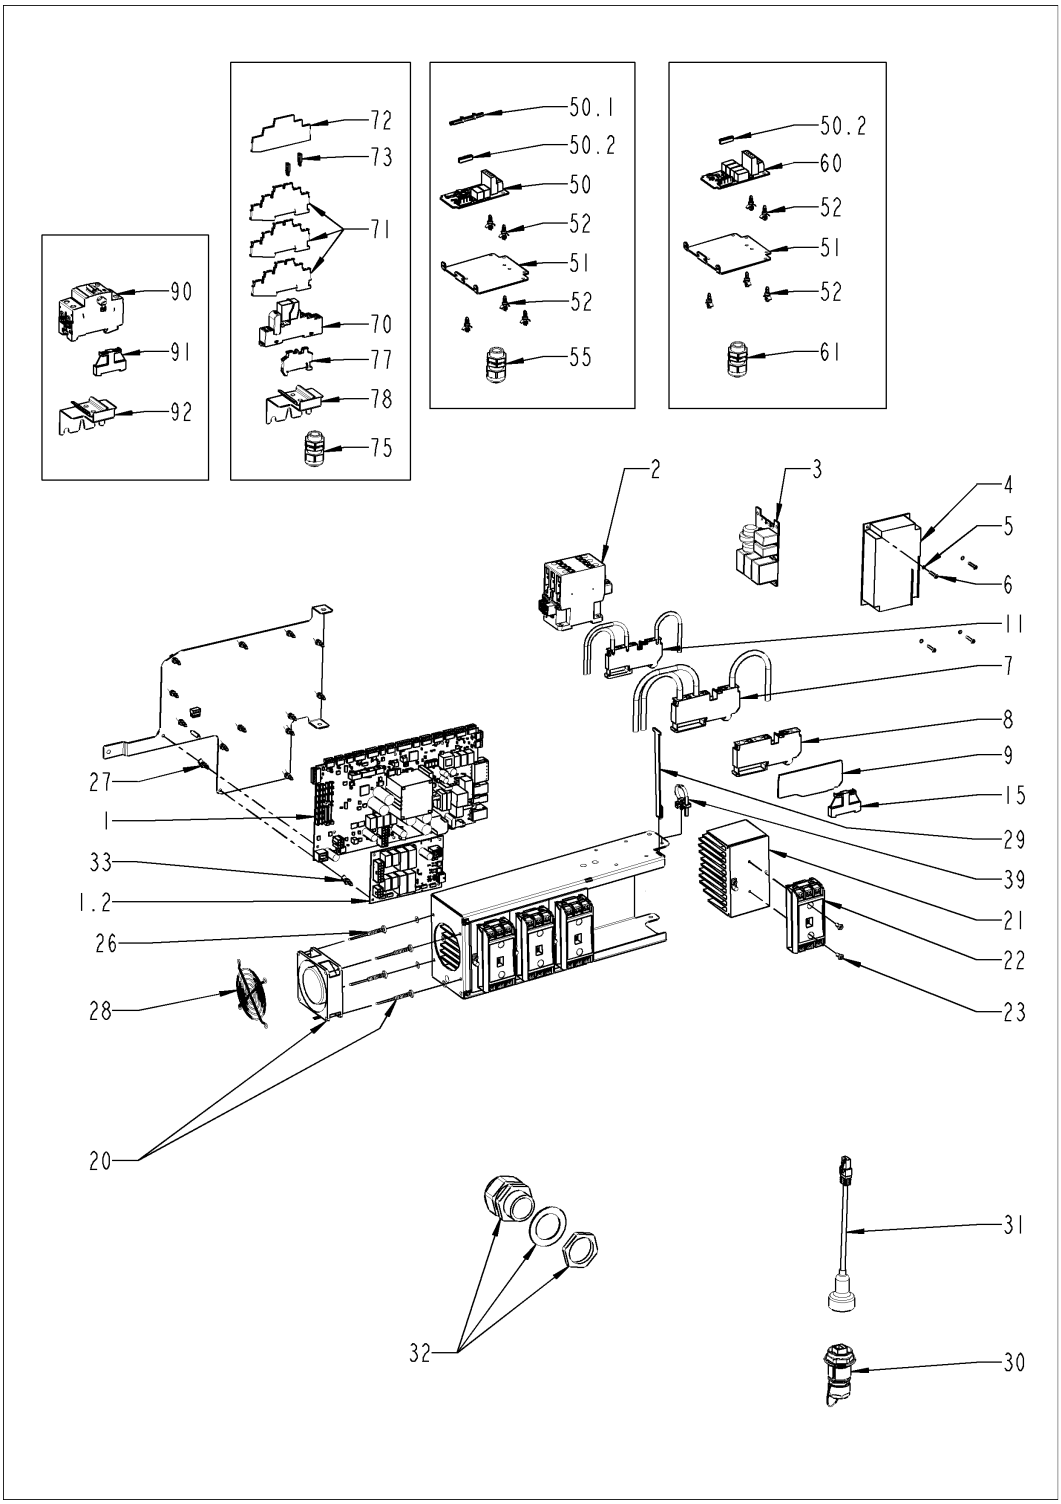


# Pos. 2 Electrical installation

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 42.00.311P | Relay-I/O pcb A10 | 1 |
| 1.1 | 40.06.252P | Termination resistor | 1 |
| 1.2 | 42.00.413P | I/O movement PCB A13 | 1 |
| 1.3 | 40.07.636P | Bus cable for A13 I/O board | 1 |
| 1.4 | 40.07.635P | Adapter harness for I/O board A13 | 1 |
| 2 | 40.07.420P | Contactor K3-18NBV10 190R T B01 AZ | 1 |
| 3 | 42.00.322P | Electronic noice filter | 1 |
| 4 | 40.06.713P | Power supply | 1 |
| 5 | 10.02.337P | Lock washer DIN6798-J M3 A2 | 4 |
| 6 | 10.00.144P | Socket cap screw M3x16mm | 4 |
| 7 | 40.06.427P | Double level terminal block 10mm² blue | 1 |
| 8 | 40.04.643P | Double leven earth terminal 10mm² yellow/green | 1 |
| 9 | 40.07.120P | End flask for block APFN 6 D1/2/35 | 1 |
| 11 | 40.06.933P | Double level earth terminal 6mm² yellow/green | 1 |
| 15 | 4001.1203P | End plate for mounting rail | 1 |
| 16 | 40.08.116P | Heat sink support | 1 |
| 20 | 40.06.806S | Cooling fan | 1 |
| 21 | 40.06.428P | Heat sink 1 SSR | 3 |
| 22 | 40.05.670P | Solid state relais | 3 |
| 23 | 10.02.263P | Raised countersunk head screw Torx M4x10 T20 | 6 |
| 26 | 10.01.339P | Fixing Elastomer | 4 |
| 27 | 10.01.336P | Plastic spacer 7mm 12 | 11 |
| 28 | 40.07.421S | 80mm fan protection grill with mounting set | 1 |
| 29 | 40.07.372P | Locking device for heat sink | 1 |
| 30 | 40.05.509P | Interface LAN IPX6 | 1 |
| 31 | 40.06.409P | Interface cable LAN 1.5m | 1 |
| 32 | 40.00.701S | Screwed cable gland polyamid PG40 | 1 |
| 33 | 10.01.336P | Plastic spacer 7mm 12 | 4 |
| 39 | 10.02.376P | Cable tie 160mm with fir base | 4 |
| 50 | 42.00.324P | IO module extension, Energy_opt. | 1 |

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 50.1 | 40.08.226P | Cable harness W32 for energy optimizer option | 1 |
| 50.2 | 40.08.115P | Cable harness W58 for extension module 2 options | 1 |
| 51 | 40.07.911P | PCB support 2 options | 1 |
| 52 | 10.02.200P | Plastic clip spacer 4.8mm | 5 |
| 55 | 40.00.320S | Cable gland M20x1.5 | 1 |
| 100 | 40.06.092P | Control harness | 1 |


# Pos. 3 Water distribution

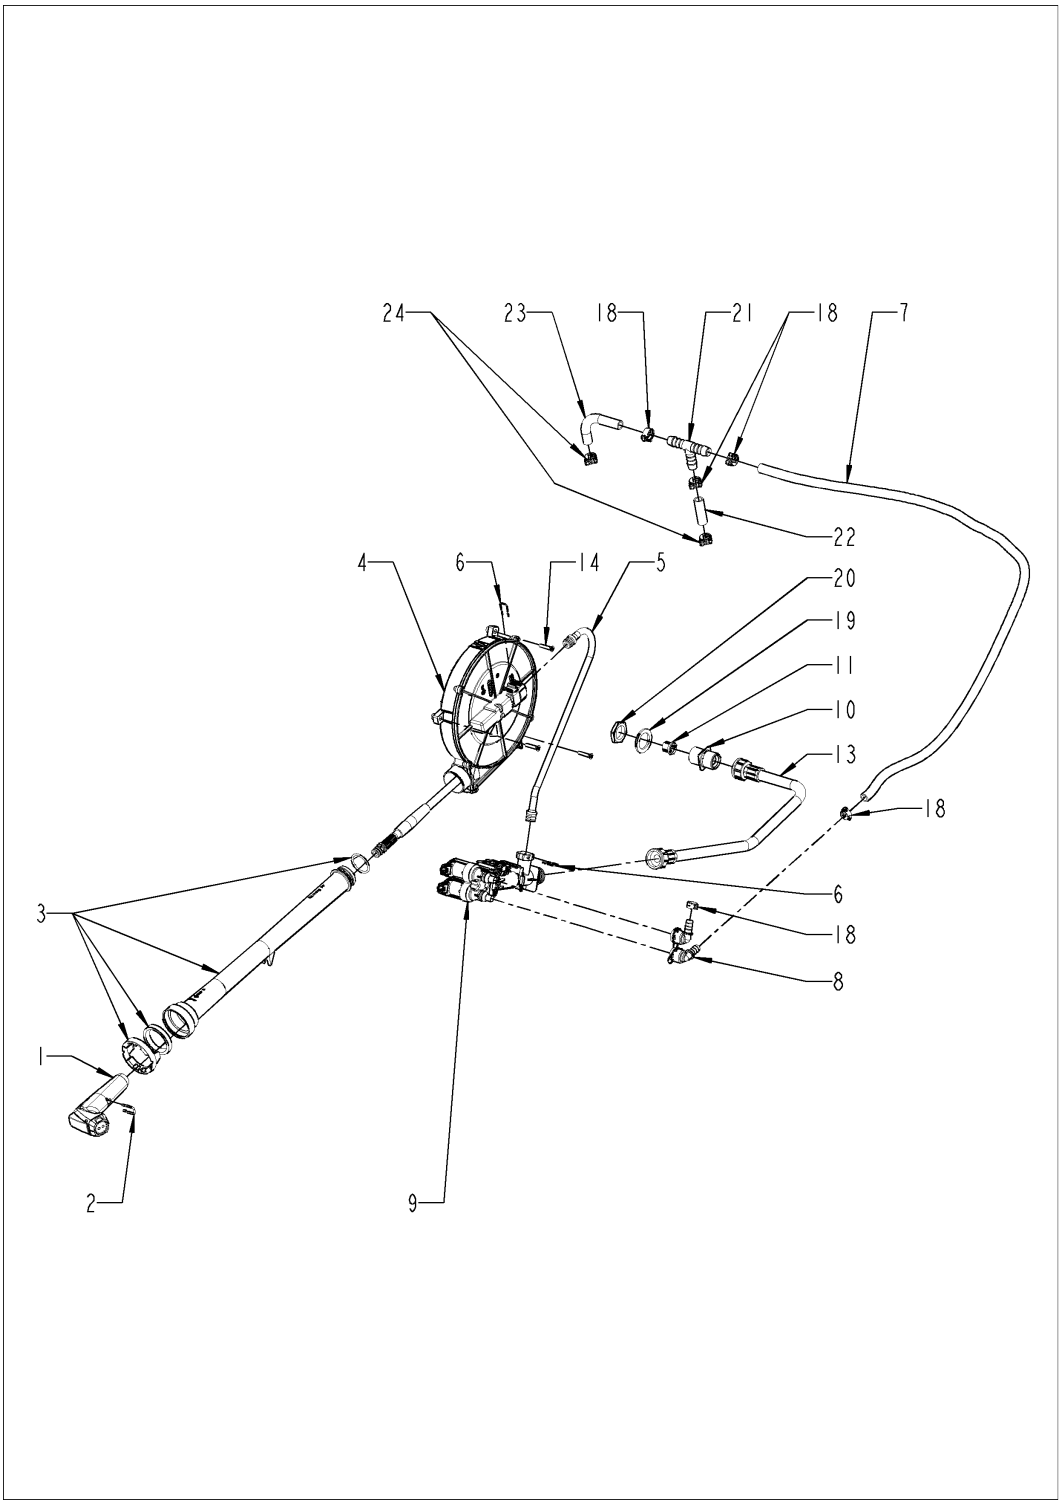

# Pos. 3 Water distribution

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 52.00.127S | Hand shower black | 1 |
| 2 | 50.00.156P | Clamp f. hand shower roll guide | 1 |
| 3 | 87.01.616S | Connection pipe hand shower roll guide | 1 |
| 4 | 52.00.143P | Hand shower roll guide | 1 |
| 5 | 52.00.105P | Hand shower roll guide water supply | 1 |
| 6 | 50.00.085P | Retractor locking spring | 2 |
| 7 | 50.02.322 | Reinforced silicon hose ø10x3mm | 1.1 |
| 8 | 52.00.017P | Angle plug PS3 6-6-90° | 2 |
| 9 | 50.02.063P | Double solenoid valve block with flowmeter | 1 |
| 10 | 50.02.114P | Fitting 3/4" M/M | 1 |
| 11 | 1900.0202P | Water filter | 1 |
| 13 | 50.02.094P | Water supply pipe | 1 |
| 14 | 10.01.669P | Slot counter head secur screw M5X20 Phillips | 3 |
| 18 | 10.02.239P | Hose clamp clic R86-145 | 6 |
| 19 | 50.02.324P | Gasket for water supply coupling 38x28 | 1 |
| 20 | 50.02.325P | Fixing nut 3/4" | 1 |
| 21 | 54.01.985P | T-fitting D10 | 1 |
| 22 | 50.02.322 | Reinforced silicon hose ø10x3mm | .05 |
| 23 | 50.02.322 | Reinforced silicon hose ø10x3mm | .12 |
| 24 | 50.02.176P | Hose clamp clic R96-165 | 2 |
| 100 | 40.07.208P | Flowmeter cable | 1 |


# Pos. 4 Console

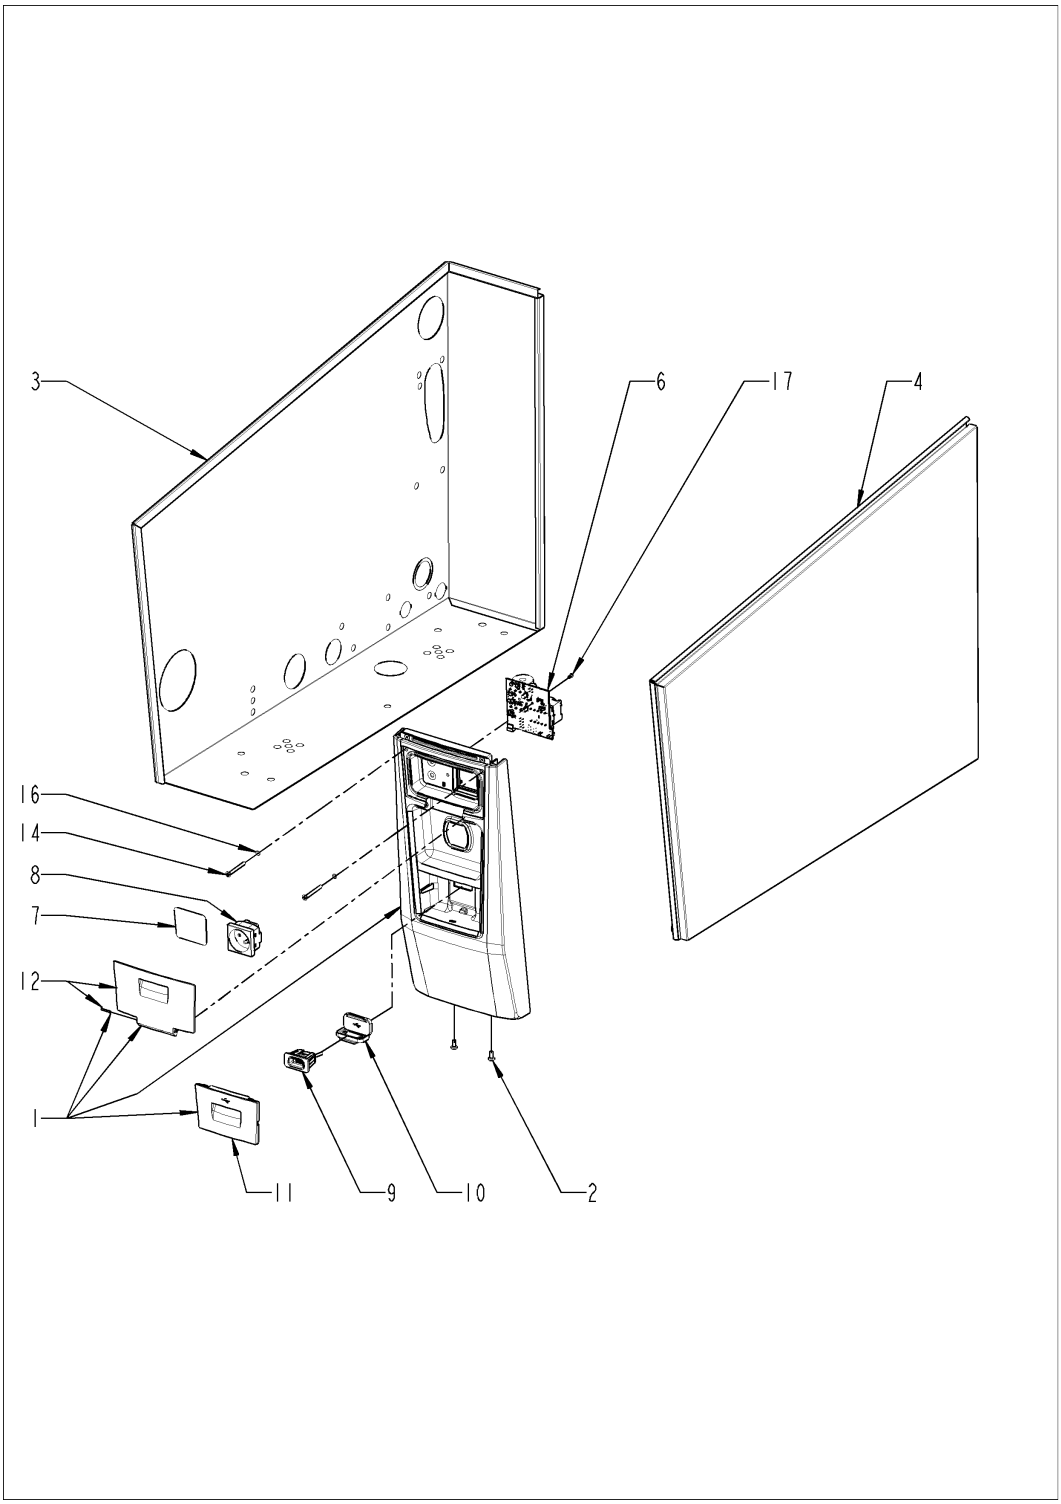

# Pos. 4 Console

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 16.04.691S | Front panel console | 1 |
| 2 | 10.01.912P | Crosshead screw M5x12 | 2 |
| 3 | 16.03.553P | Side panel left for console | 1 |
| 4 | 16.03.554P | Side panel right for console | 1 |
| 6 | 42.00.356P | Protection board for socket outlet protection | 1 |
| 7 | 16.04.236P | Shutter sticker option without differential protection | 1 |
| 8 | 40.01.409P | Socket 2P+T 16A (France) | 1 |
| 9 | 40.06.583P | Interface cable USB 1,4m | 1 |
| 10 | 40.06.045P | USB socket cover | 1 |
| 11 | 16.04.694P | Front panel cover for USB assembly | 1 |
| 12 | 16.03.997P | Socket flap | 1 |
| 14 | 10.01.923P | Counter head screw M5x45 DIN965-H | 2 |
| 16 | 10.02.001P | Gasket D4/8 x1 | 2 |
| 17 | 10.01.899P | Pan head screw Torx Delta PT WN5412 30x8 A2 | 1 |


# Pos. 5 Water drain

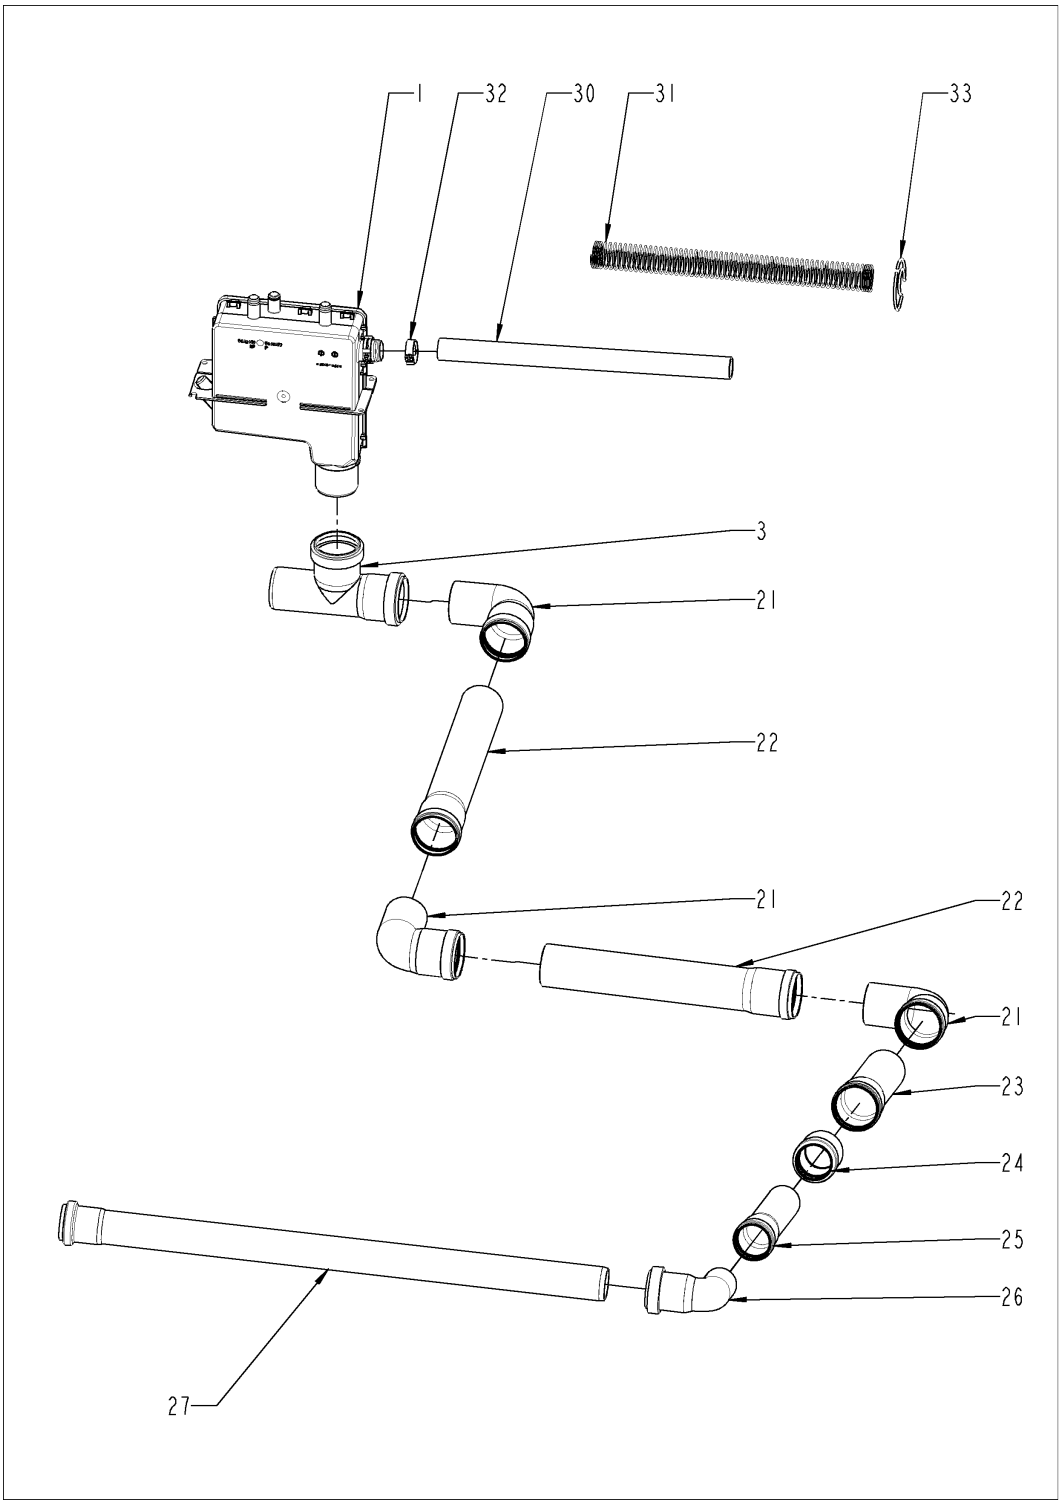

# Pos. 5 Water drain

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 54.01.978P | Control chamber | 1 |
| 3 | 2070.0048P | HT drain T-fitting 50mm | 1 |
| 21 | 54.00.560P | Elbow-pipe PP DN50 87° | 3 |
| 22 | 54.00.755P | Pipe PP DN50 x 250 | 2 |
| 23 | 54.00.564P | PP-Pipe DN50 x 150mm | 1 |
| 24 | 50.00.680P | Bushing PP D50/D40 | 1 |
| 25 | 54.00.567P | PP-Pipe DN40 x 150mm | 1 |
| 26 | 54.00.575P | Elbow-pipe PP DN40 87.5° | 1 |
| 27 | 20.03.058P | Pan drain pipe | 1 |
| 30 | 54.02.122 | Conductive silicone hose diameter 20/26mm | 1.2 |
| 31 | 50.02.072P | Holding spring | 1 |
| 32 | 10.02.240P | Hose clamp clic R96-290 | 1 |
| 33 | 24.05.622P | Spring stop | 1 |


# Pos. 6 Lid

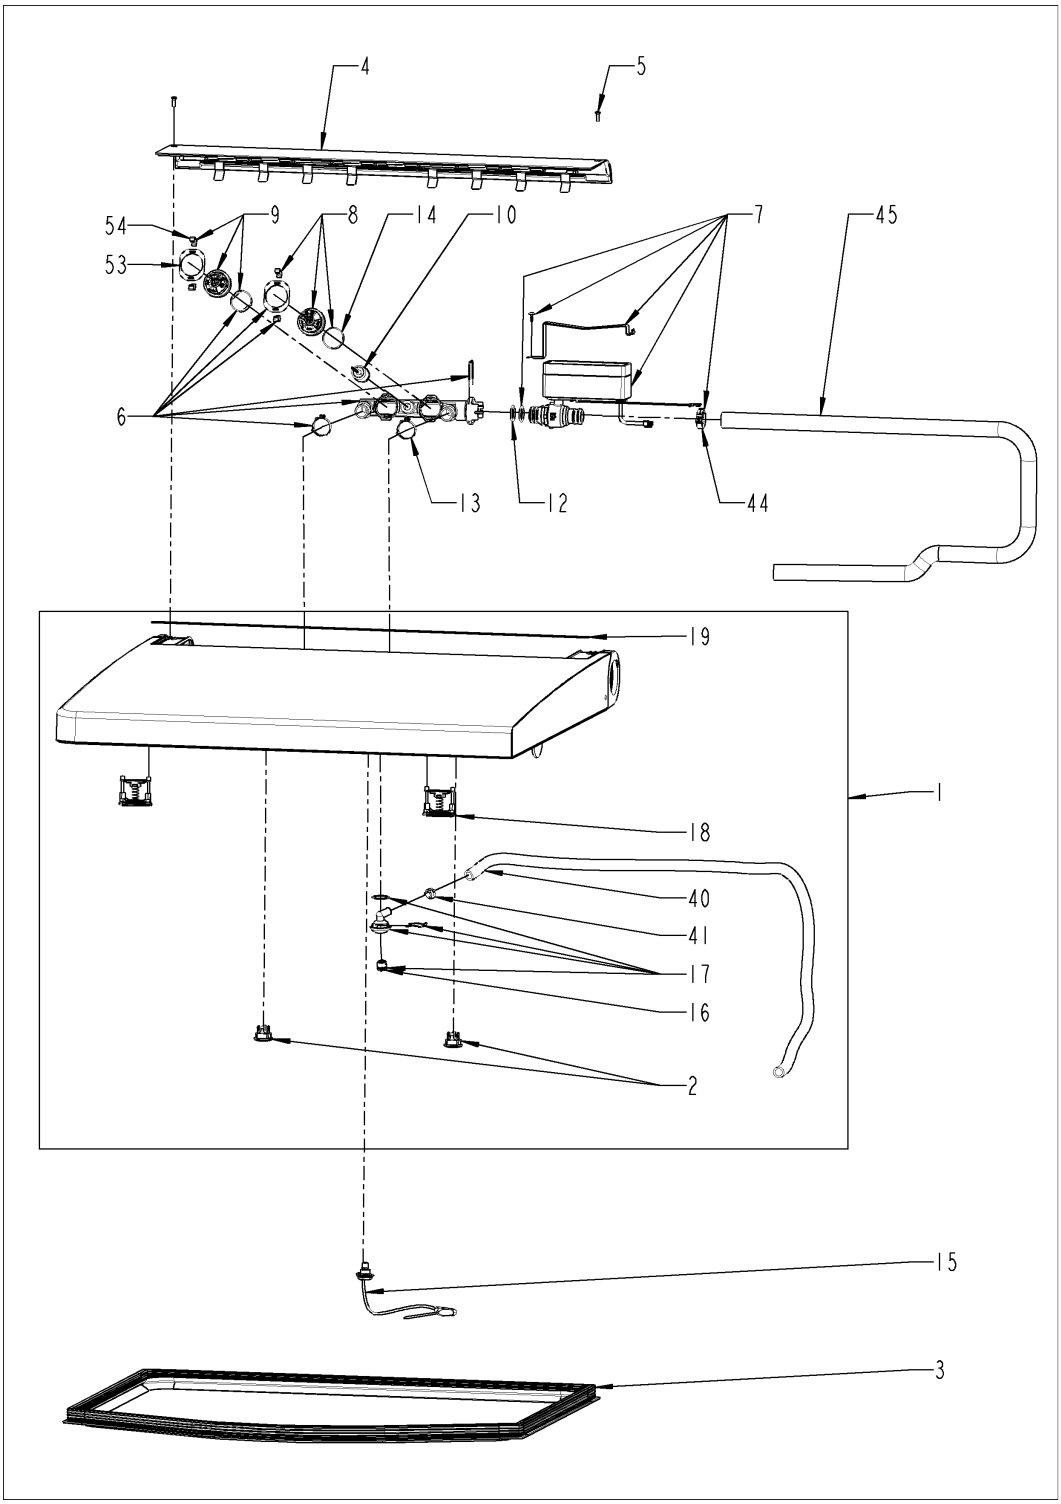

# Pos. 6 Lid

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 24.04.297P | Lid | 1 |
| 2 | 24.04.054P | Cover for pressure connection | 2 |
| 3 | 24.04.953P | Lid gasket | 1 |
| 4 | 24.04.880P | Inspection cover for lid | 1 |
| 5 | 10.01.808P | Hex socket countersunk head screw M5x16 | 2 |
| 6 | 87.01.989S | Left module for sensors | 1 |
| 7 | 87.01.836S | Pressure control valve | 1 |
| 8 | 54.02.130S | Pressure switch 20 mbar | 1 |
| 9 | 54.02.175S | Pressure switch 350 mbar | 1 |
| 10 | 54.01.771P | Pressure sensor | 1 |
| 12 | 54.02.082P | O-ring for ball valve 21,5 x 3 | 2 |
| 13 | 10.02.087P | Hose clamp clic R96-285 | 2 |
| 14 | 54.02.132P | O-ring D32xd2 | 1 |
| 15 | 40.07.165S | Core temperature probe | 1 |
| 16 | 50.02.248S | Aerator with service key | 1 |
| 17 | 87.01.617S | Filling nozzle left cover | 1 |
| 18 | 24.04.432P | Locking orifice plug | 2 |
| 19 | 10.01.376 | Gasket 1x10mm | .75 |
| 40 | 50.02.322 | Reinforced silicon hose ø10x3mm | 1.2 |
| 41 | 10.01.132P | Hose clamp clic R86-140 | 1 |
| 44 | 10.02.240P | Hose clamp clic R96-290 | 1 |
| 45 | 54.02.122 | Conductive silicone hose diameter 20/26mm | 1.2 |
| 53 | 54.02.190P | Pressure switch retaining plate | 2 |
| 54 | 54.02.210P | Pressure switch clip | 4 |


# Pos. 7 Kinematic

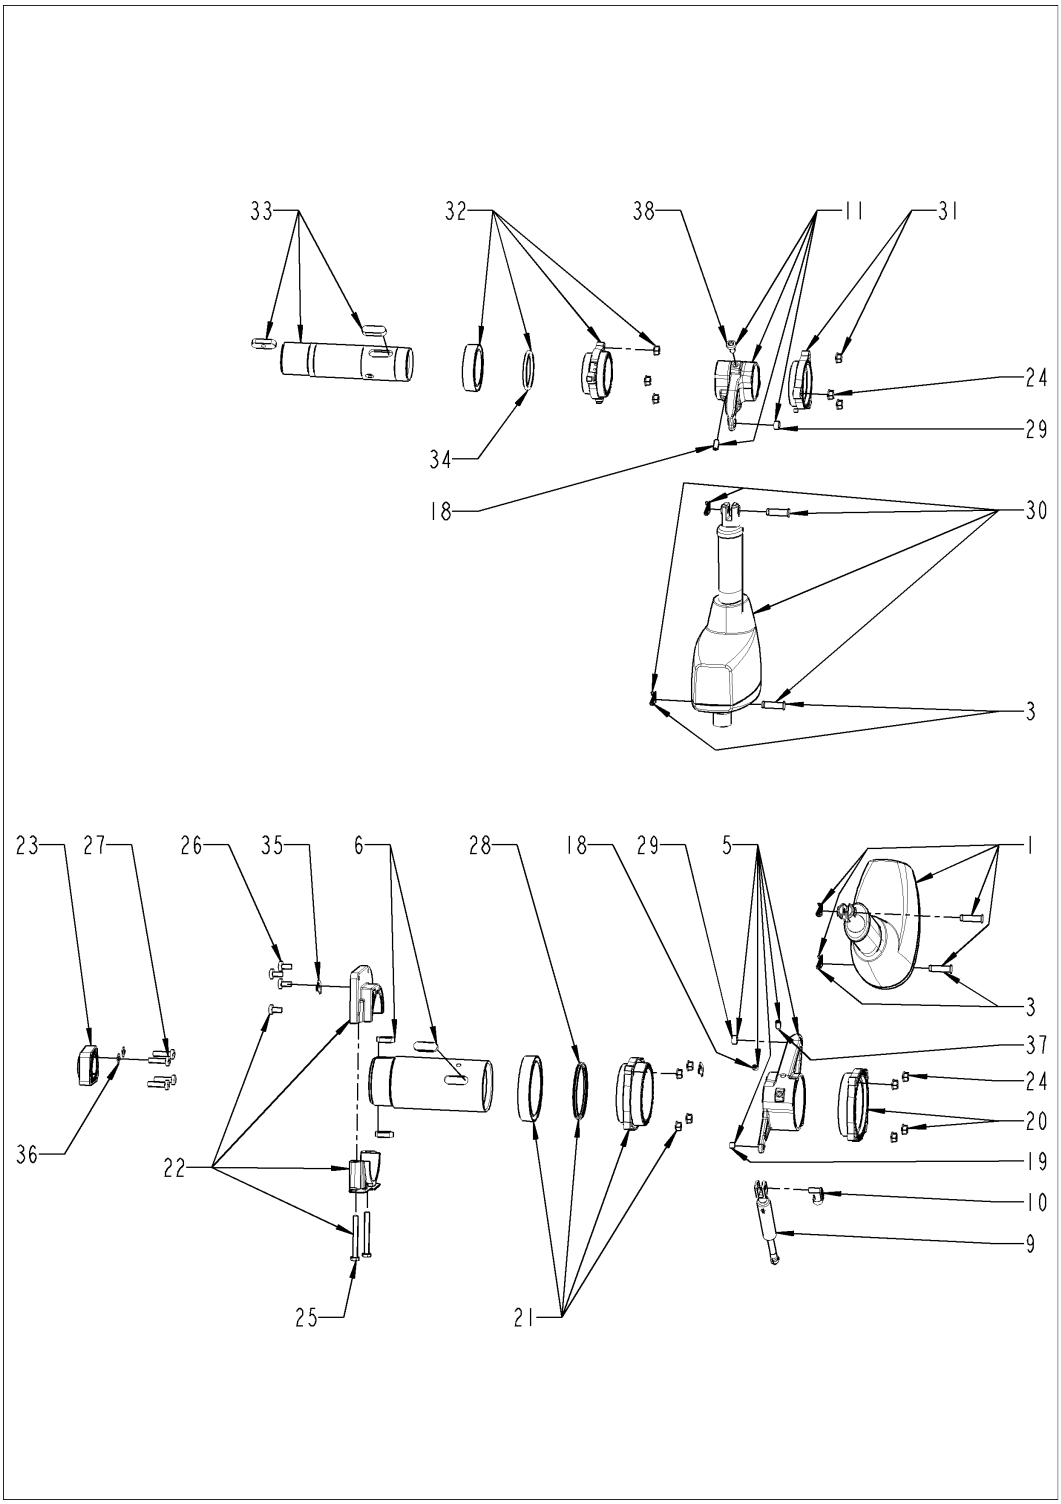

# Pos. 7 Kinematic

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 20.03.297S | Lifting cylinder for pan | 1 |
| 1.1 | 40.06.578P | Set of power supply cables for pan and lid cylinders | 1 |
| 3 | 20.02.653S | Shaft hoist swing shaft 10x38 | 4 |
| 5 | 20.03.857S | Lift arm for pan | 1 |
| 6 | 20.03.190S | Pan shaft | 1 |
| 9 | 20.03.743P | Gas spring 1000N | 1 |
| 10 | 10.02.168P | Fixture security for gas spring | 1 |
| 11 | 24.05.625S | Arm raising lid | 1 |
| 18 | 10.01.833P | Hexagon socket set screws with flat point M8x14 | 1 |
| 19 | 24.02.753P | Flange Bearing  GSM-0809-08 | 1 |
| 20 | 20.03.382S | Inner bearing for pan | 1 |
| 21 | 20.03.331S | Bearing for pan | 1 |
| 22 | 87.01.603S | Pan clamping bearing assembly | 1 |
| 23 | 20.02.892P | Bearing left for pan | 1 |
| 24 | 10.01.851P | Collar nut M8 locking teeh | 14 |
| 25 | 10.00.750P | Hex screw M8x70 | 2 |
| 26 | 10.01.616P | Pan head screw Torx T40 M8x16 | 4 |
| 27 | 10.01.826P | Cylinder head screw torx T40 M8x30 | 4 |
| 28 | 12.02.398P | X-ring 85x5.33 | 1 |
| 29 | 10.01.468P | Sintered bronze bushings | 2 |
| 30 | 24.04.352S | Lifting cylinder for lid | 1 |
| 30.1 | 40.06.578P | Set of power supply cables for pan and lid cylinders | 1 |
| 31 | 24.04.455S | Cover bearing | 1 |
| 32 | 24.04.424S | Lid bearing with sealing ring | 1 |
| 33 | 24.04.418S | Cover shaft | 1 |
| 34 | 12.02.399P | X-ring 55x5.33 | 1 |
| 35 | 20.03.887P | Key stop | 1 |
| 36 | 1308.0160P | Washer M8 A2 | 2 |
| 37 | 10.02.437P | Hex socket set screw with dog point M8x16 Din915 | 1 |
| 38 | 10.01.616P | Pan head screw Torx T40 M8x16 | 1 |

# Pos. 8 Pan

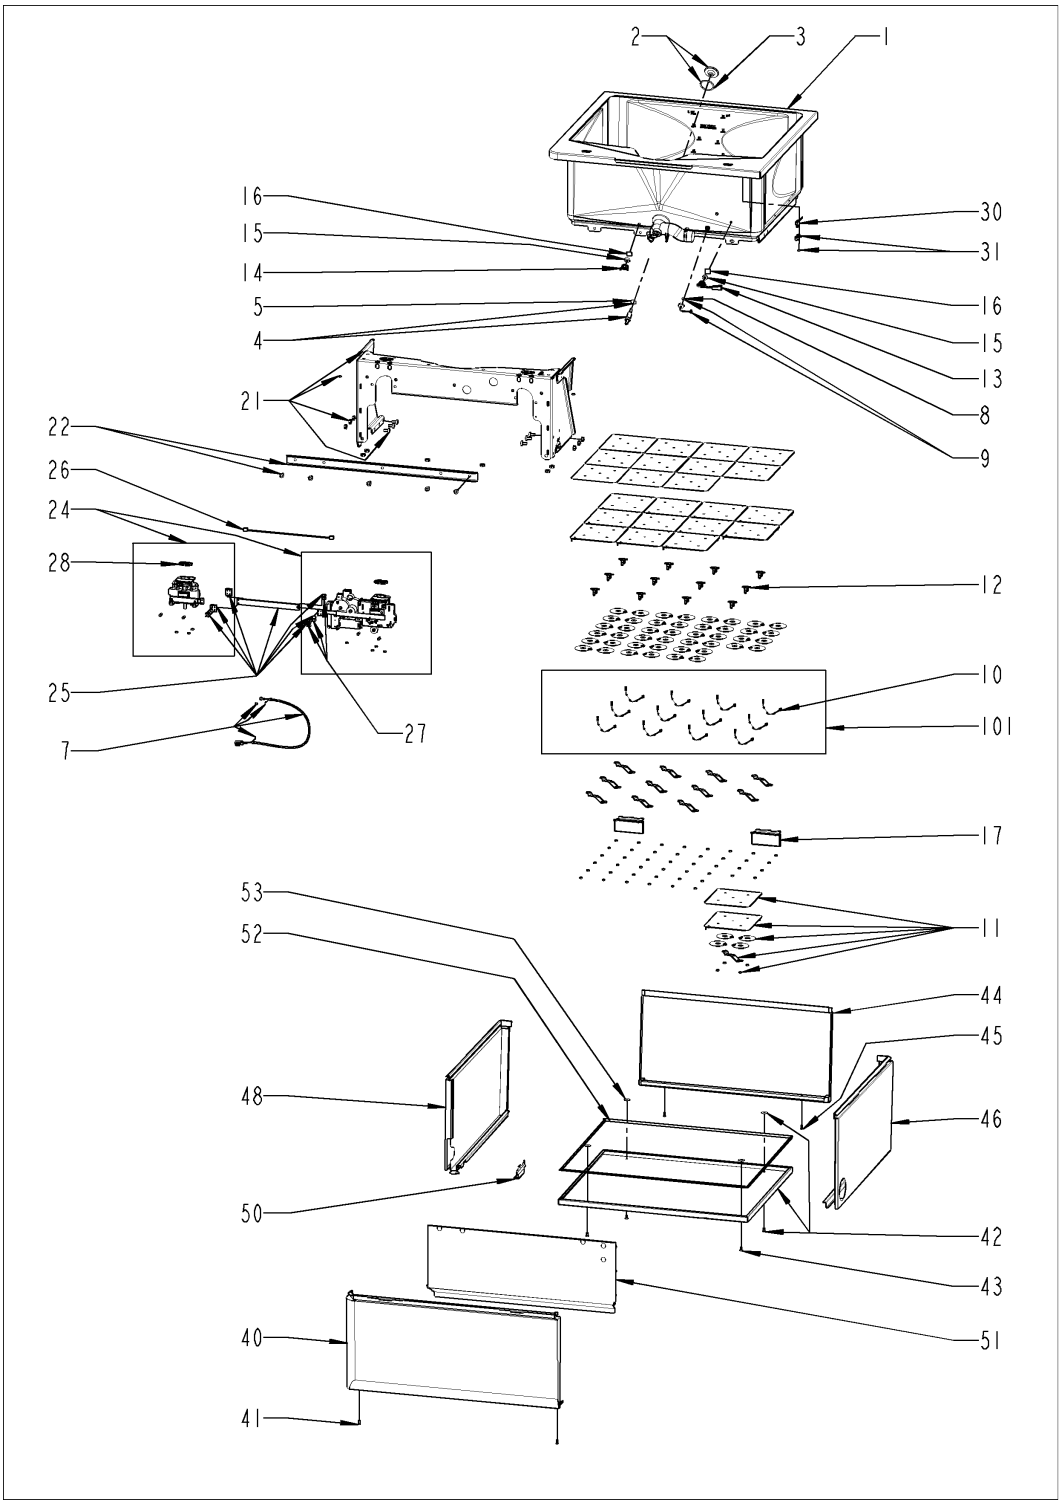

2
3
1
16
15
14
5
4
21
22
26
24
28
25
7
27
30
31
16
15
13
8
9
12
10
101
17
11
53
52
44
45
48
46
50
42
43
40
51
41

# Pos. 8 Pan

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.605S | Kit pan with pressure | 1 |
| 1.1 | 10.02.267P | Gasket 3x10mm | 3.2 |
| 2 | 20.01.653S | Plug for pan valve with gasket | 1 |
| 3 | 20.00.993P | Gasket for plug pan valve | 1 |
| 4 | 20.01.587S | Sheath for pan valve | 1 |
| 5 | 10.00.675P | O-ring f. pan valve 17.3 x 2.4 | 1 |
| 7 | 20.03.450S | Pan valve cable pan left | 1 |
| 8 | 20.03.600P | O-ring 9.8x1.5 | 1 |
| 9 | 40.06.857S | Thermocouple pan left | 1 |
| 10 | 87.00.339 | Thermocouple for heating element | 1 |
| 11 | 87.00.674 | Conversion kit heating element 2287W 230V | 12 |
| 12 | 40.04.370P | Safety temperature limiter heating element | 12 |
| 13 | 40.04.501P | Safety temperature limiter 130° | 1 |
| 14 | 40.02.337P | Safety temperature limiter 215°C | 1 |
| 15 | 20.01.508P | Spacer for safety temperature limiter | 2 |
| 16 | 20.01.518P | Graphit plate for safety temperature limiter | 2 |
| 17 | 20.03.024P | Stop for pan | 2 |
| 21 | 20.03.953S | Front reinforcement of pan headband | 1 |
| 22 | 20.03.661S | Transverse pan reinforcement | 1 |
| 24 | 87.01.564S | Lid locking assembly | 1 |
| 25 | 20.03.341S | Master-slave link assembly | 1 |
| 26 | 40.06.880P | Master-slave connection cable | 1 |
| 27 | 20.03.696P | Connecting link ISO06B-1 Form E | 1 |
| 28 | 20.03.705P | Gasket for lid locking assembly | 2 |
| 30 | 40.06.458P | Magnetic contact | 1 |
| 31 | 20.03.667S | Magnetic contact support | 1 |
| 40 | 16.04.852P | Front panel for pan | 1 |
| 41 | 10.01.808P | Hex socket countersunk head screw M5x16 | 2 |
| 42 | 16.04.730S | Lower panel for pan | 1 |
| 43 | 10.01.912P | Crosshead screw M5x12 | 4 |

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 44 | 16.03.841P | Back panel for pan | 1 |
| 45 | 10.01.808P | Hex socket countersunk head screw M5x16 | 2 |
| 46 | 16.03.556P | Side panel right of pan | 1 |
| 48 | 16.03.372P | Side panel left of pan | 1 |
| 50 | 20.03.254P | Mounting piece for pan panel | 1 |
| 51 | 20.03.999P | Thermal protection shield | 1 |
| 52 | 20.03.466P | V-profile gasket | 3.2 |
| 53 | 10.02.449P | Self-adhesive EPDM gasket 20x7mm thickness 2mm | 4 |
| 100 | 40.05.946P | Power harness heating element | 1 |
| 101 | 40.05.932P | Thermocouple harness | 1 |


# Pos. 9 Base structure

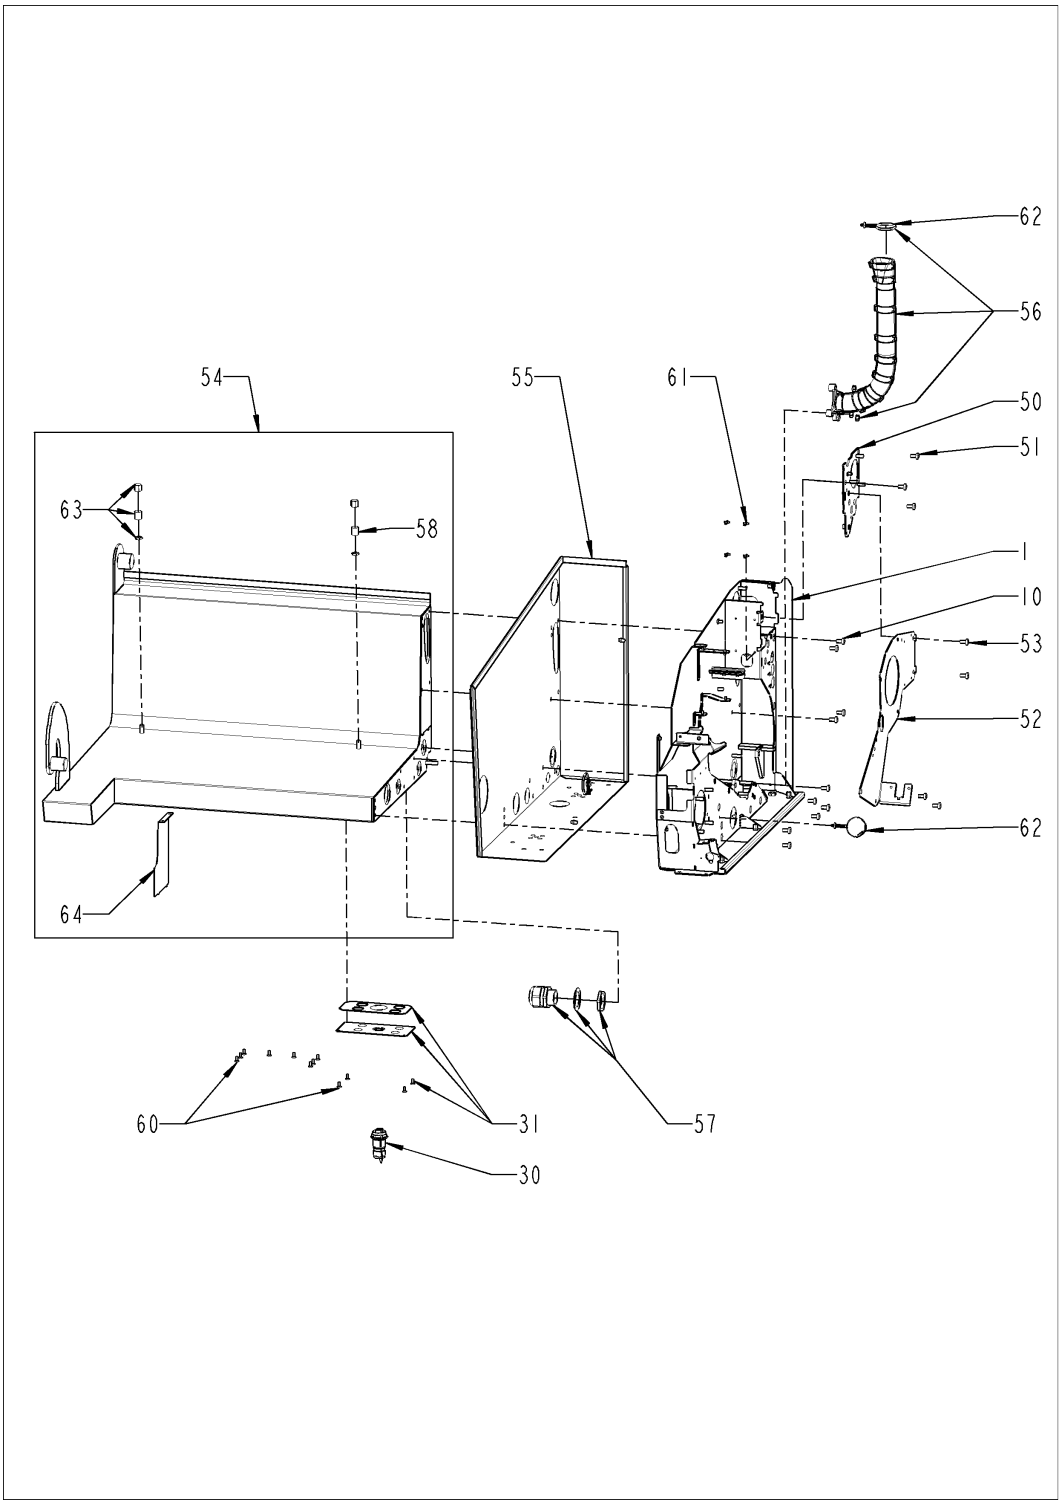

# Pos. 9 Base structure

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.928S | Chassis right | 1 |
| 10 | 10.01.616P | Pan head screw Torx T40 M8x16 | 10 |
| 30 | 40.05.509P | Interface LAN IPX6 | 1 |
| 31 | 12.02.440S | Cable gland mounting plate | 1 |
| 50 | 12.03.146P | Removable part of the right frame | 1 |
| 51 | 10.01.616P | Pan head screw Torx T40 M8x16 | 5 |
| 52 | 12.03.120P | Shower roll guide holder | 1 |
| 53 | 10.01.616P | Pan head screw Torx T40 M8x16 | 4 |
| 54 | 12.02.470P | Chassis left 211/311 | 1 |
| 55 | 16.03.553P | Side panel left for console | 1 |
| 56 | 12.03.169S | Guide tube for a supply cable | 1 |
| 57 | 40.00.701S | Screwed cable gland polyamid PG40 | 1 |
| 60 | 10.01.912P | Crosshead screw M5x12 | 14 |
| 61 | 10.01.336P | Plastic spacer 7mm 12 | 4 |
| 62 | 10.02.082P | Fir foot clamp for pipe Ø50 | 2 |
| 63 | 12.01.086S | Stop for pan on cross frame | 1 |
| 64 | 16.03.769S | Chassis rear cover | 1 |
| 70 | 40.00.320P | Cable connection M20x1.5 | 1 |


# Pos. 10 Underframe

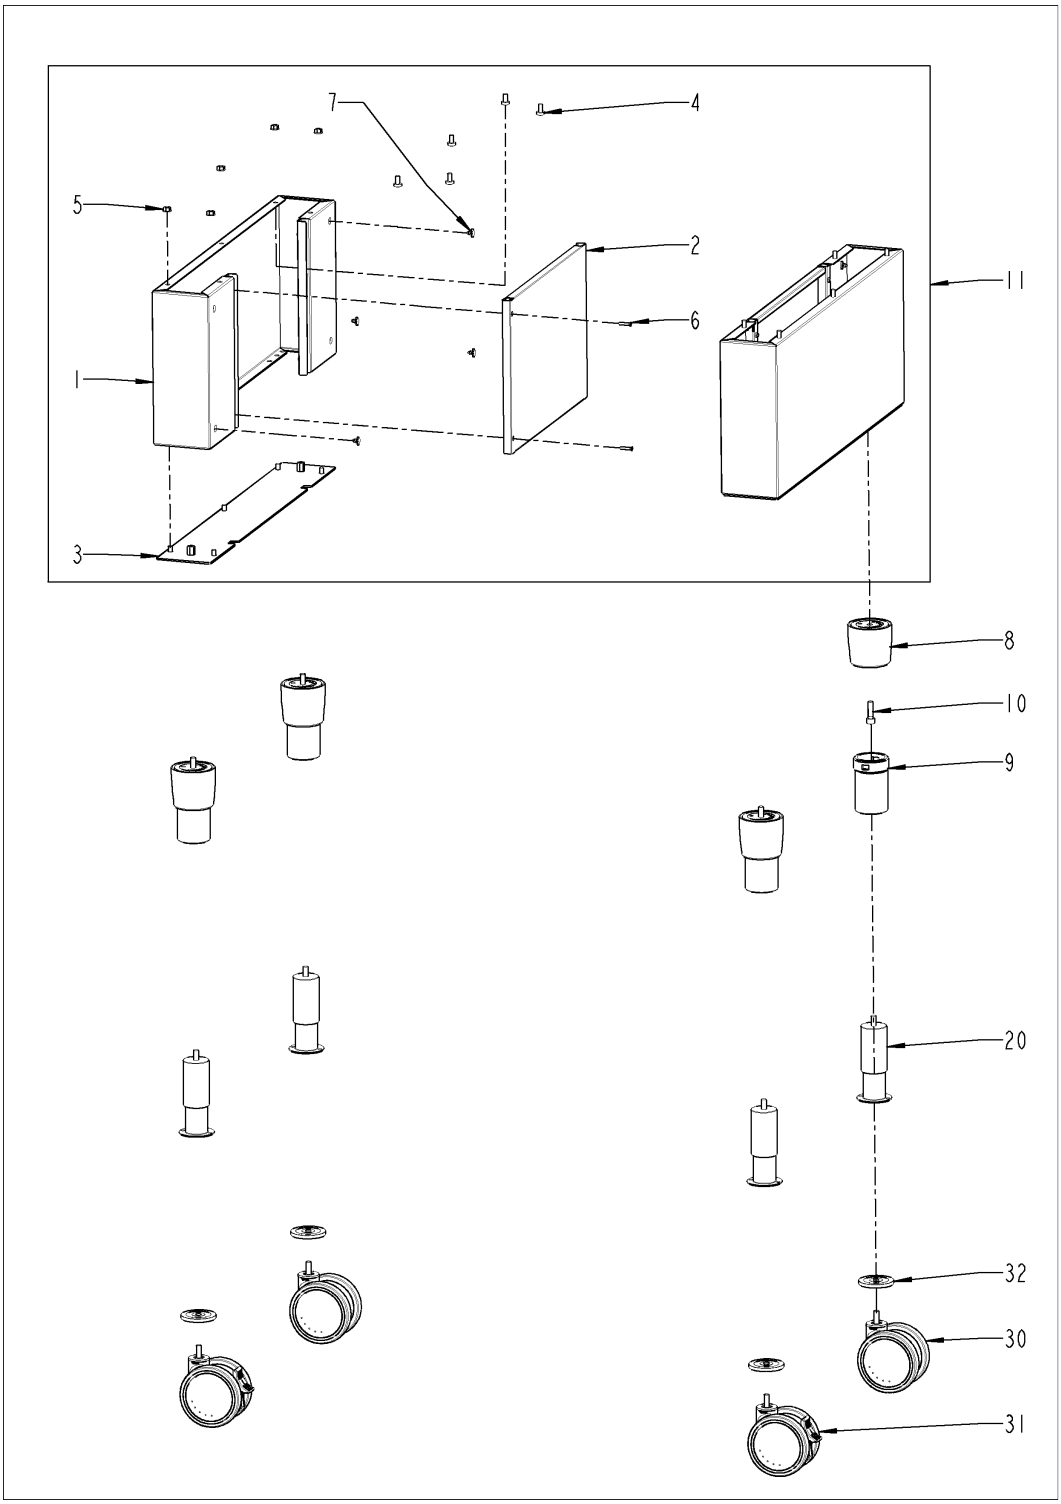

# Pos. 10 Underframe

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.74.416P | Substructure body | 2 |
| 2 | 60.74.474P | Substructure hatch | 2 |
| 3 | 60.74.536P | Substructure bottom plate | 2 |
| 4 | 10.01.616P | Pan head screw Torx T40 M8x16 | 10 |
| 5 | 10.01.851P | Collar nut M8 locking teeh | 10 |
| 6 | 10.01.669P | Slot counter head secur screw M5X20 Phillips | 4 |
| 7 | 10.01.928P | Plug 6.6 for threaded hole M8 | 8 |
| 8 | 12.00.205P | Upper part of pedestal | 4 |
| 9 | 12.00.224P | Lower part of pedestal 110mm | 4 |
| 10 | 10.01.953P | Socket cap screw M10x35 A2 Tuflok | 4 |
| 11 | 87.01.793S | Retrofit substructure body assembly | 1 |
| 20 | 12.03.051P | Adjustable stainless foot | 4 |
| 30 | 60.74.680P | Castor without brake ø125mm | 2 |
| 31 | 60.74.681P | Castor with brake ø125mm | 2 |
| 32 | 60.71.229P | Washer Ø70 castor VCC | 4 |


# Pos. 20 Accessories

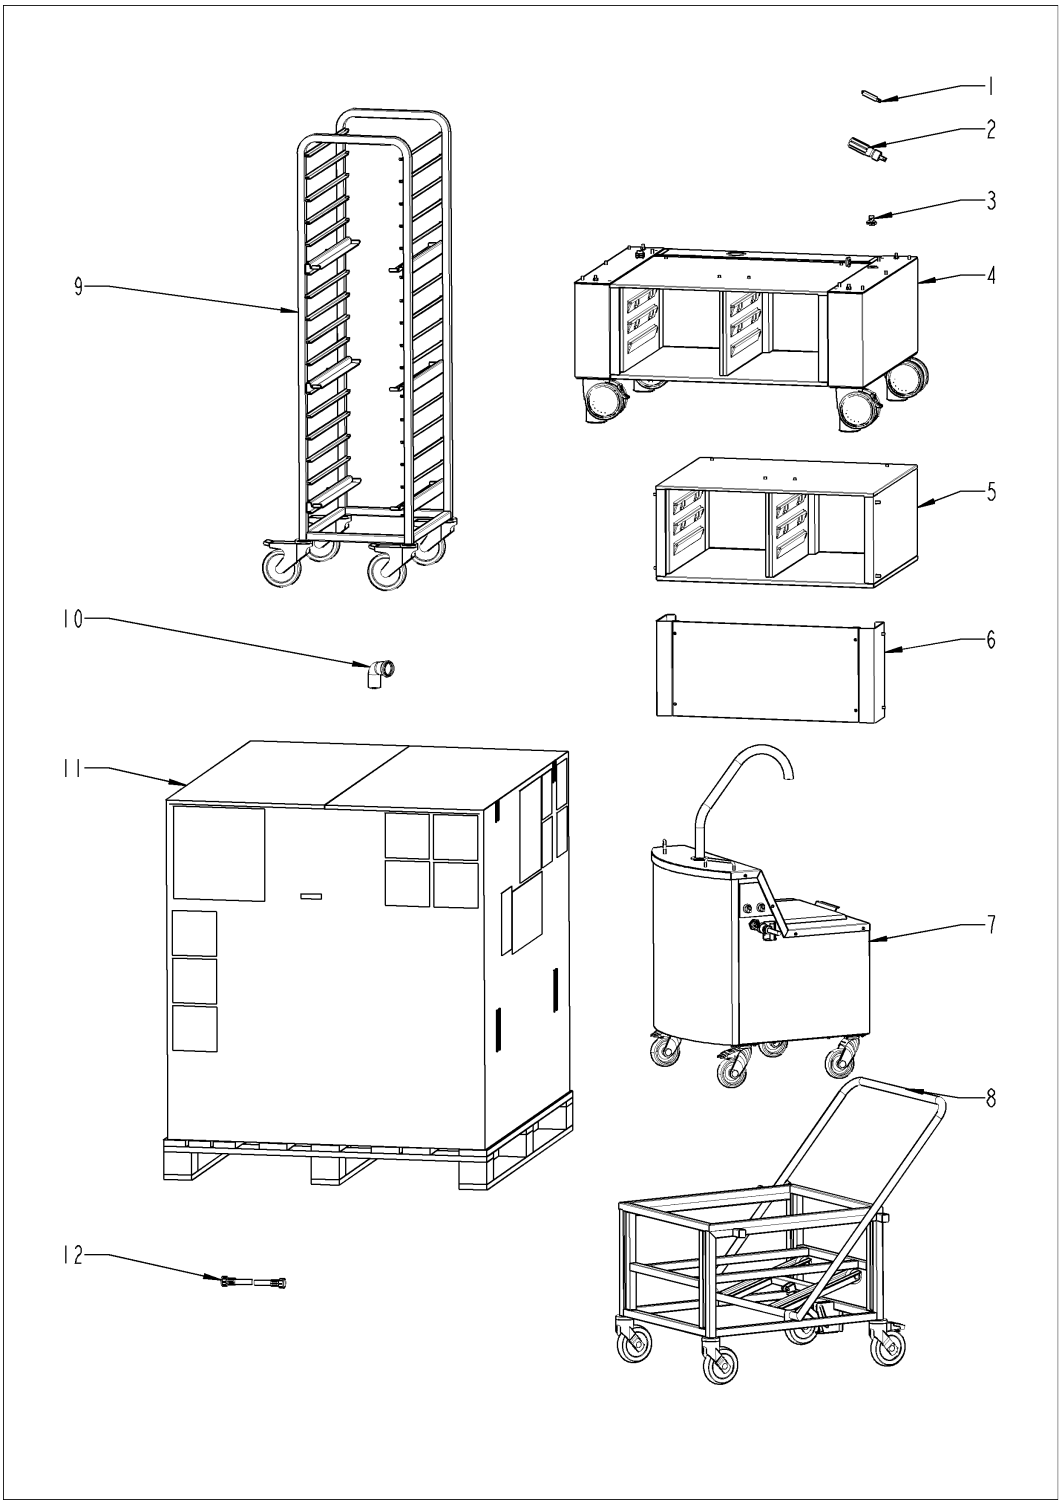

# Pos. 20 Accessories

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.758 | Memory-Stick USB iVario | 1 |
| 2 | W24001 | Dynamometric screwdriver 4Nm | 1 |
| 3 | 50.02.319P | Aerator service key | 1 |
| 4 | | Installation variants | 1 |
| 5 | | Storage space for substructure | 1 |
| 6 | | Panelling for substructure | 1 |
| 7 | | Oil cart | 1 |
| 8 | | VarioMobil | 1 |
| 9 | | Basket cart | 1 |
| 10 | 87.00.746 | Waste water connection kit | 1 |
| 11 | 90.00.951 | Complete packaging | 1 |
| 12 | 50.01.711P | Hose for water supply 1500mm | 1 |


# Pos. 4 Installation variants

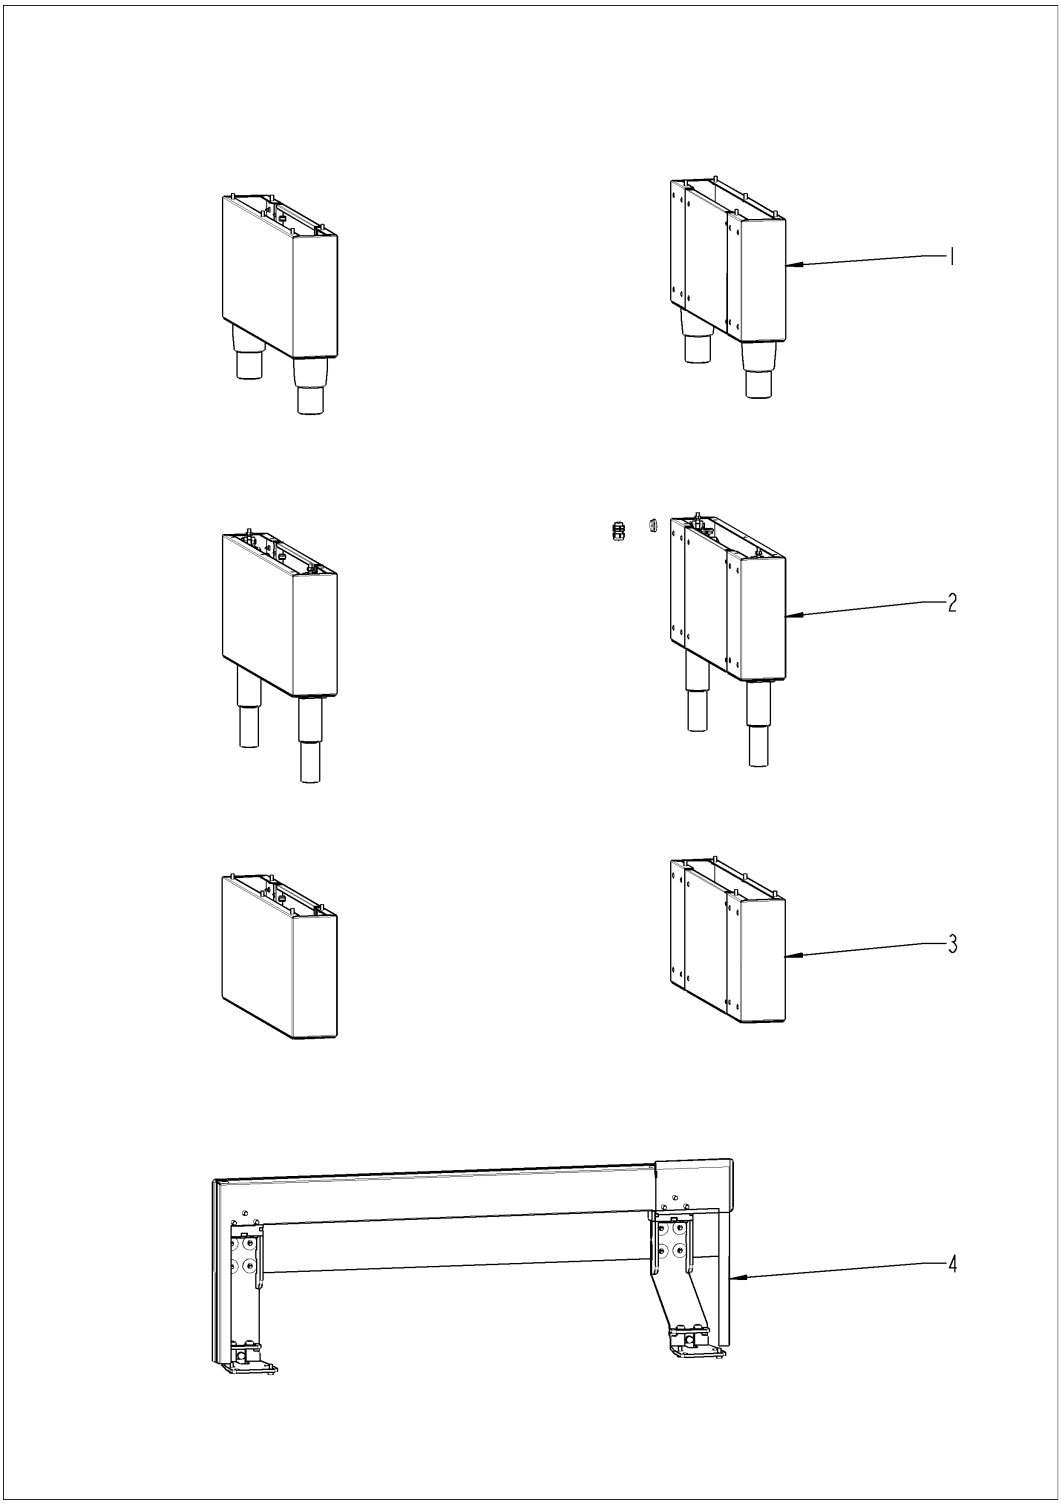

# Pos. 4 Installation variants

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 2 | | Stand with electric height adjustment | 1 |
| 3 | | Base installation kit | 1 |
| 4 | | Wall attachment kit | 1 |


# Pos. 2 Stand with electric height adjustment

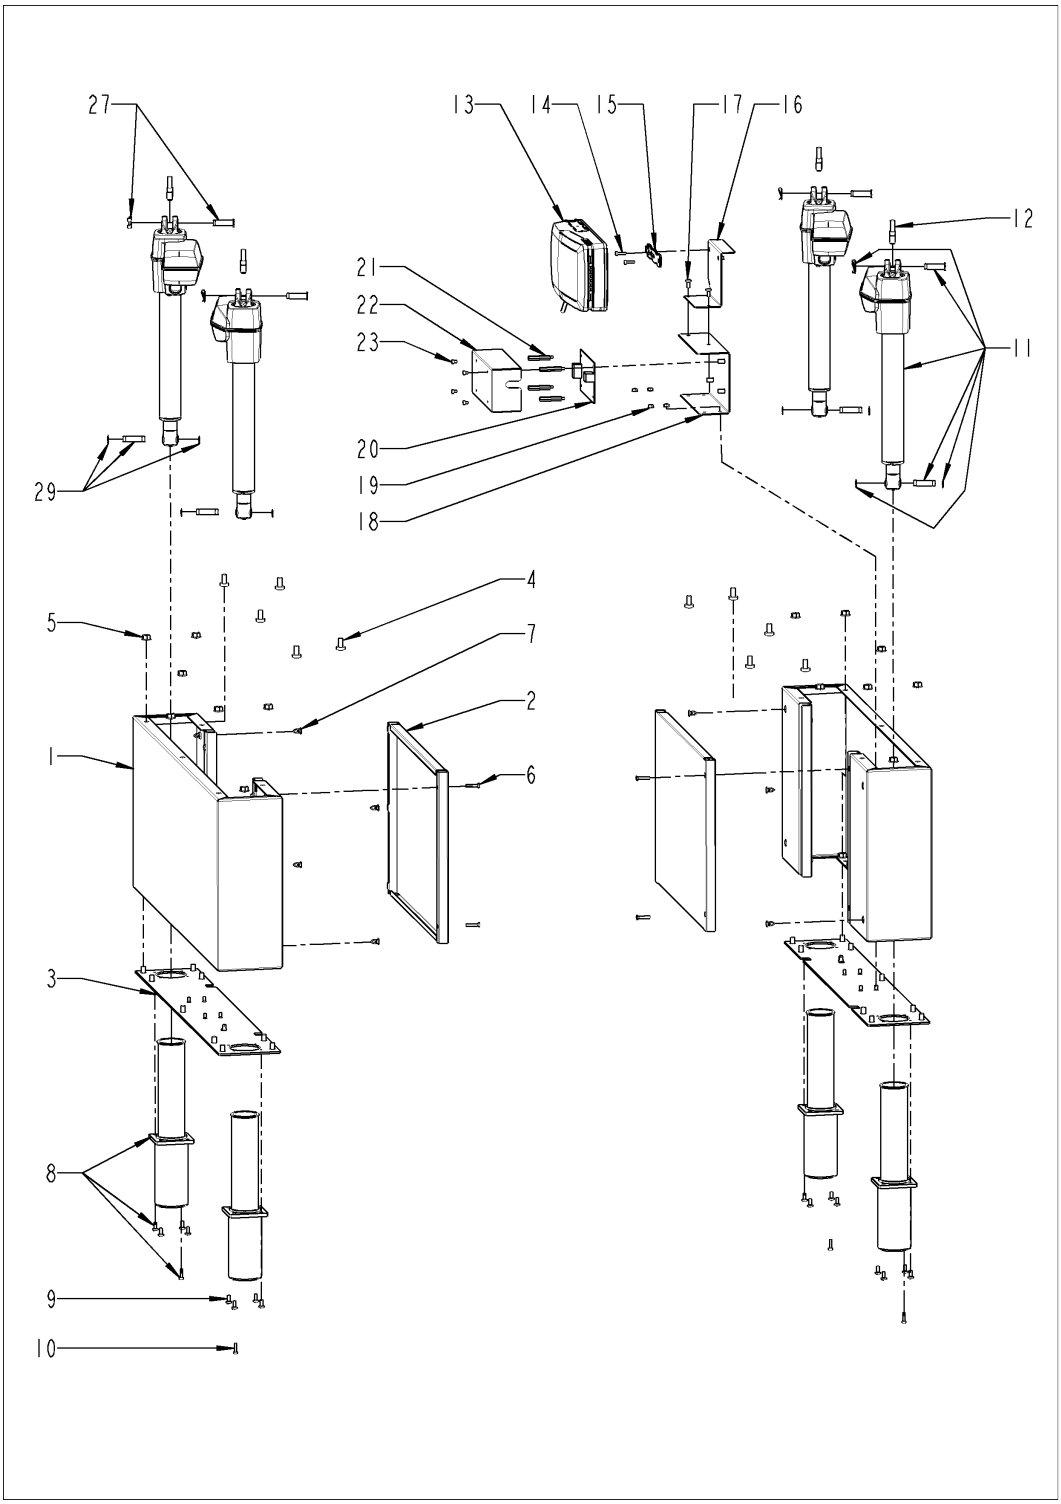

# Pos. 2 Stand with electric height adjustment

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.74.416P | Substructure body | 2 |
| 2 | 60.74.474P | Substructure hatch | 2 |
| 3 | 60.77.065P | Bottom plate for a height-adjustable substructure | 2 |
| 4 | 10.01.616P | Pan head screw Torx T40 M8x16 | 10 |
| 5 | 10.01.851P | Collar nut M8 locking teeh | 18 |
| 6 | 10.01.669P | Slot counter head secur screw M5X20 Phillips | 4 |
| 7 | 10.01.928P | Plug 6.6 for threaded hole M8 | 8 |
| 8 | 60.74.713S | Telescopic foot | 4 |
| 9 | 10.01.912P | Crosshead screw M5x12 | 16 |
| 10 | 10.01.778P | Pan head screw Torx M4x16 | 4 |
| 11 | 87.01.759S | Lifting cylinder for height adjustable substructure | 4 |
| 12 | 60.74.853P | Eye socket with threaded shank M8x20 | 4 |
| 13 | 42.00.305S | Module CO61 | 1 |
| 14 | 10.01.778P | Pan head screw Torx M4x16 | 2 |
| 15 | 42.00.342P | Holder for module  CO61 | 1 |
| 16 | 42.00.351P | CO61 module carrier | 1 |
| 17 | 10.01.912P | Crosshead screw M5x12 | 2 |
| 18 | 42.00.374P | Converter holder part 1 | 1 |
| 19 | 10.01.054P | Hexagonal nut with notched flange M5 | 4 |
| 20 | 42.00.352P | RS232 converter for adjustable height | 1 |
| 21 | 10.02.121P | Hexagonal spacer M4x40 | 4 |
| 22 | 42.00.375P | Converter protection cover | 1 |
| 23 | 10.00.061P | Pan head screw Torx T20 M4x12 | 4 |
| 27 | 20.02.653S | Shaft hoist swing shaft 10x38 | 4 |
| 29 | 10.01.913S | Shaft for jack LA40 | 4 |
| 30 | 54.02.056P | Flexible drain pipe DN50 | 1 |
| 100 | 40.07.175P | Power + bus cable for height-adjustable substructure W21 | 1 |
| 102 | 40.06.762P | Short power supply cable height adjustable cylinder W67 | 2 |
| 103 | 40.06.763P | Cylinder connection cable to CO61 module W69 | 2 |
| 104 | 40.06.765P | Connection cable CO61 - RS232 converter W68 | 1 |


# Pos. 3 Base installation kit

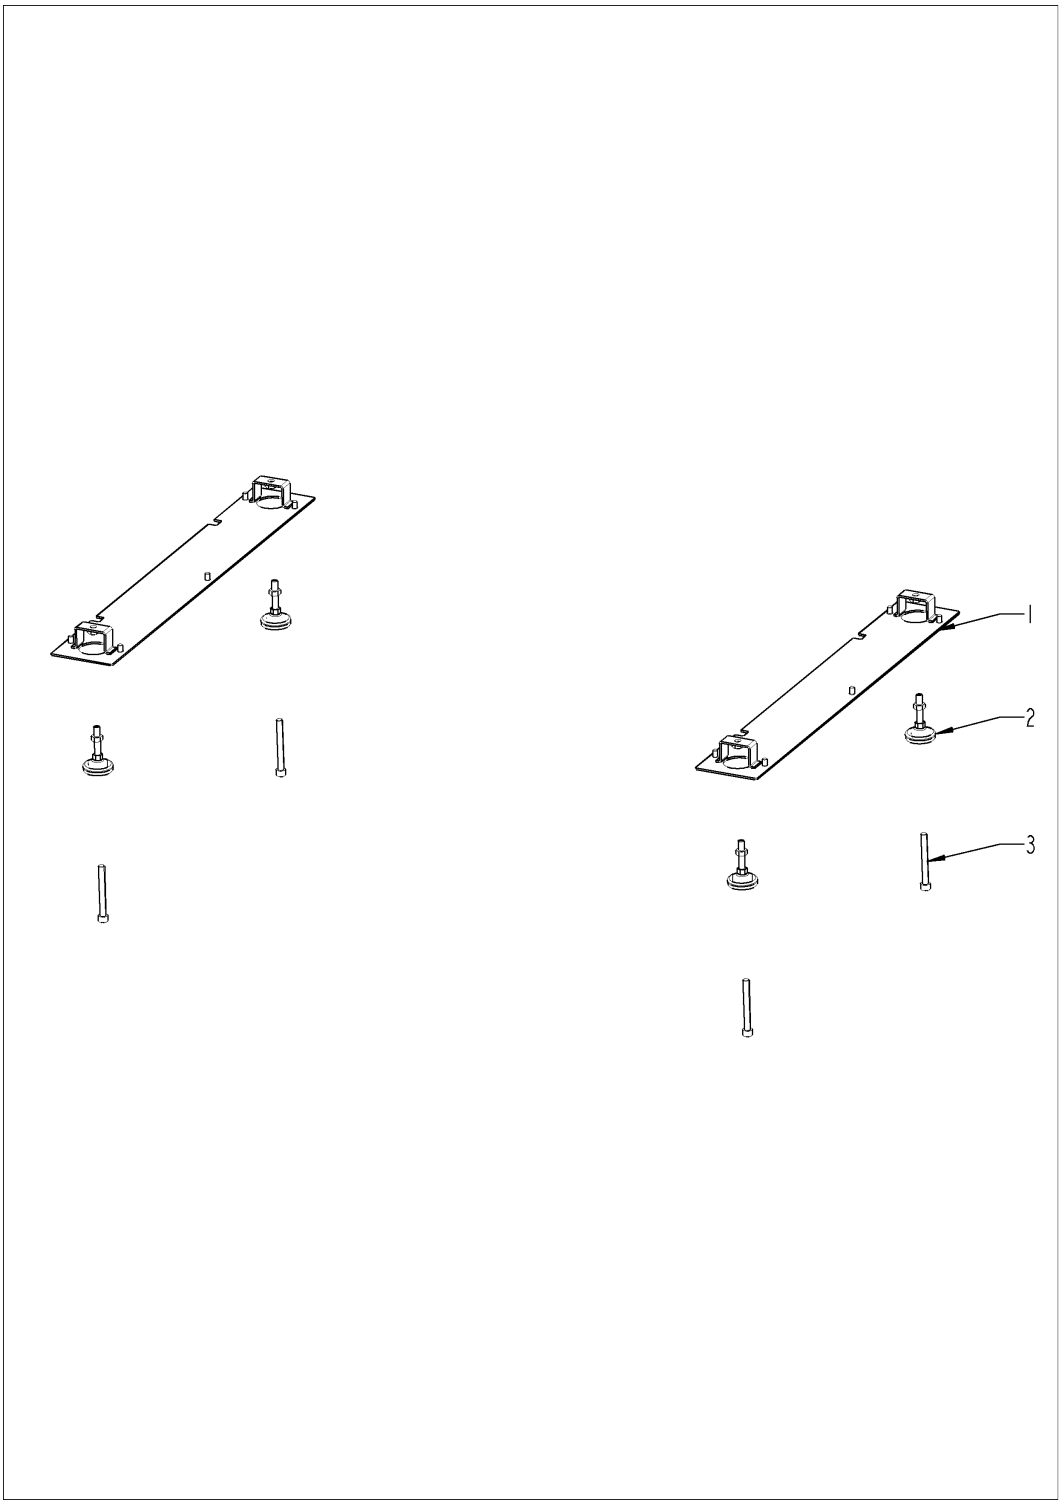

# Pos. 3 Base installation kit

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.77.230P | Substructure bottom plate for base kit | 2 |
| 2 | 60.77.995P | Adjustable foot for base installation kit | 4 |
| 3 | 10.02.084P | Allen screw M10x90 | 4 |


# Pos. 4 Wall attachment kit

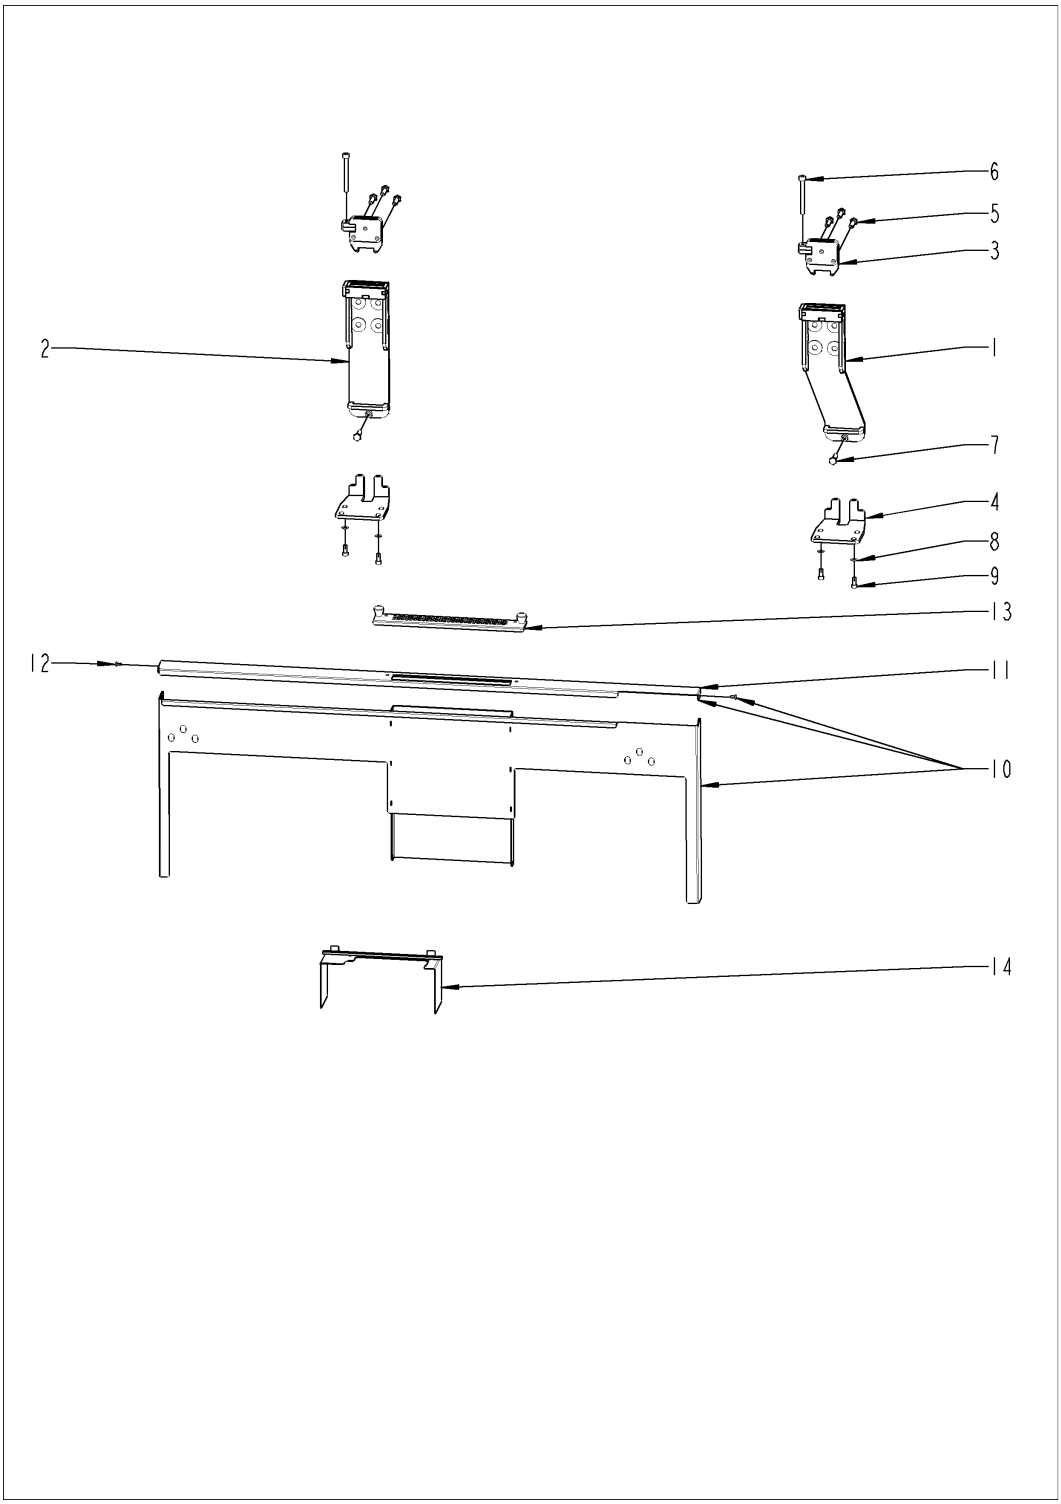

# Pos. 4 Wall attachment kit

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.75.926P | Right wall bracket | 1 |
| 2 | 60.75.944P | Left wall bracket | 1 |
| 3 | 60.75.931P | Wall mounting hook | 2 |
| 4 | 60.75.939P | Locking bracket | 2 |
| 5 | 1010.0763P | Hex screw M10x40 | 6 |
| 6 | 10.02.084P | Allen screw M10x90 | 2 |
| 7 | 1010.0763P | Hex screw M10x40 | 2 |
| 8 | 1308.0160P | Washer M8 A2 | 4 |
| 9 | 10.01.241P | Allen screw M8x20 | 4 |
| 10 | 60.75.989P | Wall mounting panelling | 1 |
| 11 | 60.77.752P | Cover panel for wall support panelling | 1 |
| 12 | 10.01.912P | Crosshead screw M5x12 | 2 |
| 13 | 60.77.518P | Ventilation grille for wall support panelling | 1 |
| 14 | 60.77.836P | Wall support steam guide | 1 |


# Pos. 5 Storage space for substructure

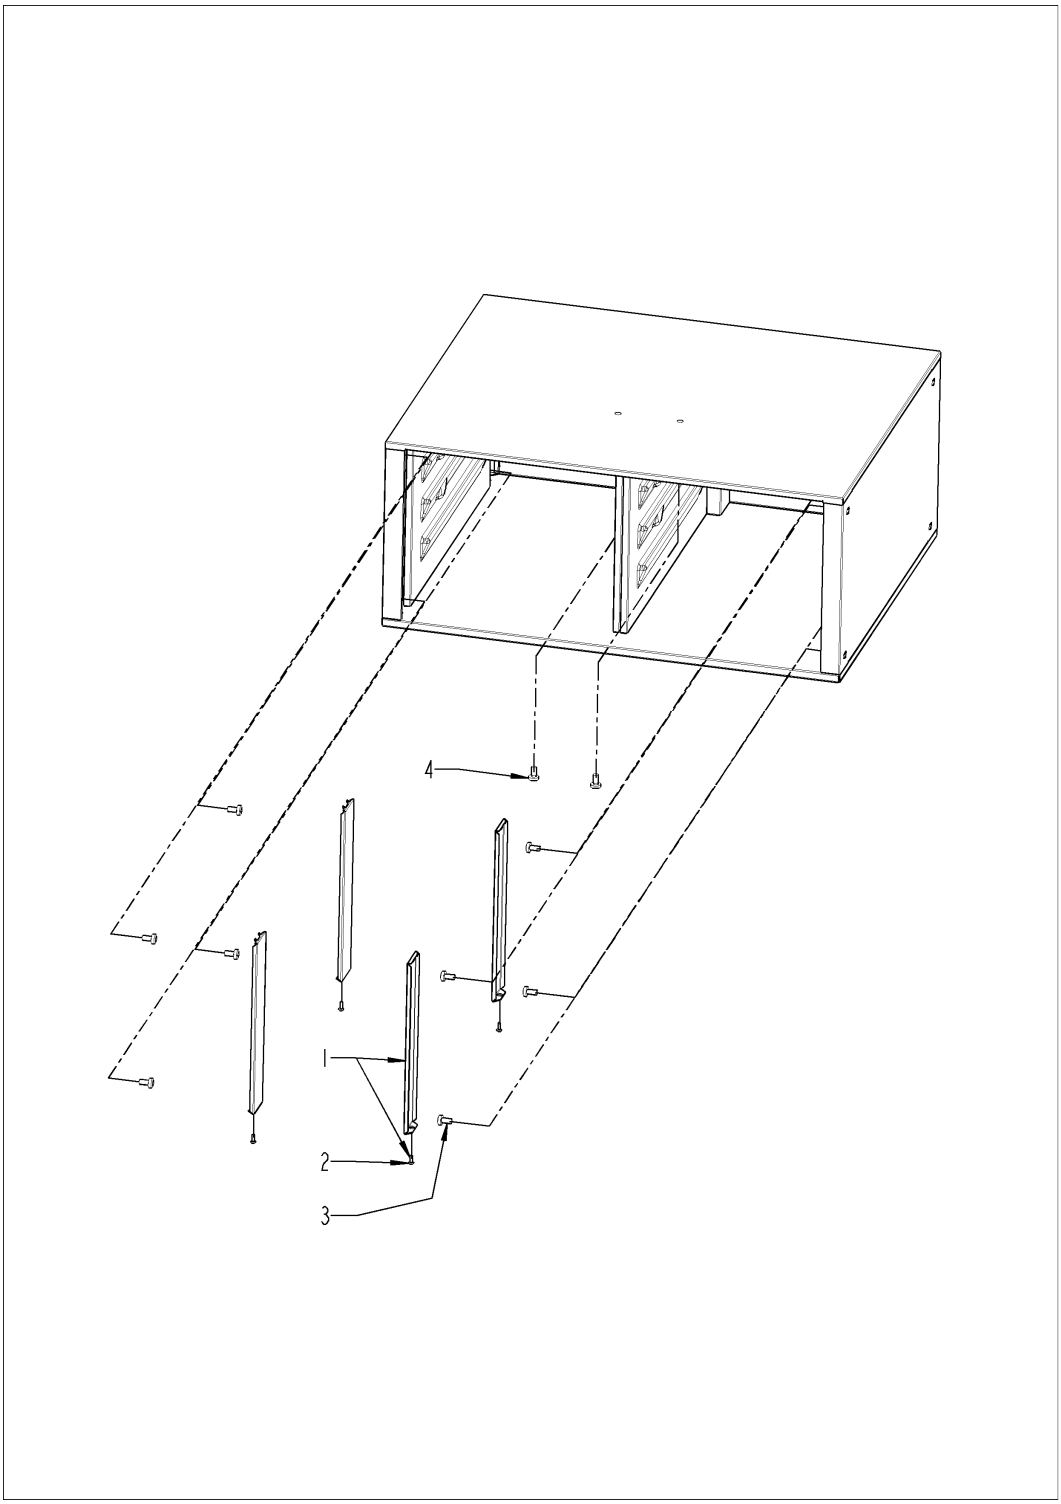

# Pos. 5 Storage space for substructure

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.76.629S | Side hatch for storage space | 4 |
| 2 | 10.01.776P | Pan head screw Torx T20 M4x12 | 4 |
| 3 | 10.01.616P | Pan head screw Torx T40 M8x16 | 8 |
| 4 | 10.02.033P | Hex screw M8x40 | 2 |


# Pos. 6 Panelling for substructure

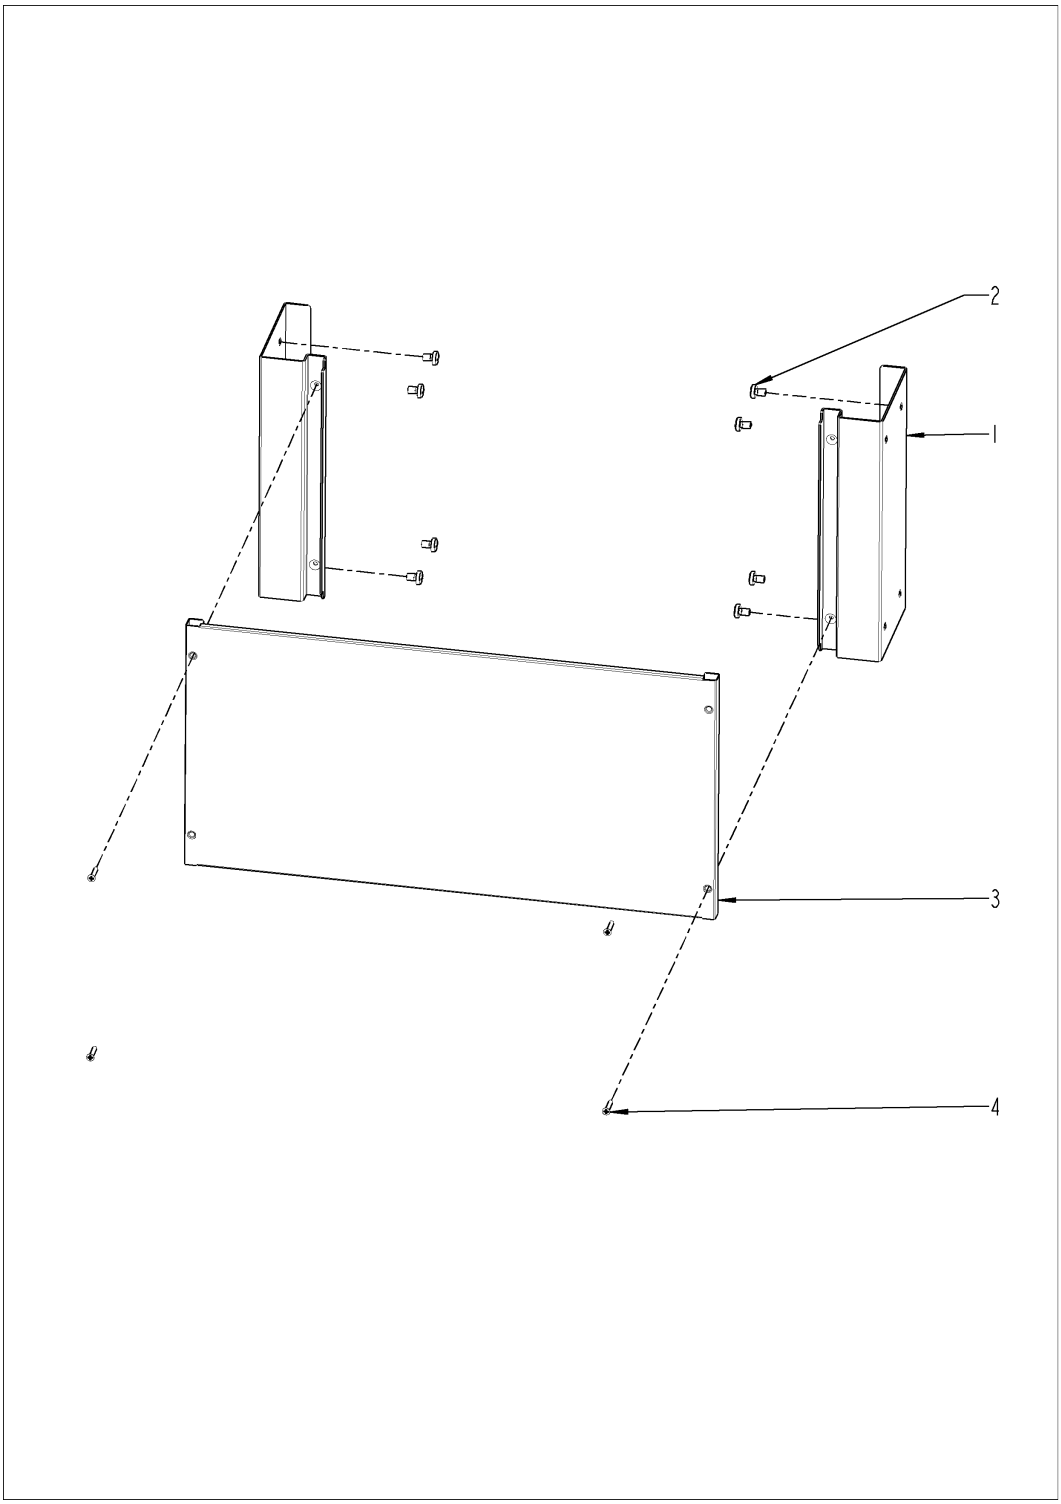

# Pos. 6 Panelling for substructure

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.76.098P | Substructure panelling support | 2 |
| 2 | 10.02.025P | Crosshead screw M8x12 | 8 |
| 3 | 60.76.099P | Substructure cover plate | 1 |
| 4 | 10.01.669P | Slot counter head secur screw M5X20 Phillips | 4 |

# Pos. 7 Oil cart

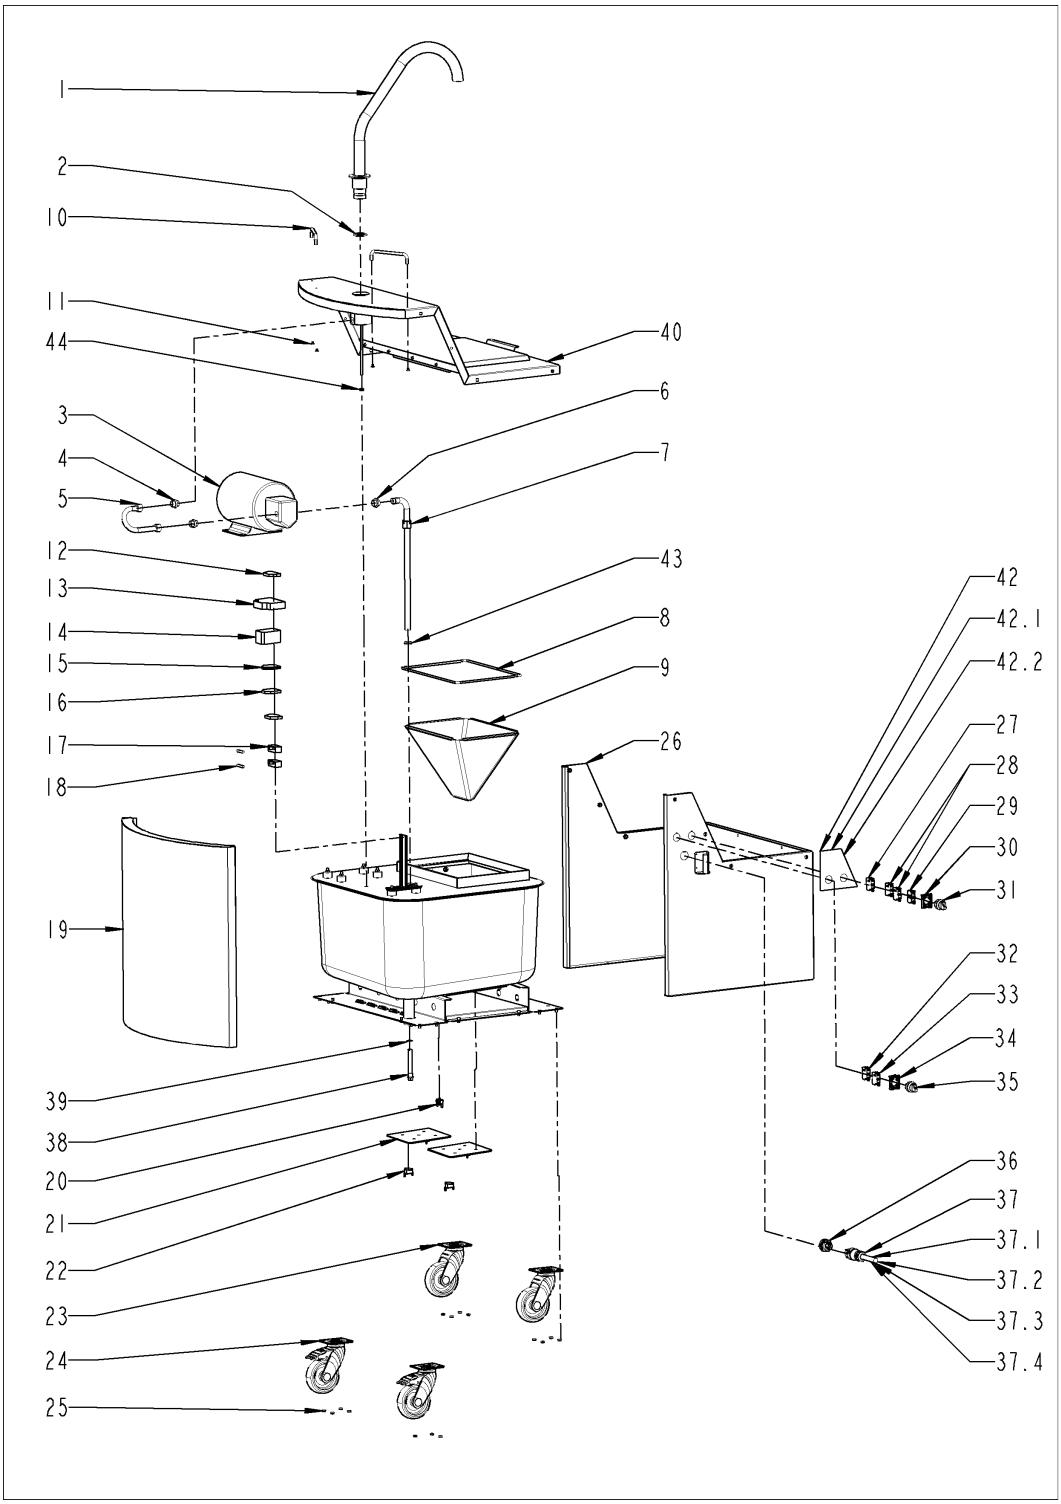


# Pos. 7 Oil cart

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 82.00.247 | Kit filling pipe | 1 |
| 1.01 | 82.00.674P | Filling pipe for 100mm extension | 1 |
| 2 | 82.00.240 | O-ring 34x3 | 1 |
| 3 | 82.00.235 | Kit pump | 1 |
| 4 | 82.00.243 | Hex double nipple G 3/8" | 2 |
| 5 | 82.00.291 | Flexible pipe 350mm for oil troley | 1 |
| 6 | 82.00.268 | Hex nipple M3/8"-F1/4" | 1 |
| 7 | 82.00.246 | Suction pipe complete | 1 |
| 8 | 60.71.850 | Support of oil filter | 1 |
| 9 | 60.71.599 | Oil filter | 1 |
| 10 | 2610.400279F | Handle | 1 |
| 11 | 1004.0665F | Allen screw M4x6 | 2 |
| 12 | 82.00.250 | End plate for mounting rail | 2 |
| 13 | 82.00.254 | Timing relay | 1 |
| 14 | 40.02.917 | Contactor 3TG1010-2AK2 | 1 |
| 15 | 82.00.248 | Terminal block 4mm² | 1 |
| 16 | 82.00.249 | Terminal block 4mm² blue | 1 |
| 17 | 82.00.251 | Fuse holder | 2 |
| 18 | 4001.0226V | Fuse 6.35x32mm 16A, time-lag | 2 |
| 19 | 82.00.288 | Round panel | 1 |
| 20 | 40.02.337 | Safety temperature limiter 215°C | 1 |
| 21 | 82.00.265 | Kit heating element | 1 |
| 22 | 82.00.261 | Klixon 240° | 2 |
| 23 | 82.00.230 | Castor without brake | 2 |
| 24 | 82.00.231 | Castor with brake | 2 |
| 25 | 1105.0121V | Hex combination nut M5 galv | 16 |
| 26 | 82.00.289 | External panel | 1 |
| 27 | 82.00.259 | Contact NC | 1 |
| 28 | 82.00.258 | Contact NO | 2 |
| 29 | 82.00.260 | Blue Led indicator | 1 |

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 30 | 82.00.257 | Adaptator for contact element | 1 |
| 31 | 82.00.255 | Selector 2 positions lighted | 1 |
| 32 | 82.00.258 | Contact NO | 1 |
| 33 | 82.00.259 | Contact NC | 1 |
| 34 | 82.00.257 | Adaptator for contact element | 1 |
| 35 | 82.00.256 | Selector 3 positions spring return | 1 |
| 36 | 82.00.300 | Connector for socket-outlet | 1 |
| 37 | 40.04.518 | Spiral cable FR/DE | 1 |
| 37.1 | 40.04.519 | Spiral cable UK | 1 |
| 37.2 | 40.04.520 | Spiral cable CH | 1 |
| 37.3 | 40.04.522 | Spiral cable AUS | 1 |
| 37.4 | 40.04.521 | Spiral cable DK | 1 |
| 38 | 60.74.412 | Drain plug oil reserve | 1 |
| 39 | 60.99.244 | Drain plug gasket | 1 |
| 40 | 60.71.704 | Lid complete oil cart | 1 |
| 41 | 82.00.617 | Insulation set for oil cart | 1 |
| 42 | 82.00.363 | Overlay FRIMA oil cart | 1 |
| 42.1 | 60.74.940 | Overlay RATIONAL oil cart | 1 |
| 42.2 | 82.00.234 | Overlay OEM oil cart | 1 |
| 43 | 40.03.330P | Cable grommet Ø16 | 1 |
| 44 | 40.03.331P | Cable grommet Ø10 | 1 |


# Pos. 8 VarioMobil

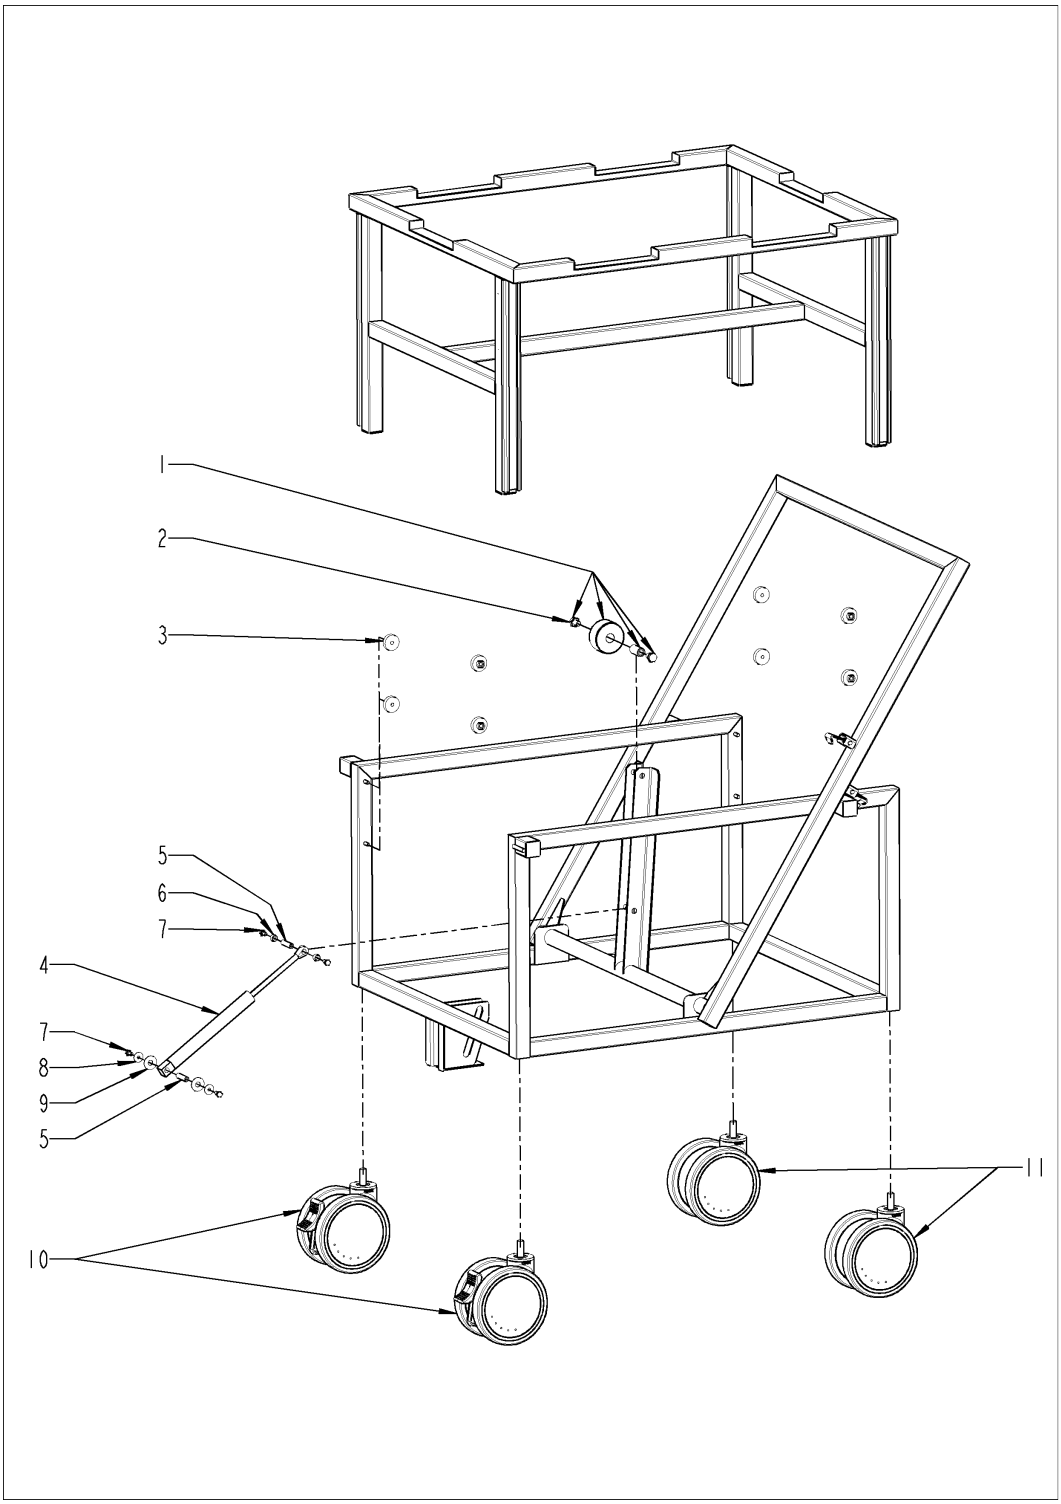

# Pos. 8 VarioMobil

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.840S | Lifting roller with axle | 1 |
| 2 | 10.00.280P | Screw HM 8x12 A2 | 2 |
| 3 | 60.70.131P | Roller 25/6.5 HM5 stainless steel | 8 |
| 4 | 40.00.631S | Gas spring 350N | 1 |
| 5 | 60.71.142P | Cylinder axis | 2 |
| 6 | 10.01.538P | Spacer D10x6x1mm | 1 |
| 7 | 1008.0752P | Hex screw M5x10 | 4 |
| 8 | 10.00.178P | Washer M5 | 2 |
| 9 | 1308.0162P | Washer A8,4 | 2 |
| 10 | 60.74.681P | Castor with brake ø125mm | 2 |
| 11 | 60.74.680P | Castor without brake ø125mm | 2 |


# Pos. 9 Basket cart

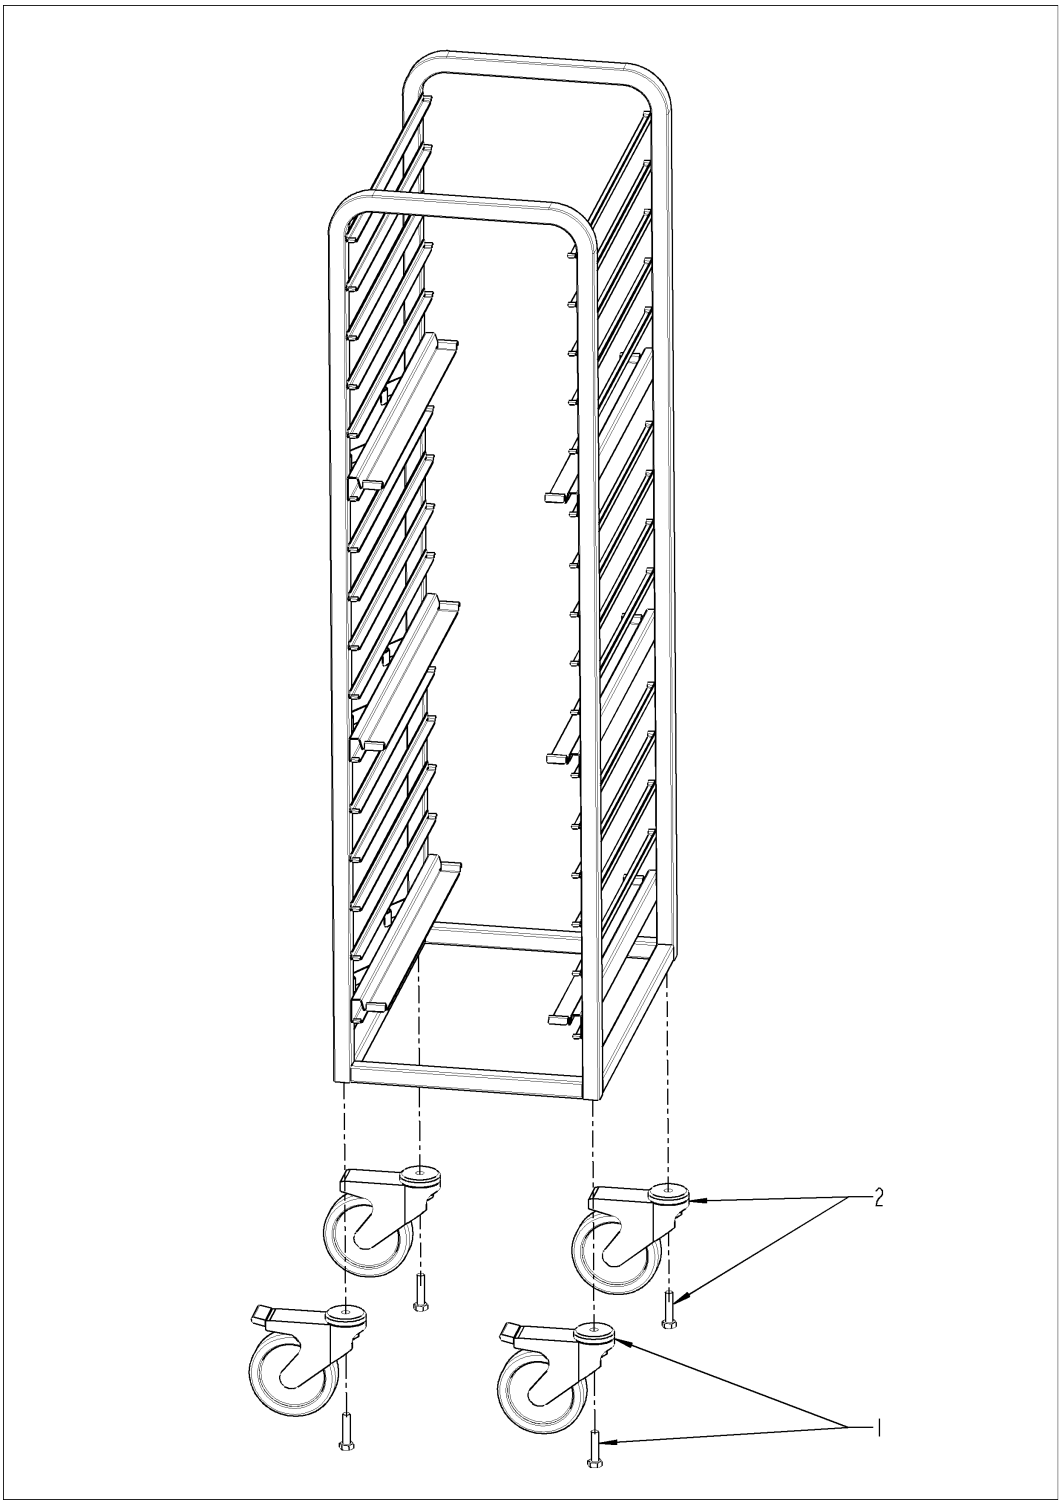

# Pos. 9 Basket cart

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.71.146 | Castor with brake ø125mm, screw M12 | 2 |
| 2 | 60.71.147 | Castor without brake ø125mm, screw M12 | 2 |

# Pos. 10 Waste water connection kit

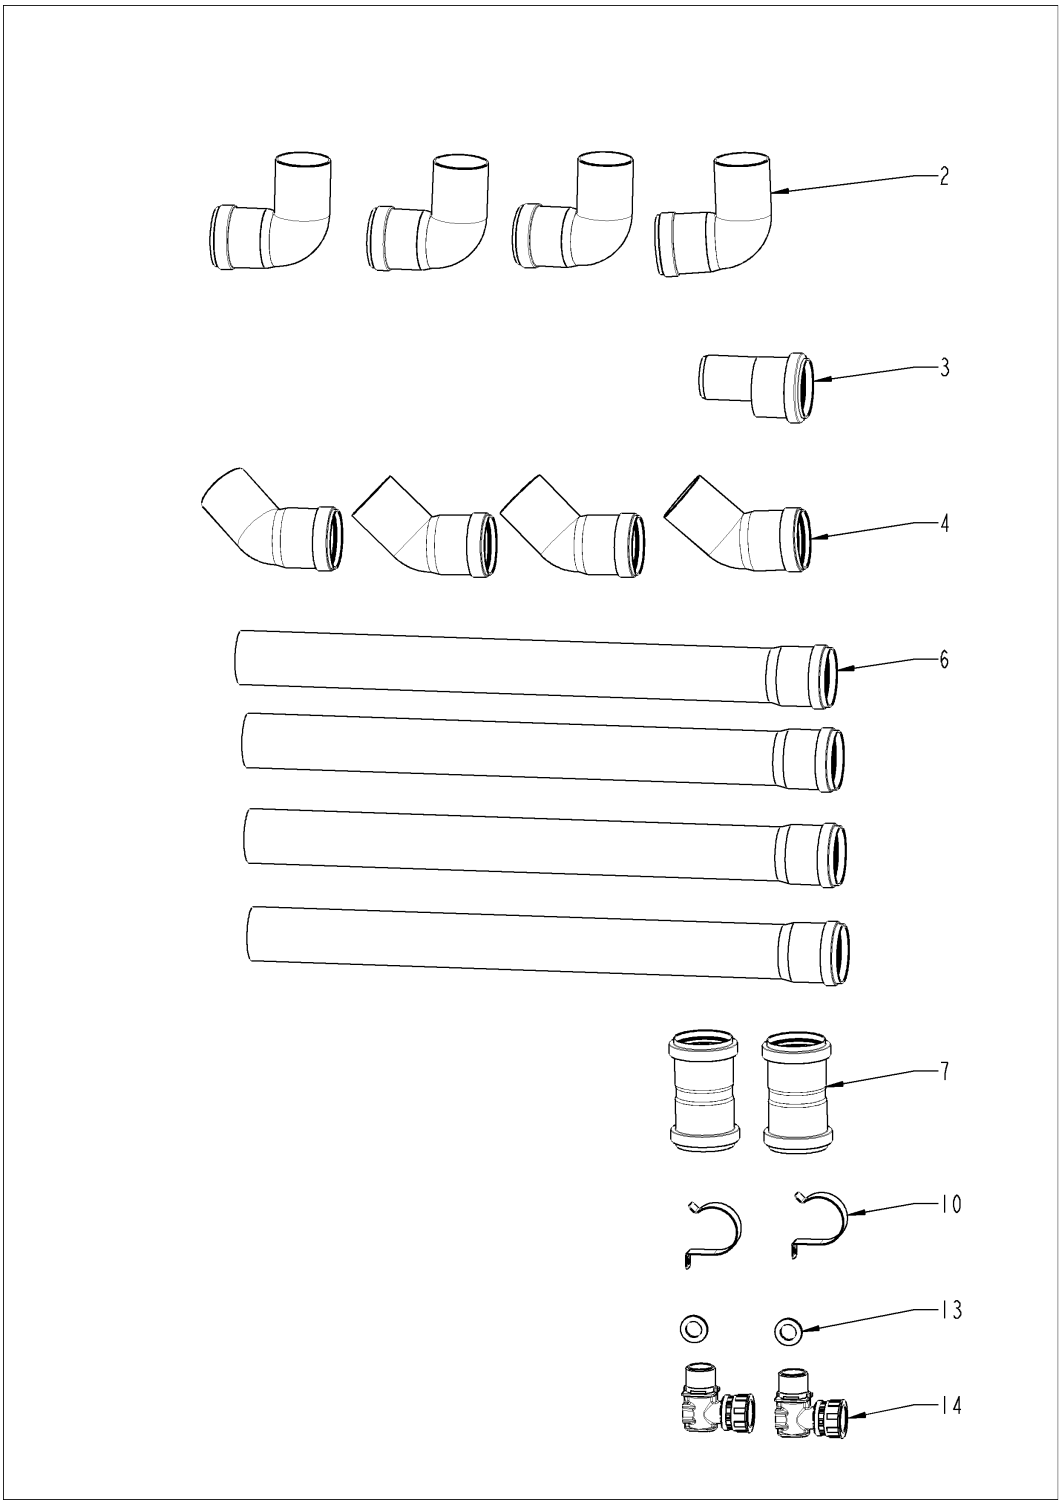

# Pos. 10 Waste water connection kit

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 2 | 54.00.560P | Elbow-pipe PP DN50 87° | 4 |
| 3 | 50.00.680P | Bushing PP  D50/D40 | 1 |
| 4 | 2070.0047P | HT drain elbow 50mm, 45° | 4 |
| 6 | 50.00.677P | PP-Pipe DN50 x 500mm | 4 |
| 7 | 50.00.679P | Sliding sleeve DN50 | 2 |
| 10 | 60.76.474P | Securing device for discharge pipe on underframe | 2 |
| 13 | 5110.1024P | Gasket for G3/4" threaded joint | 1 |
| 14 | 50.00.071S | Water distribution hor. w/o roll guide con. | 1 |

# Pos. 30 Repair and retrofit kit

# Pos. 30 Repair and retrofit kit

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.814S | Kit  connection to energy optimiser | 1 |
| 2 | 87.01.792S | Retrofit kit interface Ethernet | 1 |
| 4 | 87.01.833S | Hand shower  removal kit | 1 |
| 5 | 87.01.848S | Retrofit kit lockable control panel RATIONAL | 1 |
| 6 | 87.01.820S | Differential Switch-Adapter-Kit | 1 |
| 7 | 87.01.901S | Retrofit kit hot water option | 1 |
| 8 | 87.01.988S | Retrofit kit 4 way relay L, XL without SSR support | 1 |
| 10 | 87.01.783S | Repair kit for technical box thread | 1 |
| 11 | 87.01.822S | Control panel fixing repair kit | 1 |
| 12 | 87.01.858S | Speaker support repair kit without loudspeaker | 1 |
| 13 | 87.01.876S | CPU fan retro fit kit | 1 |
| 16 | 60.77.383P | Control box shutter | 1 |
| 19 | 87.01.964S | Rear cover with steam guide | 1 |
| 21 | 12.00.516 | Turning lock f. lower part of pedestal | 4 |