


**Pelatore universale-pelapatate-lavacozze mod. PLN-PPN-LCN5**  
**Universal peeler-potato peeler-mussel washer mod. PLN-PPN-LCN5**

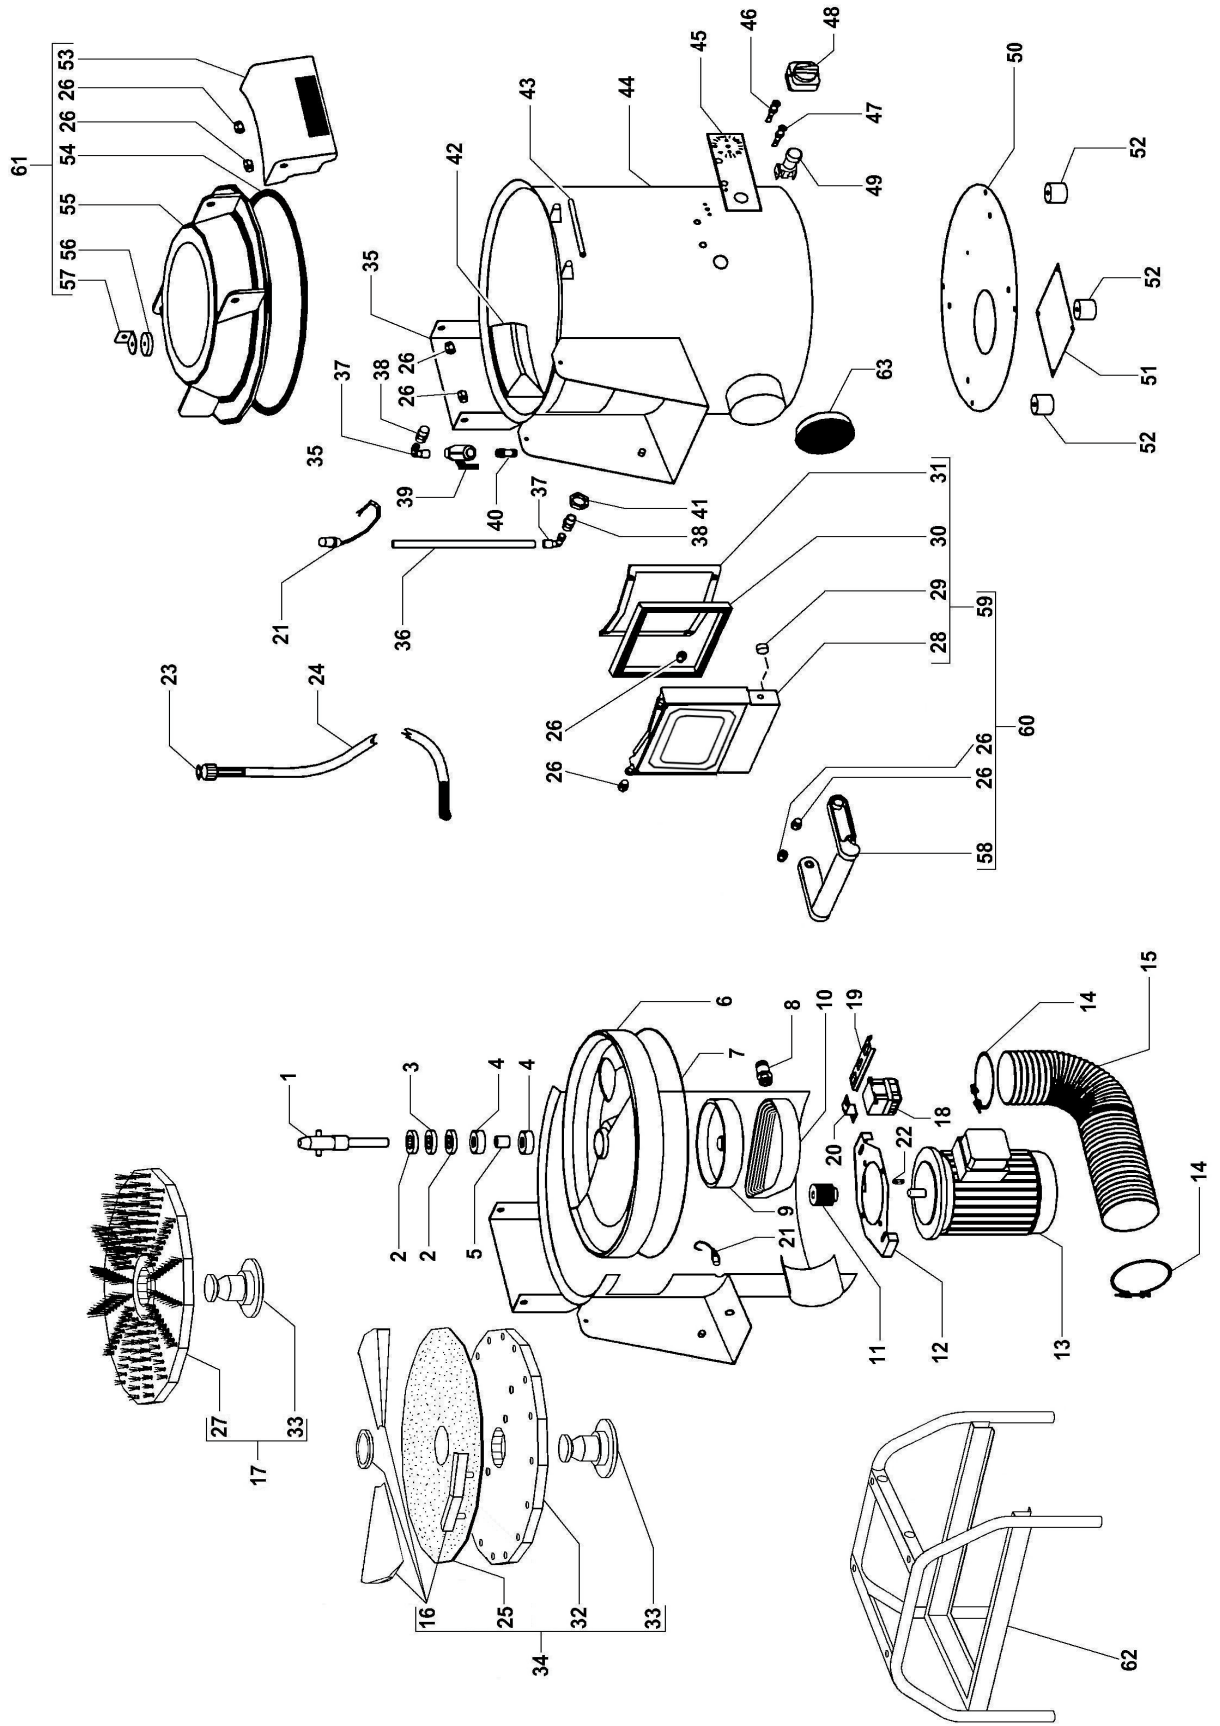

**PELATORE UNIVERSALE-PELATAPATE-LAVACOZZE MOD.PLN-PPN-LCN5  
UNIVERSAL PEELER-POTATO PEELER-MUSSEL WASHER MOD.PLN-PPN-LCN5**

Rif No	Codice Code	Caratteristiche Characteristics	Descrizione Description	
1	36G6590		A bero	Shaft
2	3151300	28x42x7	Paraolio	Oil seal
3	3190830		Rosetta	Washer
4	36F0090	6302 2RS	Cuscinetto	Bearing
5	36G5950		Boccola	Bush
6	3600870		Fondo	Bottom
7	3151750		Anello	Ring
8	SL0893	PG13,5	Pressacavo	Cable clamp
9	36G6600		Puleggia	Pulley
10	36G6610	Poly V-559 j12	Cinghia	Belt
11	36G6620	(PLN-PPN)	Puleggia	Pulley
11	36G0030	(LCN)	Puleggia	Pulley
12	35V1230		Staffa	Bracket
13	SL1518	400V/3Ph/50Hz (PLN-LCN)	Motore	Motor
13	32M0650	230V/1Ph/50Hz (PLN-LCN)	Motore	Motor
13	SL1471	400V/3Ph/50Hz (PPN)	Motore	Motor
13	SL1470	230V/1Ph/50Hz (PPN)	Motore	Motor
14	3140460	ø88÷ø96	Fascetta	Clip
15	35X1150	ø90	Tubo	Tube
16	SA3450	(PTA) plastic	Kit disco	Disk set
17	ACPPC	Assembly	Disco cozze	Mussel disk
18	32Z4840	230V/50-60Hz 3kW	Teleruttore	Remote control switch
19	32D0630		Piastra	Plate
20	SL2355		Staffa	Bracket
21	32W3240		Microinterruttore	Microswitch
22	SL0010	5x5x20	Linguetta	Key
23	3151550	ø15xø25x3	Guarnizione	Gasket
24	33M0010	3/4" F-F	Tubo	Tube
25	SL2494		Tela abrasiva	Emery cloth
26	36D9550		Boccola	Bush
27	36G6880		Disco cozze	Mussel disk
28	SA3400	Assembly	Sportello	Door
29	3600160		Magnete	Magnet
30	37Q7860		Guarnizione	Gasket
31	36C0011		Telaio	Frame
32	SL2135		Disco	Disk
33	36M5250		Pomello	Knob
34	ACPTA	Assembly	Disco patate	Potato disk
35	SL2904		Staffa	Bracket
36	35X2330		Tubo	Tube
37	33Q6040	L 90° 1/4" M-F	Raccordo	Nipple
38	33Q6210	1/4" M-F	Raccordo	Nipple
39	SL1622	1/4" M-F	Rubinetto	Cock
40	33Q5180	1/4" M ø12	Portagomma	Cluch
41	3117580	1/4" CH17	Dado	Nut
42	36D6040		Saltarello	Leaper
43	36G2040		Perno	Pivot
44	SL2693		Carcassa	Housing
44	30W3130	01/06/03 f.p.(*)	Carcassa	Housing
45	37M4770		Etichetta	Label
46	32W2970	230V 2W green	Lampada	Lamp
47	32W3280	230V 2W white	Lampada	Lamp
48	SL2348		Timer	Timer
48	32Z5560	20/10/01 f.p.(*)	Timer	Timer
49	SL1539	Unstable	Pulsante	Push button
50	35D7790		Fondo	Bottom
51	35M0850		Piastra	Plate
52	36C0800		Piedino	Foot
53	36M5090		Maniglia	Handle
54	SL2871		Guarnizione	Gasket
55	36Z6501		Coperchio	Cover
56	3600310		Magnete	Magnet
57	35V6381		Staffa	Bracket
58	6005400	Assembly	Maniglia	Handle
59	6000930	Assembly	Sportello	Door
60	6005390	Assembly	Sportello	Door
61	6005380	Assembly	Coperchio	Cover
62	ACCI	(PLF-PPF-LCF)Assembly	Telaio	Frame
63	SL2211	(PLF-PPF-LCF)	Tappo	Tap

(\*): fuori produzione / out of production