# Service part catalogue

## iCombi® ab 03/2020 101 - 10 x 1/1 Gastronorm


**G11SJ2103**




7.12.2021 r.
1NAC230 V 50/60Hz

Kat-RTS_210315
©Copyright by RATIONAL Technical Service
All Rights reserved


# Overview

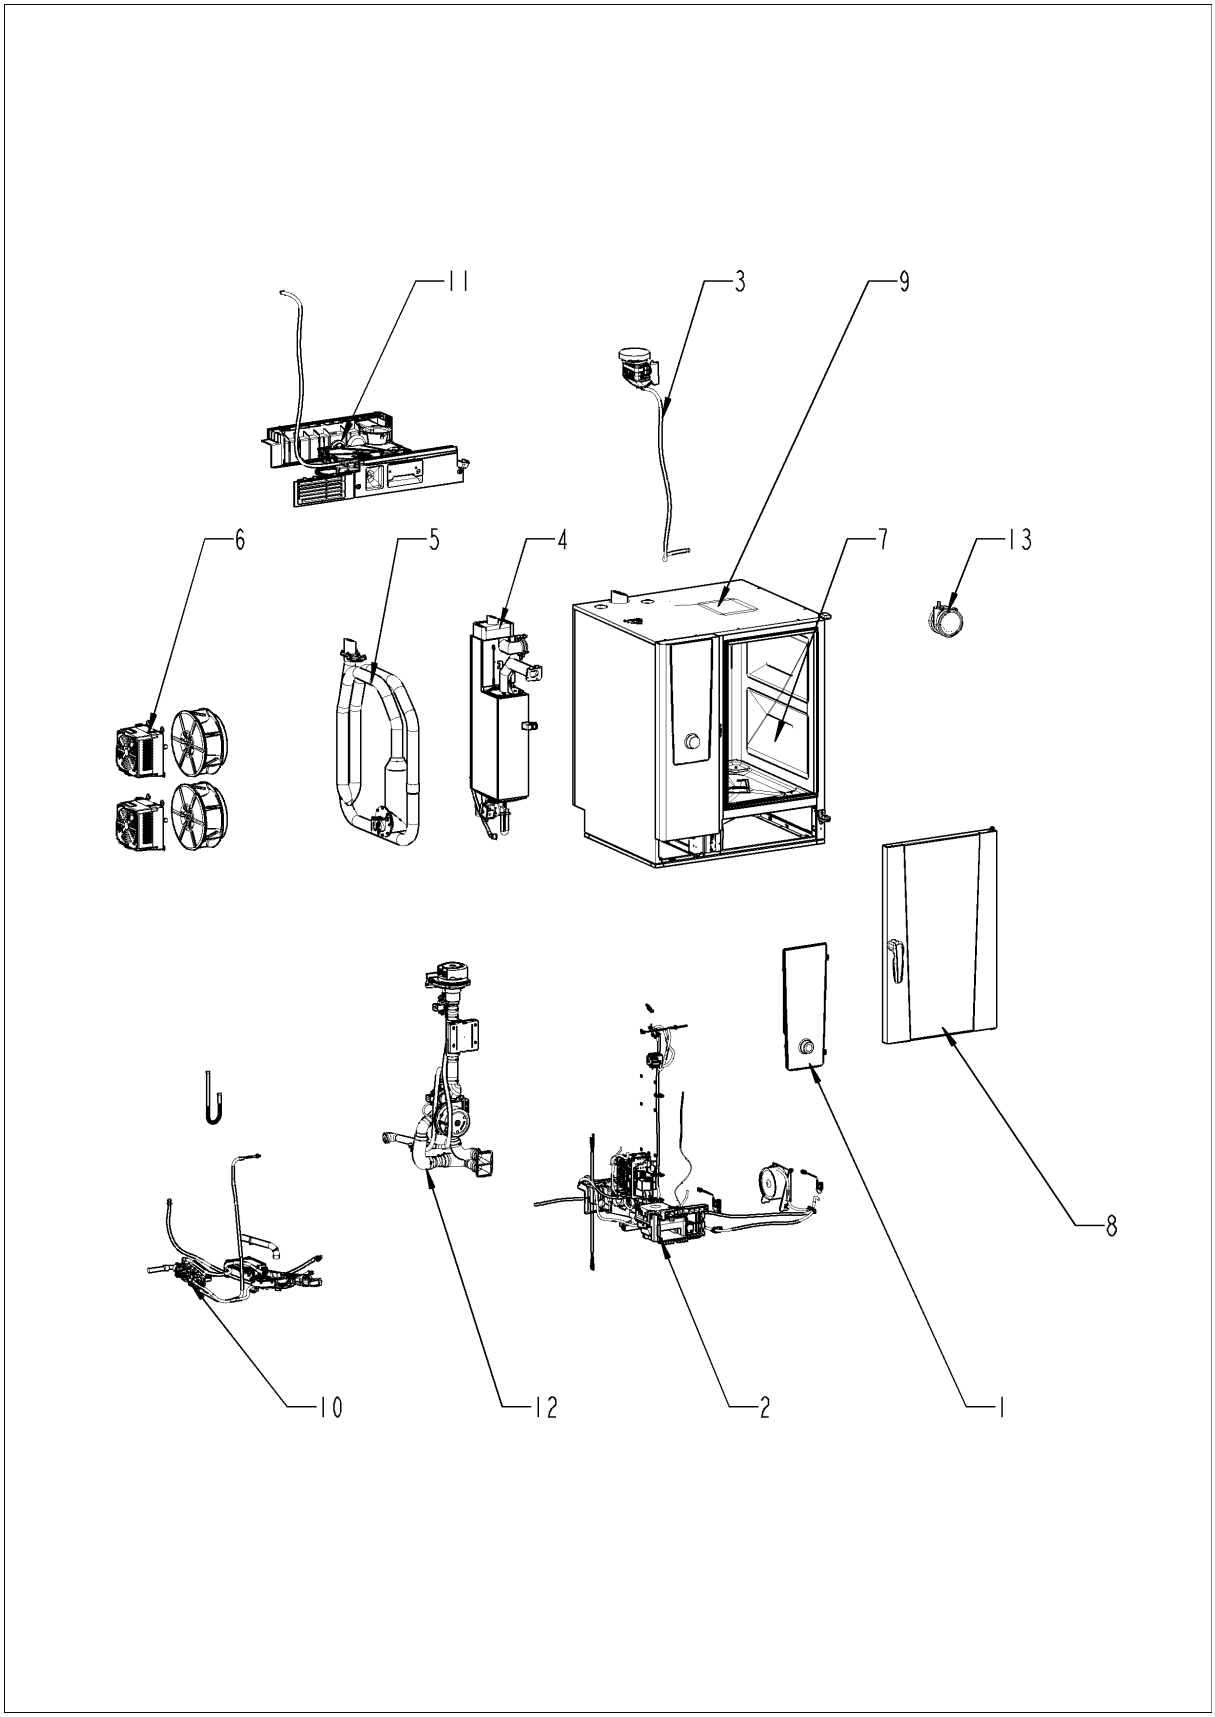

# Overview


| Pos. | Assembly | Page |
|---|---|---|
| 1 | Control panel | 4 |
| 2 | Electrical installation | 6 |
| 3 | ClimaPlus | 12 |
| 4 | Steam generator | 14 |
| 5 | Hot air heating | 16 |
| 6 | Motor and fan wheel | 20 |
| 7 | Interior cabinet | 22 |
| 8 | Door | 24 |
| 9 | Exterior cabinet | 28 |
| 10 | Water | 32 |
| 11 | CleanJet + Care | 34 |
| 12 | Gas parts | 36 |
| 13 | Standard accessory | 38 |


# Control panel

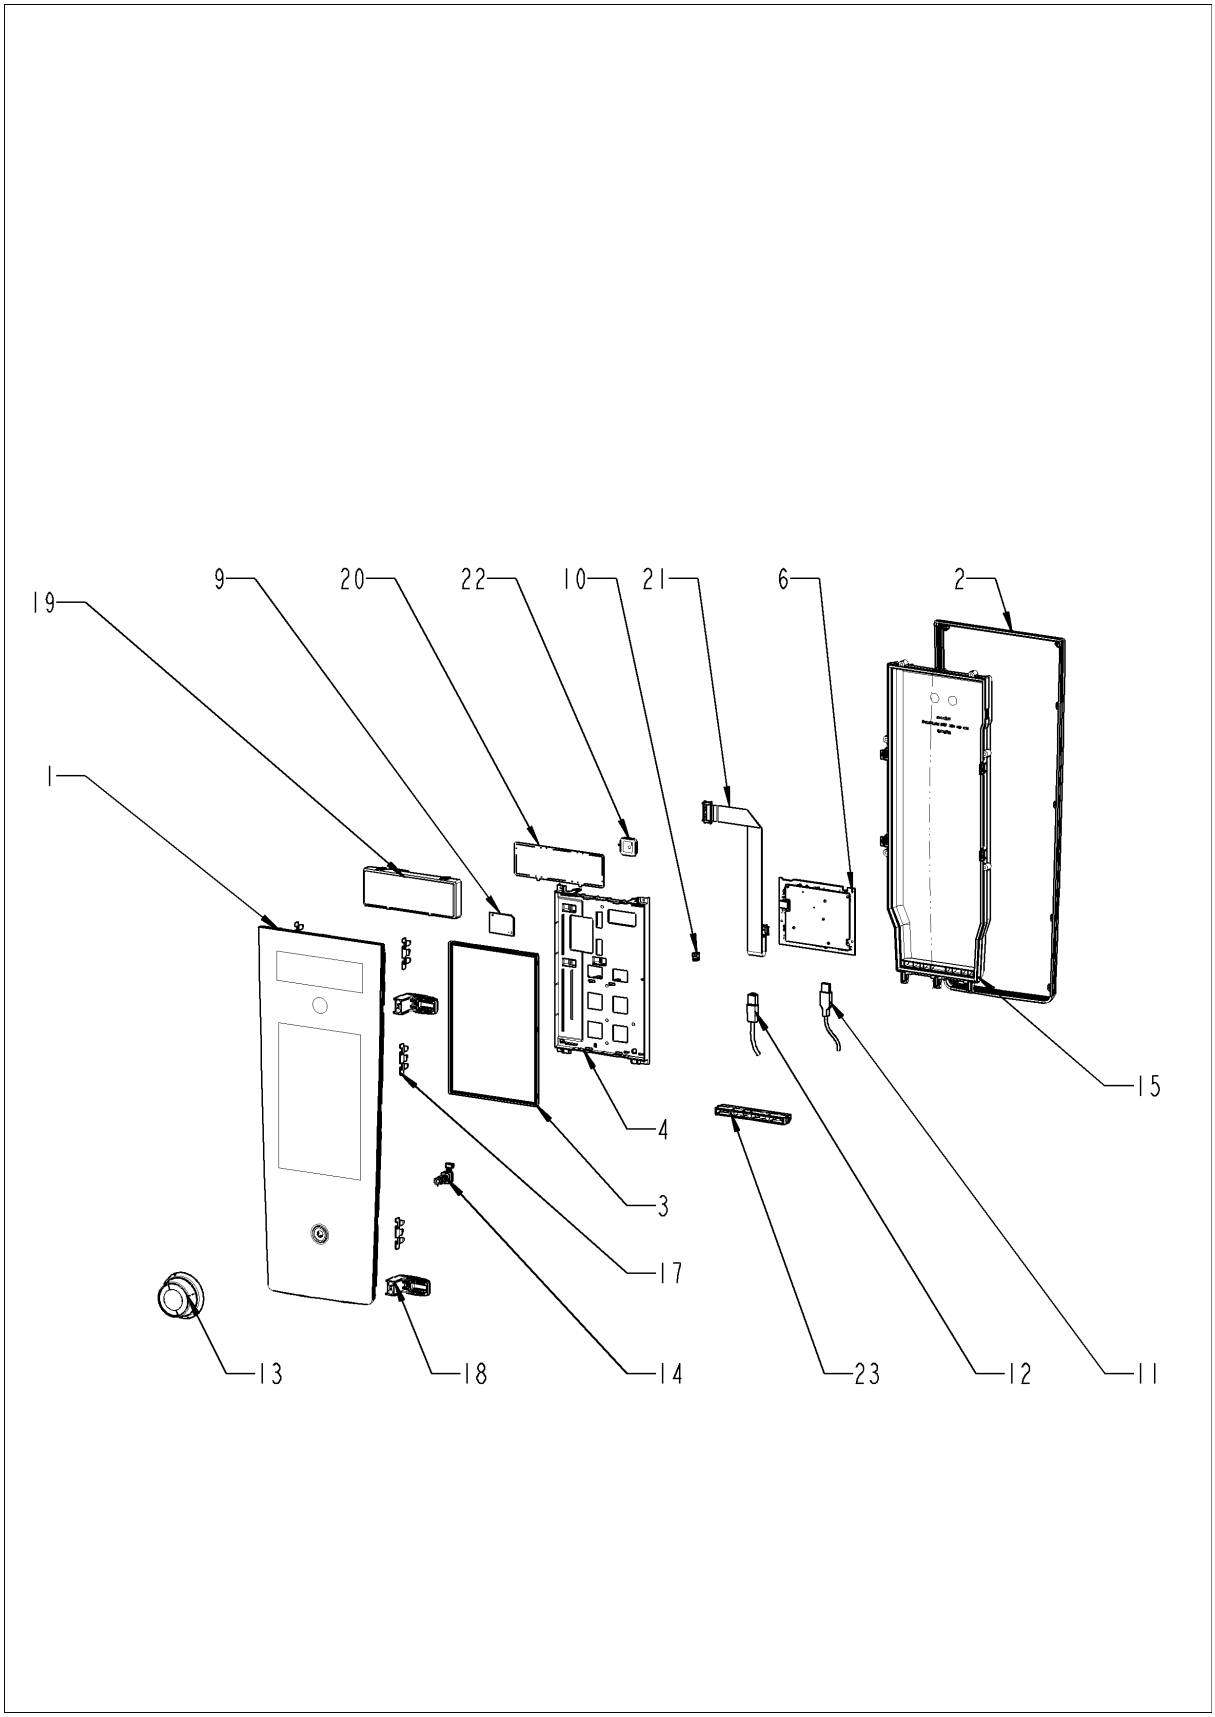

# Control panel

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.535S | Control panel insert with touch/TFT *RAT* | 1 |
| 2 | 16.03.342P | Sealing f. panel insert | 1 |
| 3 | 42.00.357P | Display *TFT* | 1 |
| 4 | 16.03.747P | Fixing display / pcb | 1 |
| 6 | 42.00.251P | Control pcb (w/o SD-Card) | 1 |
| 8 | 42.00.359P | Micro SD card | 1 |
| 9 | 42.00.346P | Sensor on / off | 1 |
| 10 | 40.06.760P | Cable control pcb - capacitive switch | 1 |
| 11 | 40.06.044P | USB socket with cable | 1 |
| 12 | 40.06.409P | Interface cable LAN 1.5m | 1 |
| 13 | 16.03.756P | Dial f. pulse generator | 1 |
| 14 | 40.06.037P | Pulse generator | 1 |
| 15 | 16.03.735P | Cover f. control pcb w. gasket | 1 |
| 17 | 16.03.748P | Metal cramp f. panel insert | 6 |
| 18 | 16.03.749P | Hook for parking position | 2 |
| 21 | 40.06.569P | Cable CPU - TFT | 1 |
| 23 | 16.04.062P | Sealing block | 1 |
| 23 | 16.03.701P | Sealing block LAN | 1 |


# Electrical installation

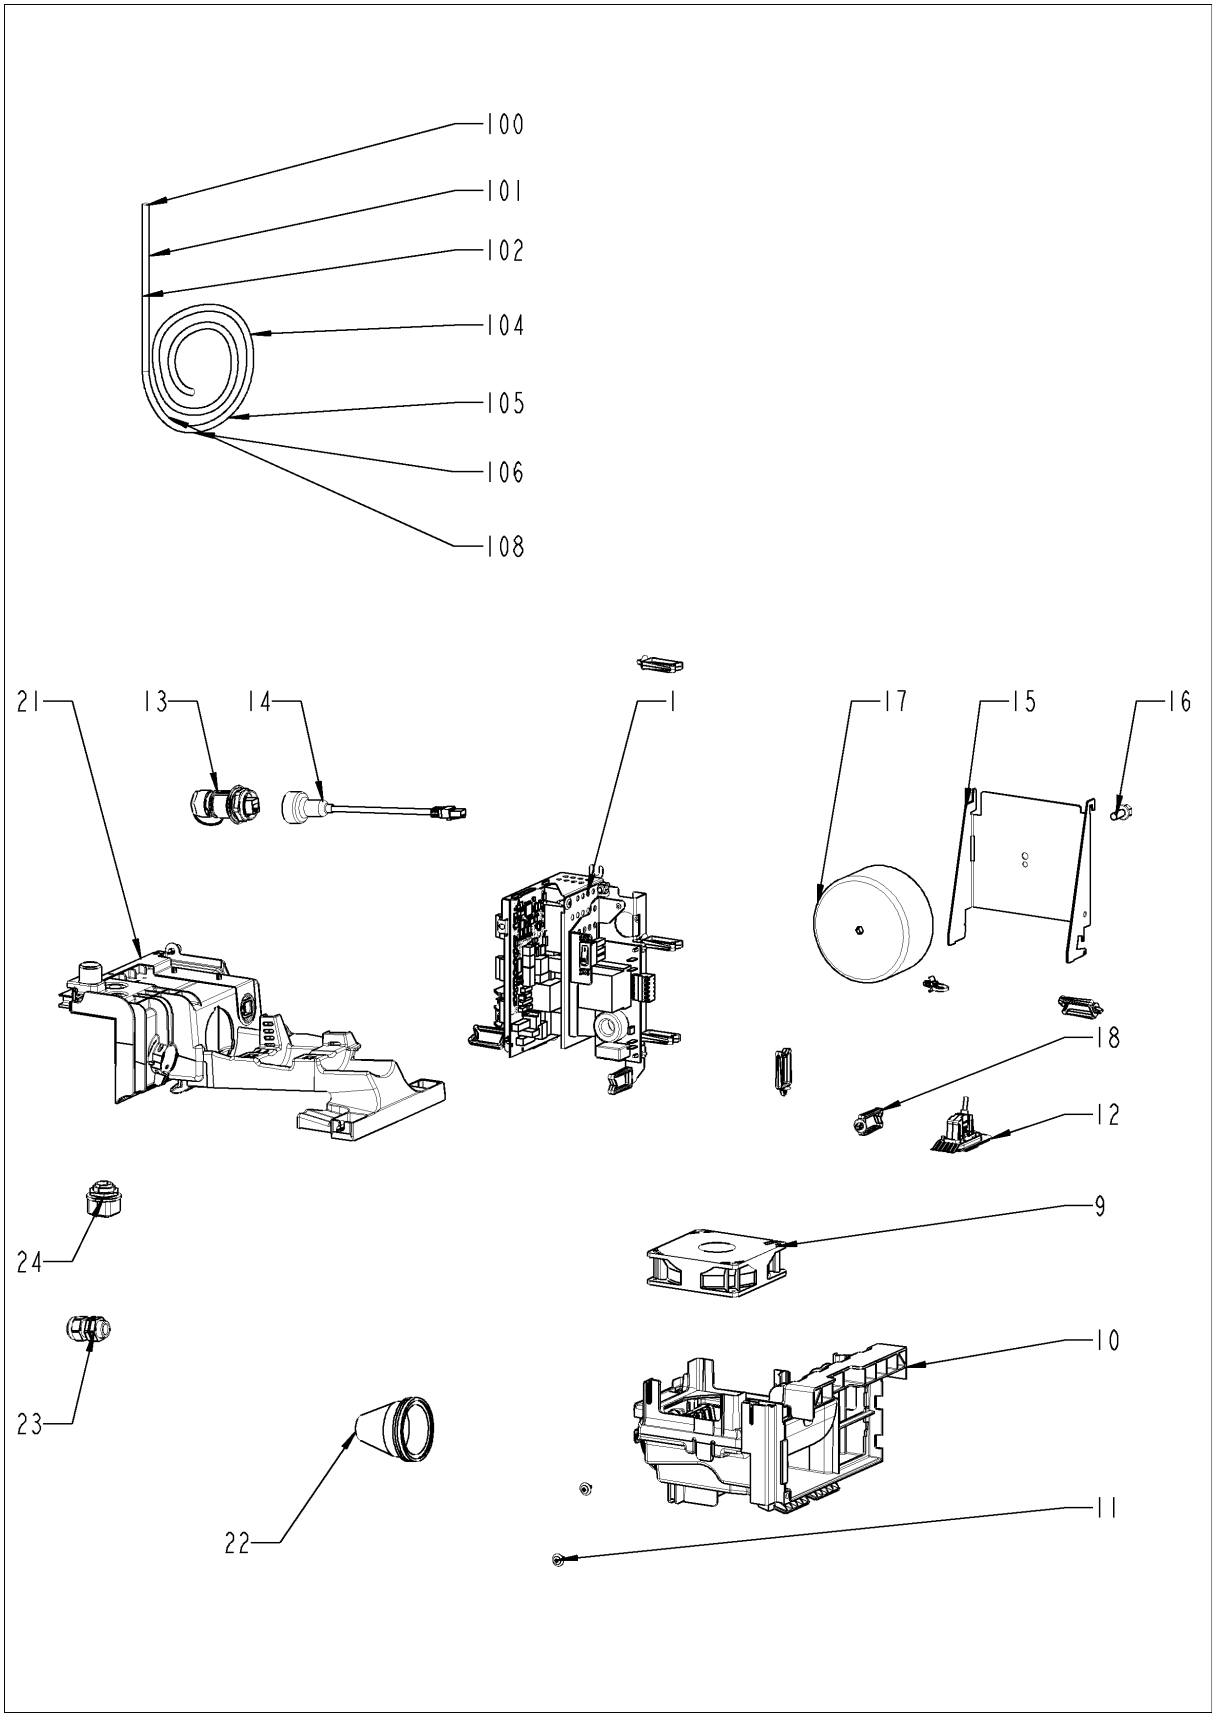

# Electrical installation

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | | Electrical installation | 1 |
| 9 | 40.05.993P | Cooling fan | 1 |
| 10 | 40.06.566P | Air shaft cpl. | 1 |
| 11 | 10.00.989P | Rivet with screw | 1 |
| 12 | 40.06.043P | Interface USB | 1 |
| 13 | 40.06.327P | Interface LAN IPX6 | 1 |
| 14 | 40.06.409P | Interface cable LAN 1.5m | 1 |
| 15 | 40.05.968P | Mounting support power transformer | 1 |
| 16 | 1008.0769P | Ornamental screw M8x30 | 1 |
| 18 | 40.06.878P | Cable holder | 8 |
| 21 | 87.01.620S | Cable entry | 1 |
| 22 | 40.06.777S | Cable bushing f. cable entry | 1 |
| 23 | 40.00.320S | Cable gland M20x1.5 | 1 |
| 24 | 40.04.495P | Cable connection M25 ø5mm *divisible* | 1 |
| 100 | 40.06.063P | Cable control harness | 1 |
| 101 | 40.06.625P | Pump harness | 1 |
| 102 | 40.06.624P | Cable harness base | 1 |
| 108 | 40.06.250P | Cable, Care pump | 1 |
| 112 | 40.06.753P | Power supply cable 3x2,5 mm² 3m | 1 |
| 114 | 40.07.148P | Bus cable 1.73m | 1 |
| 115 | 40.05.858P | Bus cable 1.08m | 1 |
| 116 | 40.05.858P | Bus cable 1.08m | 1 |
| 117 | 40.07.146P | Bus cable 1.35m | 1 |
| 120 | 40.05.858P | Bus cable 1.08m | 1 |
| 129 | 40.07.451P | Cable hot air probe - eSTB | 1 |
| 130 | 40.07.452P | Cable, steam probe - eSTB | 1 |


# Electrical installation

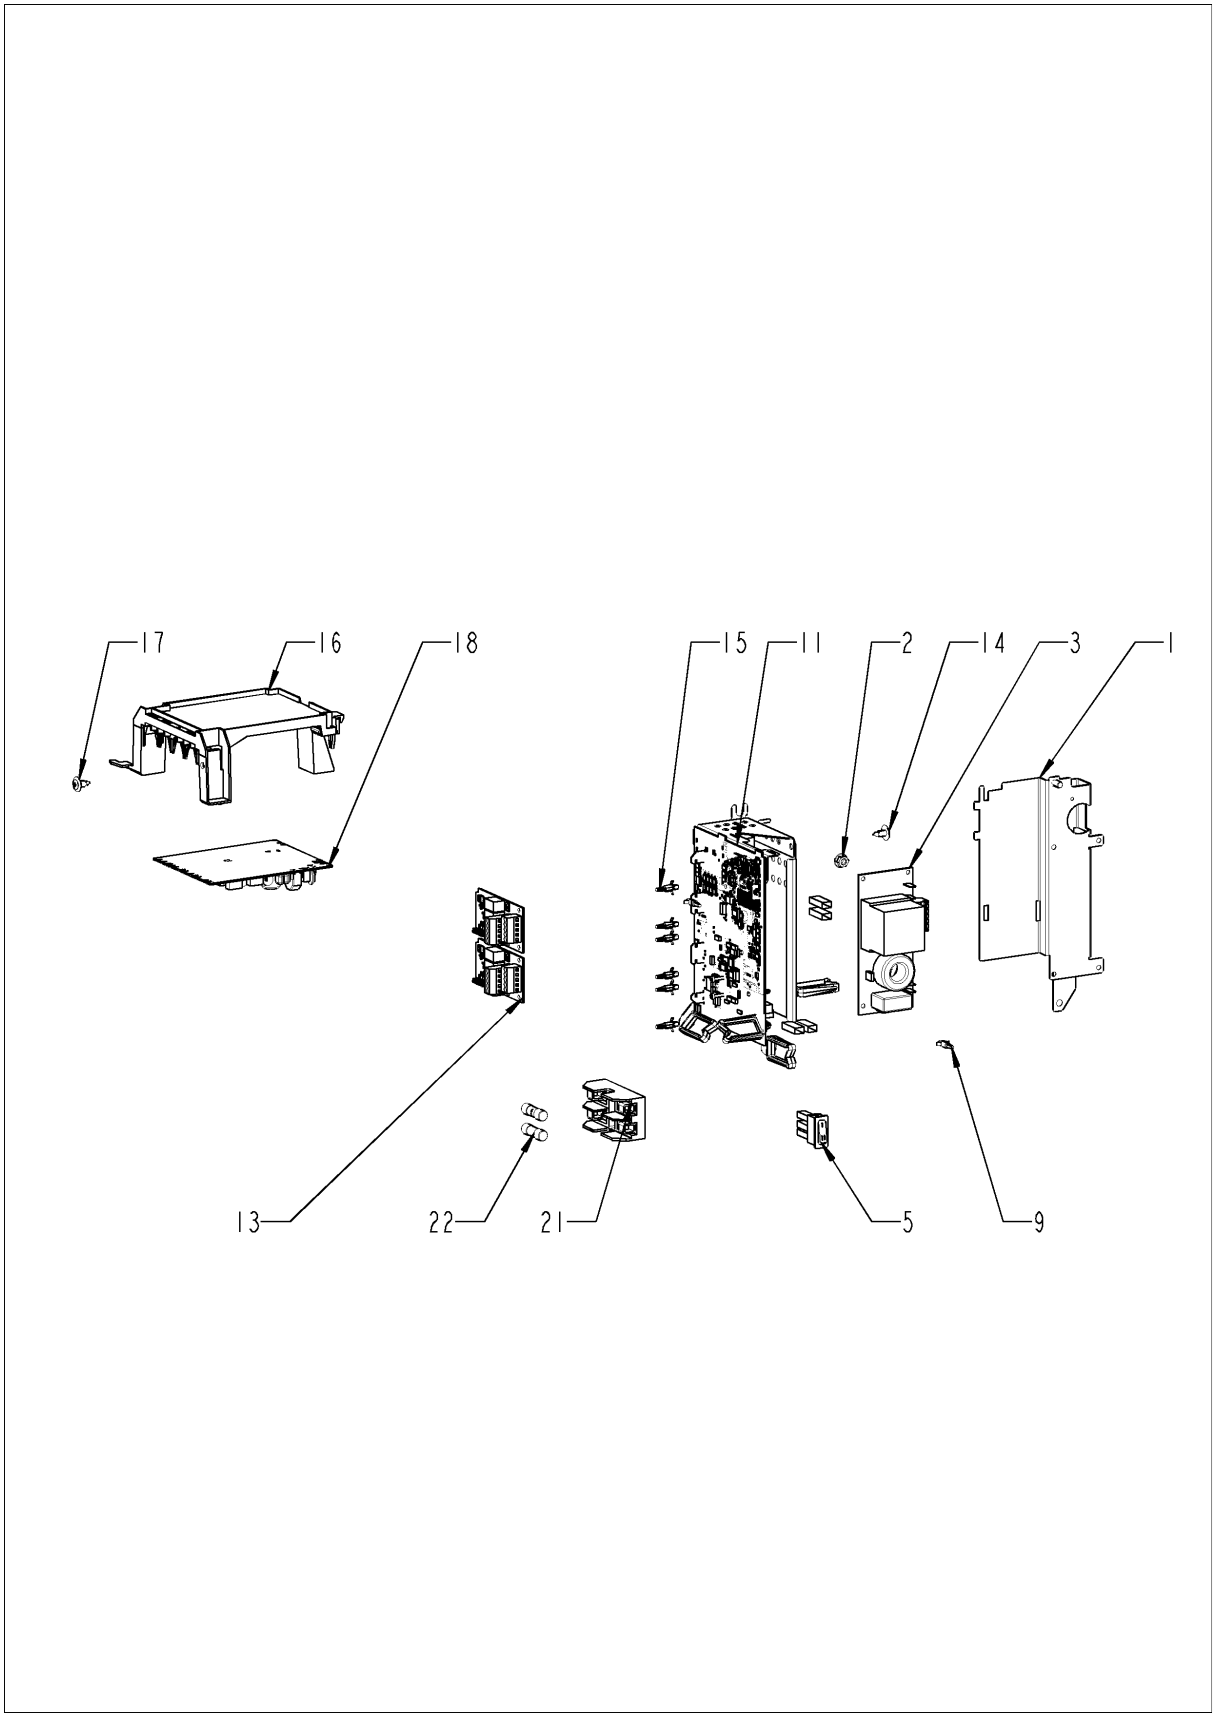

# Electrical installation

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 40.06.385P | Electrical mounting plate | 1 |
| 2 | 10.00.709P | Hex nut M6 w. locking | 1 |
| 3 | 42.00.286P | Power supply | 1 |
| 5 | 40.01.358P | Rocker switch 1 pole | 1 |
| 9 | 40.03.756P | Fixing clip f. pcb | 1 |
| 11 | 40.05.919P | IO-module | 1 |
| 14 | 10.00.989P | Rivet with screw | 1 |
| 15 | 40.03.756P | Fixing clip f. pcb | 1 |
| 16 | 40.04.953P | Mounting support for pump pcb | 1 |
| 17 | 10.00.989P | Rivet with screw | 1 |
| 18 | 42.00.273P | Pump pcb | 1 |
| 28 | 40.06.767P | Fuse 4A *Typ 5HT 4-R* | 1 |


# Air shaft cpl.

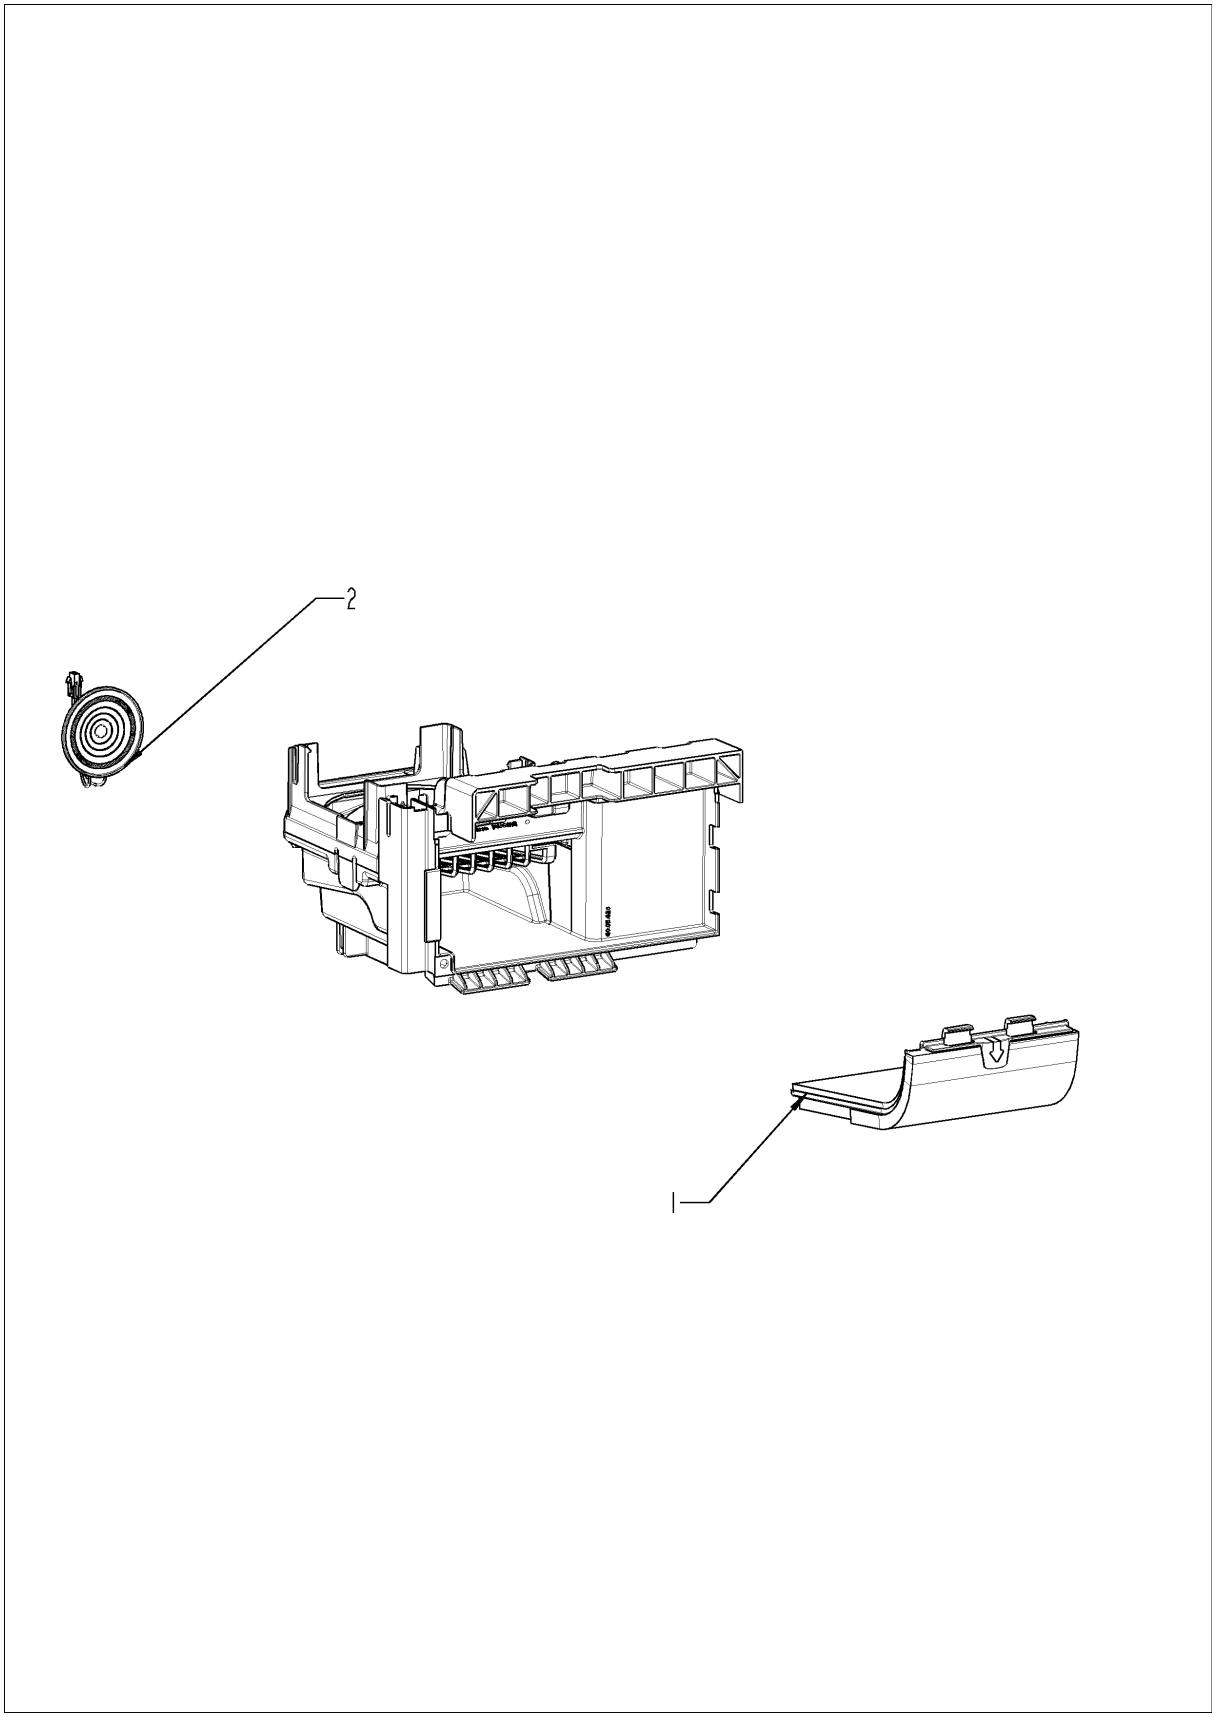

# Air shaft cpl.

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 40.05.424P | Air inlet filter cpl. | 1 |
| 2 | 40.07.257P | Loudspeaker K 64 WP FR | 1 |


# ClimaPlus

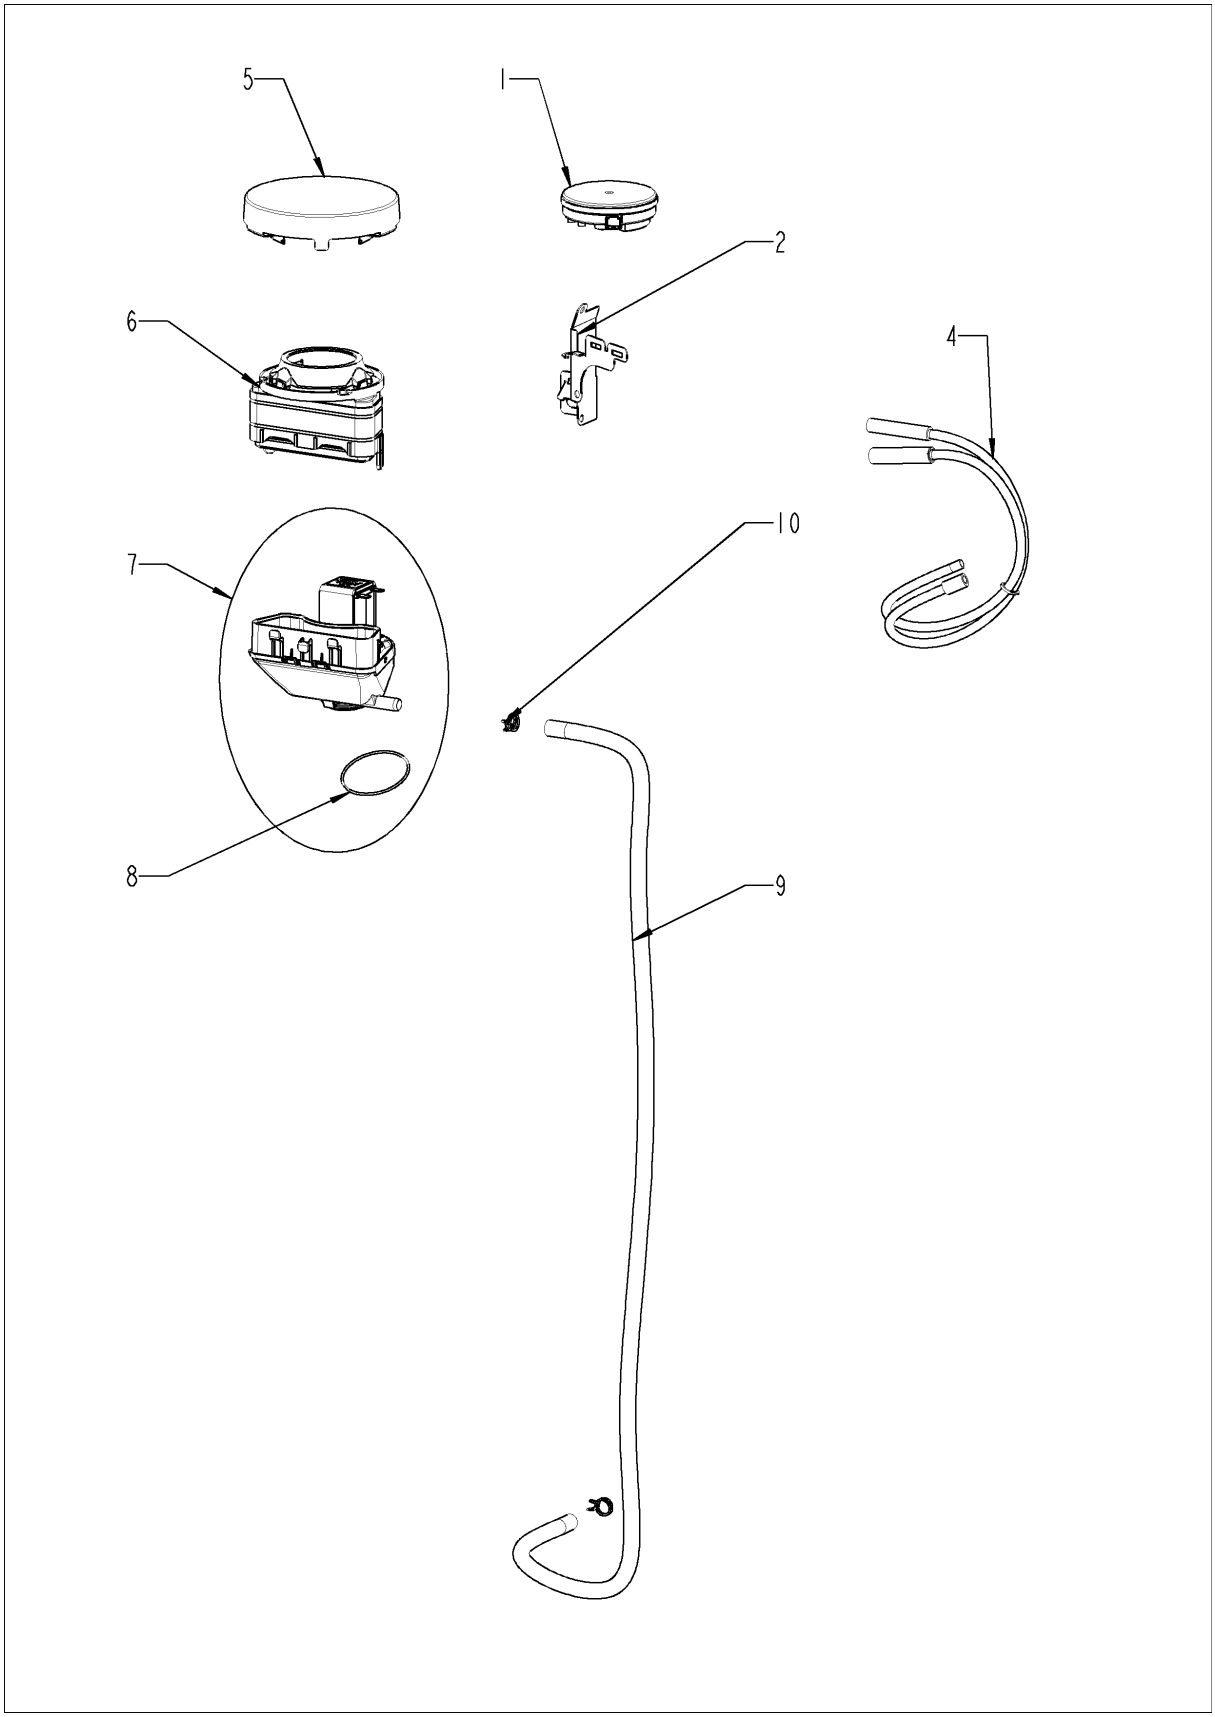

# ClimaPlus

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 3017.1011P | Pressure sensor Huba 401 | 1 |
| 2 | 40.05.435P | Mounting device f. pressure sensor | 1 |
| 4 | 22.01.497P | Hose set f. humidity control | 1 |
| 5 | 22.01.409P | Vent cover | 1 |
| 6 | 87.01.713S | Air inlet pipe | 1 |
| 7 | 22.01.402P | Humidity control cpl. | 1 |
| 8 | 10.01.694P | O-ring for humidity control | 2 |
| 9 | 56.01.518P | Drain hose set, humidity control, unit drip collector | 1 |
| 10 | 2066.0527P | Hose clamp ø14mm | 2 |


# Steam generator

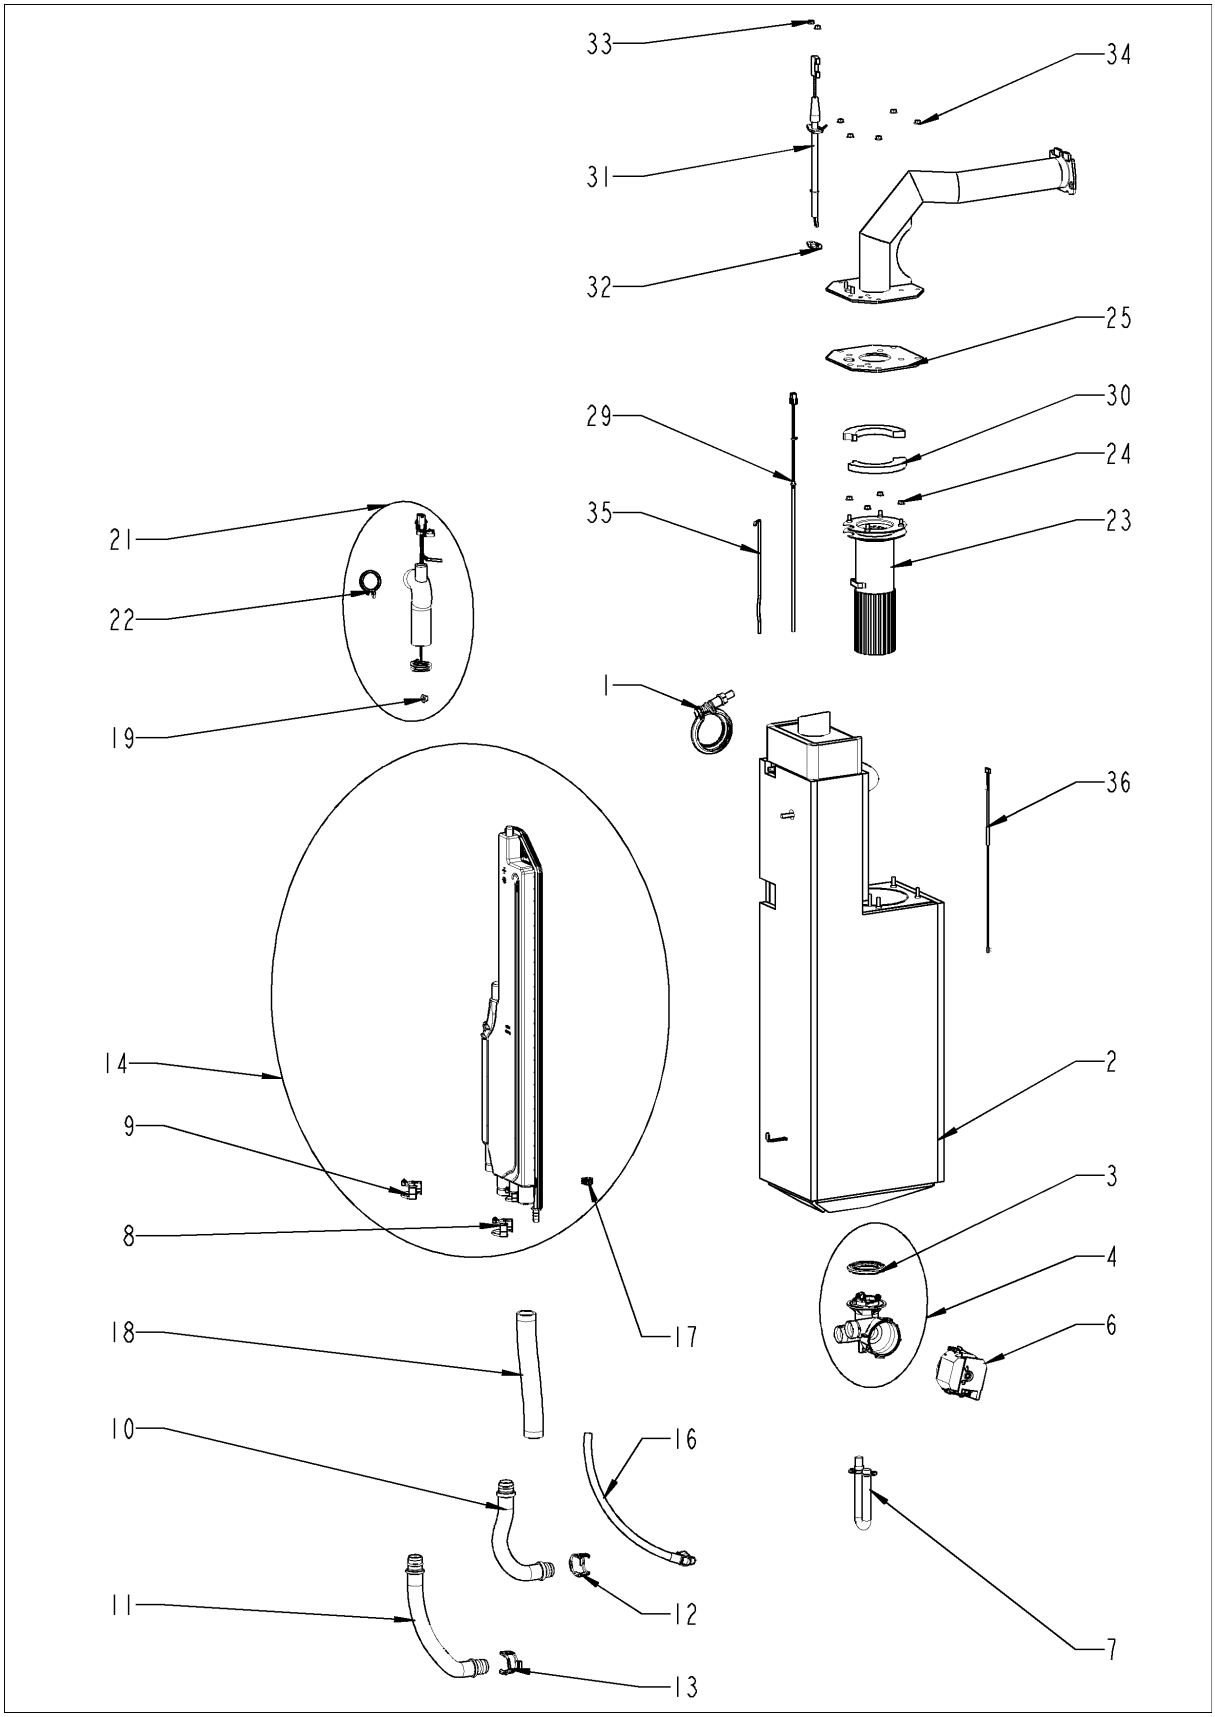

# Steam generator

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 72.00.492P | V Clamp 50mm right | 1 |
| 2 | 87.01.552S | Kit Steam generator insolated | 1 |
| 3 | 44.02.200P | Gasket SC pump | 1 |
| 4 | 44.02.179S | Pump housing | 1 |
| 6 | 56.01.024P | Emptying pump | 1 |
| 7 | 44.02.287P | Emergency drainage hose | 1 |
| 8 | 10.01.707P | Locking ring 25mm | 1 |
| 9 | 10.01.707P | Locking ring 25mm | 1 |
| 10 | 44.02.227S | Supply hose safety armature | 1 |
| 11 | 44.02.219S | Drain hose steam generator | 1 |
| 12 | 10.01.707P | Locking ring 25mm | 1 |
| 13 | 10.01.707P | Locking ring 25mm | 1 |
| 14 | 87.01.548S | Safety device / water supply for steam generator | 1 |
| 16 | 50.02.119P | Hose, water supply, steam generator | 1 |
| 17 | 2066.0205P | Hose clamp 8-16x9 mm SW 7mm | 1 |
| 18 | 44.02.230P | Drain hose steam generator | 1 |
| 19 | 44.01.505P | Grommet Ø12x8,2 | 1 |
| 21 | 44.02.494S | Molded hose with level electrode | 1 |
| 22 | 2066.0518P | Hose clamp 30mm | 2 |
| 23 | 70.01.277S | Burner steam gen. kit | 1 |
| 24 | 10.01.065P | Hex nut M5 | 1 |
| 25 | 72.00.408P | Gasket f. burner carrier | 1 |
| 29 | 40.06.131P | Temperature sensor eSTB 240mm *S* | 1 |
| 30 | 72.00.077P | Insulation f. burner steam gen. | 1 |
| 31 | 70.01.250S | Ignition electrode kit for steam generator | 1 |
| 32 | 70.01.258P | Gasket f. ignition electrode | 1 |
| 33 | 10.01.065P | Hex nut M5 | 2 |
| 34 | 10.01.065P | Hex nut M5 | 5 |
| 35 | 72.00.505P | Fixing plate steam generator thermostat | 1 |
| 36 | 40.06.228P | Thermocouple steam generator *B5* | 1 |


# Hot air heating

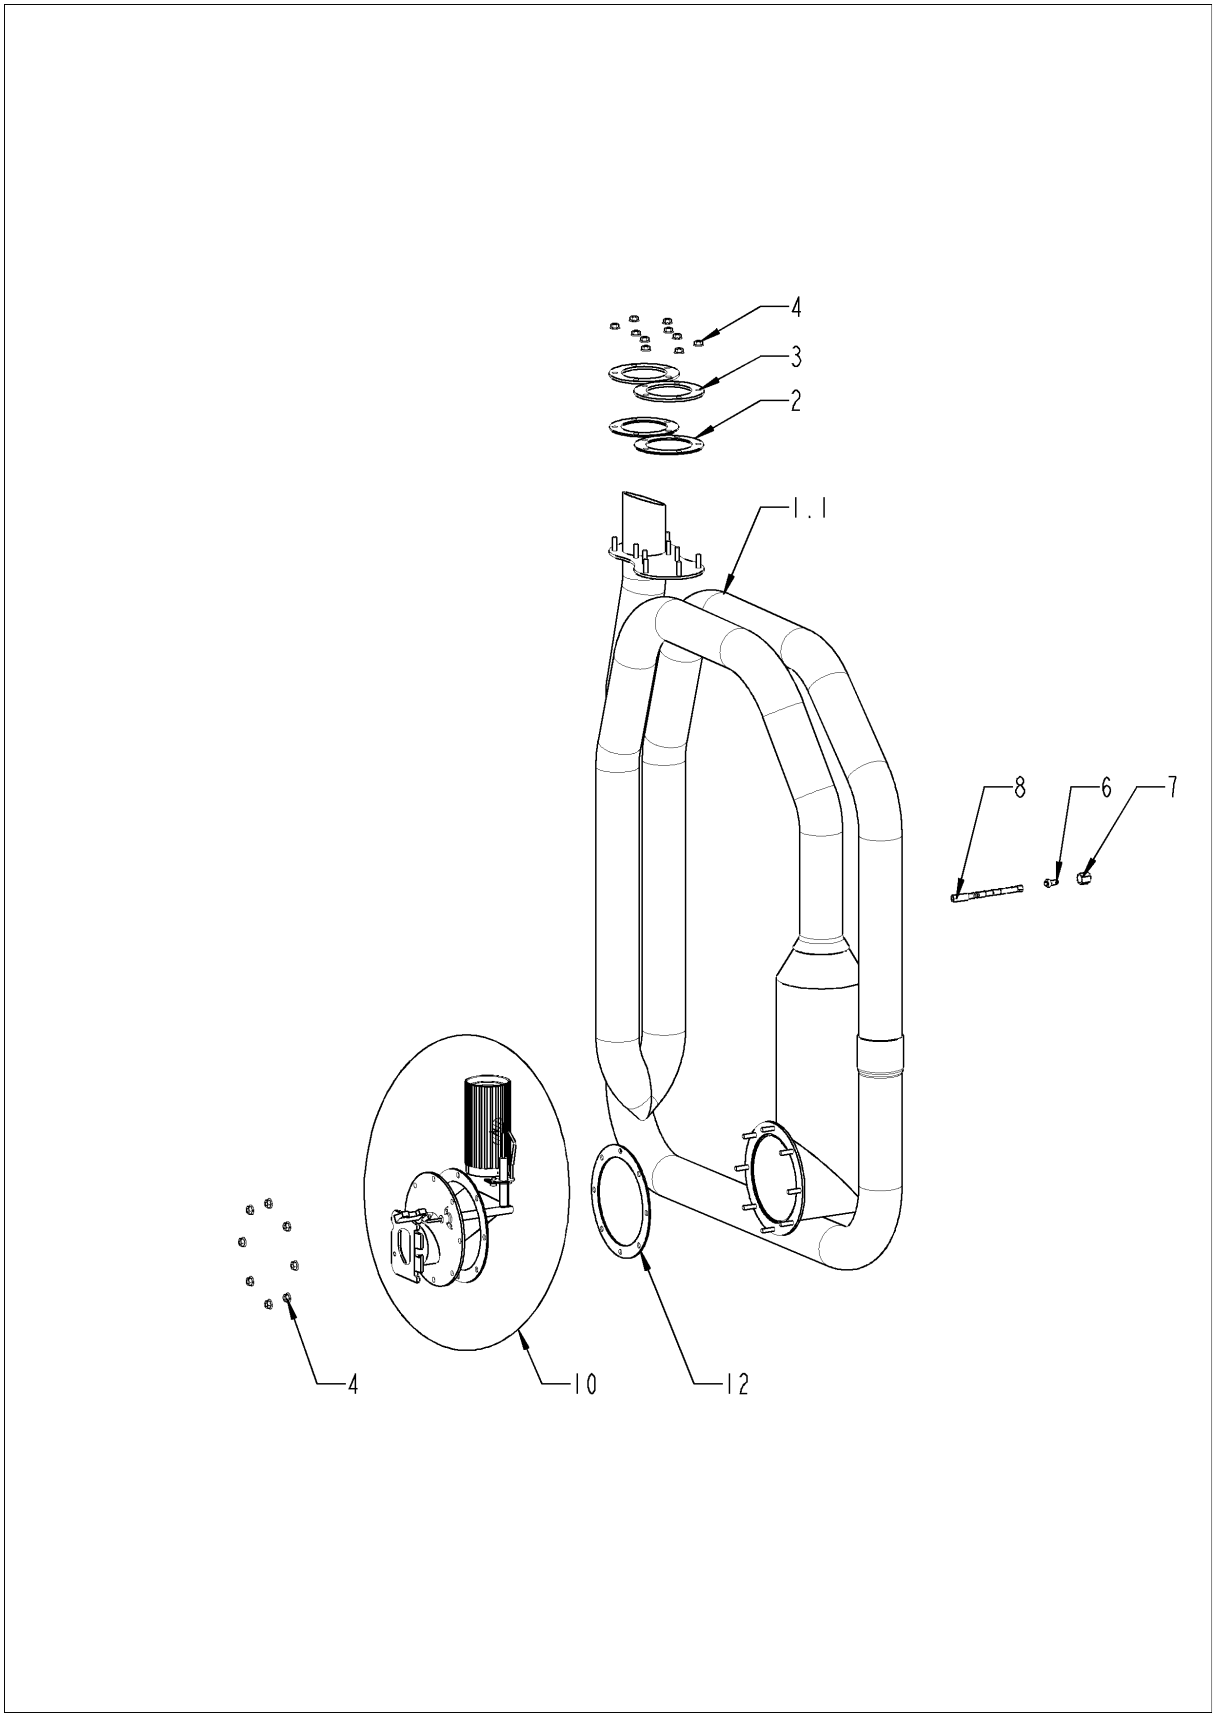

# Hot air heating

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1.1 | 74.00.981S | Hot air heat exchanger | 1 |
| 2 | 74.01.124P | Gasket hot air heat exchanger/interior cabinet | 2 |
| 3 | 74.01.125P | Mating flange heat exchanger | 2 |
| 4 | 10.01.065P | Hex nut M5 | 10 |
| 6 | 50.02.004P | Nozzle f. moistening | 1 |
| 7 | 50.02.005P | Union nut | 1 |
| 8 | 50.02.006P | Plastic pipe PEEK | 1 |
| 10 | 87.01.654S | Burner hot air | 1 |
| 12 | 74.00.296P | Gasket f. heat exchanger below | 1 |


# Burner hot air

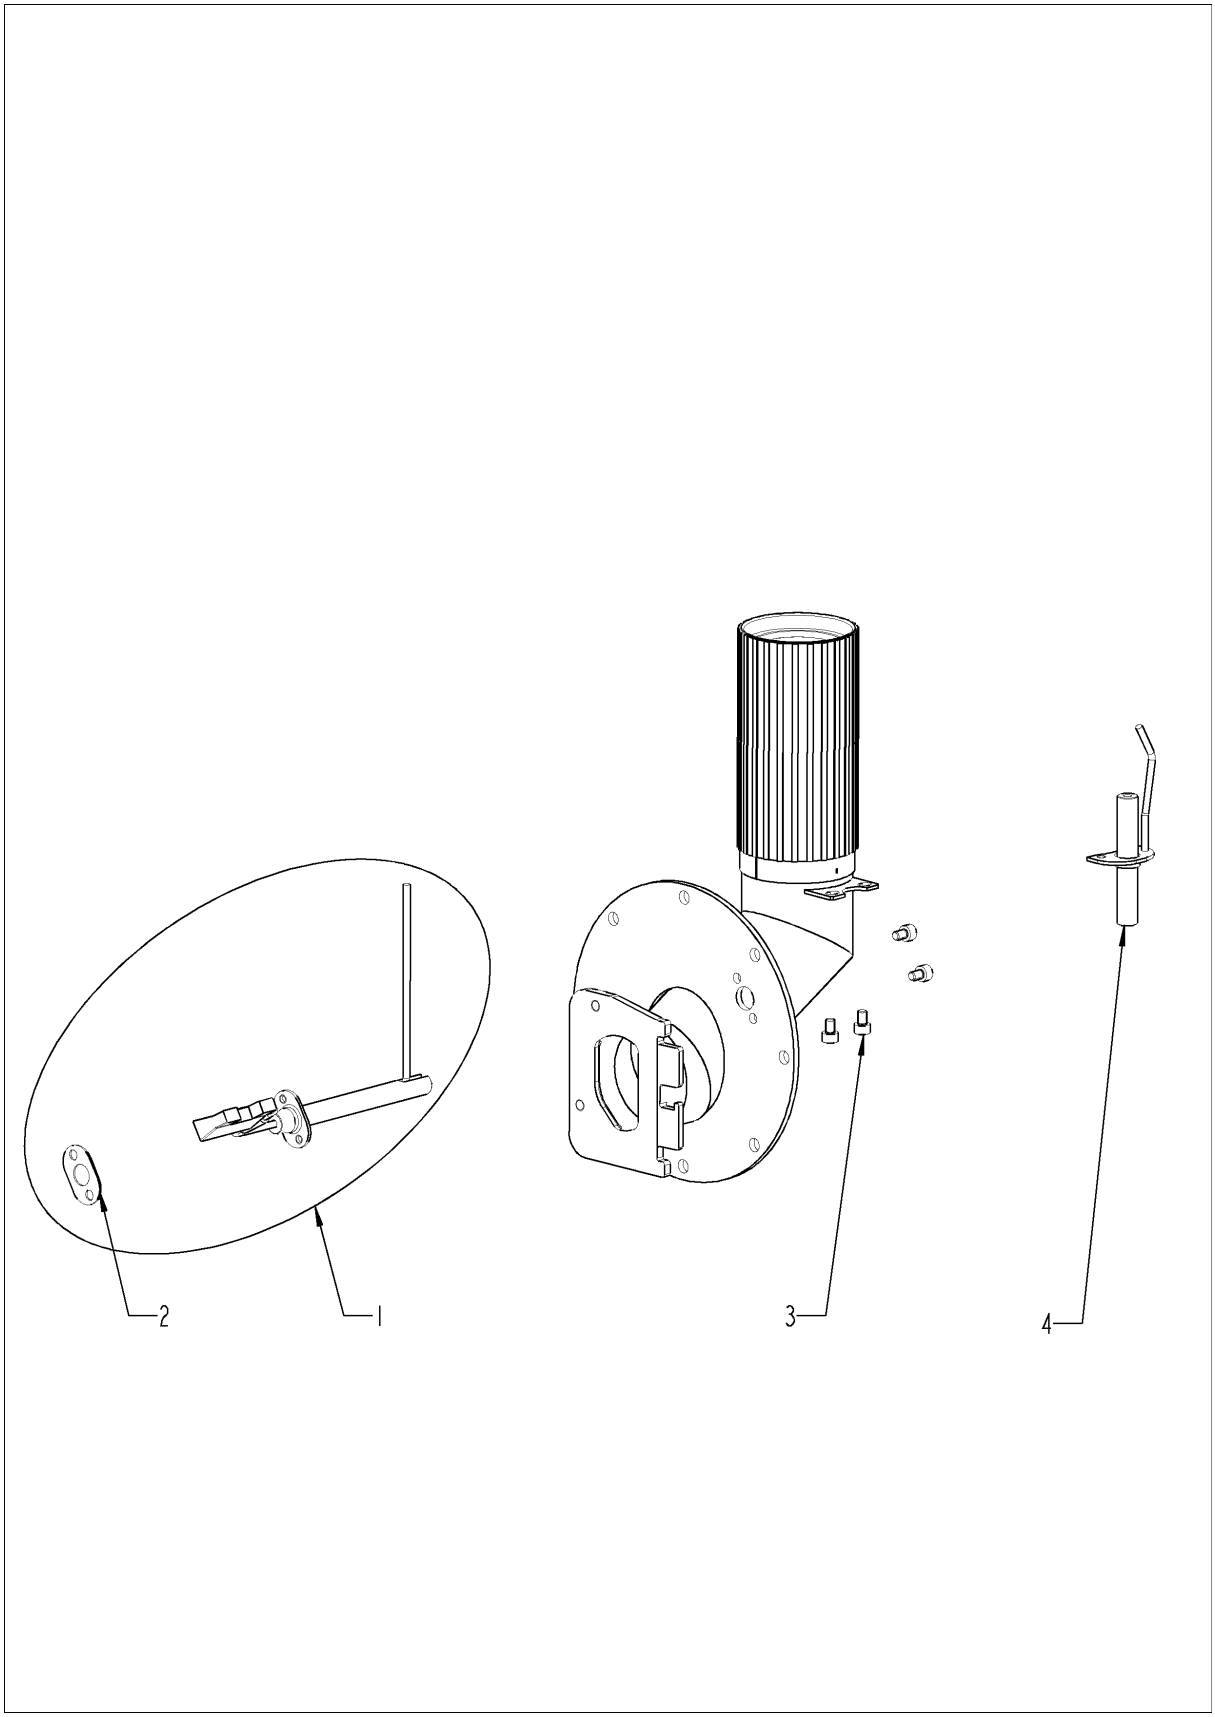

# Burner hot air

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 70.01.247S | Ignitionelectrode, hot air 350mm | 1 |
| 2 | 74.00.290P | Gasket electrode hot air | 1 |
| 3 | 10.00.696P | Allen screw M4x6 w. Precoat 85 | 4 |
| 4 | 74.00.873P | Earth electrode, hot air | 1 |


# Motor and fan wheel

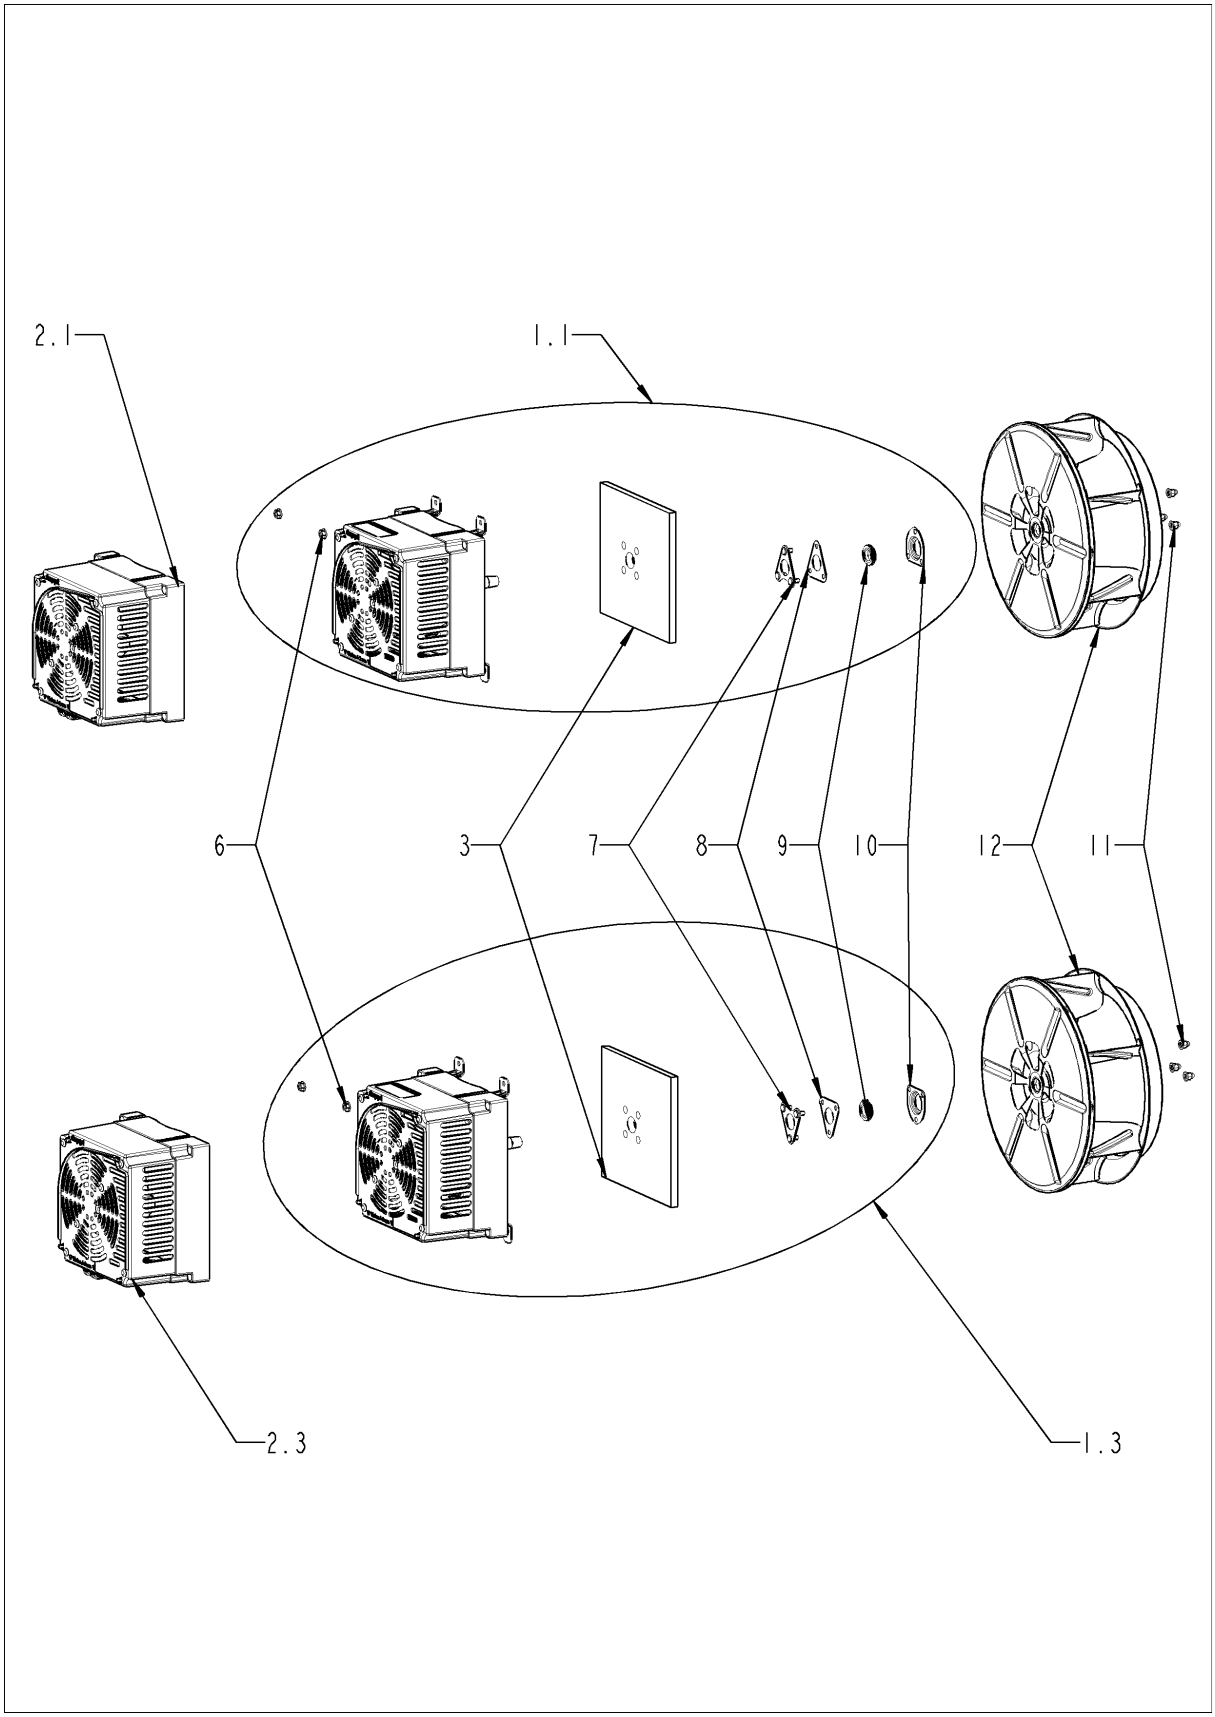

# Motor and fan wheel

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1.1 | 87.01.558S | Fan motor | 1 |
| 1.3 | 87.01.560S | Fan motor | 1 |
| 2.1 | 42.00.276P | Motor control for fan motor | 1 |
| 2.3 | 42.00.277P | Motor control for fan motor | 1 |
| 3 | 20.02.807P | Isolation for mounting plate for motor | 2 |
| 6 | 10.00.709P | Hex nut M6 w. locking | 8 |
| 7 | 22.01.423P | Mounting support f. gasket flange | 2 |
| 8 | 22.01.425P | Graphit seal for gasket flange | 2 |
| 9 | 22.00.985P | Motor shaft gasket D15 | 2 |
| 10 | 22.01.427P | Flange f. motor shaft gasket | 2 |
| 11 | 10.01.076P | Cap nut M5*A2 | 6 |
| 12 | 22.01.164S | Fan wheel | 2 |
| 13 | 1308.0162P | Washer A8,4 | 2 |
| 14 | 10.00.936P | Hex screw M8x20 | 2 |


# Interior cabinet

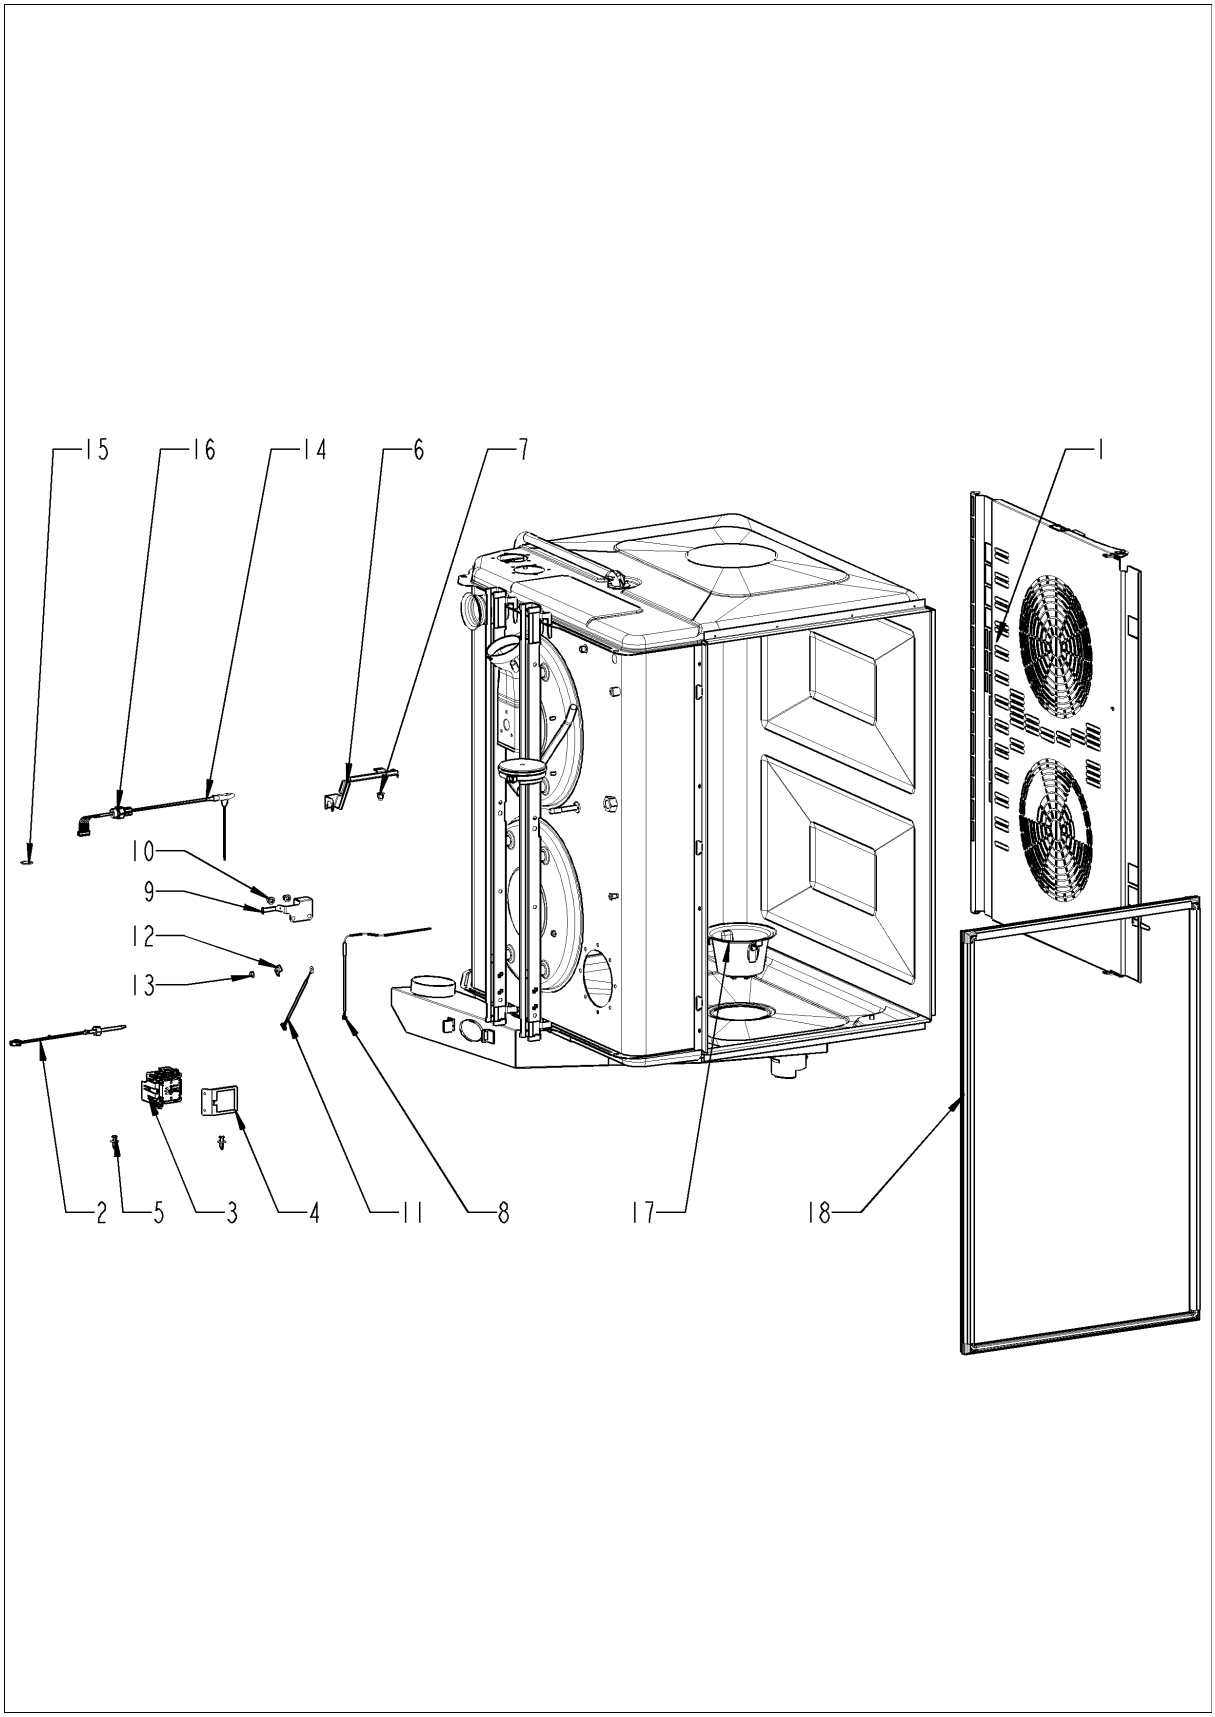

# Interior cabinet

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 22.01.343P | Air baffle | 1 |
| 2 | 40.06.112S | Temperature sensor eSTB *HA* | 1 |
| 3 | 40.06.684P | Safety temperature limiter | 1 |
| 4 | 40.06.053P | Fixing device for safety temperature limiter | 1 |
| 5 | 10.00.515P | Rivet 3,2x6.8 A2/NSF | 2 |
| 6 | 40.06.098P | Screen core temperature sensor | 1 |
| 7 | 10.01.076P | Cap nut M5*A2 | 1 |
| 8 | 40.06.888P | Thermocouple interior cabinet B1 | 1 |
| 9 | 40.05.489P | Screen interior cabinet sensor | 1 |
| 10 | 10.01.076P | Cap nut M5*A2 | 2 |
| 11 | 40.06.212S | Thermocouple humidity *B4* | 1 |
| 12 | 10.00.087P | Clamp strap f. sensor | 1 |
| 13 | 10.01.065P | Hex nut M5 | 1 |
| 14 | 40.06.902P | Meat probe sensor | 1 |
| 15 | 1315.0104P | Copper washer 16x20x1,5 | 1 |
| 16 | 10.01.751P | Hex nut M16 DIN934 A2 | 1 |
| 17 | 56.01.491P | Outlet sieve | 1 |
| 18 | 20.02.552P | Door gasket | 1 |


# Door

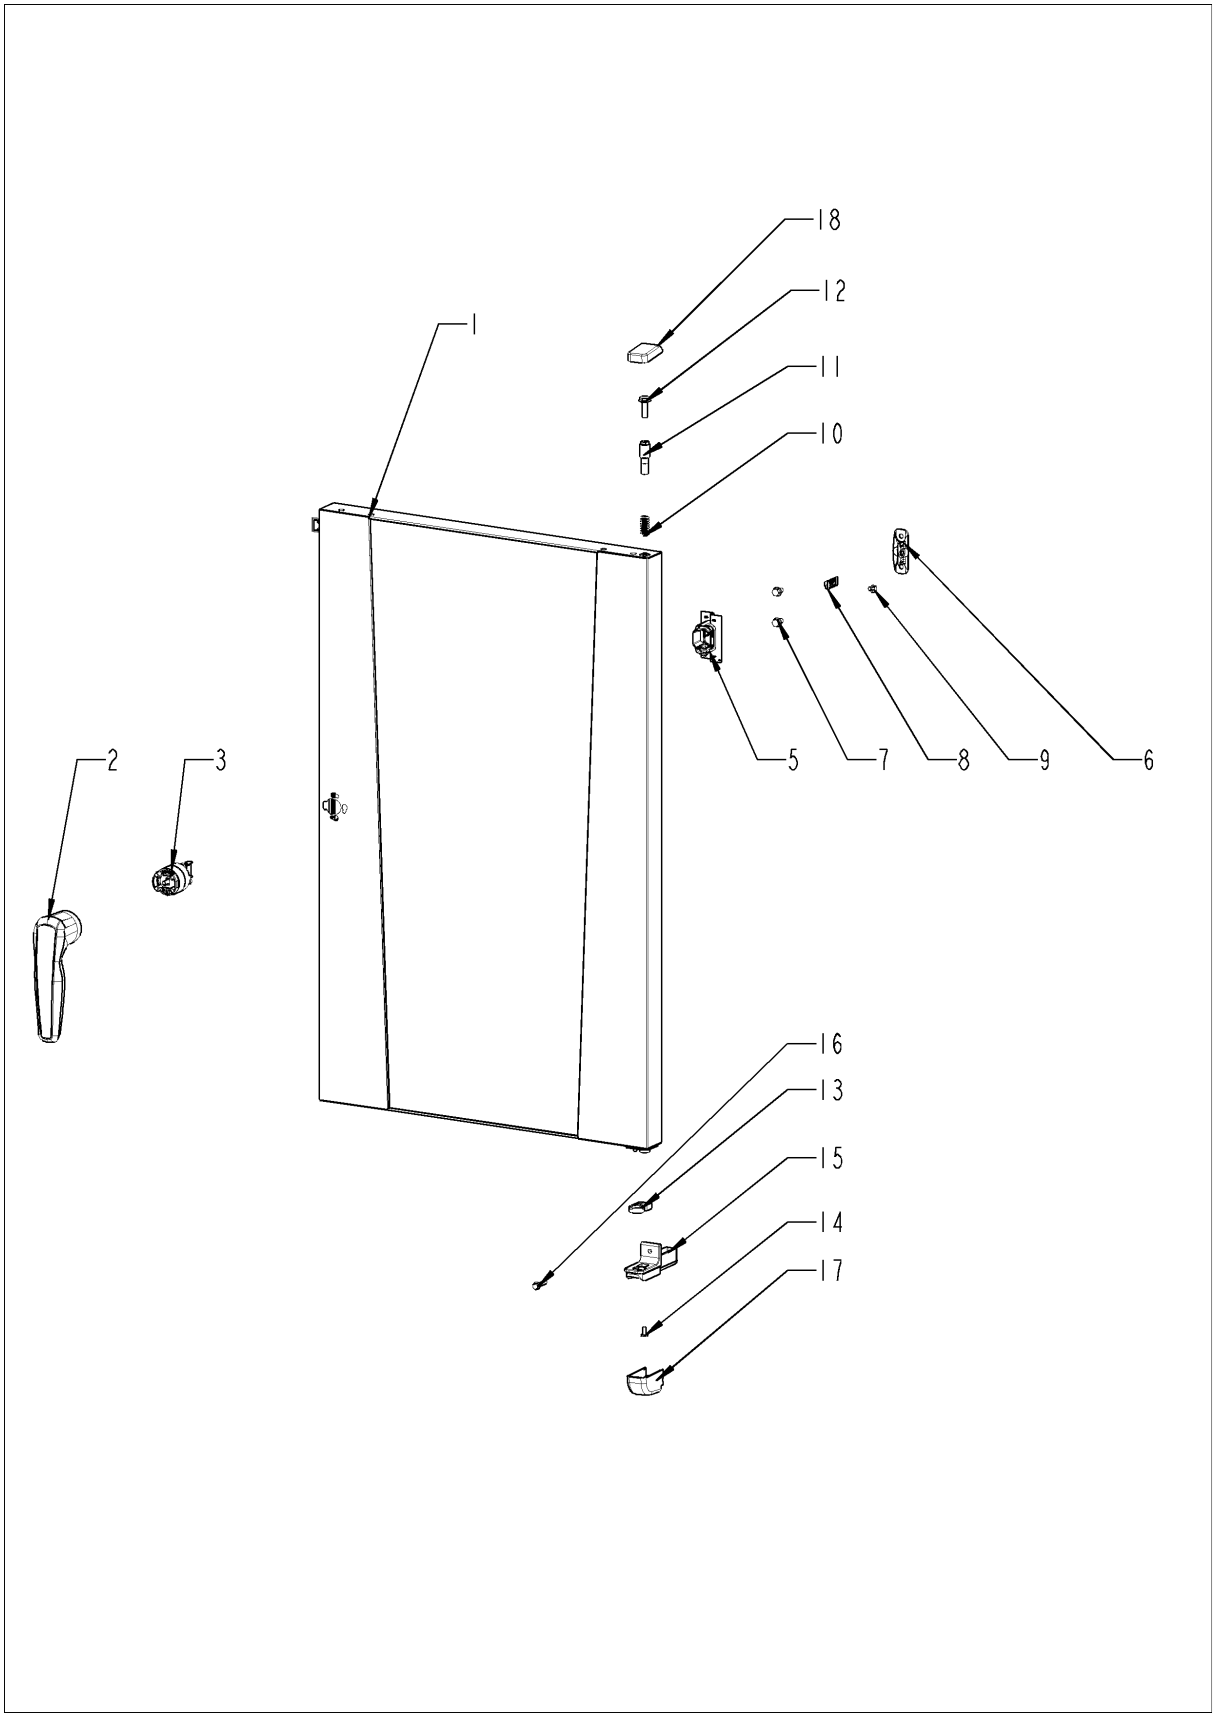

# Door

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 24.04.097S | Door | 1 |
| 2 | 24.04.083P | Door handle RATIONAL | 1 |
| 3 | 24.03.041P | Door lock with spring U-bolt | 1 |
| 5 | 24.04.211P | Lock cover | 1 |
| 6 | 24.02.958P | Holding bracket f. door catch | 1 |
| 7 | 10.01.719P | Hex screw M6x12 | 2 |
| 8 | 24.02.959P | Door catch | 1 |
| 9 | 24.02.960P | Interlocking tooth screw M5x6 | 1 |
| 10 | 2001.0109P | Compression spring | 1 |
| 11 | 24.03.040P | Door bolt | 1 |
| 12 | 1008.0768P | Ornamental screw M8x16 | 1 |
| 13 | 14.01.057P | Door bolt | 1 |
| 14 | 10.00.099P | Hex screw M8x12 | 1 |
| 15 | 14.01.056P | Door mounting support bottom | 1 |
| 16 | 10.01.755P | Countersunk screw M5x20 A2 | 1 |
| 17 | 56.01.429P | Cap for door mounting support bottom | 1 |
| 18 | 16.04.110P | Cover for door mounting support | 1 |


# Door

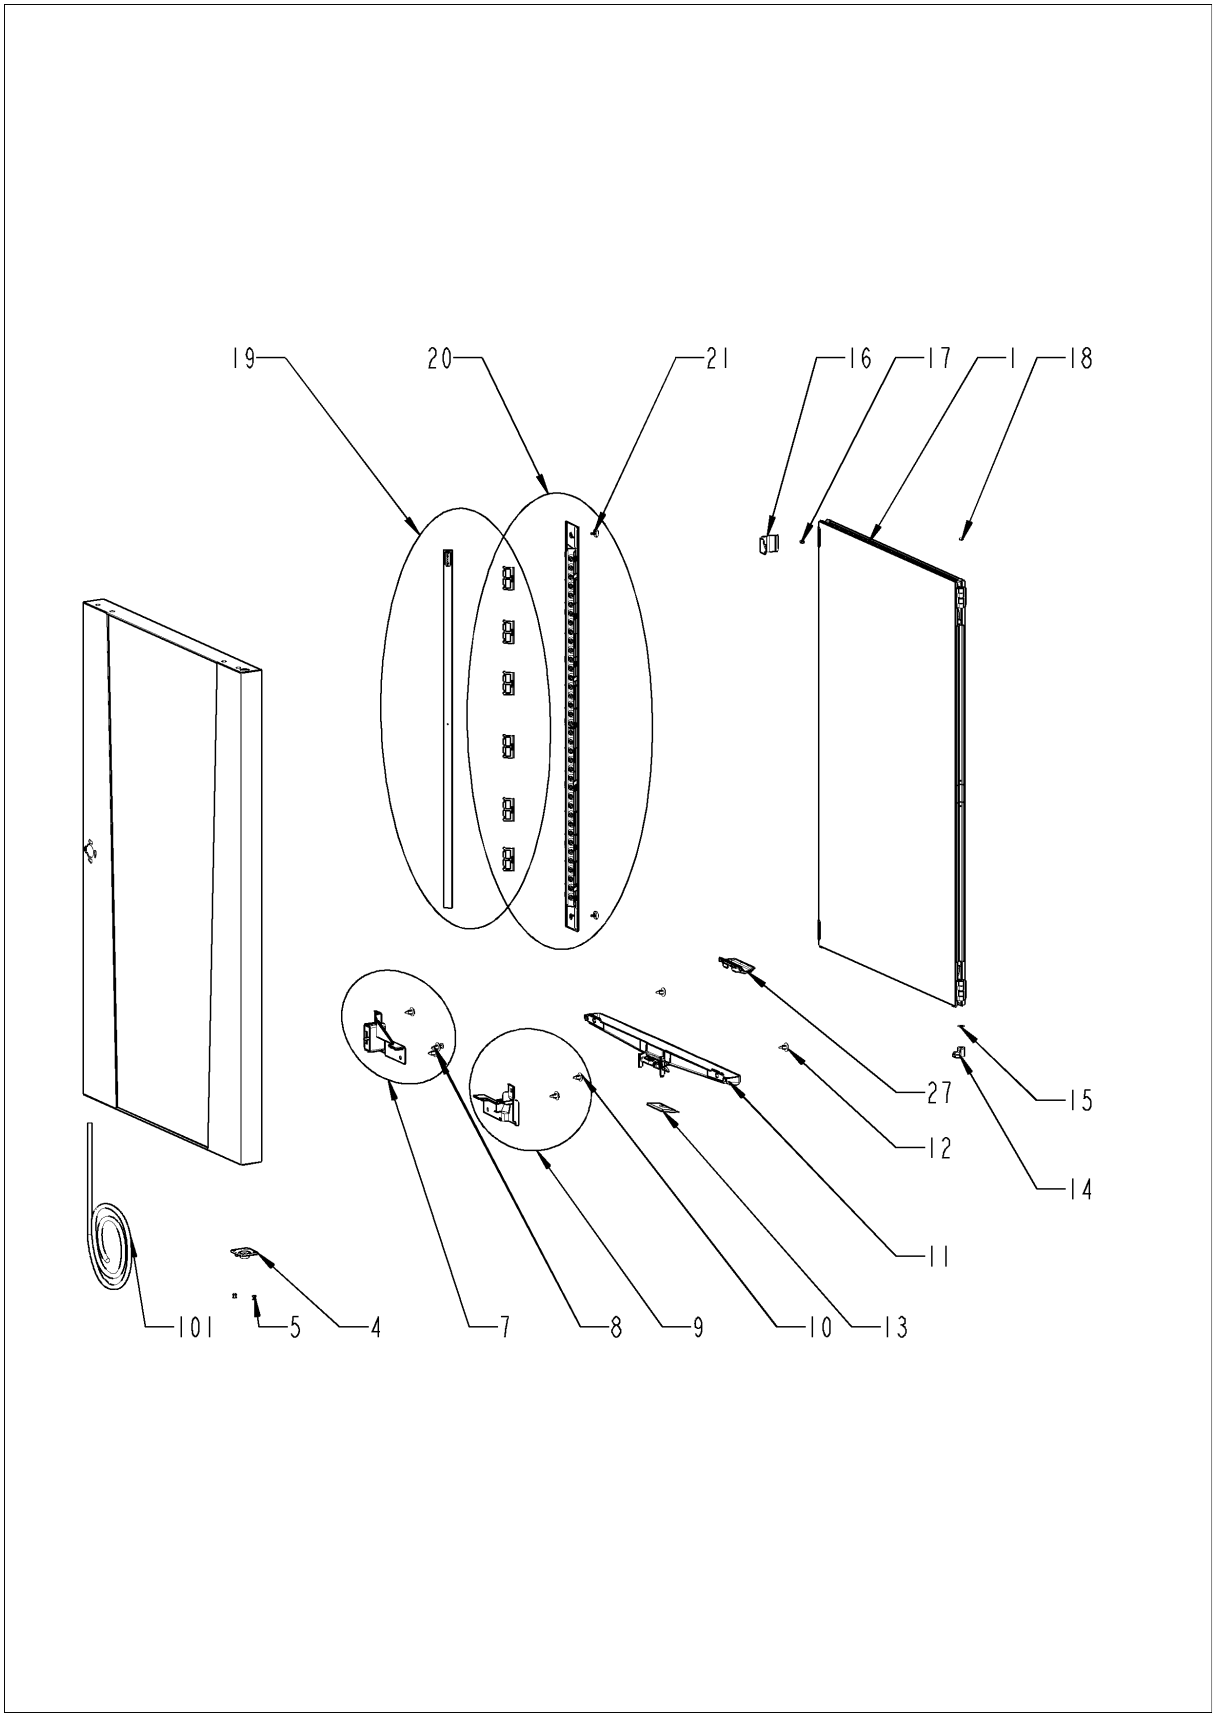

# Door

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 24.04.897S | Glass pane bundle | 1 |
| 4 | 24.04.217P | Door setting bolt | 1 |
| 5 | 10.00.904P | Rivet B4x8 | 2 |
| 7 | 24.04.596S | Cover for door magnet with magnet | 1 |
| 8 | 10.02.008P | Rivet with screw | 2 |
| 9 | 24.05.303S | Hinge cover | 1 |
| 10 | 10.00.989P | Rivet with screw | 2 |
| 11 | 24.05.499S | Door drip collector | 1 |
| 12 | 10.00.989P | Rivet with screw | 2 |
| 13 | 24.05.345P | Drain seal  for door drip collector | 1 |
| 14 | 24.03.056P | Slide bush for door | 1 |
| 15 | 24.03.057P | Abrasion protection for glide socket | 1 |
| 16 | 24.03.787S | Fixing bracket kit for interior glass pane | 2 |
| 17 | 1604.0161P | Rivet 4x6 CNS | 1 |
| 18 | 24.03.062P | Cover cap for door | 1 |
| 19 | 87.01.581S | LED bar | 2 |
| 20 | 87.01.582S | LED optics | 2 |
| 21 | 24.05.458P | Plastic spreader rivet | 4 |
| 22 | 24.03.764P | Spacer for door | 1 |
| 27 | 24.05.501P | Slosh protection | 1 |
| 101 | 40.06.078P | Cable, interior light W40 *door lighting* | 1 |


# Exterior cabinet

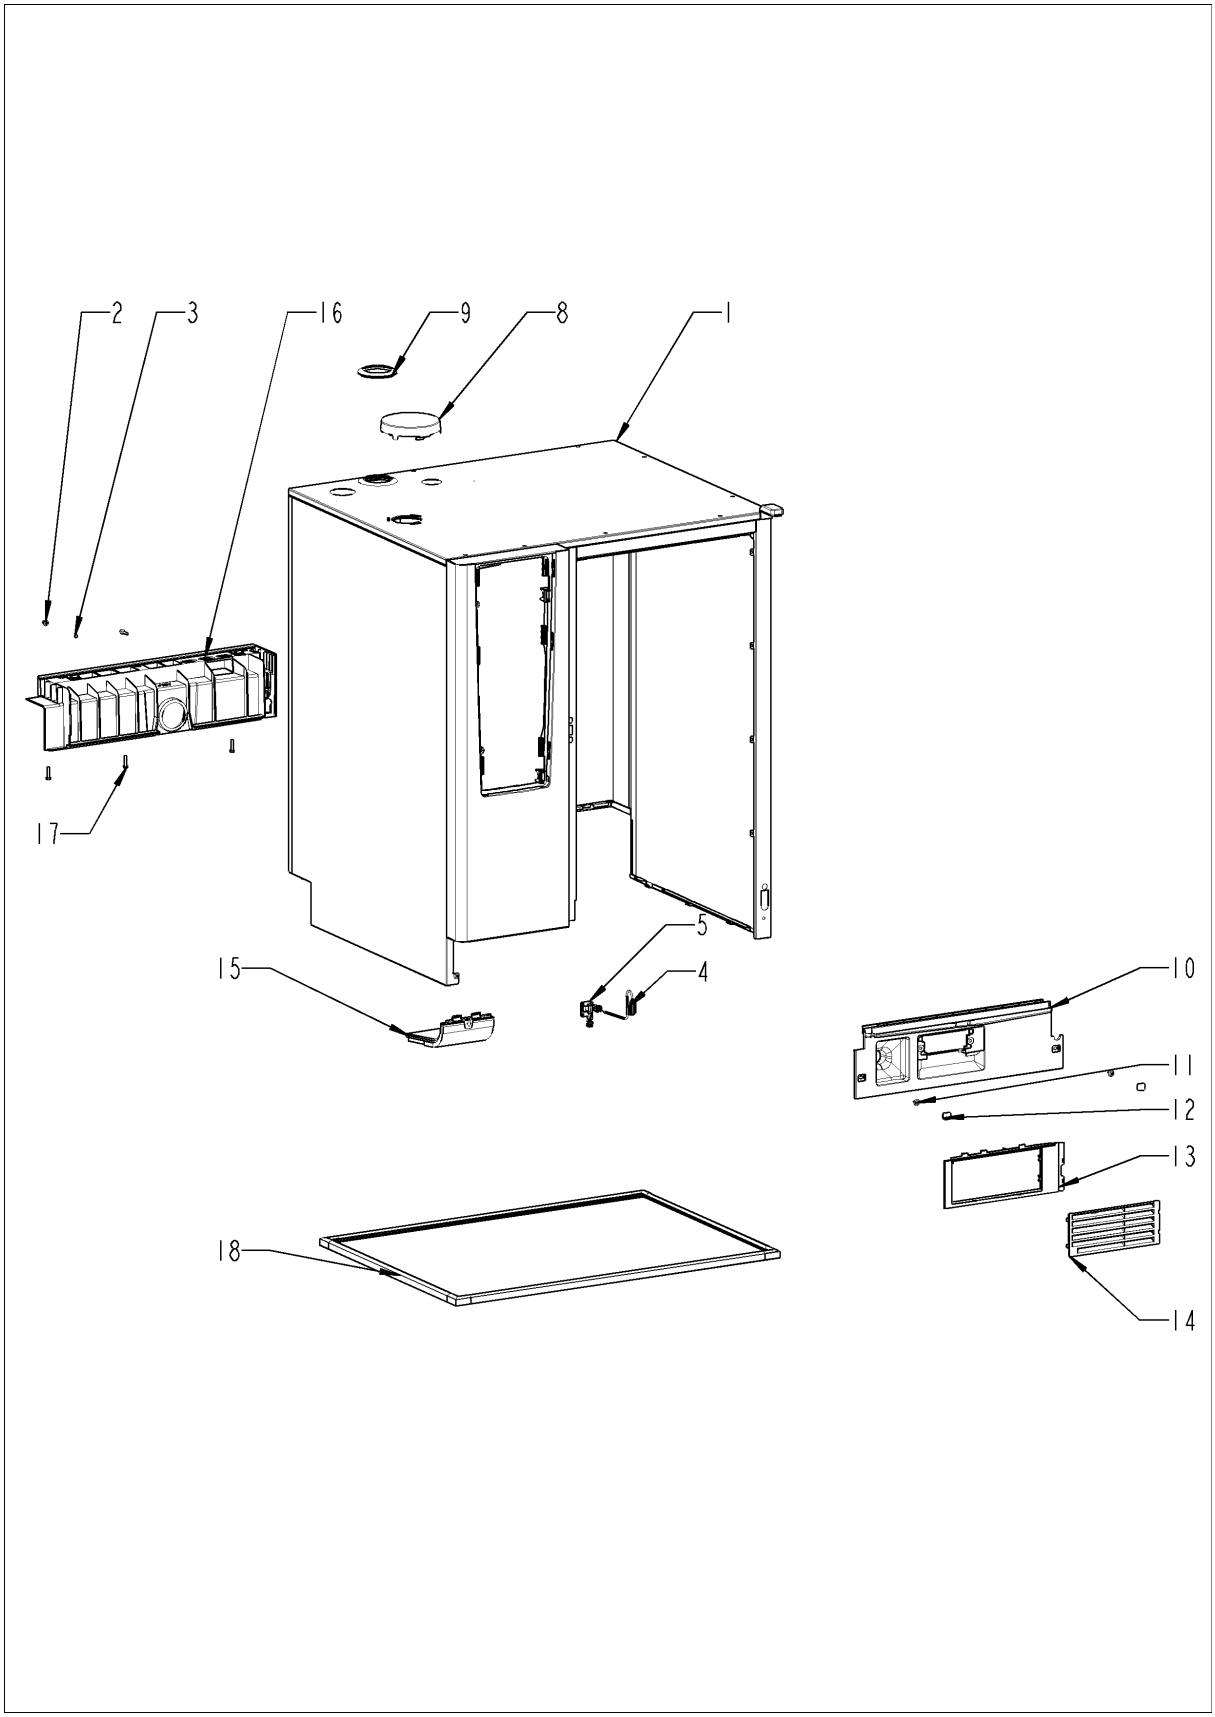

# Exterior cabinet

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | | Exterior cabinet | 1 |
| 2 | 10.01.076P | Cap nut M5*A2 | 1 |
| 3 | 1205.0120P | Tooth lock washer A5,3 | 1 |
| 4 | 40.06.664P | Door switch | 1 |
| 5 | 14.00.937P | Bracket for door contact switch | 1 |
| 8 | 22.01.409P | Vent cover | 1 |
| 9 | 16.01.434P | Gasket for venting tube d=73mm | 1 |
| 10 | 56.01.208P | Base panel right | 1 |
| 11 | 10.00.989P | Rivet with screw | 4 |
| 12 | 56.01.419P | Plastic cap | 2 |
| 13 | 56.01.432P | Base panel left | 1 |
| 14 | 56.01.422P | Grid cover | 1 |
| 15 | 40.05.424P | Air inlet filter cpl. | 1 |
| 16 | 56.01.521P | Waste water cover | 1 |
| 17 | 10.01.755P | Countersunk screw M5x20 A2 | 3 |
| 18 | 12.02.664P | Gasket for base frame | 1 |


# Exterior cabinet

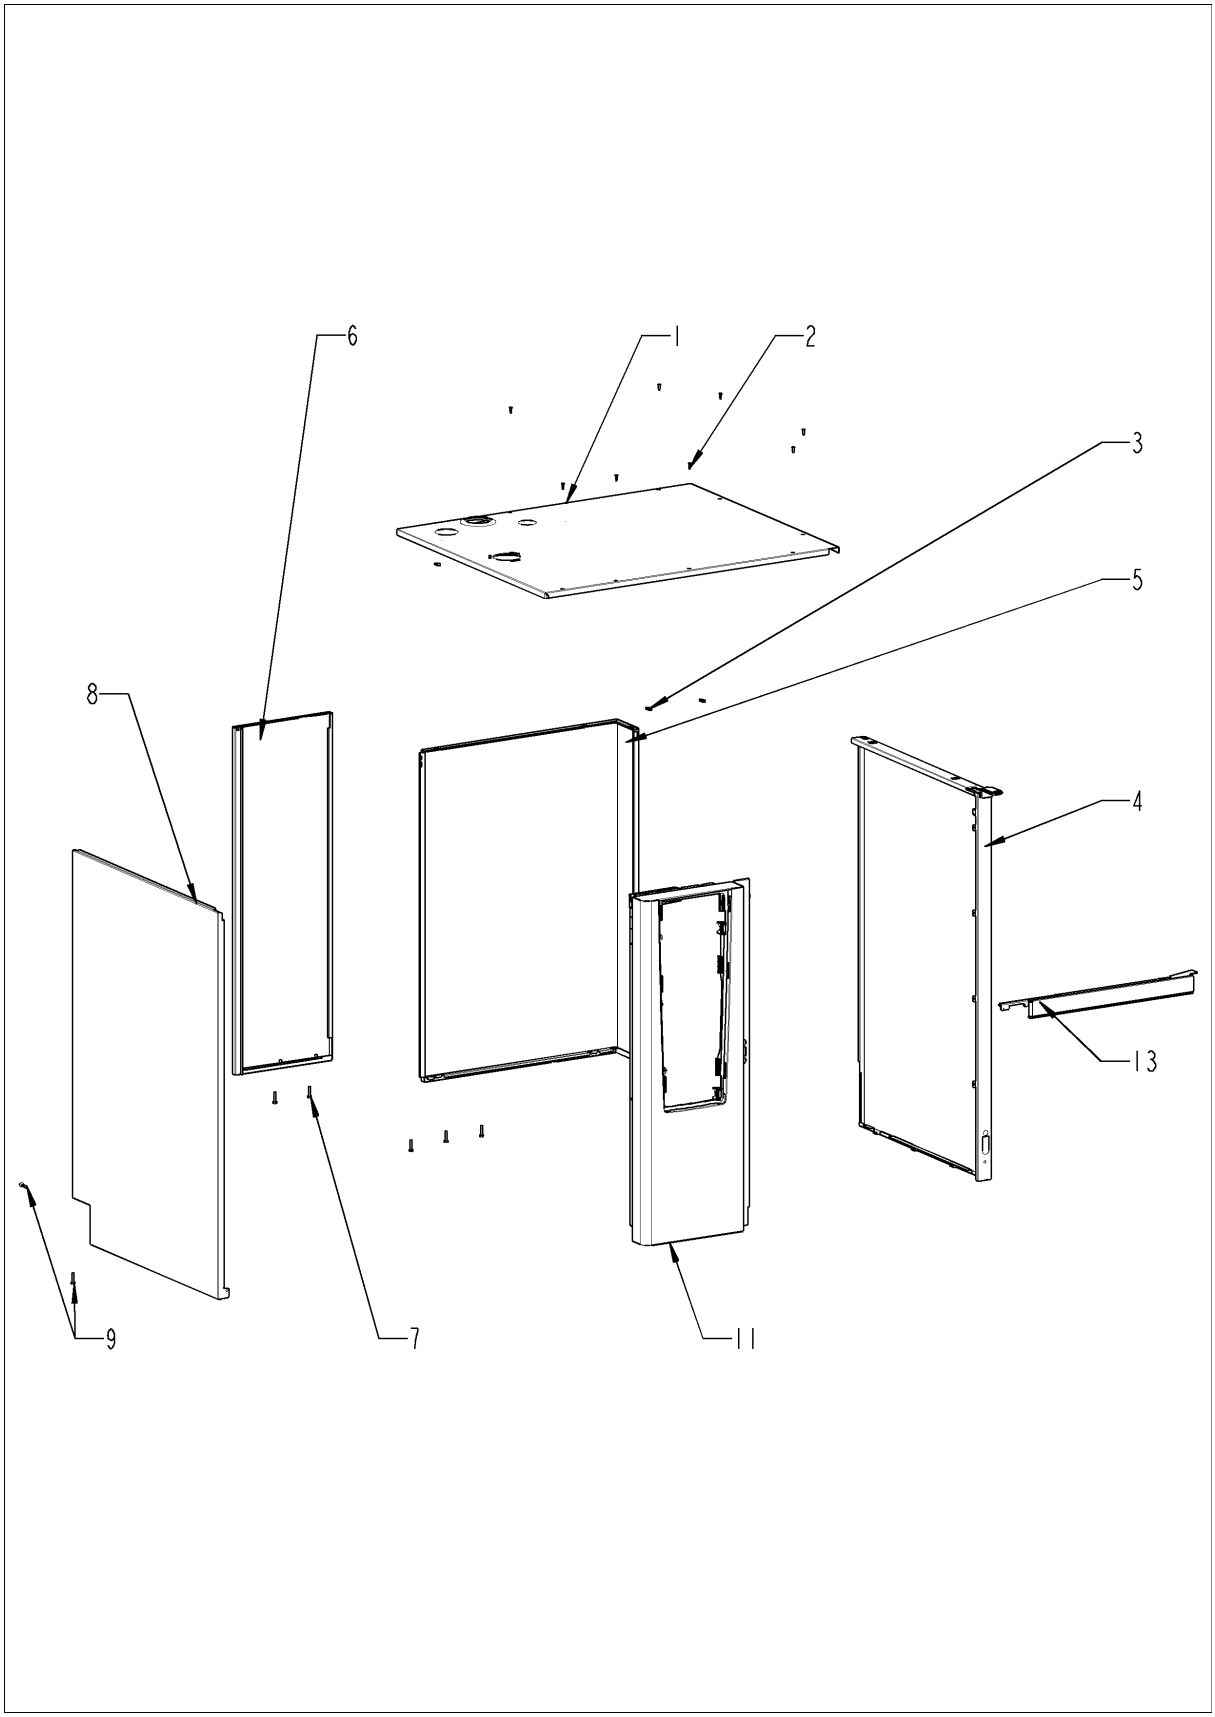

# Exterior cabinet

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 16.03.398P | Top cover | 1 |
| 2 | 1003.2265P | Countersunk self tapping screw 4,2x16 | 8 |
| 3 | 1104.0820P | Snap nut 4,2mm | 8 |
| 4 | 16.04.077P | Side panel right | 1 |
| 5 | 16.04.086P | Back panel, right | 1 |
| 6 | 16.03.394P | Back panel, left | 1 |
| 7 | 10.01.755P | Countersunk screw M5x20 A2 | 2 |
| 8 | 16.03.397P | Side panel left | 1 |
| 9 | 10.01.755P | Countersunk screw M5x20 A2 | 2 |
| 11 | 16.03.631P | Front panel | 1 |
| 13 | 16.04.091P | Crossbar top | 1 |


# Water

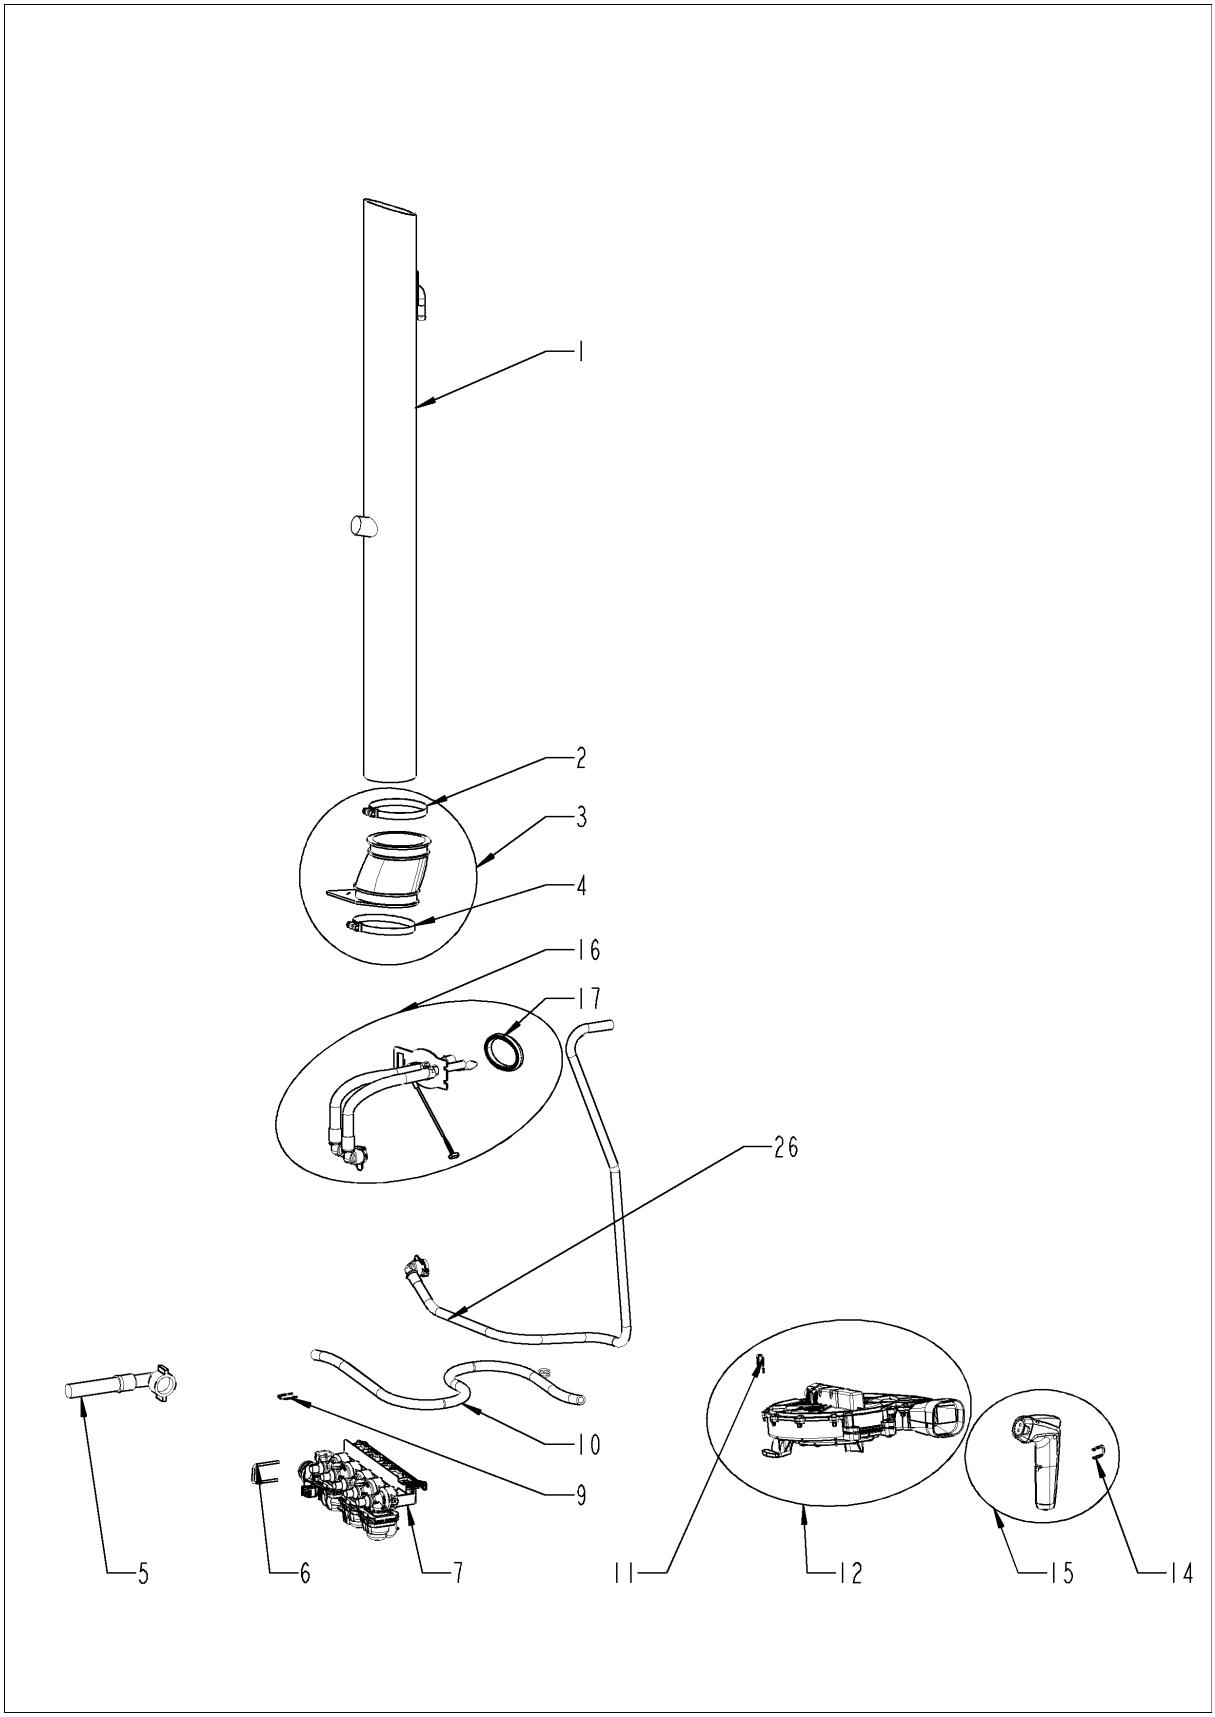

# Water

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 54.01.928P | Ventilation pipe | 1 |
| 2 | 10.01.262P | Hose clamp 76 mm | 1 |
| 3 | 54.01.729S | Rubber form piece venting pipe | 1 |
| 4 | 10.01.686P | Hose clamp Ø82mm | 1 |
| 5 | 2067.0709P | Hose for water supply 2500mm | 1 |
| 6 | 50.02.112P | Locking plate f. water distribution | 1 |
| 7 | 50.02.054P | Solenoid valve fivefold | 1 |
| 9 | 50.00.085P | Plug-in spring f. hand shower roll guide | 1 |
| 10 | 52.00.106S | Connect. hose f. hand shower roll guide | 1 |
| 11 | 50.00.085P | Plug-in spring f. hand shower roll guide | 1 |
| 12 | 52.00.096P | Hand shower roll guide | 1 |
| 14 | 50.00.156P | Clamp f. hand shower roll guide | 1 |
| 15 | 52.00.127S | Hand shower black | 1 |
| 16 | 54.01.862S | Inspection lid, B2 | 1 |
| 17 | 54.01.168P | Gasket f. inspection lid | 1 |
| 26 | 50.02.144P | Supply hose for moistening | 1 |
| 27 | 2066.0205P | Hose clamp 8-16x9 mm SW 7mm | 2 |


# CleanJet + Care

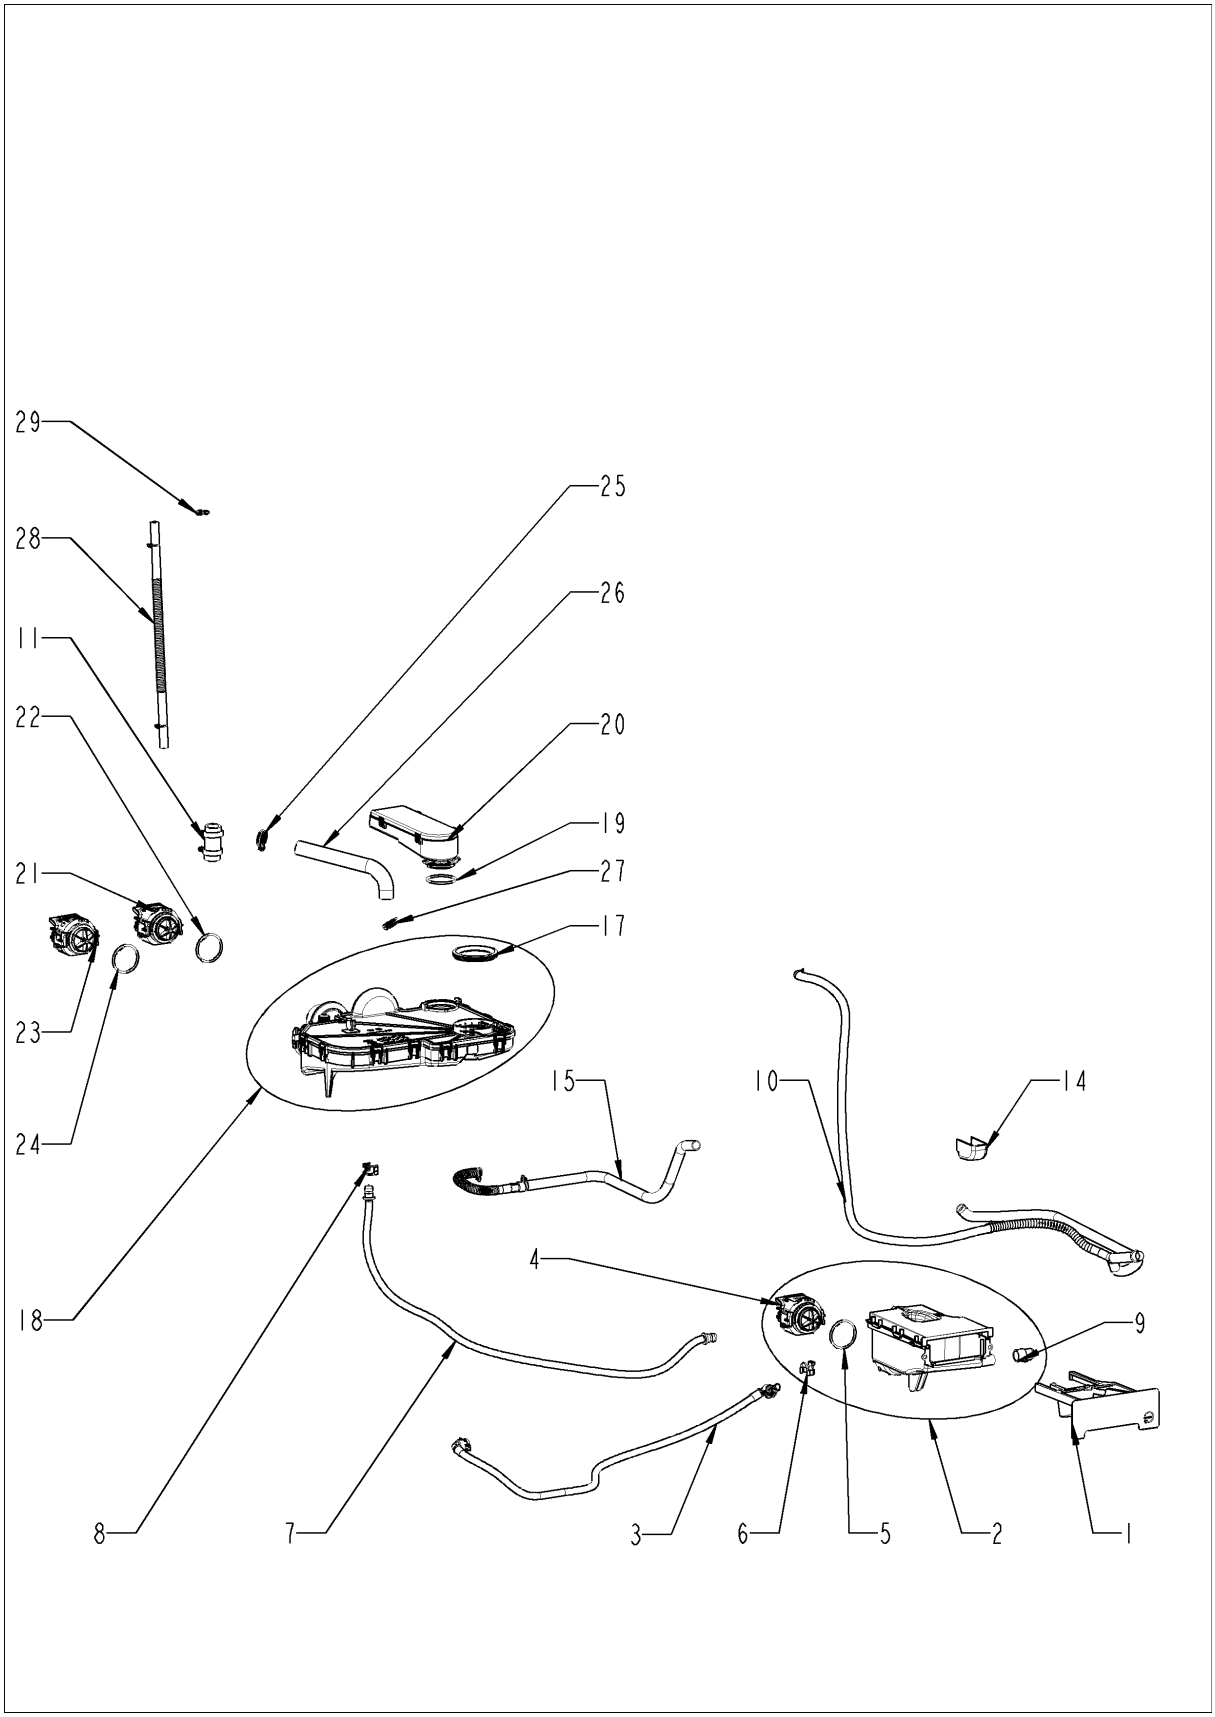

# CleanJet + Care

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 56.00.952P | Drawer Care container | 1 |
| 2 | 56.01.466P | Care container with pump | 1 |
| 3 | 50.02.131P | Supply hose for "Care box" | 1 |
| 4 | 56.01.028P | Pump f. CareControl | 1 |
| 5 | 56.01.631P | O-ring for pump | 1 |
| 6 | 10.01.703P | Locking ring 16 mm | 1 |
| 7 | 56.01.506S | Care hose | 1 |
| 8 | 10.01.703P | Locking ring 16 mm | 1 |
| 9 | 56.00.752P | Hose fitting EPDM-70ShA | 1 |
| 10 | 56.01.518P | Drain hose set, humidity control, unit drip collector | 1 |
| 11 | 56.01.682S | Bushing CleanJet pipe | 1 |
| 14 | 56.01.245P | Cap for door mounting support bottom | 1 |
| 15 | 56.01.730P | Drain hose drip collector | 1 |
| 16 | 10.00.982P | Hose clamp D=18.2 | 1 |
| 17 | 56.01.461P | Gasket DN60 | 1 |
| 18 | 56.01.486P | Cleaning box | 1 |
| 19 | 56.01.481P | O Ring emergency overflow | 1 |
| 20 | 56.01.454S | Emergency overflow cleaning box | 1 |
| 21 | 56.01.017P | Waste water pump Cleaning box | 1 |
| 22 | 56.01.631P | O-ring for pump | 1 |
| 23 | 56.01.020P | Pump f. cleaning | 1 |
| 24 | 56.01.631P | O-ring for pump | 1 |
| 25 | 2066.0521P | Hose clamp 27mm | 1 |
| 26 | 56.01.792P | CleanJet hose | 1 |
| 27 | 2066.0521P | Hose clamp 27mm | 1 |
| 28 | 56.01.688S | Silicone hose with hose clamps | 1 |
| 29 | 2066.0527P | Hose clamp ø14mm | 1 |


# Gas parts

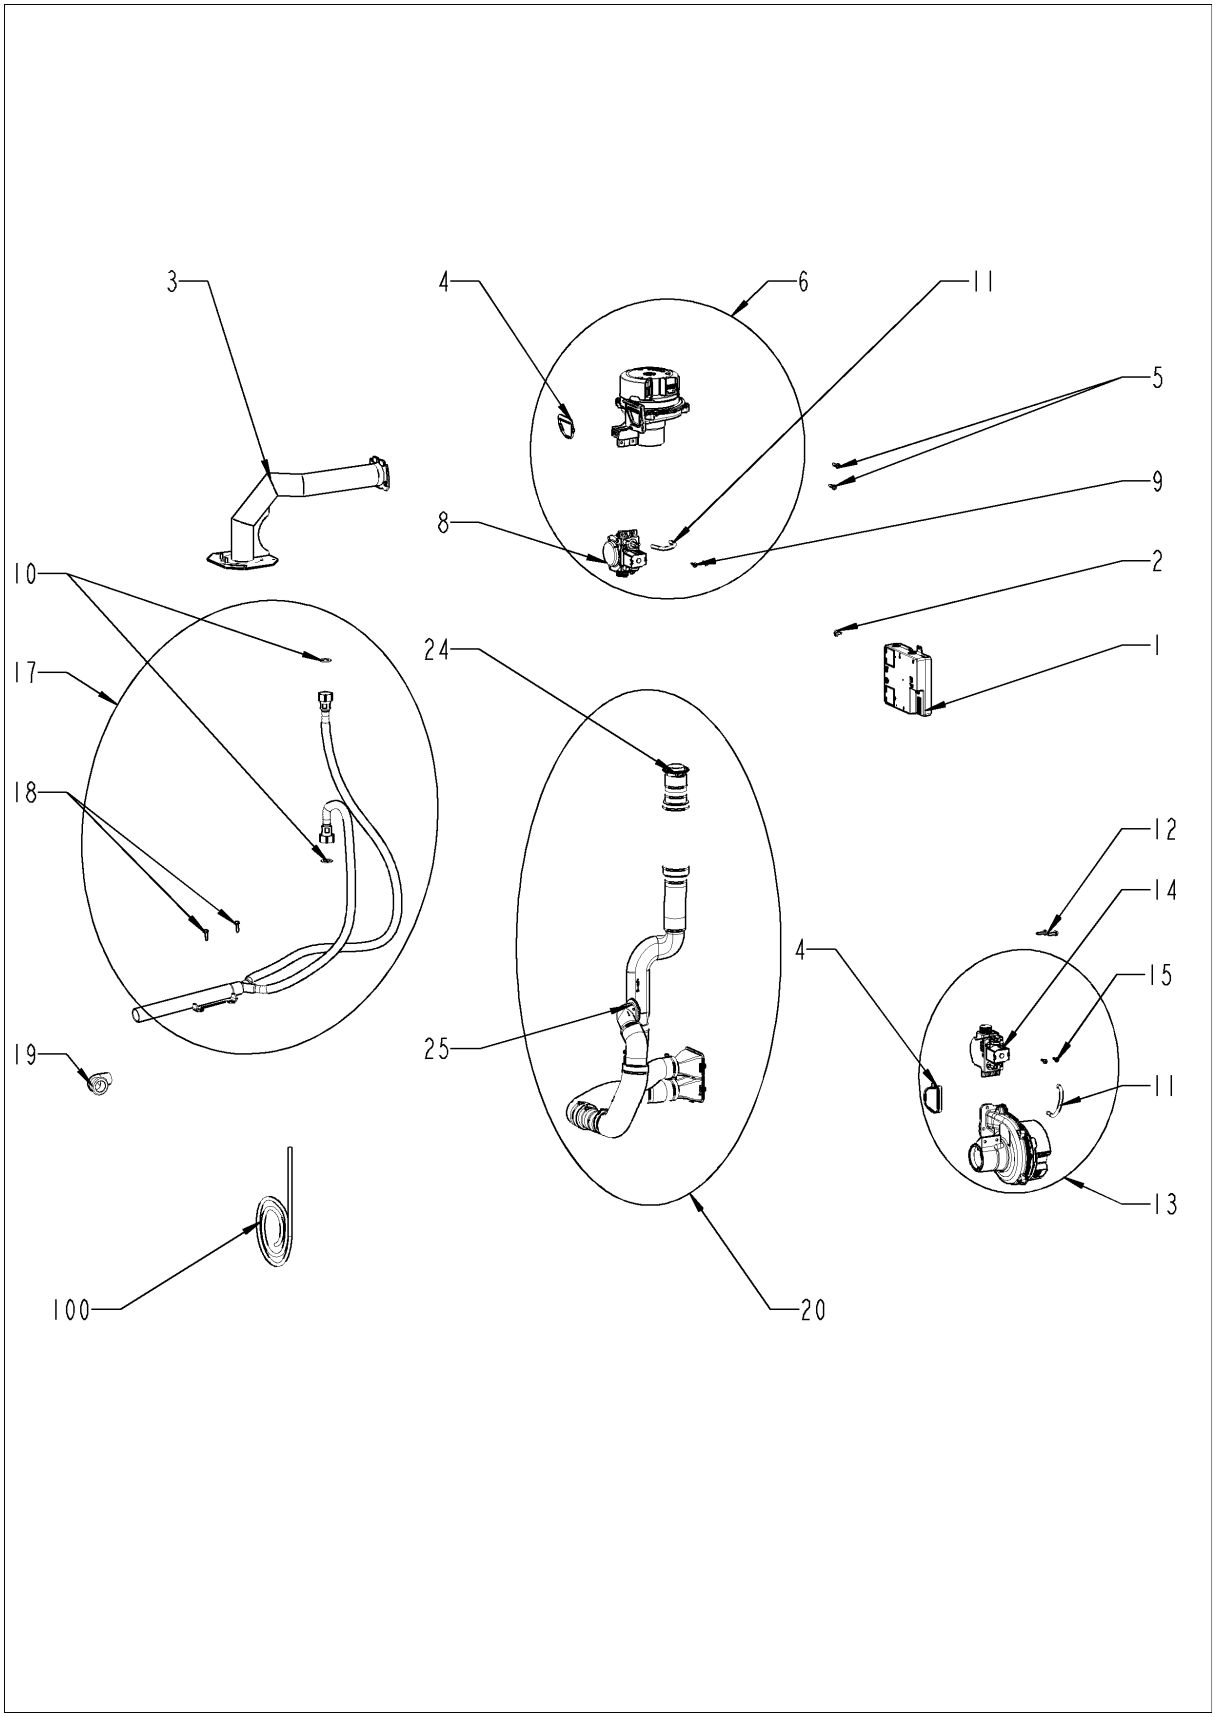

# Gas parts

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 70.01.205S | Automatic ignition controller | 1 |
| 2 | 10.00.989P | Rivet with screw | 1 |
| 3 | 70.01.067P | Burner pipe | 1 |
| 4 | 70.01.148P | Gasket f. blower burner | 2 |
| 5 | 10.01.747P | Hex screw M5x19 Torx T20 | 2 |
| 6 | 70.01.427P | Gas blower / gas valve kit | 1 |
| 8 | 87.01.644S | Gas valve E01 | 1 |
| 9 | 10.01.902P | Truss head screw Torx M5X12 T25 | 2 |
| 10 | 70.01.622P | Gasket corrugated hose | 2 |
| 11 | 70.01.268P | Connection compensation tube | 1 |
| 12 | 10.01.747P | Hex screw M5x19 Torx T20 | 2 |
| 13 | 70.01.426P | Gas blower / gas valve kit | 1 |
| 14 | 87.01.644S | Gas valve E01 | 1 |
| 15 | 10.01.902P | Truss head screw Torx M5X12 T25 | 2 |
| 17 | 70.01.607S | Gas connection manifold | 1 |
| 18 | 10.01.755P | Countersunk screw M5x20 A2 | 2 |
| 19 | 70.00.188P | Hose fitting 3/4"-3/4" | 1 |
| 20 | 70.01.328P | Air supply, hot air | 1 |
| 24 | 70.01.167P | Air hose adapter straight DN40 | 1 |
| 25 | 70.01.168P | Air hose adapter 90° DN40 | 1 |
| 100 | 87.01.737S | Wire set earth - ignition electrode | 1 |


# Standard accessory

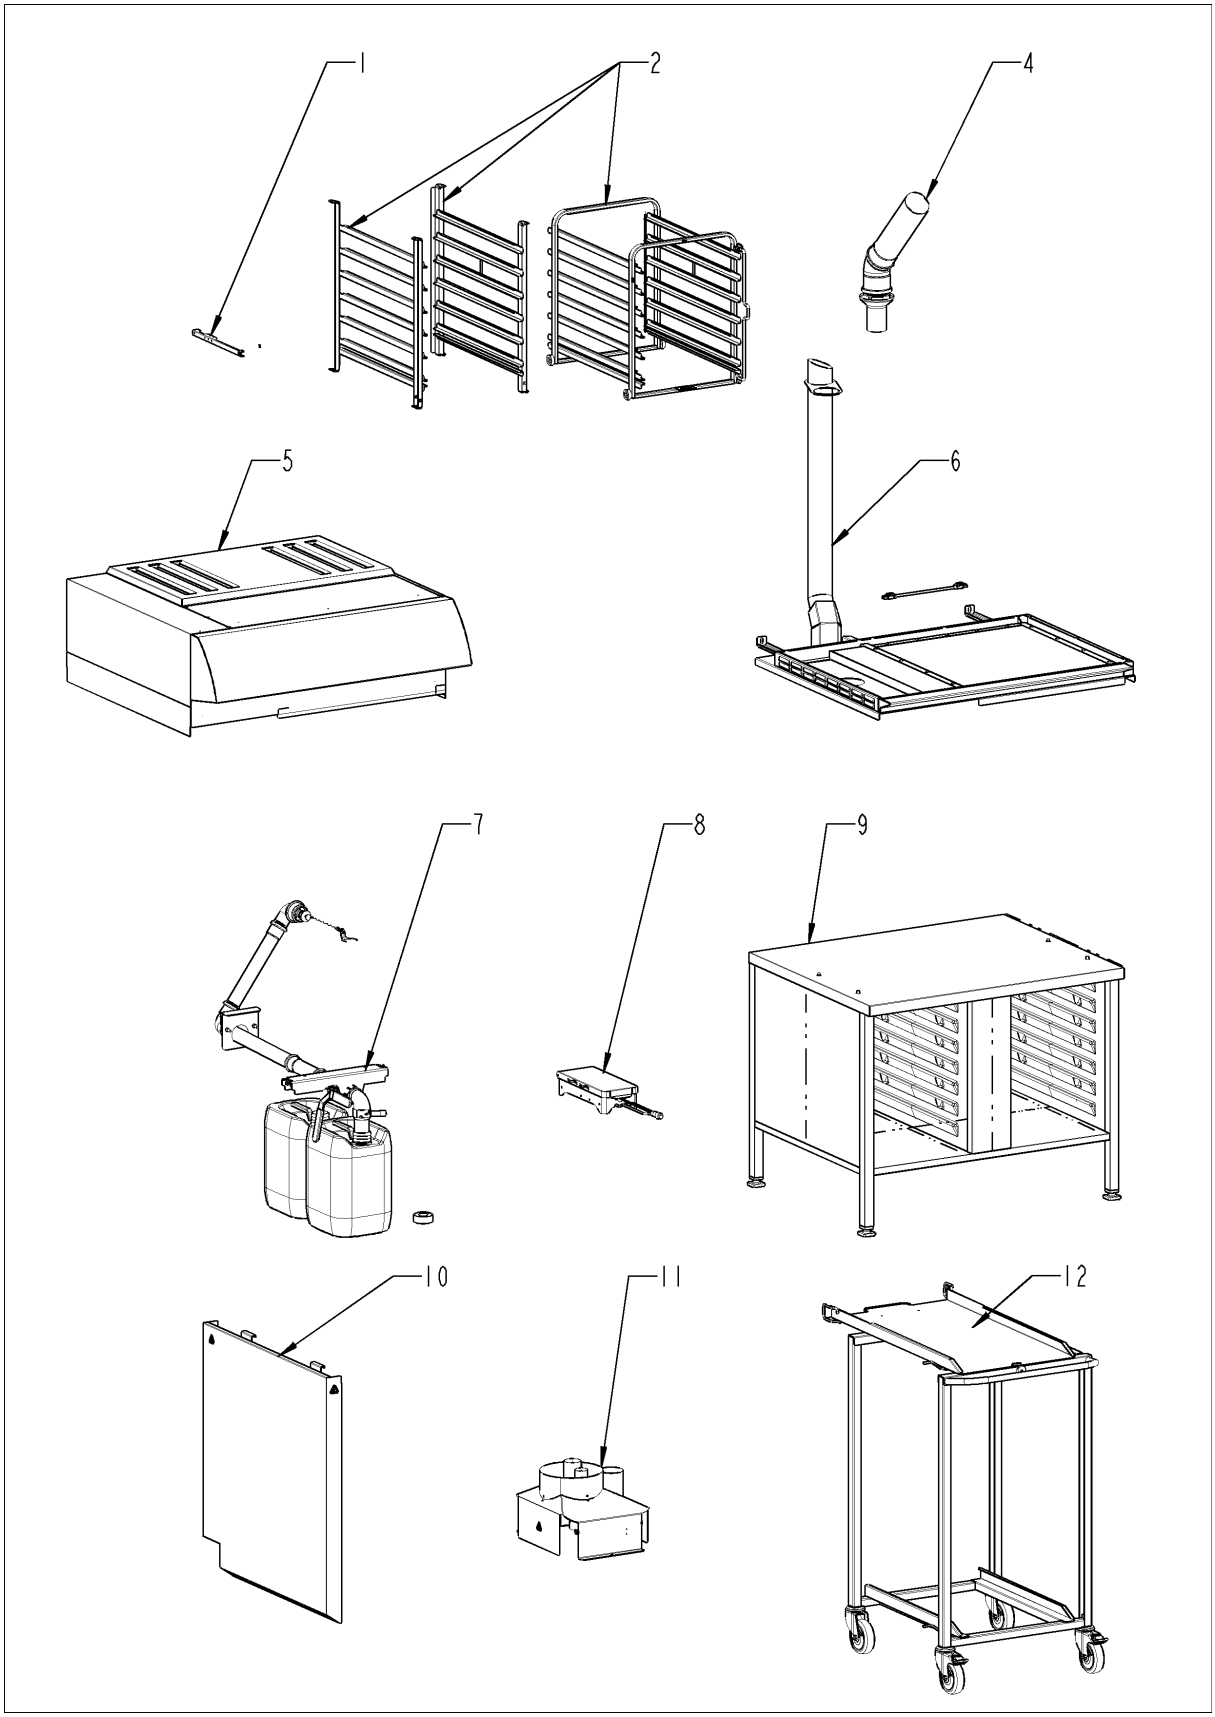

# Standard accessory

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.71.022 | Positioning support for core sensor | 1 |
| 2 | 60.11.447 | Hinging rack Typ 10-1/1, | 1 |
| 4 | 60.72.592 | Condensation breaker | 1 |
| 5 | | Exhaust hood | 1 |
| 6 | | CombiDuo | 1 |
| 7 | | Internal fat drain table unit | 1 |
| 8 | | VarioSmoker | 1 |
| 9 | | Stands | 1 |
| 10 | | Heat shield | 1 |
| 11 | | Flow guard | 1 |
| 12 | | Transport trolley | 1 |
| 20 | | Repair and retrofit kit | 1 |


# Exhaust hood

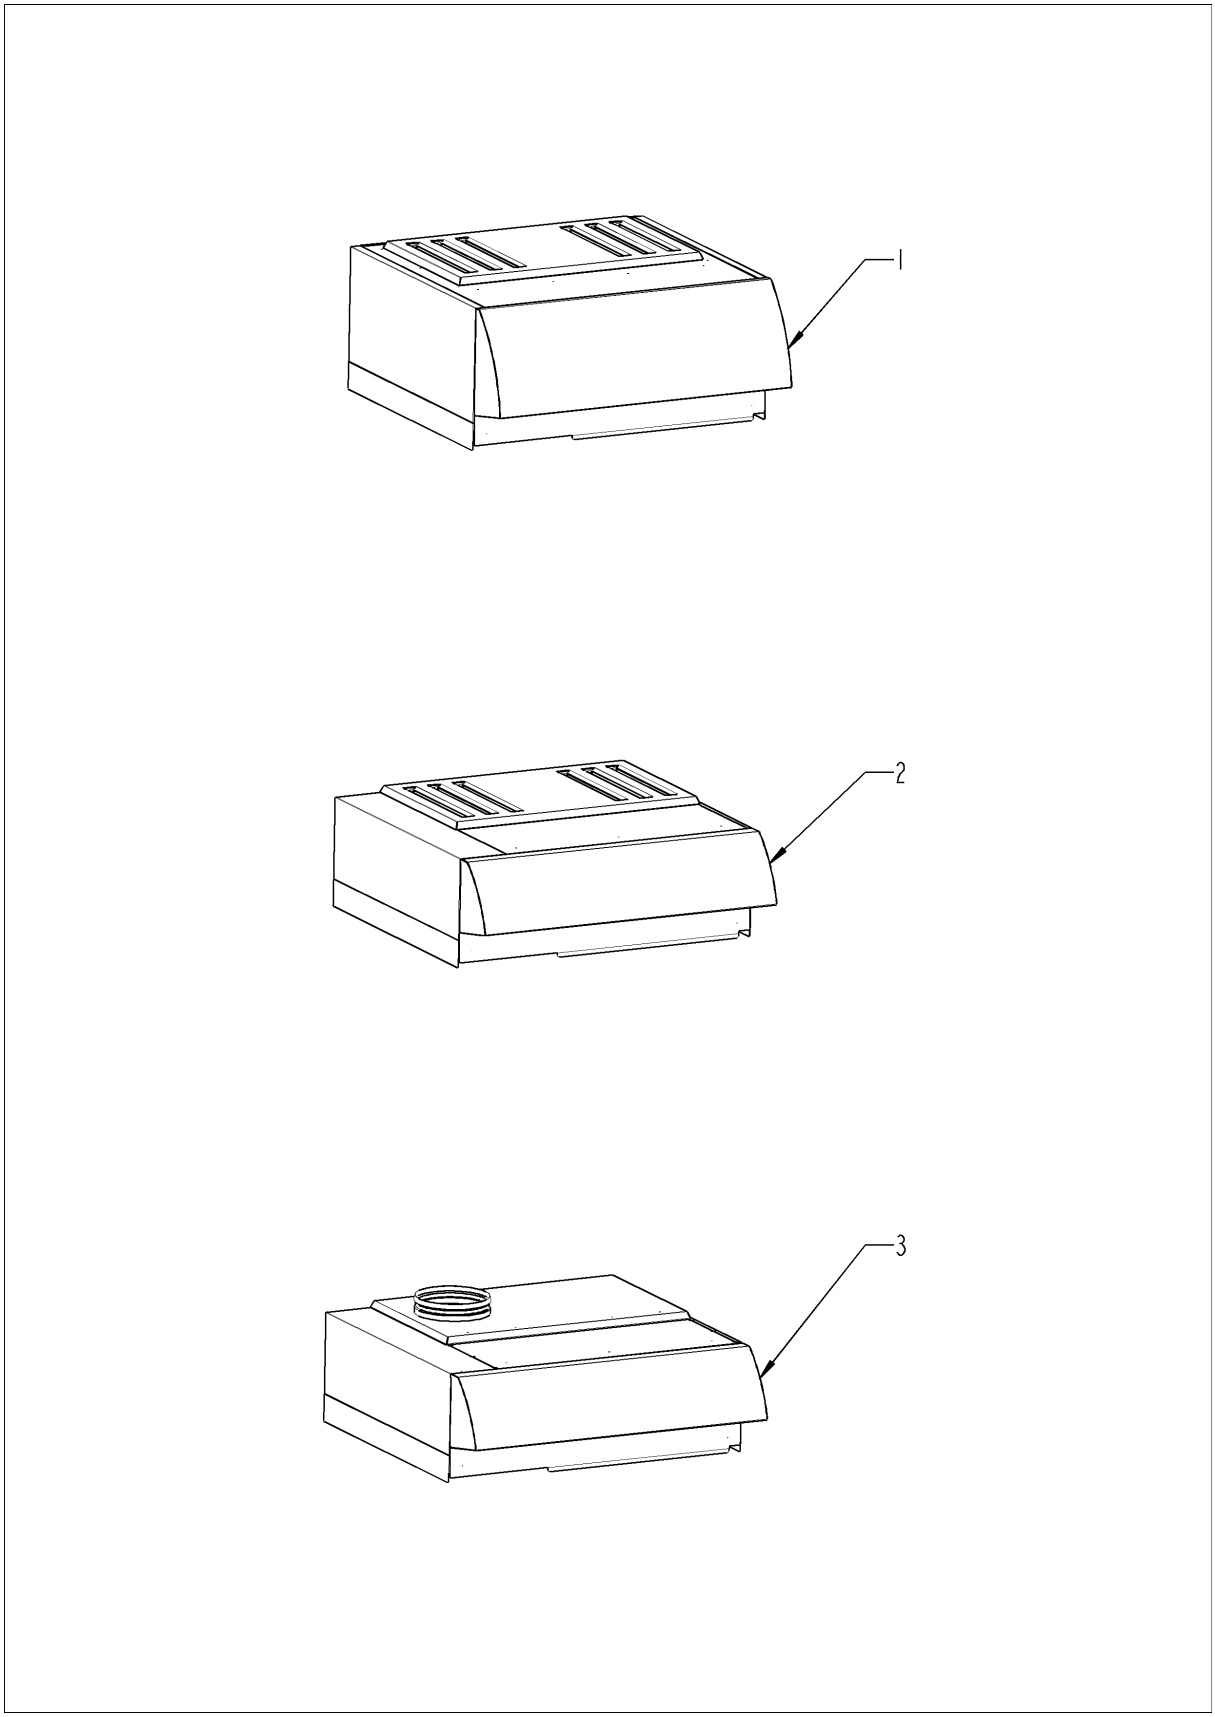

# Exhaust hood

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | | UltraVent Plus | 1 |
| 2 | | UltraVent | 1 |
| 3 | | Extractor hood | 1 |


# UltraVent Plus

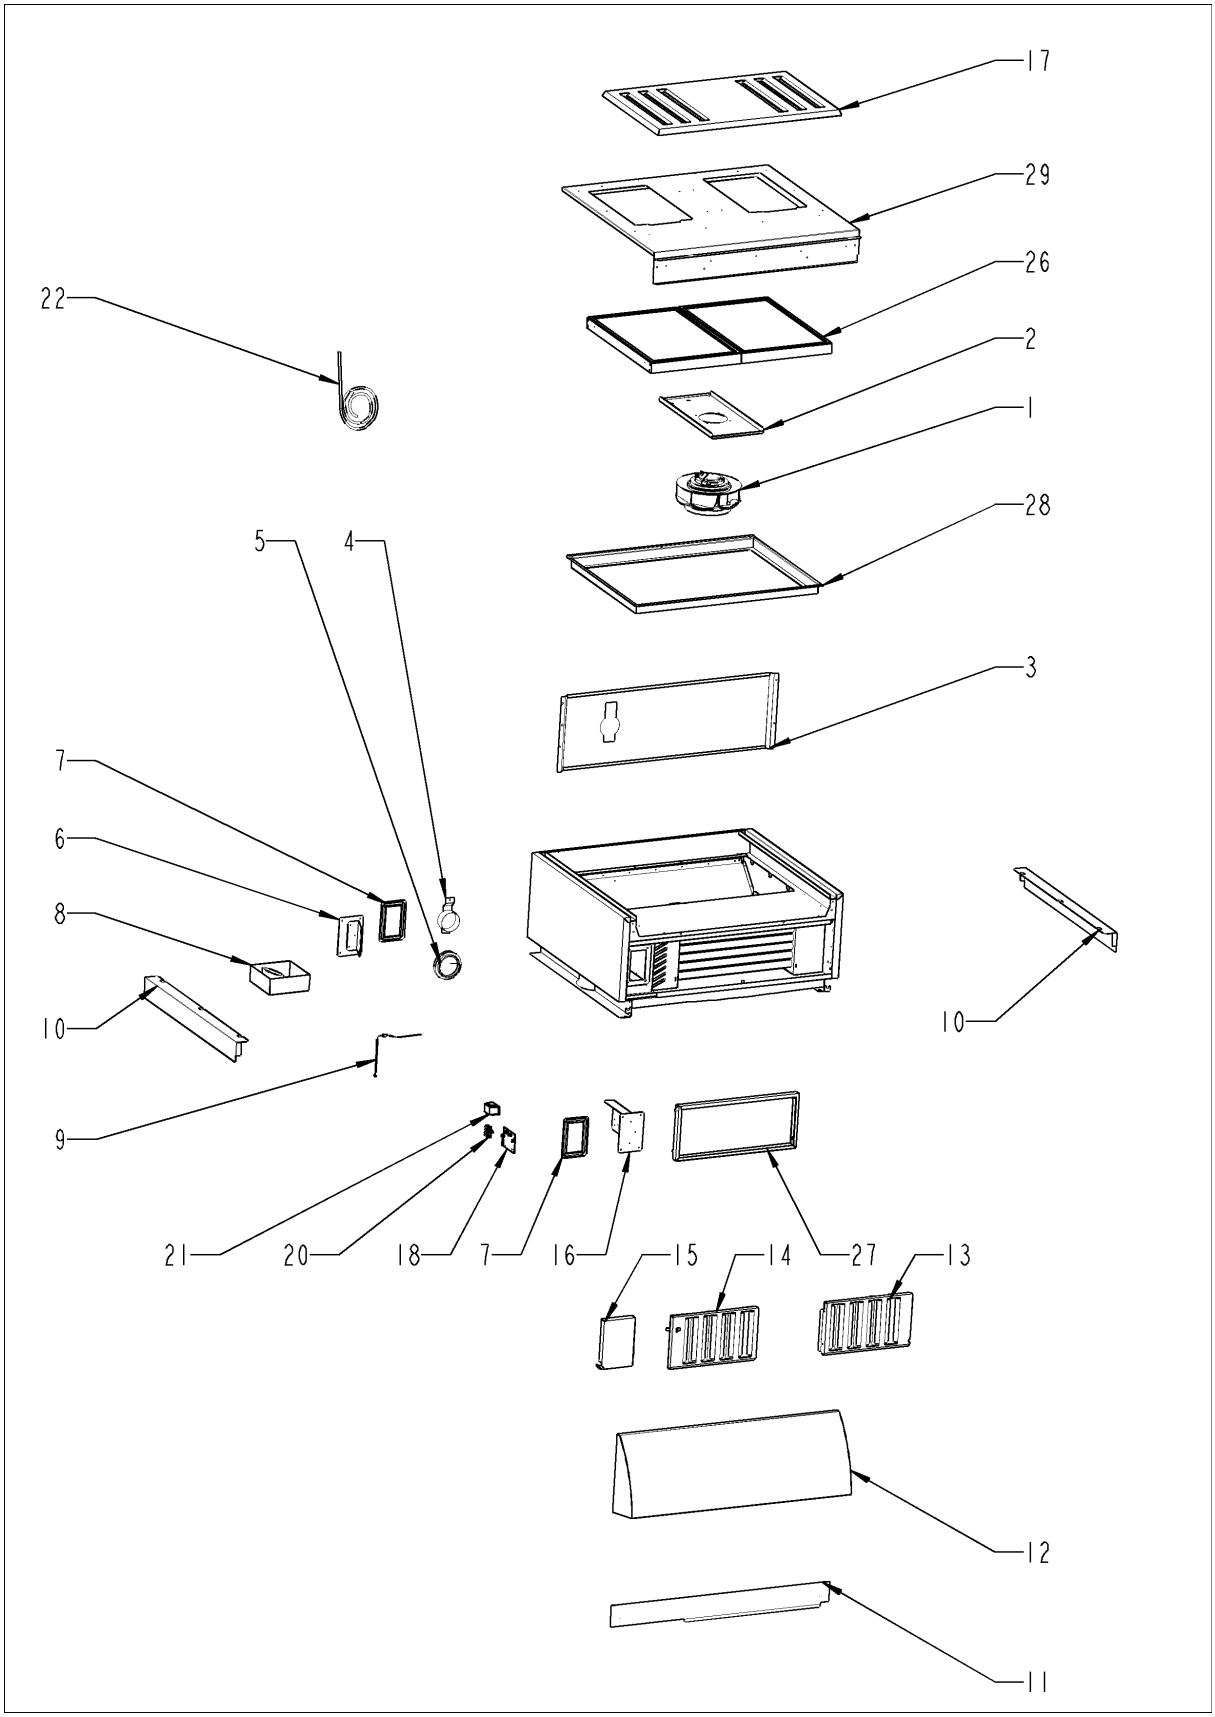

# UltraVent Plus

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.74.890S | Blower motor for Ultravent | 1 |
| 1 | 60.74.889S | Blower motor for Ultravent | 1 |
| 2 | 60.75.179S | Motor mounting plate | 1 |
| 3 | 60.75.216S | Heat protection plate | 1 |
| 4 | 60.75.215S | Closure Combi-Duo 70mm | 1 |
| 5 | 60.75.156P | Gasket 70mm | 1 |
| 6 | 60.75.171S | Electrical box cover back | 1 |
| 7 | 60.75.212P | Electrical box seal | 1 |
| 8 | 60.75.160P | Condensate collector 70mm | 1 |
| 9 | 40.05.995P | Thermocouple | 1 |
| 10 | 60.75.170P | side panels | 1 |
| 11 | 60.75.173S | Front panel | 1 |
| 12 | 60.75.198S | Front hood | 1 |
| 13 | 60.75.183P | Baffle plate filter right | 1 |
| 14 | 60.75.200P | Baffle plate filter left | 1 |
| 15 | 60.75.209P | Electrical box cover | 1 |
| 16 | 60.75.175S | Electric box cover front | 1 |
| 17 | 60.76.572S | IPX5 Coverage | 1 |
| 18 | 42.00.308S | Control pcb UltraVent | 1 |
| 19 | 60.76.574P | spacer CPU | 1 |
| 20 | 60.76.447S | Connection terminal | 1 |
| 21 | 60.76.448S | Power chokes | 1 |
| 21 | 60.76.449P | Capacitors | 1 |
| 22 | 40.06.597P | Bus cable | 1 |
| 24 | 87.01.781S | Thermocouple | 1 |
| 26 | 60.75.210P | HEPA filtert | 1 |
| 27 | 60.75.213P | Prefilter metal mesh | 1 |
| 28 | 60.76.528S | Pressure frame HEPA filtert | 1 |
| 29 | 60.76.527S | filter cassette clp. | 1 |
| 30 | 42.00.309S | Adapter pcb f. UVP | 1 |
| 31 | 60.75.211P | Hose set Filter detection | 1 |


# UltraVent

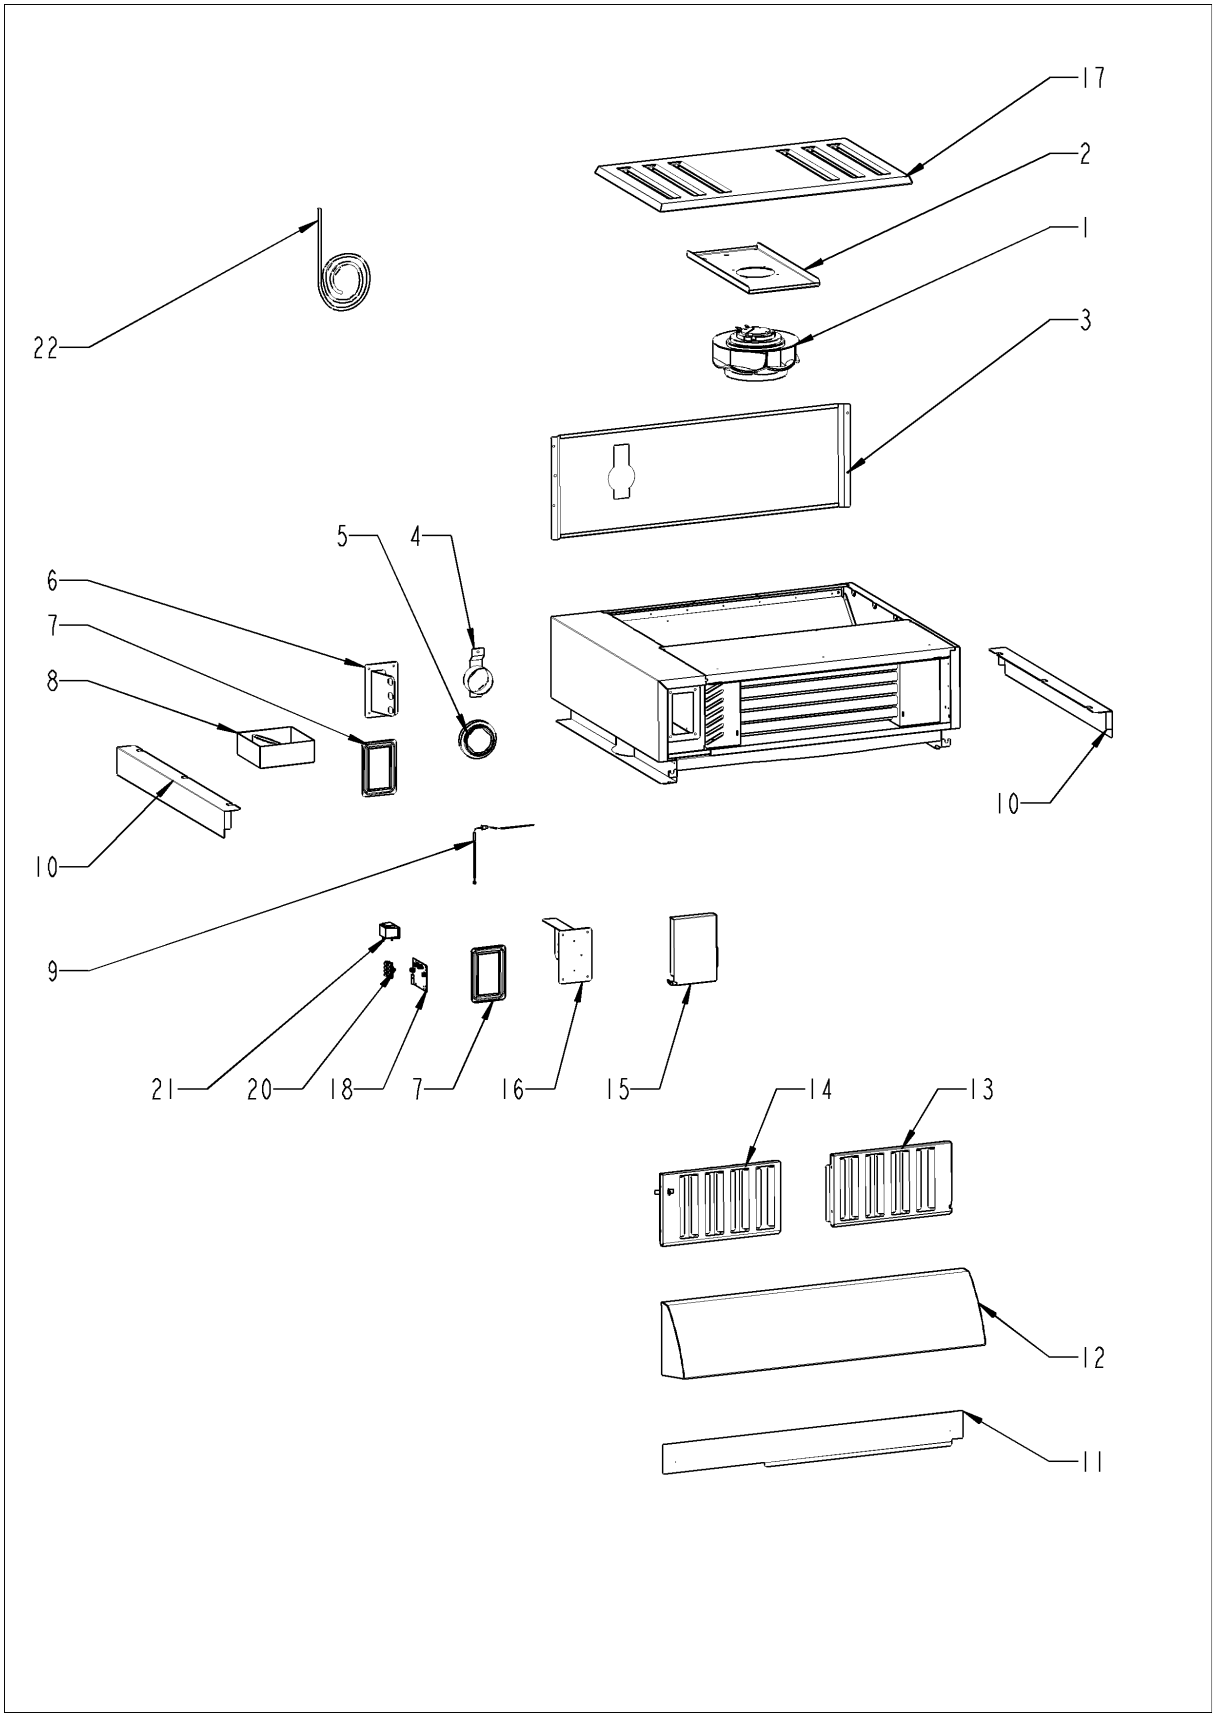

# UltraVent

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.74.890S | Blower motor for Ultravent | 1 |
| 1 | 60.74.889S | Blower motor for Ultravent | 1 |
| 2 | 60.75.179S | Motor mounting plate | 1 |
| 3 | 60.75.216S | Heat protection plate | 1 |
| 4 | 60.75.215S | Closure Combi-Duo 70mm | 1 |
| 5 | 60.75.156P | Gasket 70mm | 1 |
| 6 | 60.75.171S | Electrical box cover back | 1 |
| 7 | 60.75.212P | Electrical box seal | 1 |
| 8 | 60.75.160P | Condensate collector 70mm | 1 |
| 9 | 40.05.995P | Thermocouple | 1 |
| 10 | 60.75.170P | side panels | 1 |
| 11 | 60.75.173S | Front panel | 1 |
| 12 | 60.75.194S | Front hood | 1 |
| 13 | 60.75.183P | Baffle plate filter right | 1 |
| 14 | 60.75.200P | Baffle plate filter left | 1 |
| 15 | 60.75.209P | Electrical box cover | 1 |
| 16 | 60.75.175S | Electric box cover front | 1 |
| 17 | 60.75.204S | IPX5 Coverage | 1 |
| 18 | 42.00.308S | Control pcb UltraVent | 1 |
| 19 | 60.76.574P | spacer CPU | 1 |
| 20 | 60.76.447S | Connection terminal | 1 |
| 21 | 60.76.448S | Power chokes | 1 |
| 21 | 60.76.449P | Capacitors | 1 |
| 22 | 40.06.597P | Bus cable | 1 |
| 24 | 87.01.781S | Thermocouple | 1 |


# Extractor hood

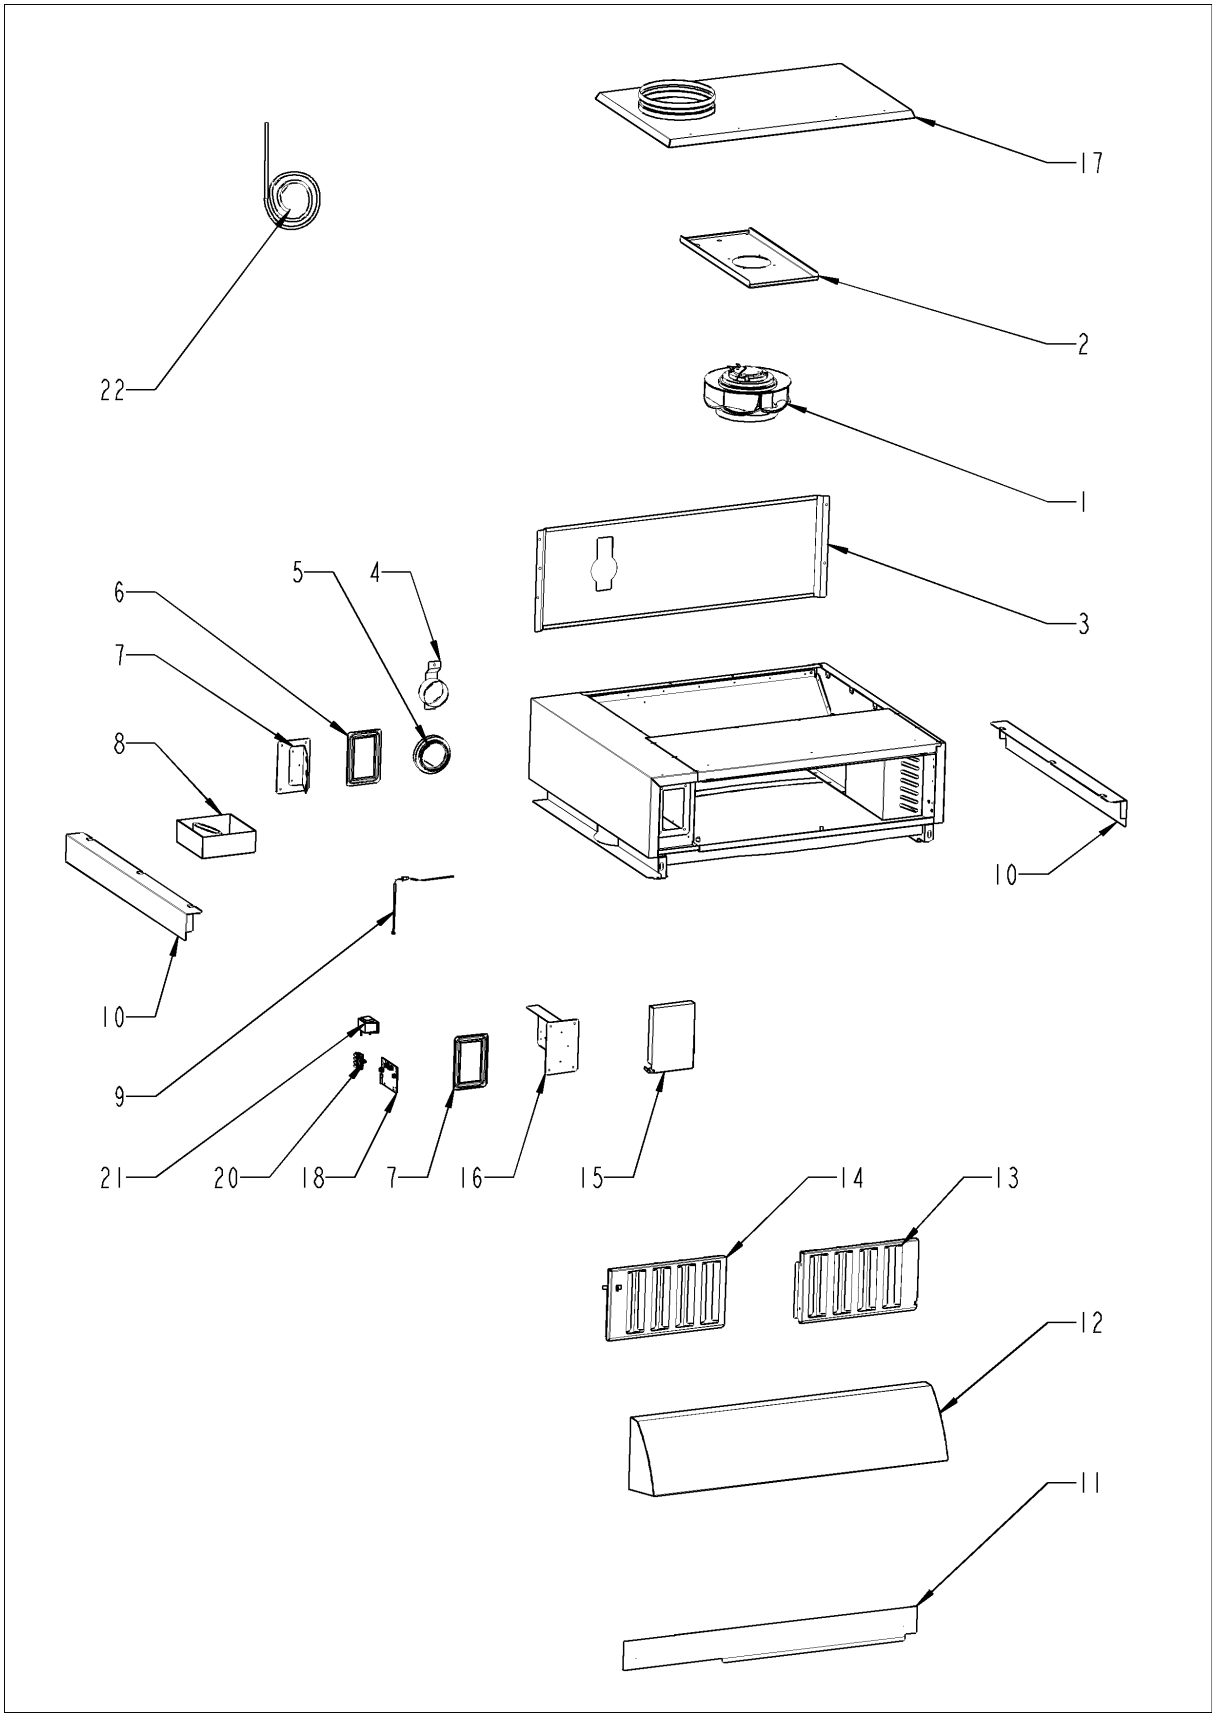

# Extractor hood

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.74.889S | Blower motor for Ultravent | 1 |
| 1 | 60.74.890S | Blower motor for Ultravent | 1 |
| 2 | 60.75.179S | Motor mounting plate | 1 |
| 3 | 60.75.216S | Heat protection plate | 1 |
| 4 | 60.75.212P | Electrical box seal | 1 |
| 5 | 60.75.156P | Gasket 70mm | 1 |
| 6 | 60.75.171S | Electrical box cover back | 1 |
| 7 | 60.75.212P | Electrical box seal | 1 |
| 8 | 60.75.160P | Condensate collector 70mm | 1 |
| 9 | 40.05.995P | Thermocouple | 1 |
| 10 | 60.75.170P | side panels | 1 |
| 11 | 60.75.173S | Front panel | 1 |
| 12 | 60.75.194S | Front hood | 1 |
| 13 | 60.75.183P | Baffle plate filter right | 1 |
| 14 | 60.75.200P | Baffle plate filter left | 1 |
| 15 | 60.75.209P | Electrical box cover | 1 |
| 16 | 60.75.175S | Electric box cover front | 1 |
| 17 | 60.76.467S | Exhaust air plate | 1 |
| 18 | 42.00.308S | Control pcb UltraVent | 1 |
| 19 | 60.76.574P | spacer CPU | 1 |
| 20 | 60.76.447S | Connection terminal | 1 |
| 21 | 60.76.448S | Power chokes | 1 |
| 21 | 60.76.449P | Capacitors | 1 |
| 22 | 40.06.597P | Bus cable | 1 |
| 24 | 87.01.781S | Thermocouple | 1 |


# CombiDuo

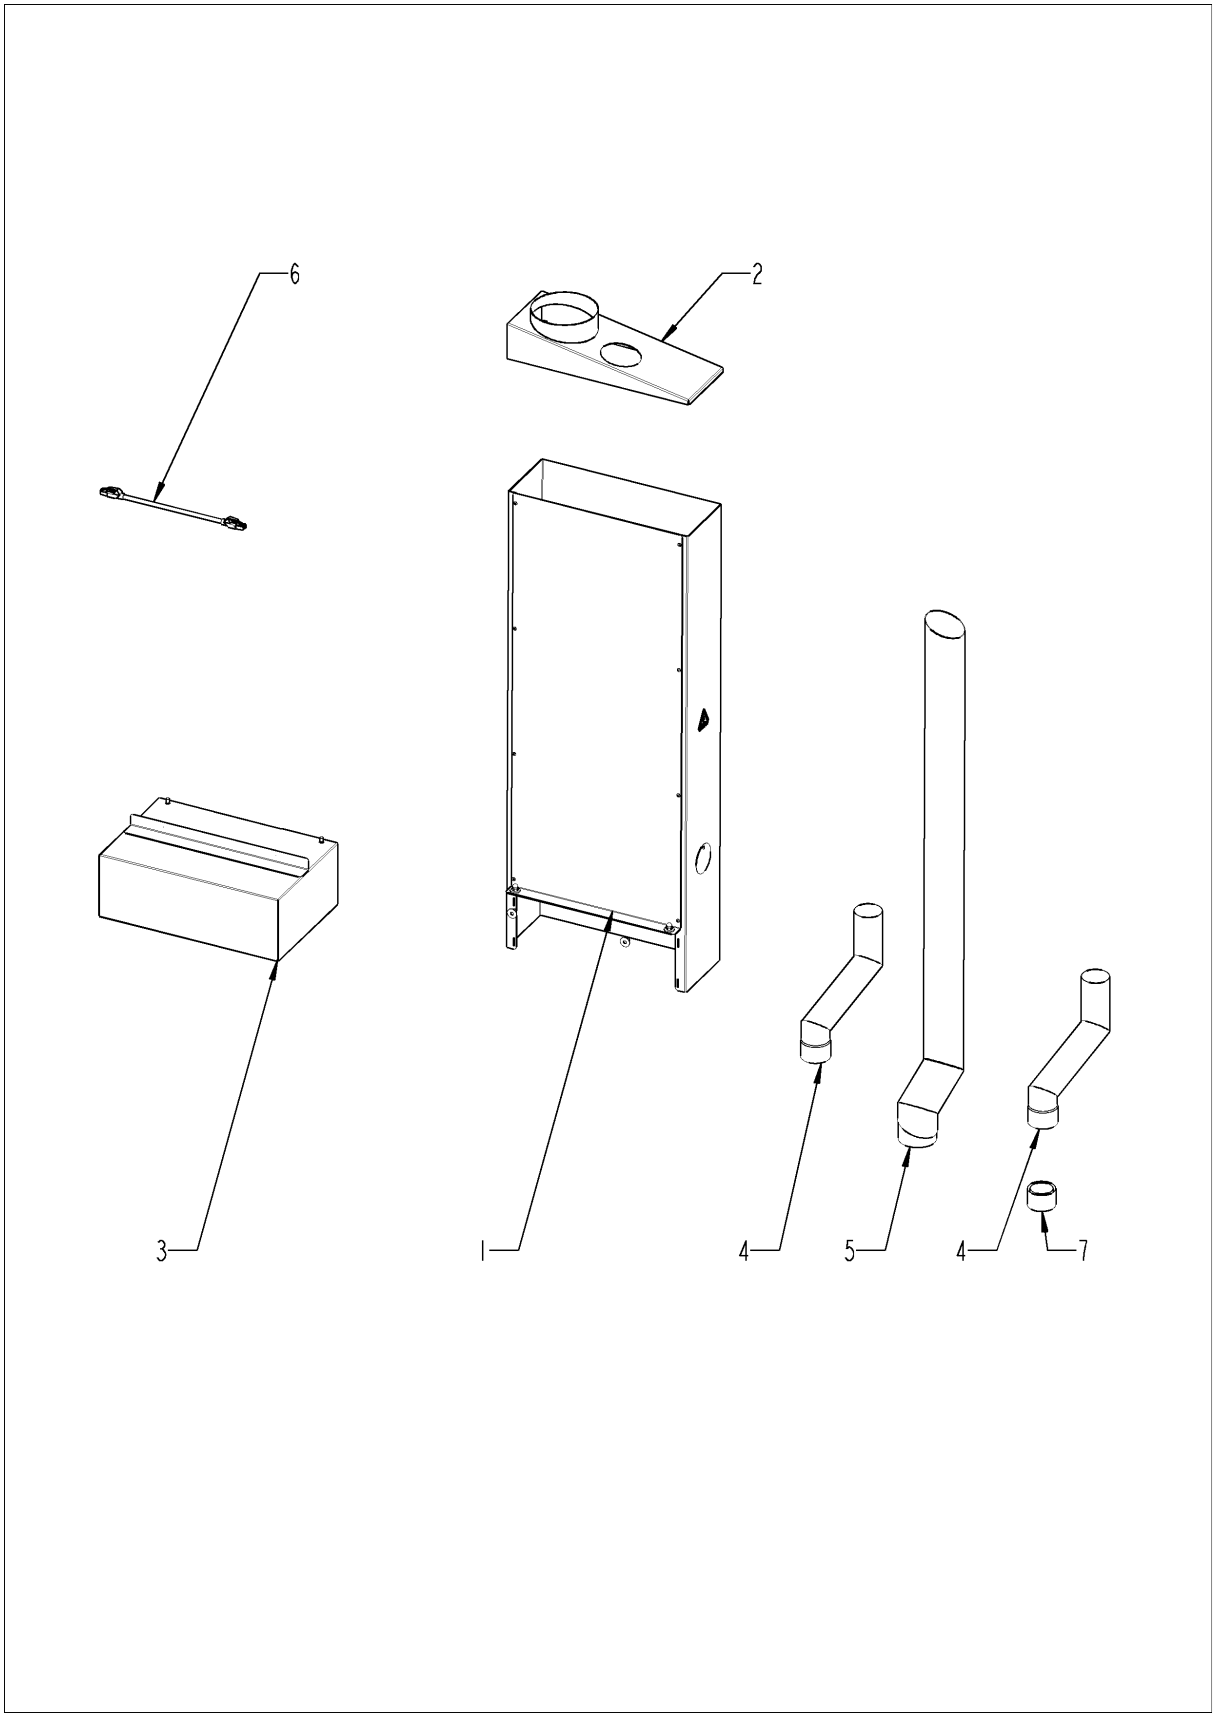

# CombiDuo

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.74.761S | Exhaust gas Stack | 1 |
| 2 | 60.75.542P | Shaft cover | 1 |
| 3 | 60.74.760S | Head protection cover | 1 |
| 4 | 60.75.535P | Venting pipe for Combi-Duo | 1 |
| 5 | 60.75.490P | Flue riser | 1 |
| 6 | 40.05.839P | Bus cable RJ45 2.85m | 1 |
| 7 | 60.76.442P | Adapter Flue riser | 1 |


# Internal fat drain table unit

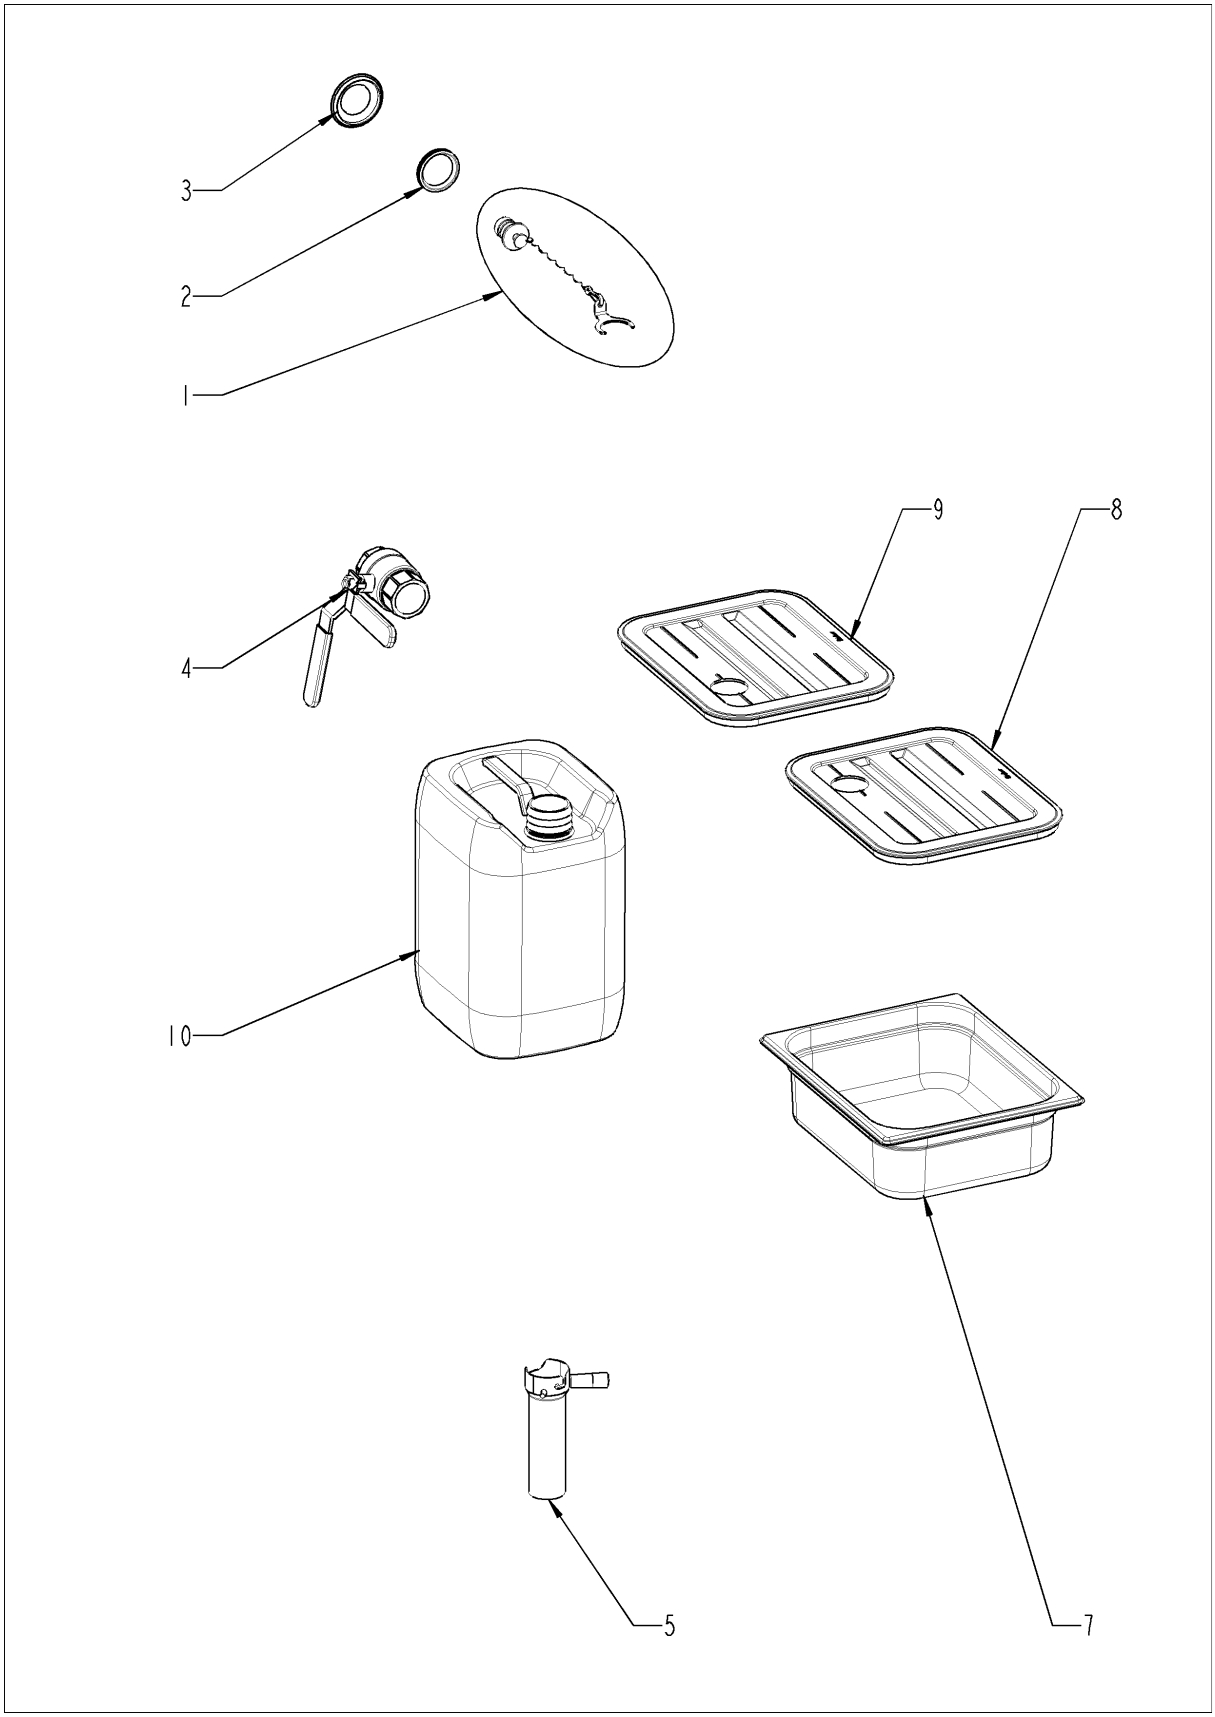

# Internal fat drain table unit

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.76.409P | End cap for Internal fat drain | 1 |
| 2 | 60.74.564P | Gasket for int. fat drain | 1 |
| 3 | 56.00.874P | Gasket wastewater | 1 |
| 4 | 60.72.729P | Ball valve DN32 (1 1/4") | 1 |
| 5 | 60.72.609P | Drain pipe, bayonet with handle | 1 |
| 7 | 6013.1210 | Tray, 1/2 GN, 100 mm (4") deep | 1 |
| 8 | 60.72.696P | Lid for tray, hole right side, GN1/2 | 1 |
| 9 | 60.72.745P | Lid for tray, hole left side, GN1/2 | 1 |
| 10 | 60.72.619 | Jerry can 10l (2,64USGAL) | 1 |


# VarioSmoker

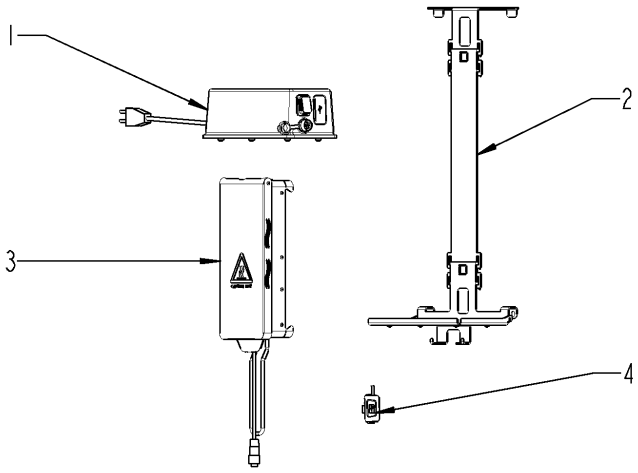

# VarioSmoker

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.75.374P | Power supply for VarioSmoker *UK* | 1 |
| 1 | 60.75.376P | Power supply for VarioSmoker *ARG* | 1 |
| 1 | 60.75.378P | Power supply for VarioSmoker *CH* | 1 |
| 1 | 60.75.386P | Power supply for VarioSmoker *BRA* | 1 |
| 1 | 60.75.368P | Power supply for VarioSmoker *US* | 1 |
| 1 | 60.75.372P | Power supply for VarioSmoker *EU* | 1 |
| 2 | 60.76.115S | Mounting device kit for VarioSmoker | 1 |
| 3 | 60.76.691P | Smoking box for VarioSmoker | 1 |
| 4 | 40.06.837P | Interface cable USB VarioSmoker | 1 |


# Stands

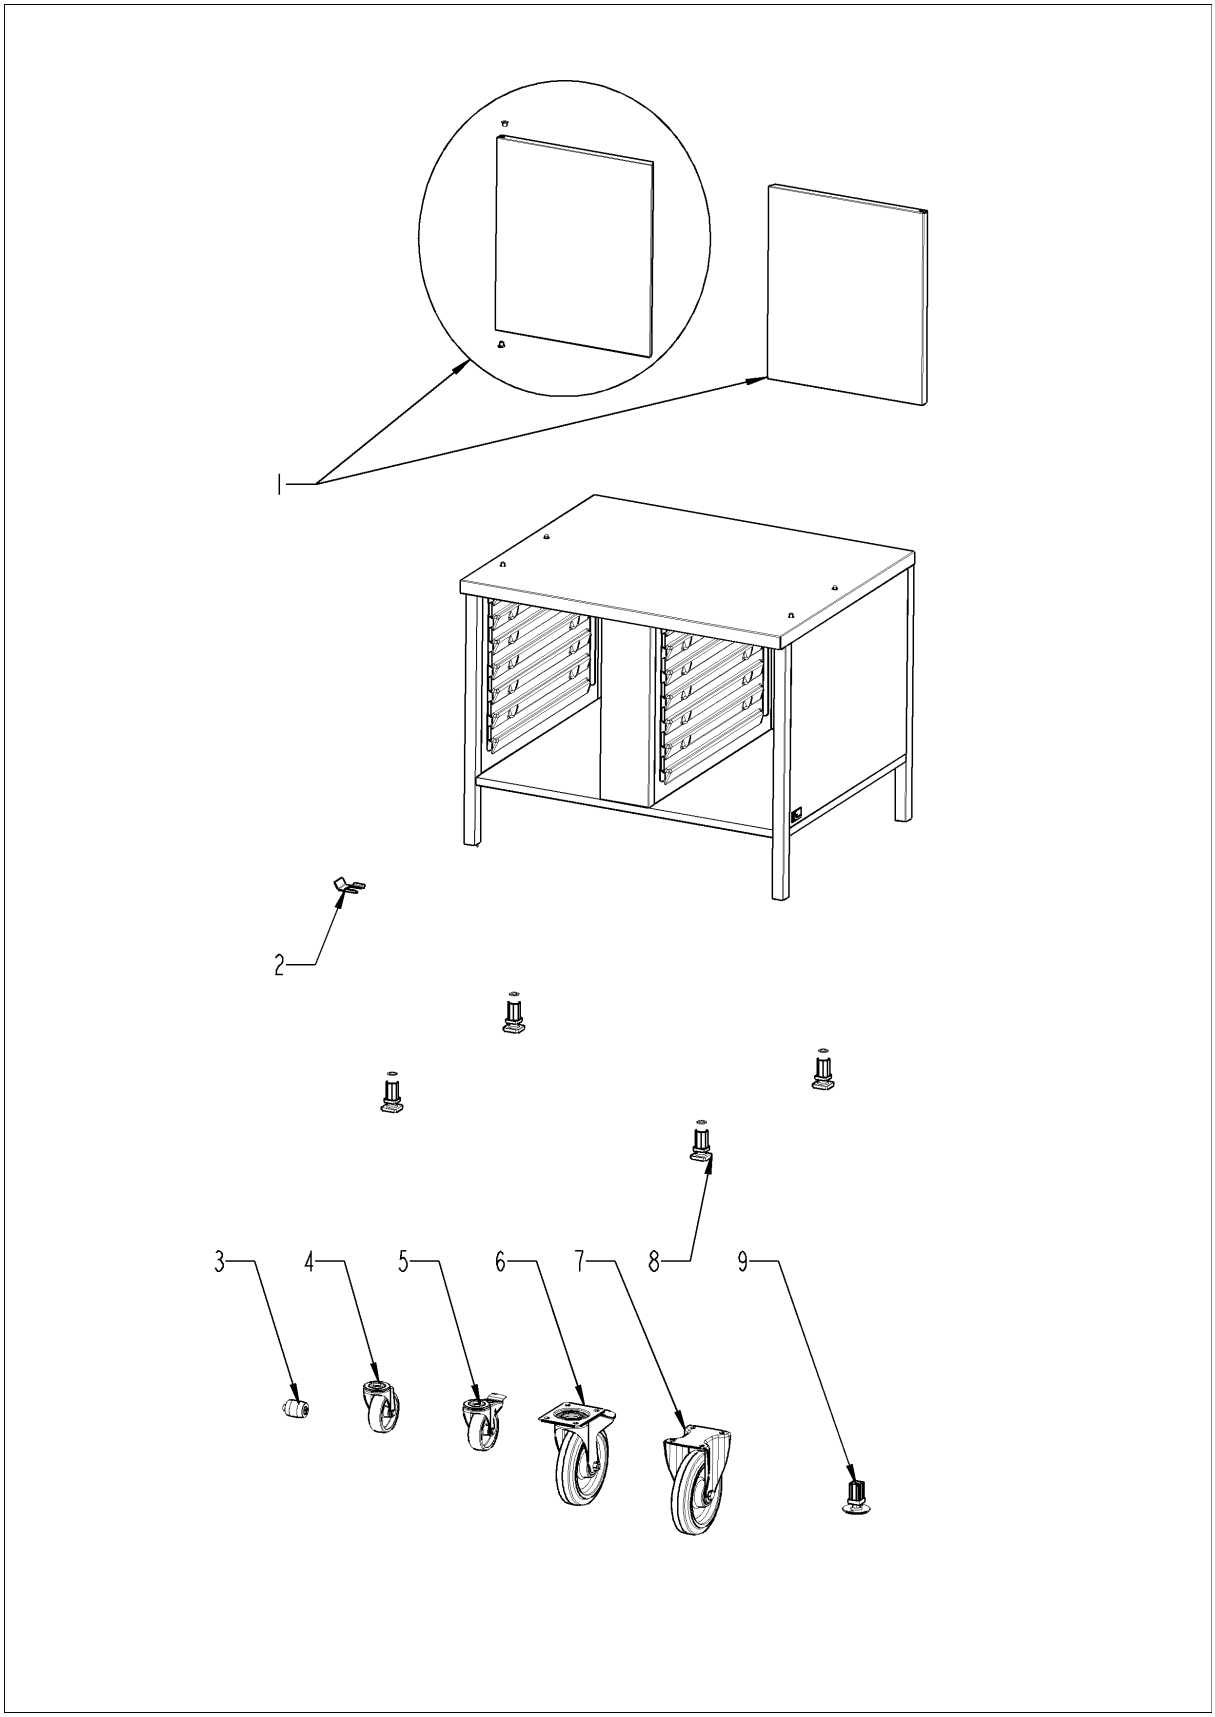

# Stands

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.811S | Door 1/1 | 1 |
| 2 | 60.31.648P | Castor brake | 1 |
| 3 | 60.76.291P | Castor for levelling kit | 1 |
| 4 | 60.75.365P | Castor, 100mm without brake | 1 |
| 5 | 60.75.366P | Castor, 100mm with brake | 1 |
| 6 | 60.73.162S | Castor without brake D=200 | 1 |
| 7 | 60.73.163S | Castor with brake ø200mm | 1 |
| 8 | 60.31.283P | Foot adjustable,30x30 | 1 |
| 9 | 60.31.351P | Stainless steel base | 1 |


# Heat shield

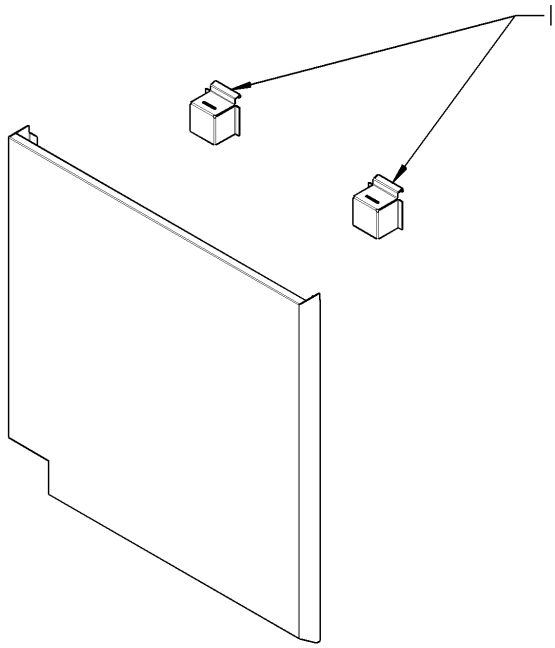

# Heat shield

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.75.111P | heat shield holder top | 1 |


# Flow guard

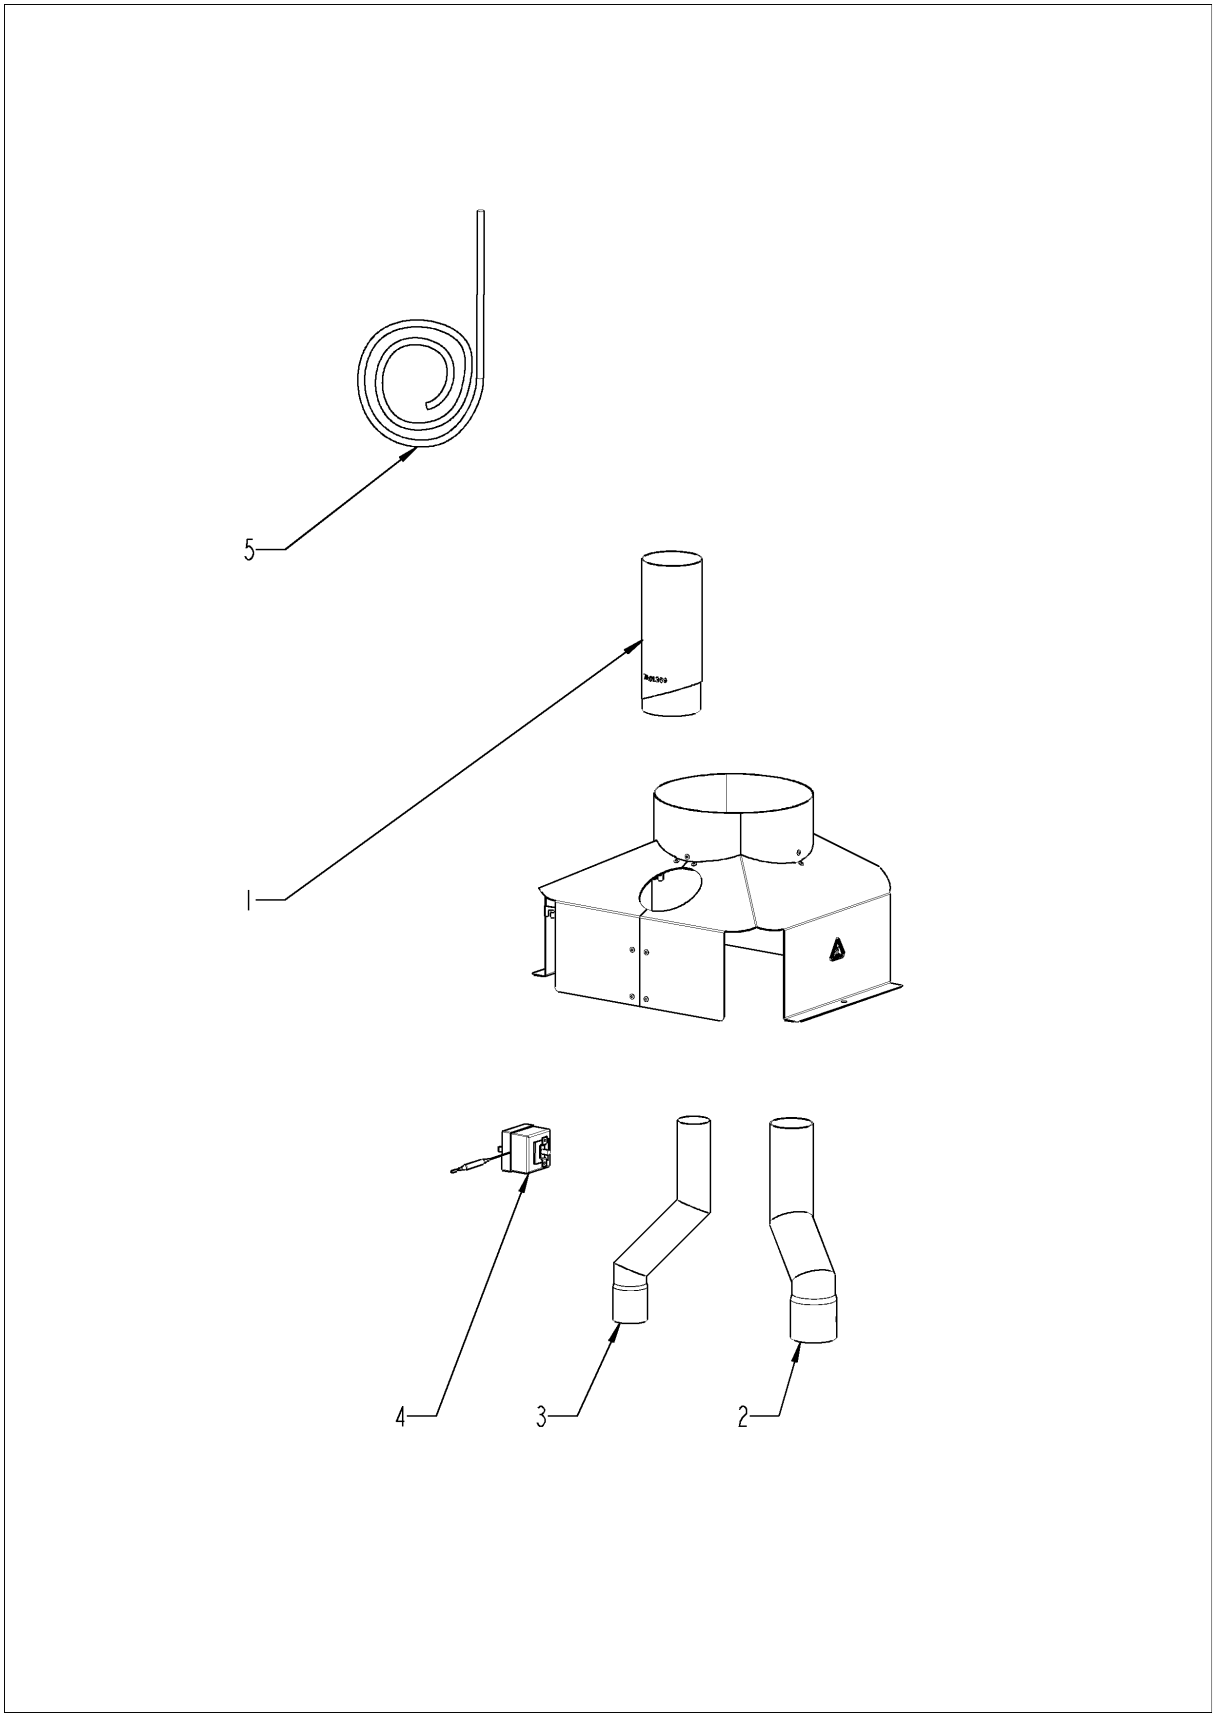

# Flow guard

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | | Ventilation pipe extension | 1 |
| 2 | | Exhaust pipe (Draft diverter) | 1 |
| 3 | | Exhaust pipe (Draft diverter) | 1 |
| 4 | | Safety temperature limiter 103°C | 1 |
| 5 | | Cable draft diverter B13 | 1 |


# Transport trolley

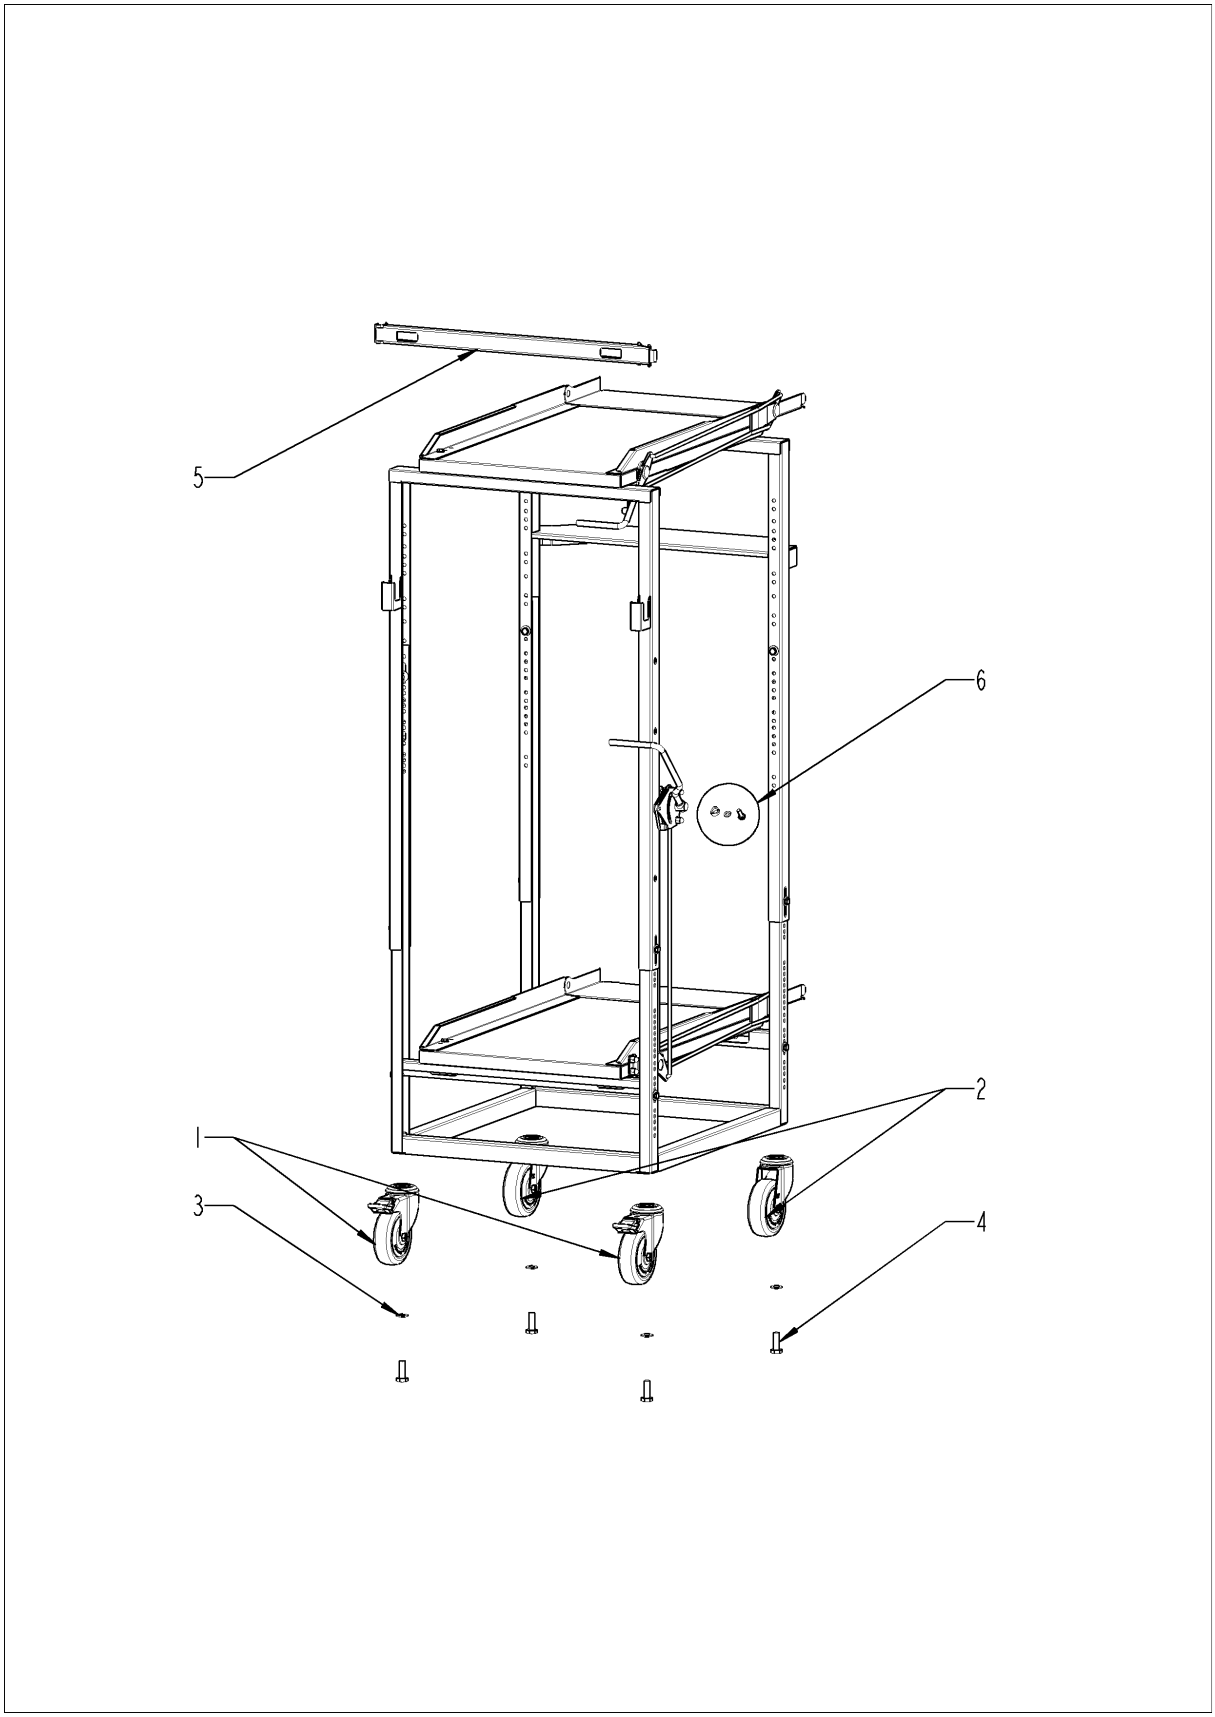

# Transport trolley

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.73.531P | Castor with brake ø100mm | 2 |
| 2 | 60.73.532P | Castor without brake ø100mm | 2 |
| 3 | 1310.0160P | Washer A10,5 | 4 |
| 4 | 1010.0761P | Hex screw M10x30 | 4 |
| 5 | 60.77.486P | Handle for transport trolley | 1 |
| 6 | 60.76.540S | Bush for transport trolley | 1 |

# Repair and retrofit kit

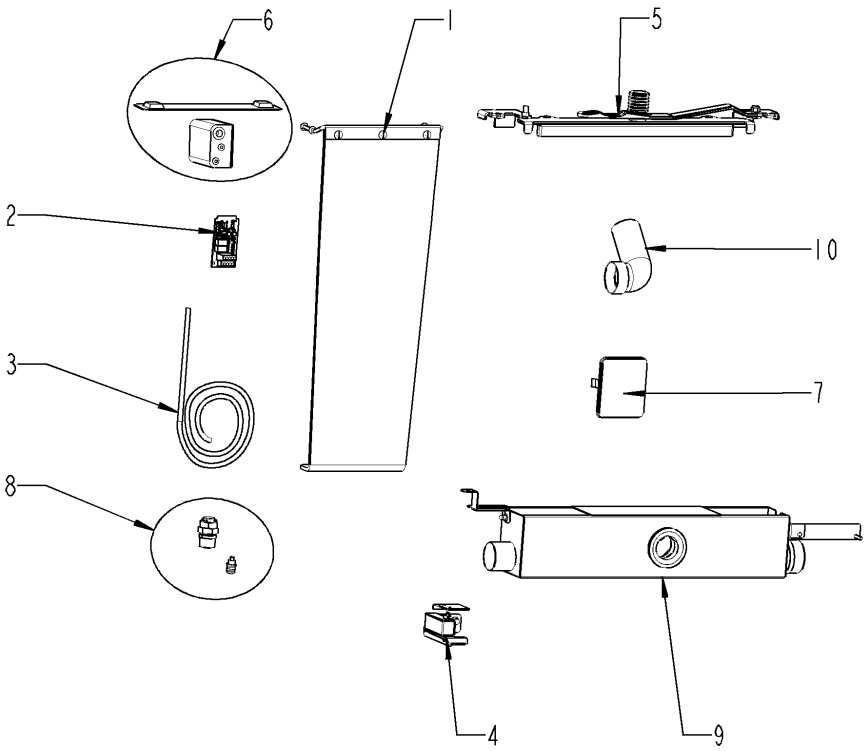

# Repair and retrofit kit

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.866S | Retrofit kit *Collision protection* | 1 |
| 5 | 87.01.779S | Door fixing mechanism marine version | 1 |
| 6 | 60.76.876 | Extension set for USB core temperature probe | 1 |
| 7 | 87.01.790S | Conversion kit blind cover for hand shower | 1 |
| 8 | 60.77.082 | Second water connection for filling the hand shower. | 1 |
| 9 | 56.01.809P | Waste water box | 1 |
| 10 | 87.01.897 | Retrofit kit waste water piping DN90 | 1 |

# Index


| Part no. | Description | Page |
|---|---|---|
| 24.03.057P | Abrasion protection for glide socket | 27 |
| 60.76.442P | Adapter Flue riser | 49 |
| 42.00.309S | Adapter pcb f. UVP | 43 |
| 22.01.343P | Air baffle | 23 |
| 70.01.168P | Air hose adapter 90° DN40 | 37 |
| 70.01.167P | Air hose adapter straight DN40 | 37 |
| 40.05.424P | Air inlet filter cpl. | 11, 29 |
| 87.01.713S | Air inlet pipe | 13 |
| 40.06.566P | Air shaft cpl. | 7 |
| 70.01.328P | Air supply, hot air | 37 |
| 10.00.696P | Allen screw M4x6 w. Precoat 85 | 19 |
| 70.01.205S | Automatic ignition controller | 37 |
| 16.03.394P | Back panel, left | 31 |
| 16.04.086P | Back panel, right | 31 |
| 60.75.200P | Baffle plate filter left | 43, 45, 47 |
| 60.75.183P | Baffle plate filter right | 43, 45, 47 |
| 60.72.729P | Ball valve DN32 (1 1/4") | 51 |
| 56.01.432P | Base panel left | 29 |
| 56.01.208P | Base panel right | 29 |
| 60.74.890S | Blower motor for Ultravent | 43, 45, 47 |
| 60.74.889S | Blower motor for Ultravent | 43, 45, 47 |
| 14.00.937P | Bracket for door contact switch | 29 |
| 87.01.654S | Burner hot air | 17 |
| 70.01.067P | Burner pipe | 37 |
| 70.01.277S | Burner steam gen. kit | 15 |
| 40.06.597P | Bus cable | 43, 45, 47 |
| 40.05.858P | Bus cable 1.08m | 7 |
| 40.07.146P | Bus cable 1.35m | 7 |
| 40.07.148P | Bus cable 1.73m | 7 |
| 40.05.839P | Bus cable RJ45 2.85m | 49 |
| 60.76.540S | Bush for transport trolley | 61 |
| 56.01.682S | Bushing CleanJet pipe | 35 |

# Index


| Part no. | Description | Page |
|---|---|---|
| 40.06.777S | Cable bushing f. cable entry | 7 |
| 40.04.495P | Cable connection M25 ø5mm *divisible* | 7 |
| 40.06.063P | Cable control harness | 7 |
| 40.06.760P | Cable control pcb - capacitive switch | 5 |
| 40.06.569P | Cable CPU - TFT | 5 |
| 87.01.620S | Cable entry | 7 |
| 40.00.320S | Cable gland M20x1.5 | 7 |
| 40.06.624P | Cable harness base | 7 |
| 40.06.878P | Cable holder | 7 |
| 40.07.451P | Cable hot air probe - eSTB | 7 |
| 40.06.250P | Cable, Care pump | 7 |
| 40.06.078P | Cable, interior light W40 *door lighting* | 27 |
| 40.07.452P | Cable, steam probe - eSTB | 7 |
| 56.01.429P | Cap for door mounting support bottom | 25 |
| 56.01.245P | Cap for door mounting support bottom | 35 |
| 10.01.076P | Cap nut M5*A2 | 21, 23, 29 |
| 60.76.449P | Capacitors | 43, 45, 47 |
| 56.01.466P | Care container with pump | 35 |
| 56.01.506S | Care hose | 35 |
| 60.31.648P | Castor brake | 55 |
| 60.76.291P | Castor for levelling kit | 55 |
| 60.73.531P | Castor with brake ø100mm | 61 |
| 60.73.163S | Castor with brake ø200mm | 55 |
| 60.73.162S | Castor without brake D=200 | 55 |
| 60.73.532P | Castor without brake ø100mm | 61 |
| 60.75.366P | Castor, 100mm with brake | 55 |
| 60.75.365P | Castor, 100mm without brake | 55 |
| 50.00.156P | Clamp f. hand shower roll guide | 33 |
| 10.00.087P | Clamp strap f. sensor | 23 |
| 56.01.486P | Cleaning box | 35 |
| 56.01.792P | CleanJet hose | 35 |
| 60.75.215S | Closure Combi-Duo 70mm | 43, 45 |

# Index


| Part no. | Description | Page |
|---|---|---|
| 2001.0109P | Compression spring | 25 |
| 60.75.160P | Condensate collector 70mm | 43, 45, 47 |
| 60.72.592 | Condensation breaker | 39 |
| 52.00.106S | Connect. hose f. hand shower roll guide | 33 |
| 70.01.268P | Connection compensation tube | 37 |
| 60.76.447S | Connection terminal | 43, 45, 47 |
| 87.01.535S | Control panel insert with touch/TFT *RAT* | 5 |
| 42.00.251P | Control pcb (w/o SD-Card) | 5 |
| 42.00.308S | Control pcb UltraVent | 43, 45, 47 |
| 87.01.790S | Conversion kit blind cover for hand shower | 63 |
| 40.05.993P | Cooling fan | 7 |
| 1315.0104P | Copper washer 16x20x1,5 | 23 |
| 10.01.755P | Countersunk screw M5x20 A2 | 25, 29, 31, 37 |
| 1003.2265P | Countersunk self tapping screw 4,2x16 | 31 |
| 24.03.062P | Cover cap for door | 27 |
| 16.03.735P | Cover f. control pcb w. gasket | 5 |
| 24.04.596S | Cover for door magnet with magnet | 27 |
| 16.04.110P | Cover for door mounting support | 25 |
| 16.04.091P | Crossbar top | 31 |
| 16.03.756P | Dial f. pulse generator | 5 |
| 42.00.357P | Display *TFT* | 5 |
| 24.04.097S | Door | 25 |
| 87.01.811S | Door 1/1 | 55 |
| 24.03.040P | Door bolt | 25 |
| 14.01.057P | Door bolt | 25 |
| 24.02.959P | Door catch | 25 |
| 24.05.499S | Door drip collector | 27 |
| 87.01.779S | Door fixing mechanism marine version | 63 |
| 20.02.552P | Door gasket | 23 |
| 24.04.083P | Door handle RATIONAL | 25 |
| 24.03.041P | Door lock with spring U-bolt | 25 |
| 14.01.056P | Door mounting support bottom | 25 |

# Index


| Part no. | Description | Page |
|---|---|---|
| 24.04.217P | Door setting bolt | 27 |
| 40.06.664P | Door switch | 29 |
| 56.01.730P | Drain hose drip collector | 35 |
| 56.01.518P | Drain hose set, humidity control, unit drip collector | 13, 35 |
| 44.02.219S | Drain hose steam generator | 15 |
| 44.02.230P | Drain hose steam generator | 15 |
| 60.72.609P | Drain pipe, bayonet with handle | 51 |
| 24.05.345P | Drain seal for door drip collector | 27 |
| 56.00.952P | Drawer Care container | 35 |
| 74.00.873P | Earth electrode, hot air | 19 |
| 60.75.175S | Electric box cover front | 43, 45, 47 |
| 60.75.209P | Electrical box cover | 43, 45, 47 |
| 60.75.171S | Electrical box cover back | 43, 45, 47 |
| 60.75.212P | Electrical box seal | 43, 45, 47 |
| 40.06.385P | Electrical mounting plate | 9 |
| 44.02.287P | Emergency drainage hose | 15 |
| 56.01.454S | Emergency overflow cleaning box | 35 |
| 56.01.024P | Emptying pump | 15 |
| 60.76.409P | End cap for Internal fat drain | 51 |
| 60.76.467S | Exhaust air plate | 47 |
| 60.74.761S | Exhaust gas Stack | 49 |
| 60.76.876 | Extension set for USB core temperature probe | 63 |
| 87.01.558S | Fan motor | 21 |
| 87.01.560S | Fan motor | 21 |
| 22.01.164S | Fan wheel | 21 |
| 60.76.527S | filter cassette clp. | 43 |
| 24.03.787S | Fixing bracket kit for interior glass pane | 27 |
| 40.03.756P | Fixing clip f. pcb | 9 |
| 40.06.053P | Fixing device for safety temperature limiter | 23 |
| 16.03.747P | Fixing display / pcb | 5 |
| 72.00.505P | Fixing plate steam generator thermostat | 15 |
| 22.01.427P | Flange f. motor shaft gasket | 21 |

# Index


| Part no. | Description | Page |
|---|---|---|
| 60.75.490P | Flue riser | 49 |
| 60.31.283P | Foot adjustable,30x30 | 55 |
| 60.75.198S | Front hood | 43 |
| 60.75.194S | Front hood | 45, 47 |
| 16.03.631P | Front panel | 31 |
| 60.75.173S | Front panel | 43, 45, 47 |
| 40.06.767P | Fuse 4A *Typ 5HT 4-R* | 9 |
| 70.01.427P | Gas blower / gas valve kit | 37 |
| 70.01.426P | Gas blower / gas valve kit | 37 |
| 70.01.607S | Gas connection manifold | 37 |
| 87.01.644S | Gas valve E01 | 37 |
| 60.75.156P | Gasket 70mm | 43, 45, 47 |
| 70.01.622P | Gasket corrugated hose | 37 |
| 56.01.461P | Gasket DN60 | 35 |
| 74.00.290P | Gasket electrode hot air | 19 |
| 70.01.148P | Gasket f. blower burner | 37 |
| 72.00.408P | Gasket f. burner carrier | 15 |
| 74.00.296P | Gasket f. heat exchanger below | 17 |
| 70.01.258P | Gasket f. ignition electrode | 15 |
| 54.01.168P | Gasket f. inspection lid | 33 |
| 12.02.664P | Gasket for base frame | 29 |
| 60.74.564P | Gasket for int. fat drain | 51 |
| 16.01.434P | Gasket for venting tube d=73mm | 29 |
| 74.01.124P | Gasket hot air heat exchanger/interior cabinet | 17 |
| 44.02.200P | Gasket SC pump | 15 |
| 56.00.874P | Gasket wastewater | 51 |
| 24.04.897S | Glass pane bundle | 27 |
| 22.01.425P | Graphit seal for gasket flange | 21 |
| 56.01.422P | Grid cover | 29 |
| 44.01.505P | Grommet Ø12x8,2 | 15 |
| 52.00.127S | Hand shower black | 33 |
| 52.00.096P | Hand shower roll guide | 33 |

# Index


| Part no. | Description | Page |
|---|---|---|
| 60.77.486P | Handle for transport trolley | 61 |
| 60.74.760S | Head protection cover | 49 |
| 60.75.216S | Heat protection plate | 43, 45, 47 |
| 60.75.111P | heat shield holder top | 57 |
| 60.75.210P | HEPA filtert | 43 |
| 10.01.065P | Hex nut M5 | 15, 17, 23 |
| 10.00.709P | Hex nut M6 w. locking | 9, 21 |
| 10.01.751P | Hex nut M16 DIN934 A2 | 23 |
| 10.01.747P | Hex screw M5x19 Torx T20 | 37 |
| 10.01.719P | Hex screw M6x12 | 25 |
| 10.00.099P | Hex screw M8x12 | 25 |
| 10.00.936P | Hex screw M8x20 | 21 |
| 1010.0761P | Hex screw M10x30 | 61 |
| 24.05.303S | Hinge cover | 27 |
| 60.11.447 | Hinging rack Typ 10-1/1, | 39 |
| 24.02.958P | Holding bracket f. door catch | 25 |
| 16.03.749P | Hook for parking position | 5 |
| 2066.0205P | Hose clamp 8-16x9 mm SW 7mm | 15, 33 |
| 2066.0521P | Hose clamp 27mm | 35 |
| 2066.0518P | Hose clamp 30mm | 15 |
| 10.01.262P | Hose clamp 76 mm | 33 |
| 10.00.982P | Hose clamp D=18.2 | 35 |
| 2066.0527P | Hose clamp ø14mm | 13, 35 |
| 10.01.686P | Hose clamp Ø82mm | 33 |
| 70.00.188P | Hose fitting 3/4"-3/4" | 37 |
| 56.00.752P | Hose fitting EPDM-70ShA | 35 |
| 2067.0709P | Hose for water supply 2500mm | 33 |
| 22.01.497P | Hose set f. humidity control | 13 |
| 60.75.211P | Hose set Filter detection | 43 |
| 50.02.119P | Hose, water supply, steam generator | 15 |
| 74.00.981S | Hot air heat exchanger | 17 |
| 22.01.402P | Humidity control cpl. | 13 |

# Index


| Part no. | Description | Page |
|---|---|---|
| 70.01.250S | Ignition electrode kit for steam generator | 15 |
| 70.01.247S | Ignitionelectrode, hot air 350mm | 19 |
| 54.01.862S | Inspection lid, B2 | 33 |
| 72.00.077P | Insulation f. burner steam gen. | 15 |
| 40.06.409P | Interface cable LAN 1.5m | 5, 7 |
| 40.06.837P | Interface cable USB VarioSmoker | 53 |
| 40.06.327P | Interface LAN IPX6 | 7 |
| 40.06.043P | Interface USB | 7 |
| 24.02.960P | Interlocking tooth screw M5x6 | 25 |
| 40.05.919P | IO-module | 9 |
| 60.76.572S | IPX5 Coverage | 43 |
| 60.75.204S | IPX5 Coverage | 45 |
| 20.02.807P | Isolation for mounting plate for motor | 21 |
| 60.72.619 | Jerry can 10l (2,64USGAL) | 51 |
| 87.01.552S | Kit Steam generator insolated | 15 |
| 87.01.581S | LED bar | 27 |
| 87.01.582S | LED optics | 27 |
| 60.72.745P | Lid for tray, hole left side, GN1/2 | 51 |
| 60.72.696P | Lid for tray, hole right side, GN1/2 | 51 |
| 24.04.211P | Lock cover | 25 |
| 50.02.112P | Locking plate f. water distribution | 33 |
| 10.01.703P | Locking ring 16 mm | 35 |
| 10.01.707P | Locking ring 25mm | 15 |
| 40.07.257P | Loudspeaker K 64 WP FR | 11 |
| 74.01.125P | Mating flange heat exchanger | 17 |
| 40.06.902P | Meat probe sensor | 23 |
| 16.03.748P | Metal cramp f. panel insert | 5 |
| 42.00.359P | Micro SD card | 5 |
| 44.02.494S | Molded hose with level electrode | 15 |
| 42.00.276P | Motor control for fan motor | 21 |
| 42.00.277P | Motor control for fan motor | 21 |
| 60.75.179S | Motor mounting plate | 43, 45, 47 |

# Index


| Part no. | Description | Page |
|---|---|---|
| 22.00.985P | Motor shaft gasket D15 | 21 |
| 40.05.435P | Mounting device f. pressure sensor | 13 |
| 60.76.115S | Mounting device kit for VarioSmoker | 53 |
| 22.01.423P | Mounting support f. gasket flange | 21 |
| 40.04.953P | Mounting support for pump pcb | 9 |
| 40.05.968P | Mounting support power transformer | 7 |
| 50.02.004P | Nozzle f. moistening | 17 |
| 56.01.481P | O Ring emergency overflow | 35 |
| 10.01.694P | O-ring for humidity control | 13 |
| 56.01.631P | O-ring for pump | 35 |
| 1008.0768P | Ornamental screw M8x16 | 25 |
| 1008.0769P | Ornamental screw M8x30 | 7 |
| 56.01.491P | Outlet sieve | 23 |
| 56.01.419P | Plastic cap | 29 |
| 50.02.006P | Plastic pipe PEEK | 17 |
| 24.05.458P | Plastic spreader rivet | 27 |
| 50.00.085P | Plug-in spring f. hand shower roll guide | 33 |
| 60.71.022 | Positioning support for core sensor | 39 |
| 60.76.448S | Power chokes | 43, 45, 47 |
| 42.00.286P | Power supply | 9 |
| 40.06.753P | Power supply cable 3x2,5 mm² 3m | 7 |
| 60.75.376P | Power supply for VarioSmoker *ARG* | 53 |
| 60.75.386P | Power supply for VarioSmoker *BRA* | 53 |
| 60.75.378P | Power supply for VarioSmoker *CH* | 53 |
| 60.75.372P | Power supply for VarioSmoker *EU* | 53 |
| 60.75.374P | Power supply for VarioSmoker *UK* | 53 |
| 60.75.368P | Power supply for VarioSmoker *US* | 53 |
| 60.75.213P | Prefilter metal mesh | 43 |
| 60.76.528S | Pressure frame HEPA filtert | 43 |
| 3017.1011P | Pressure sensor Huba 401 | 13 |
| 40.06.037P | Pulse generator | 5 |
| 56.01.028P | Pump f. CareControl | 35 |

# Index


| Part no. | Description | Page |
|---|---|---|
| 56.01.020P | Pump f. cleaning | 35 |
| 40.06.625P | Pump harness | 7 |
| 44.02.179S | Pump housing | 15 |
| 42.00.273P | Pump pcb | 9 |
| 87.01.866S | Retrofit kit *Collision protection* | 63 |
| 87.01.897 | Retrofit kit waste water piping DN90 | 63 |
| 10.00.515P | Rivet 3,2x6.8 A2/NSF | 23 |
| 1604.0161P | Rivet 4x6 CNS | 27 |
| 10.00.904P | Rivet B4x8 | 27 |
| 10.00.989P | Rivet with screw | 7, 9, 27, 29, 37 |
| 10.02.008P | Rivet with screw | 27 |
| 40.01.358P | Rocker switch 1 pole | 9 |
| 54.01.729S | Rubber form piece venting pipe | 33 |
| 87.01.548S | Safety device / water supply for steam generator | 15 |
| 40.06.684P | Safety temperature limiter | 23 |
| 40.06.098P | Screen core temperature sensor | 23 |
| 40.05.489P | Screen interior cabinet sensor | 23 |
| 16.04.062P | Sealing block | 5 |
| 16.03.701P | Sealing block LAN | 5 |
| 16.03.342P | Sealing f. panel insert | 5 |
| 60.77.082 | Second water connection for filling the hand shower. | 63 |
| 42.00.346P | Sensor on / off | 5 |
| 60.75.542P | Shaft cover | 49 |
| 16.03.397P | Side panel left | 31 |
| 16.04.077P | Side panel right | 31 |
| 60.75.170P | side panels | 43, 45, 47 |
| 56.01.688S | Silicone hose with hose clamps | 35 |
| 24.03.056P | Slide bush for door | 27 |
| 24.05.501P | Slosh protection | 27 |
| 60.76.691P | Smoking box for VarioSmoker | 53 |
| 1104.0820P | Snap nut 4,2mm | 31 |
| 50.02.054P | Solenoid valve fivefold | 33 |

# Index


| Part no. | Description | Page |
|---|---|---|
| 60.76.574P | spacer CPU | 43, 45, 47 |
| 24.03.764P | Spacer for door | 27 |
| 60.31.351P | Stainless steel base | 55 |
| 50.02.131P | Supply hose for "Care box" | 35 |
| 50.02.144P | Supply hose for moistening | 33 |
| 44.02.227S | Supply hose safety armature | 15 |
| 40.06.112S | Temperature sensor eSTB *HA* | 23 |
| 40.06.131P | Temperature sensor eSTB 240mm *S* | 15 |
| 40.05.995P | Thermocouple | 43, 45, 47 |
| 87.01.781S | Thermocouple | 43, 45, 47 |
| 40.06.212S | Thermocouple humidity *B4* | 23 |
| 40.06.888P | Thermocouple interior cabinet B1 | 23 |
| 40.06.228P | Thermocouple steam generator *B5* | 15 |
| 1205.0120P | Tooth lock washer A5,3 | 29 |
| 16.03.398P | Top cover | 31 |
| 6013.1210 | Tray, 1/2 GN, 100 mm (4") deep | 51 |
| 10.01.902P | Truss head screw Torx M5X12 T25 | 37 |
| 50.02.005P | Union nut | 17 |
| 40.06.044P | USB socket with cable | 5 |
| 72.00.492P | V Clamp 50mm right | 15 |
| 22.01.409P | Vent cover | 13, 29 |
| 54.01.928P | Ventilation pipe | 33 |
| 60.75.535P | Venting pipe for Combi-Duo | 49 |
| 1308.0162P | Washer A8,4 | 21 |
| 1310.0160P | Washer A10,5 | 61 |
| 56.01.809P | Waste water box | 63 |
| 56.01.521P | Waste water cover | 29 |
| 56.01.017P | Waste water pump Cleaning box | 35 |
| 87.01.737S | Wire set earth - ignition electrode | 37 |

RATIONAL Aktiengesellschaft
Siegfried-Meister-Straße 1
86899 Landsberg am Lech
Germany