# Service part catalogue

## iCombi® as of 03/2020 61 - 6  x 1/1 Gastronorm


### G61MJ2404XXXXXXX




10/2/2024
1NAC230 V 50/60Hz

© Copyright by RATIONAL Technical Service
All Rights reserved


# Overview

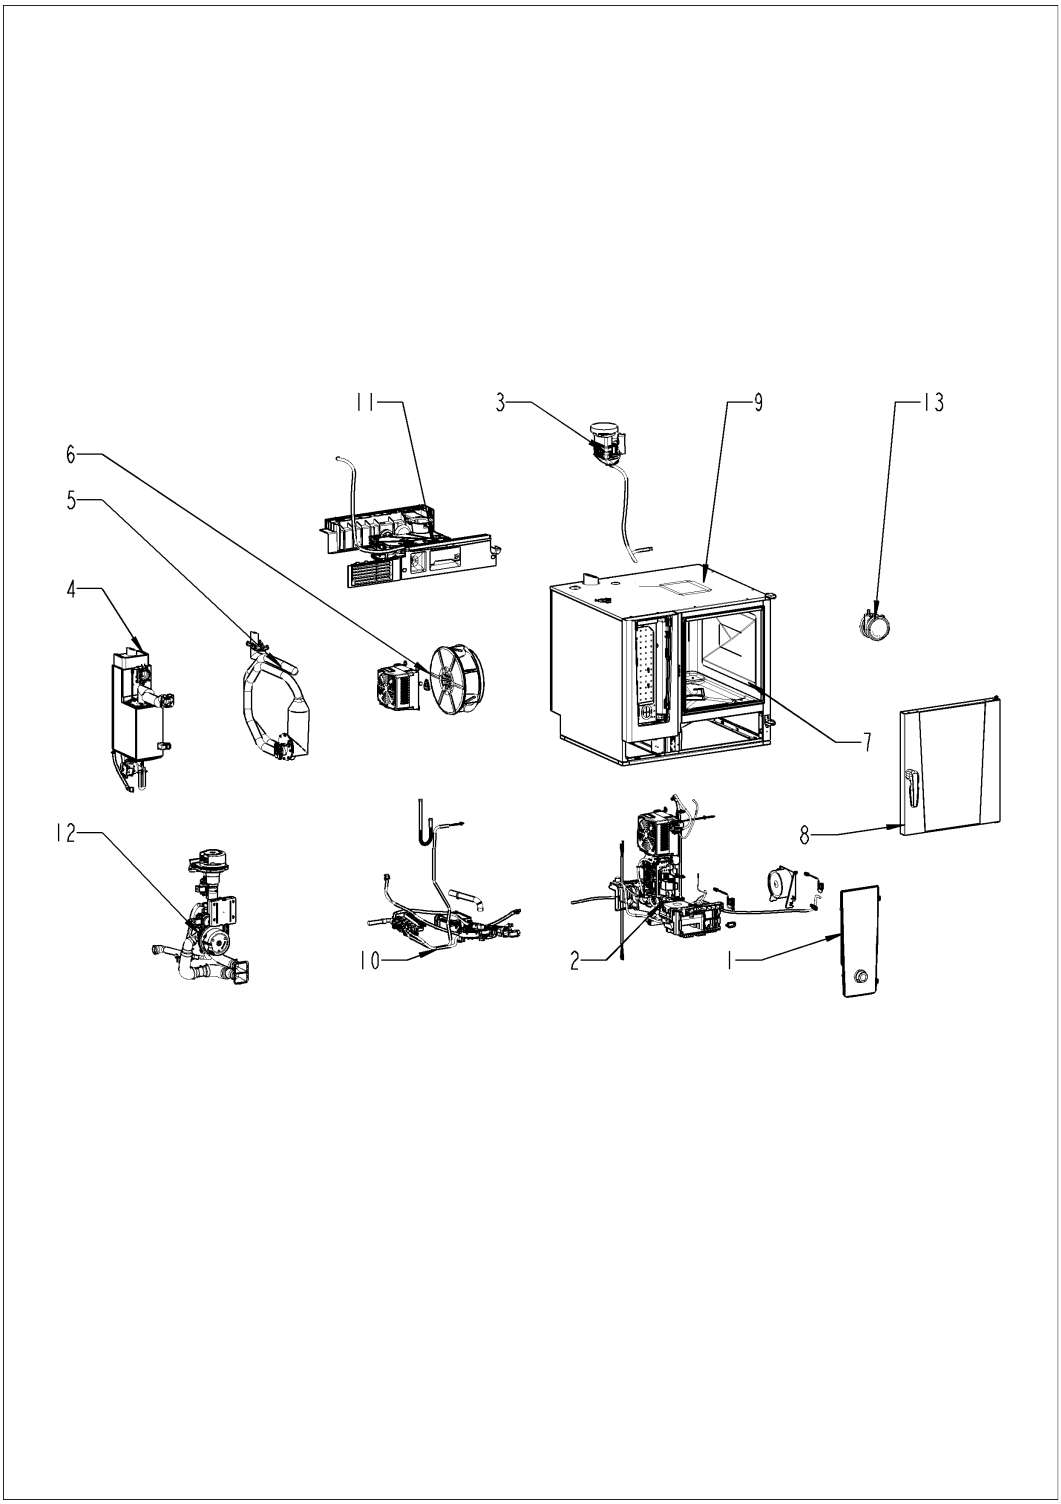

# Overview

Pos. 1 Control panel **4**
Pos. 2 Electrical installation **6**
Pos. 3 ClimaPlus **12**
Pos. 4 Steam generator **14**
Pos. 5 Hot air heating **17**
Pos. 6 Motor and fan wheel **21**
Pos. 7 Interior cabinet **23**
Pos. 8 Door **25**
Pos. 9 Exterior cabinet **29**
Pos. 10 Water **33**
Pos. 11 CleanJet + Care **35**
Pos. 12 Gas parts **37**
Pos. 13 Standard accessory **39**
Pos. 20 Repair and retrofit kit **55**


# Pos. 1 Control panel

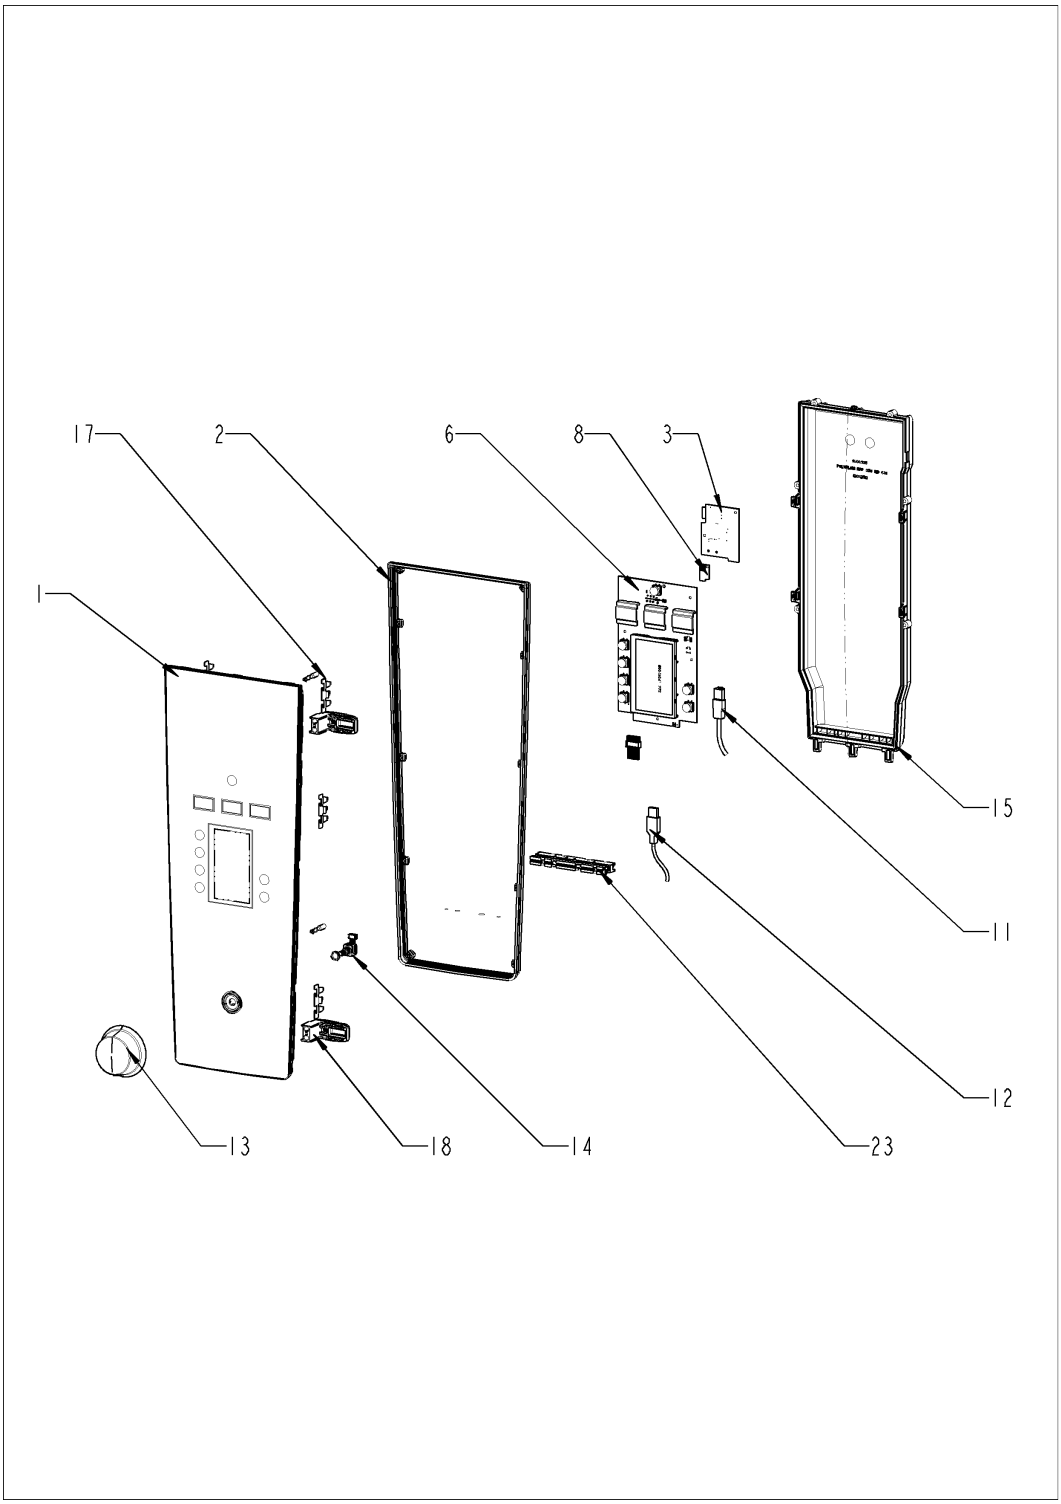

# Pos. 1 Control panel

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.536S | Control panel insert with overlay *RAT* | 1 |
| 2 | 16.03.342P | Sealing f. panel insert | 1 |
| 6 | 42.00.292P | Control pcb (w/o Eeprom) | 1 |
| 8 | 42.00.293P | External memory | 1 |
| 11 | 40.06.044P | USB socket with cable | 1 |
| 13 | 16.03.752P | Dial f. pulse generator | 1 |
| 14 | 40.06.037P | Pulse generator | 1 |
| 15 | 16.04.606P | Cover f. control pcb w. gasket | 1 |
| 17 | 16.03.748P | Metal cramp f. panel insert | 6 |
| 18 | 16.03.749P | Hook for parking position | 2 |
| 23 | 16.04.062P | Sealing block | 1 |


# Pos. 2 Electrical installation

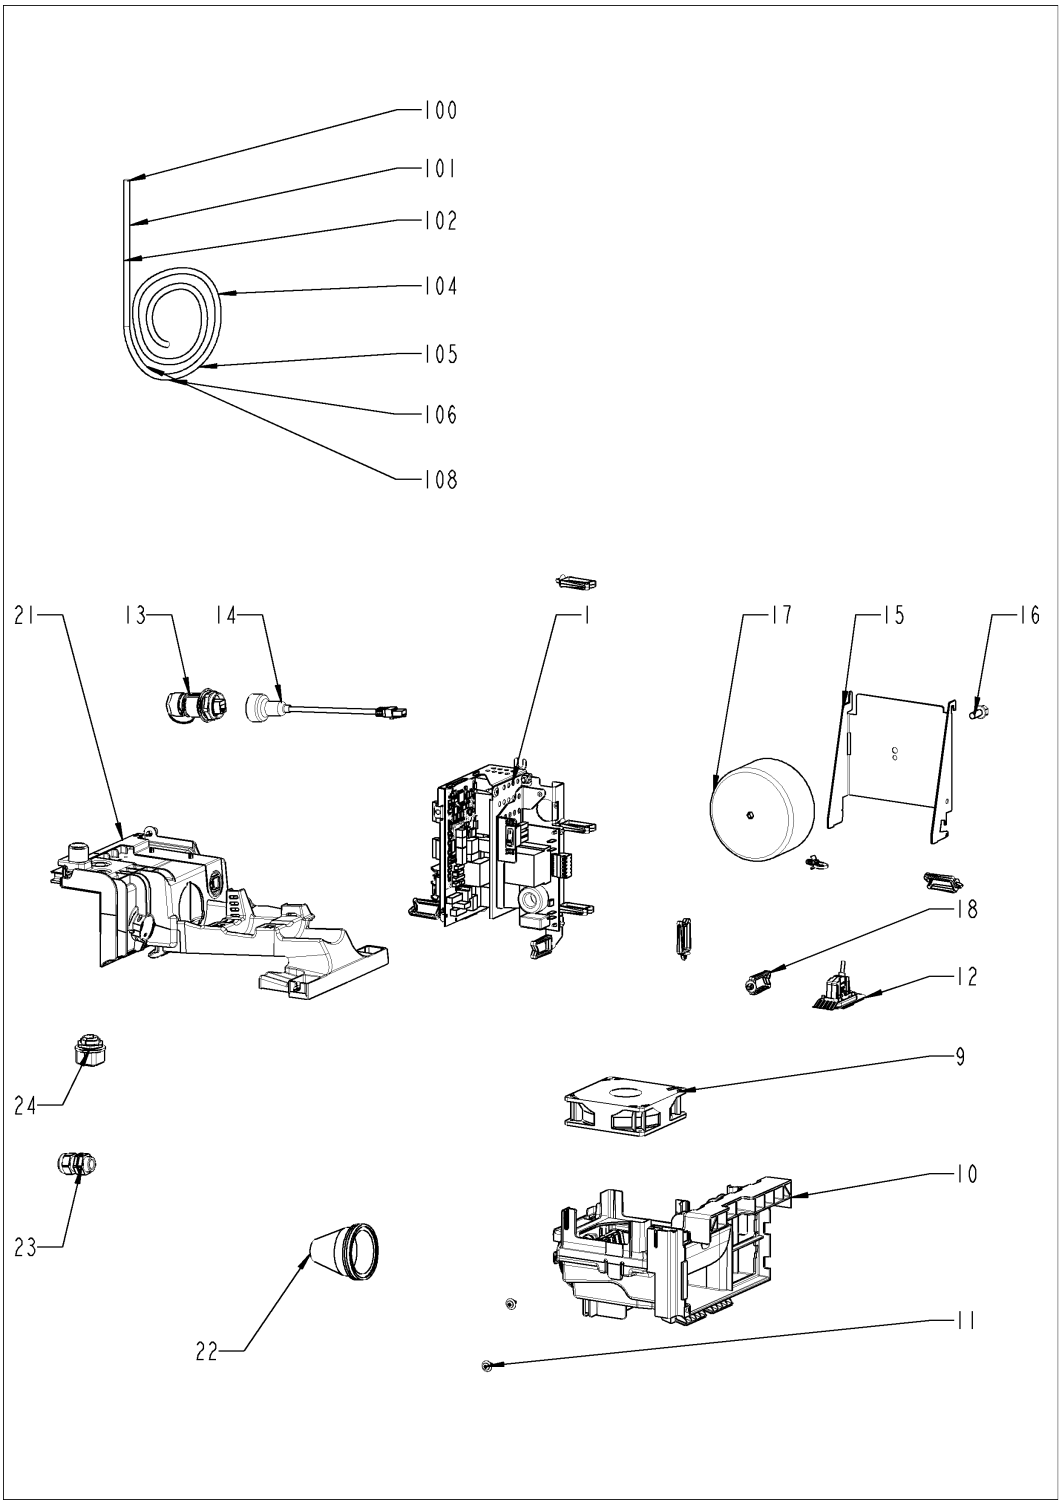

# Pos. 2 Electrical installation

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | | Electrical installation | 1 |
| 9 | 40.05.993P | Cooling fan | 1 |
| 10 | 40.06.566P | Air shaft cpl. | 1 |
| 11 | 10.02.008P | Rivet with screw | 1 |
| 12 | 40.06.043P | Interface USB | 1 |
| 15 | 40.05.968P | Mounting support power transformer | 1 |
| 16 | 1008.0769P | Ornamental screw M8x30 | 1 |
| 18 | 40.06.878P | Cable holder | 7 |
| 21 | 87.01.620S | Cable entry | 1 |
| 22 | 40.06.777S | Cable bushing f. cable entry | 1 |
| 23 | 40.00.320S | Cable gland M20x1.5 | 1 |
| 24 | 40.04.495P | Cable connection M25 ø5mm *divisible* | 1 |
| 100 | 40.06.062P | Cable control harness | 1 |
| 101 | 40.06.625P | Pump harness | 1 |
| 102 | 40.07.607P | Cable harness base | 1 |
| 108 | 40.06.250P | Cable, Care pump | 1 |
| 112 | 40.06.753P | Power supply cable 3x2,5 $mm^2$ 3m | 1 |
| 114 | 40.05.895P | Bus cable 1.16m | 1 |
| 115 | 40.05.858P | Bus cable 1.08m | 1 |
| 116 | 40.05.858P | Bus cable 1.08m | 1 |
| 119 | 40.05.858P | Bus cable 1.08m | 1 |
| 126 | 40.07.451P | Cable hot air probe - eSTB | 1 |
| 127 | 40.07.453P | Cable, steam probe - eSTB | 1 |


# Pos. 1 Electrical installation

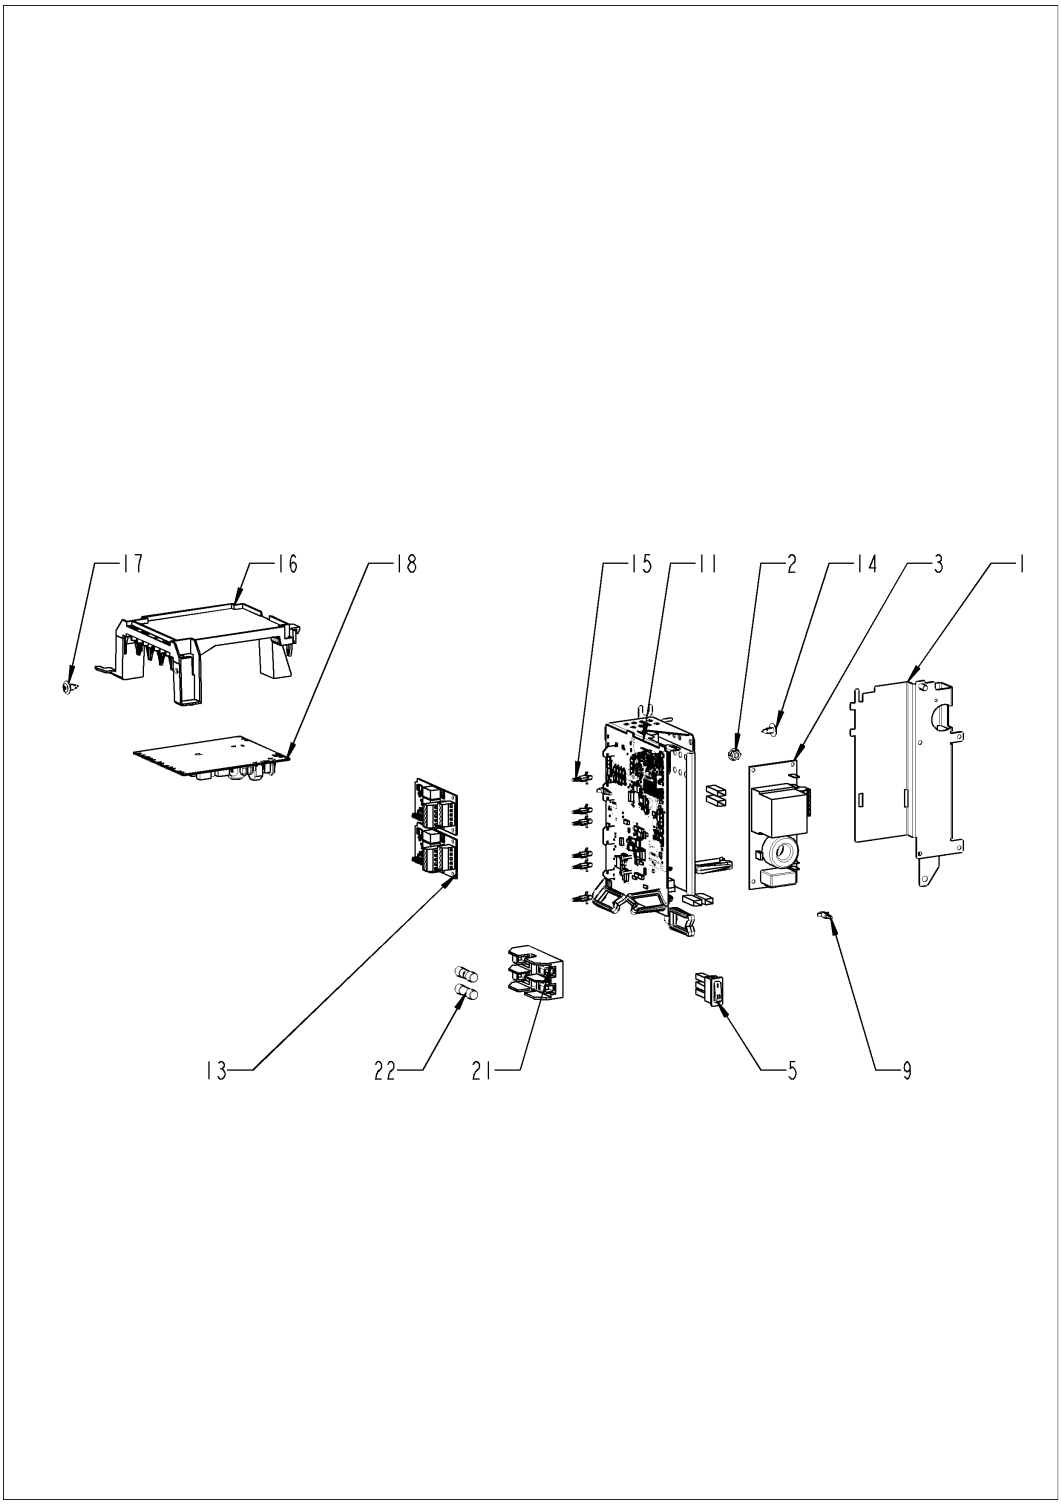

# Pos. 1 Electrical installation

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 40.06.385P | Electrical mounting plate | 1 |
| 2 | 10.00.709P | Hex nut M6 w. locking | 1 |
| 3 | 42.00.286P | Power supply | 1 |
| 5 | 40.01.358P | Rocker switch 1 pole | 1 |
| 9 | 40.03.756P | Fixing clip f. pcb | 1 |
| 11 | 40.05.919P | IO-module | 1 |
| 14 | 10.02.008P | Rivet with screw | 1 |
| 15 | 40.03.756P | Fixing clip f. pcb | 1 |
| 16 | 40.04.953P | Mounting support for pump pcb | 1 |
| 17 | 10.02.008P | Rivet with screw | 1 |
| 18 | 42.00.273P | Pump pcb | 1 |
| 28 | 40.06.767P | Fuse 4A *Typ 5HT 4-R* | 1 |


# Pos. 10 Air shaft cpl.

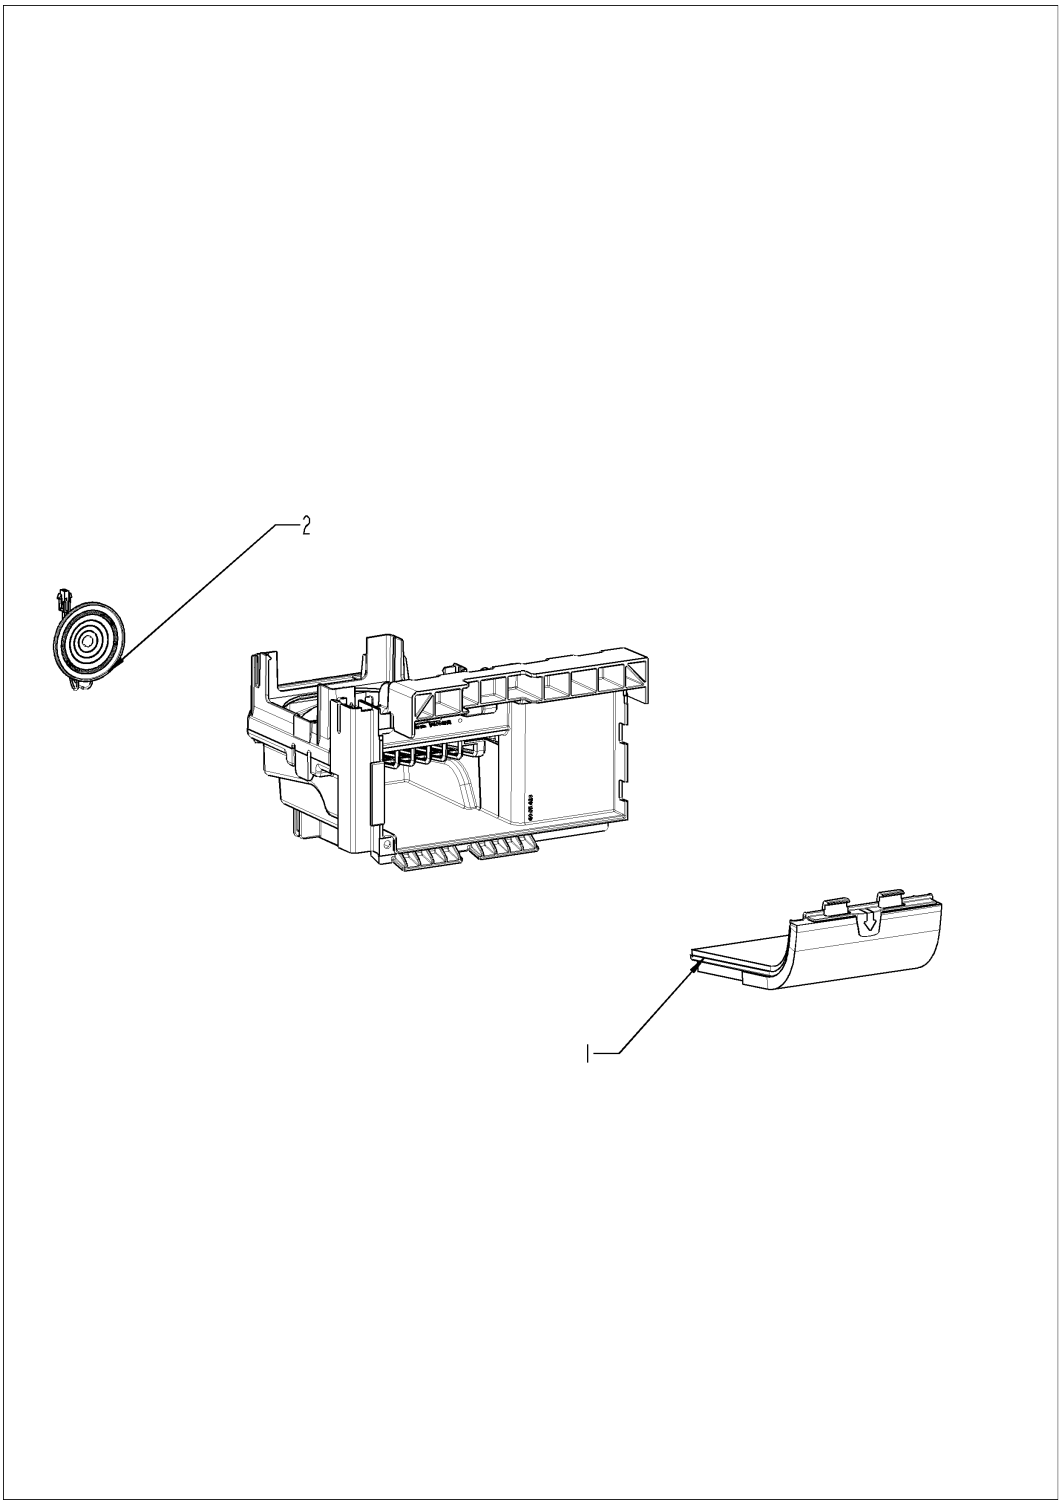

# Pos. 10 Air shaft cpl.

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 40.05.424P | Air inlet filter cpl. | 1 |
| 2 | 40.07.257P | Loudspeaker K 64 WP FR | 1 |


# Pos. 3 ClimaPlus

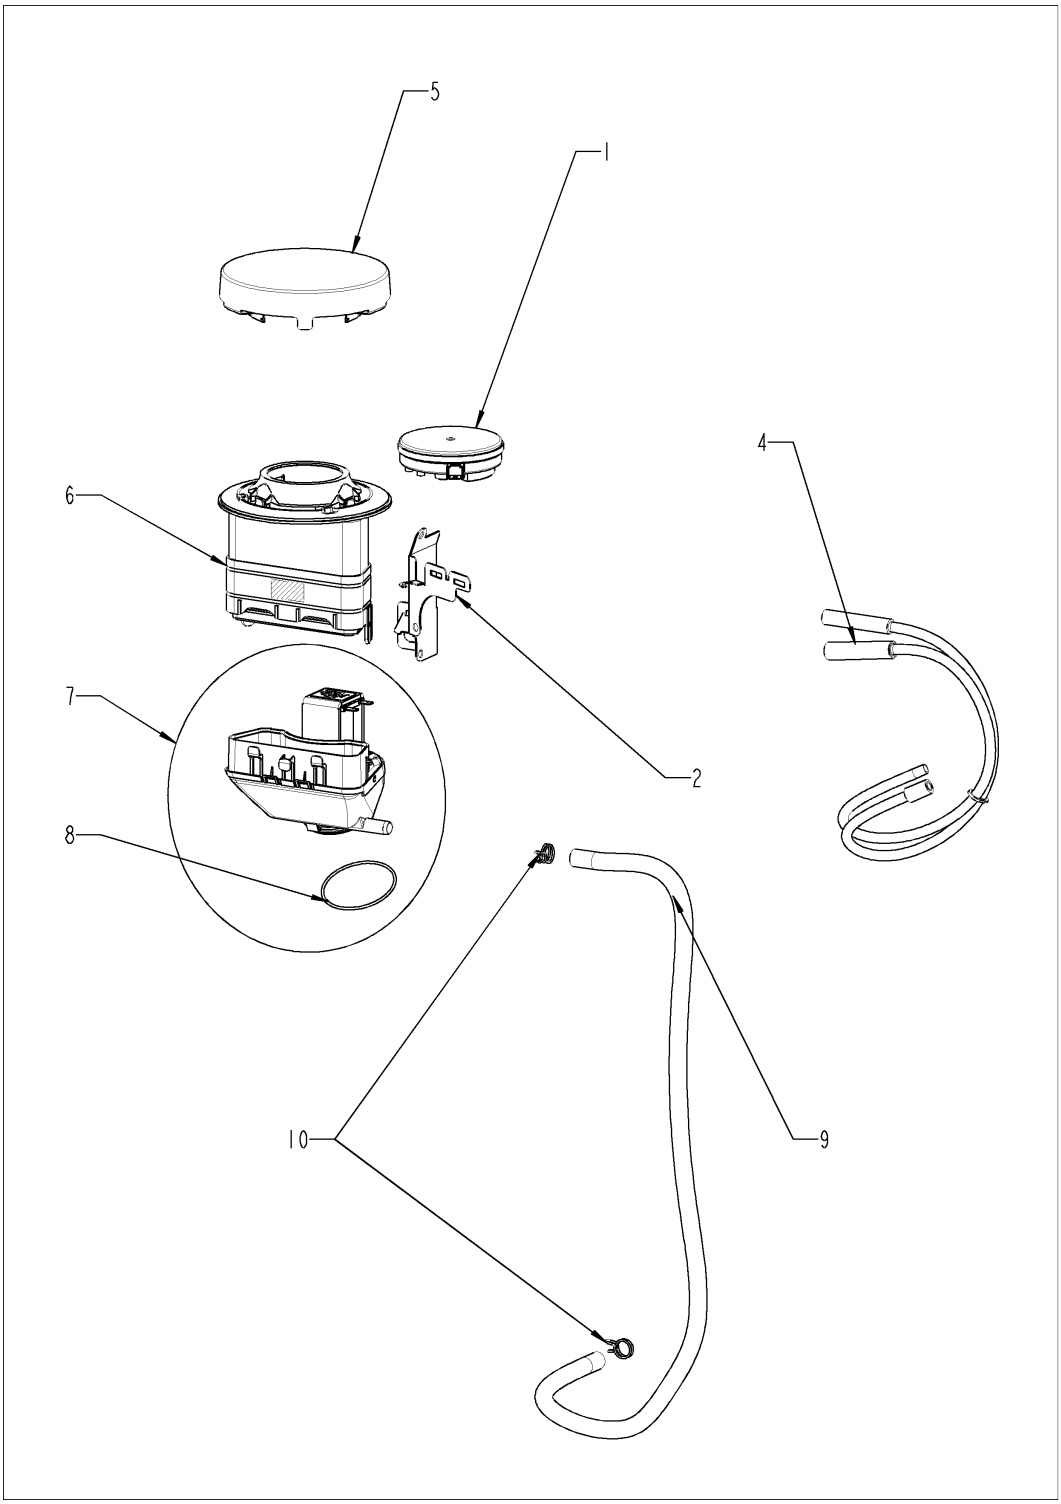

# Pos. 3 ClimaPlus

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 40.06.801P | Pressure sensor Huba 5 mbar | 1 |
| 2 | 40.05.435P | Mounting device f. pressure sensor | 1 |
| 4 | 22.01.497P | Hose set f. humidity control | 1 |
| 5 | 22.01.409P | Vent cover | 1 |
| 6 | 87.01.553S | Air inlet pipe | 1 |
| 7 | 22.01.402P | Humidity control cpl. | 1 |
| 8 | 10.01.694P | O-ring for humidity control | 2 |
| 9 | 56.01.517P | Drain hose set, humidity control, unit drip collector | 1 |
| 10 | 2066.0527P | Hose clamp ø14mm | 2 |

# Pos. 4 Steam generator

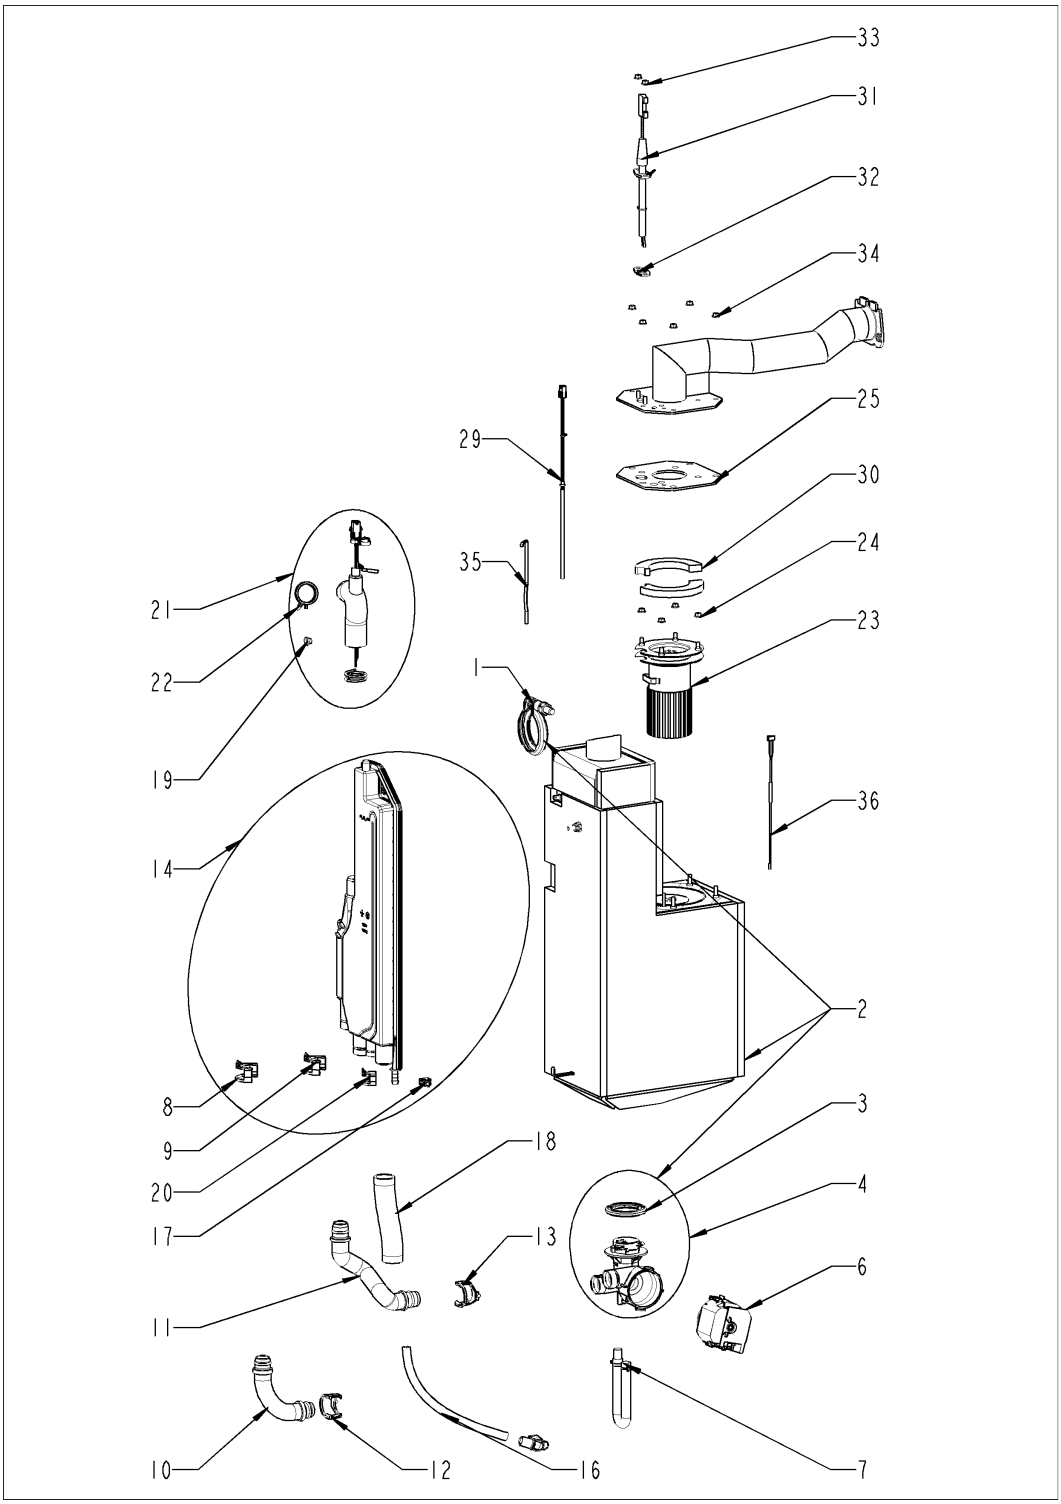


# Pos. 4 Steam generator

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 72.00.492P | V Clamp 50mm right | 1 |
| 2 | 87.01.550S | Kit Steam generator insolated | 1 |
| 3 | 44.02.200P | Gasket SC pump | 1 |
| 4 | 44.02.179S | Pump housing | 1 |
| 5 | 56.01.631P | O-ring for pump | 1 |
| 6 | 56.01.024P | Emptying pump | 1 |
| 7 | 44.02.287P | Emergency drainage hose | 1 |
| 8 | 10.01.707P | Locking ring 25mm | 1 |
| 9 | 10.01.707P | Locking ring 25mm | 1 |
| 10 | 44.02.225S | Supply hose safety armature | 1 |
| 11 | 44.02.217S | Drain hose steam generator | 1 |
| 12 | 10.01.707P | Locking ring 25mm | 1 |
| 13 | 10.01.707P | Locking ring 25mm | 1 |
| 14 | 87.01.542S | Safety device / water supply for steam generator | 1 |
| 16 | 50.02.115P | Hose, water supply, steam generator | 1 |
| 17 | 2066.0205P | Hose clamp 8-16x9 mm SW 7mm | 1 |
| 18 | 44.02.229P | Drain hose, safety device | 1 |
| 19 | 44.01.505P | Grommet Ø12x8,2 | 1 |
| 20 | 10.01.703P | Locking ring 16 mm | 1 |
| 21 | 44.02.493S | Molded hose with level electrode | 1 |
| 22 | 2066.0518P | Hose clamp 30mm | 2 |
| 23 | 70.01.275S | Burner steam gen. kit | 1 |
| 24 | 10.01.065P | Hex nut M5 | 1 |
| 25 | 72.00.408P | Gasket f. burner carrier | 1 |
| 29 | 40.06.132P | Temperature sensor eSTB 140mm *S* | 1 |
| 30 | 72.00.077P | Insulation f. burner steam gen. | 1 |
| 31 | 70.01.249S | Ignition electrode kit for steam generator | 1 |
| 32 | 70.01.258P | Gasket f. ignition electrode | 1 |
| 33 | 10.01.065P | Hex nut M5 | 2 |
| 34 | 10.01.065P | Hex nut M5 | 5 |

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 35 | 72.00.504P | Fixing plate steam generator thermostat | 1 |
| 36 | 40.06.226P | Thermocouple steam generator *B5* | 1 |


# Pos. 5 Hot air heating

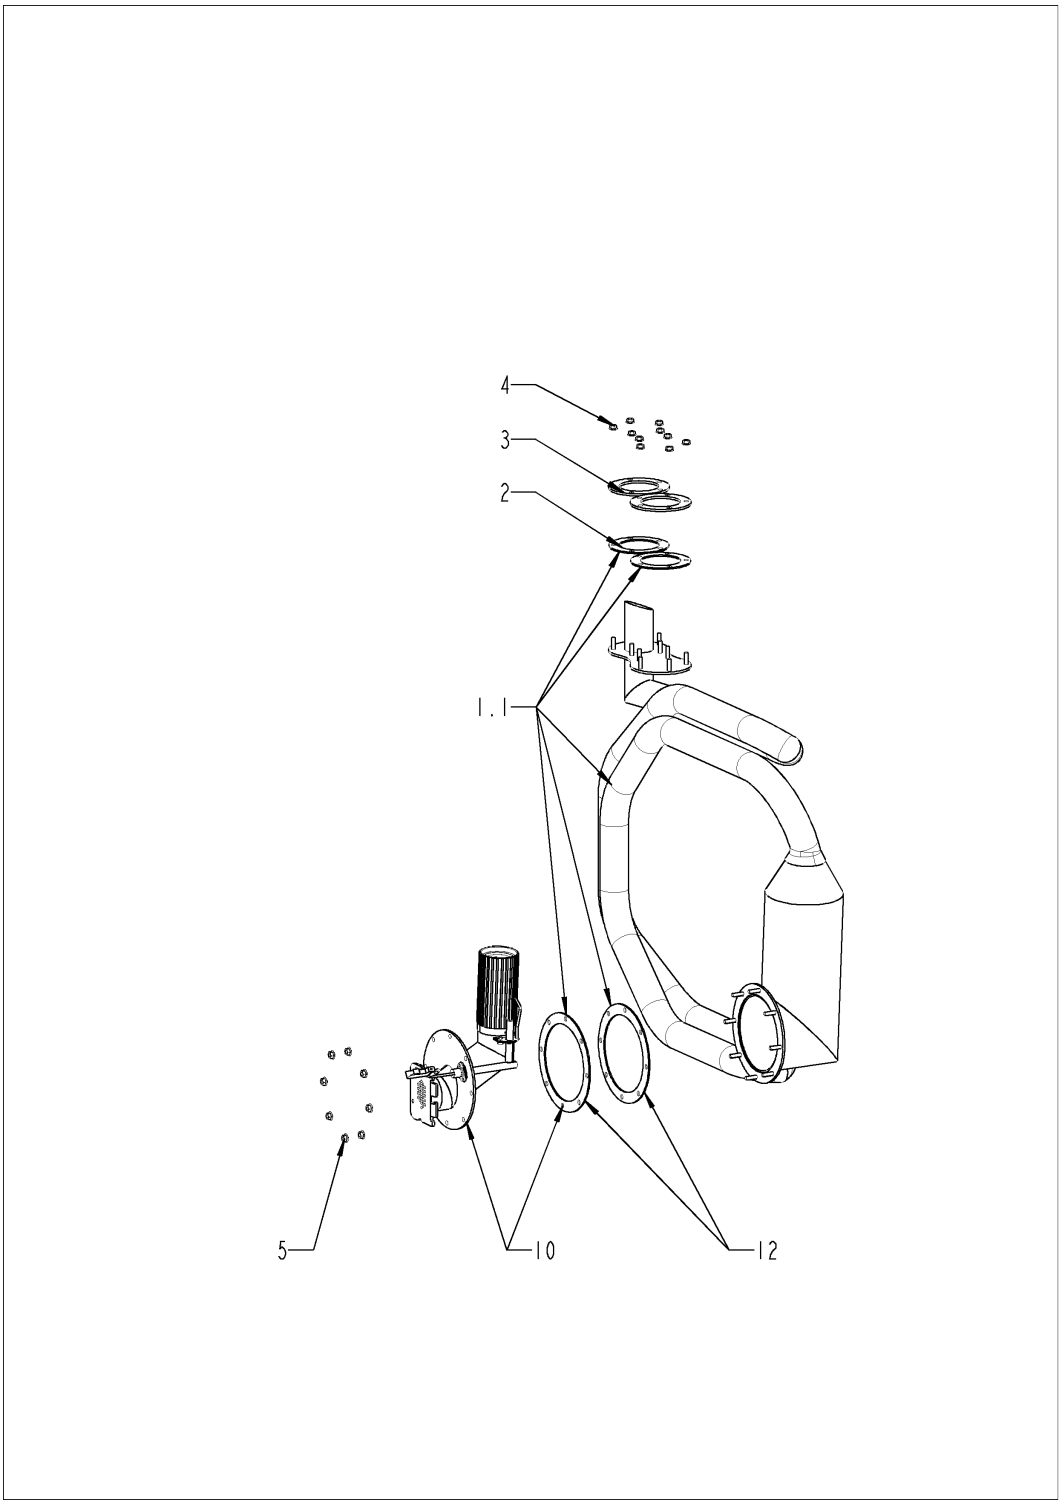

# Pos. 5 Hot air heating

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1.1 | 74.01.062S | Hot air heat exchanger | 1 |
| 2 | 74.01.124P | Gasket hot air heat exchanger/interior cabinet | 2 |
| 3 | 74.01.125P | Mating flange heat exchanger | 2 |
| 4 | 10.01.065P | Hex nut M5 | 10 |
| 5 | 10.01.065P | Hex nut M5 | 8 |
| 10 | 87.01.652S | Burner hot air | 1 |
| 12 | 74.00.296P | Gasket f. heat exchanger below | 2 |


# Pos. 10 Burner hot air

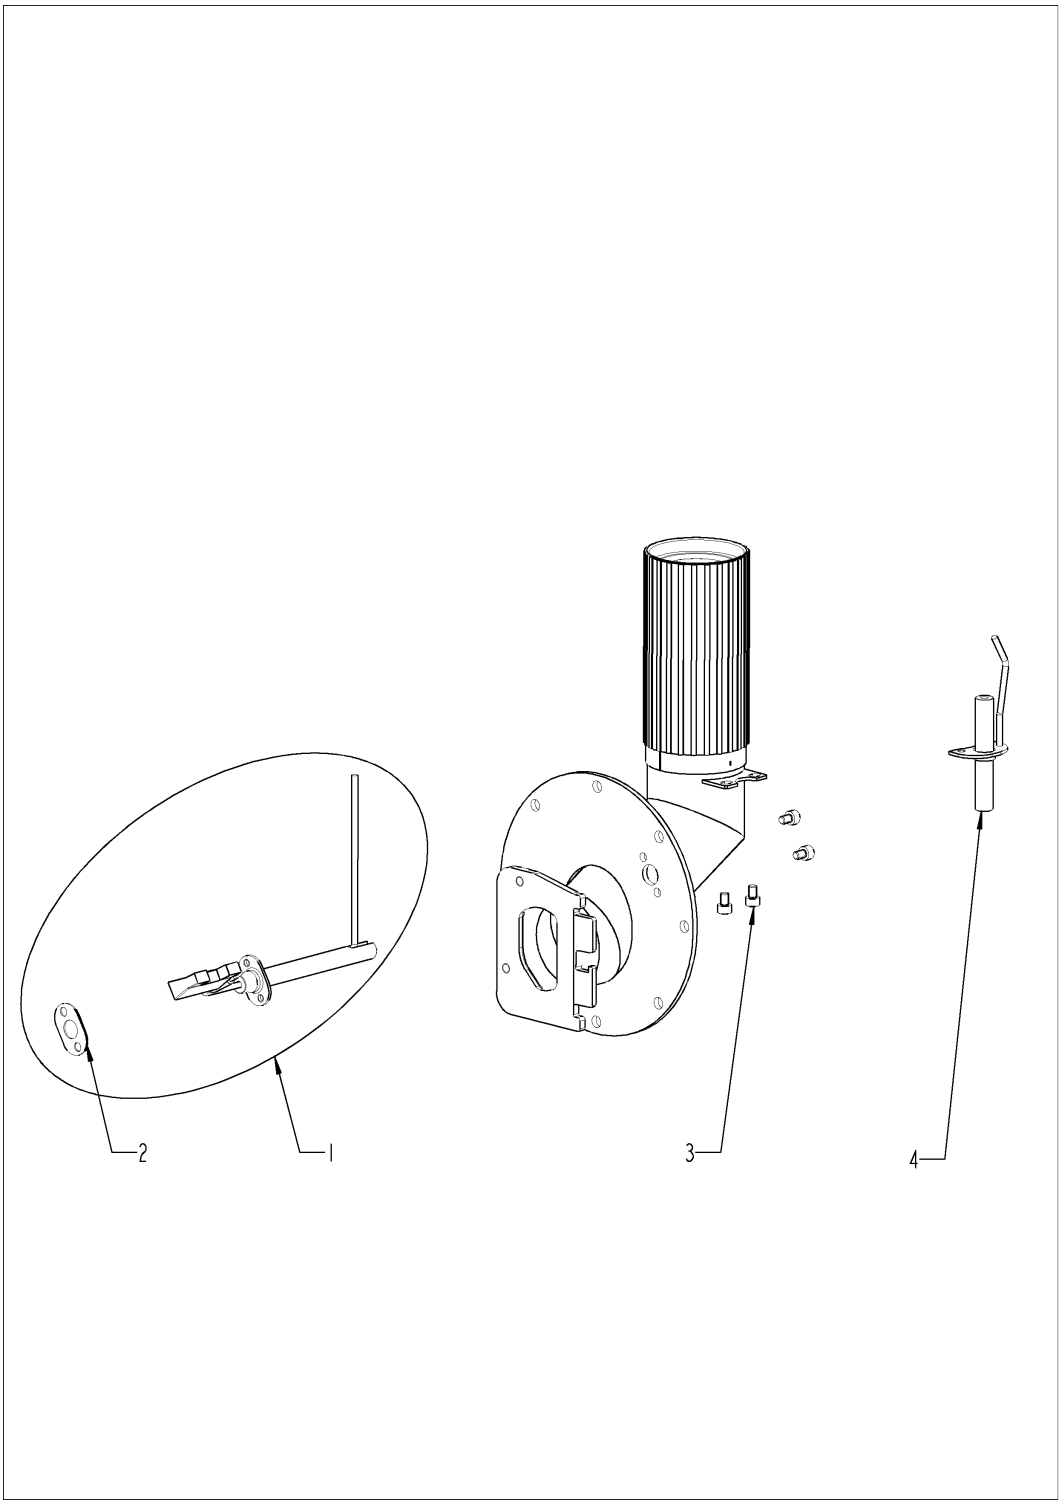

# Pos. 10 Burner hot air

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.02.005S | Ignitionelectrode, hot air 200mm | 1 |
| 2 | 74.00.290P | Gasket electrode hot air | 1 |
| 3 | 10.00.696P | Allen screw M4x6 w. Precoat 85 | 4 |
| 4 | 87.02.010S | Earth electrode, hot air | 1 |


# Pos. 6 Motor and fan wheel

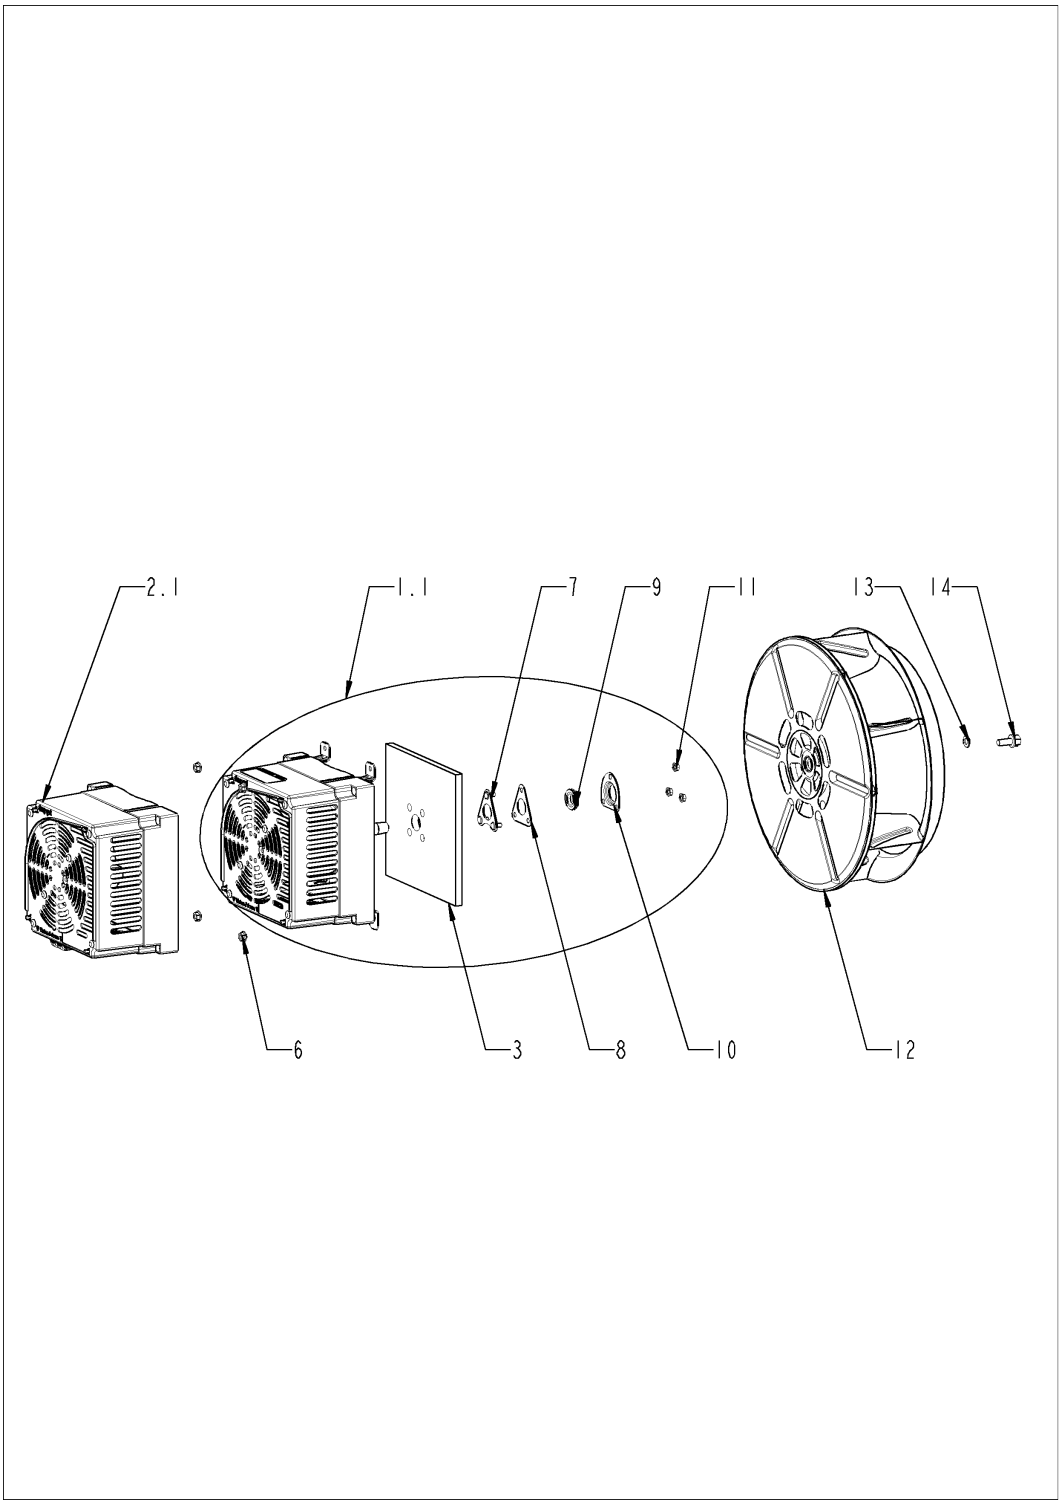

# Pos. 6 Motor and fan wheel

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1.1 | 87.01.558S | Fan motor | 1 |
| 2.1 | 42.00.276P | Motor control for fan motor | 1 |
| 3 | 20.02.807P | Isolation for mounting plate for motor | 1 |
| 6 | 10.00.709P | Hex nut M6 w. locking | 4 |
| 7 | 22.01.423P | Mounting support f. gasket flange | 1 |
| 8 | 22.01.425P | Graphit seal for gasket flange | 1 |
| 9 | 22.00.985P | Motor shaft gasket D15 | 1 |
| 10 | 22.01.427P | Flange f. motor shaft gasket | 1 |
| 11 | 10.01.065P | Hex nut M5 | 3 |
| 12 | 22.01.151S | Fan wheel | 1 |
| 13 | 1308.0162P | Washer A8,4 | 1 |
| 14 | 10.00.936P | Hex screw M8x20 | 1 |


# Pos. 7 Interior cabinet

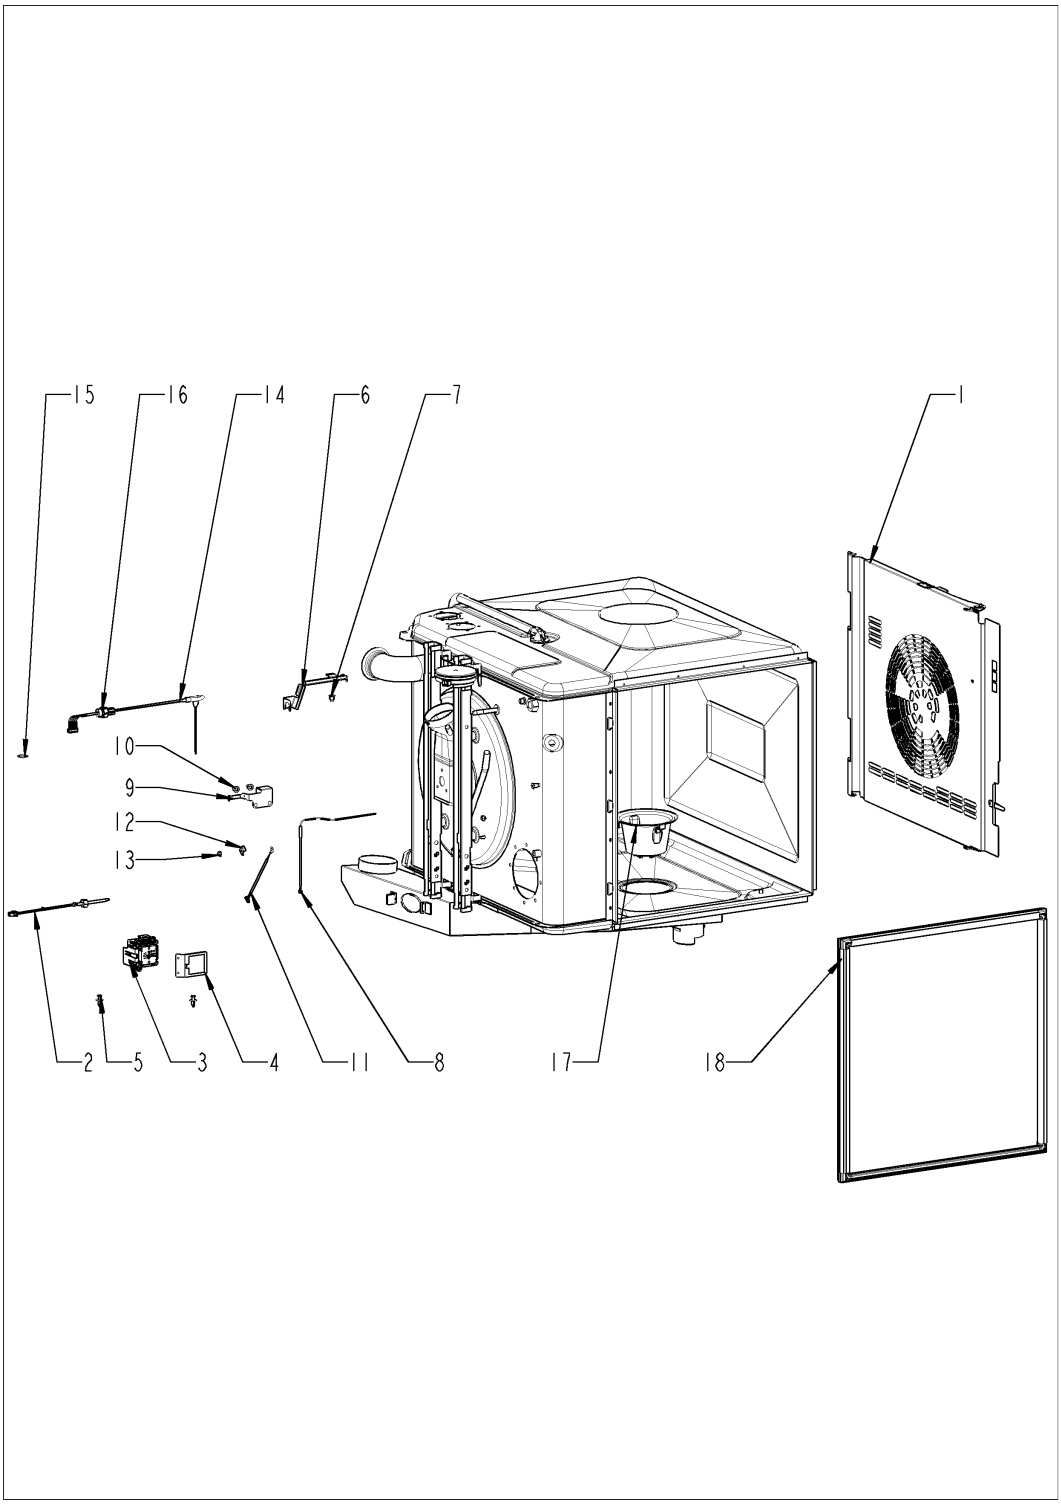

# Pos. 7 Interior cabinet

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 22.01.337P | Air baffle | 1 |
| 2 | 40.06.112S | Temperature sensor eSTB *HA* | 1 |
| 3 | 40.06.684P | Safety temperature limiter | 1 |
| 4 | 40.06.053P | Fixing device for safety temperature limiter | 1 |
| 5 | 10.00.515P | Rivet 3,2x8 A2/NSF | 2 |
| 6 | 40.06.098P | Shielding for core temperature sensor | 1 |
| 7 | 10.01.076P | Cap nut M5*A2 | 1 |
| 8 | 40.05.995P | Thermocouple | 1 |
| 9 | 40.05.489P | Shielding for interior cabinet sensor | 1 |
| 10 | 10.01.076P | Cap nut M5*A2 | 2 |
| 11 | 40.06.210S | Thermocouple humidity *B4* | 1 |
| 12 | 10.00.087P | Clamp strap f. sensor | 1 |
| 13 | 10.01.065P | Hex nut M5 | 1 |
| 14 | 40.06.378P | Core temperature probe | 1 |
| 15 | 1315.0104P | Copper washer 16x20x1,5 | 1 |
| 16 | 10.01.751P | Hex nut M16 DIN934 A2 | 1 |
| 17 | 56.01.491P | Outlet sieve | 1 |
| 18 | 20.02.550P | Door gasket | 1 |


# Pos. 8 Door

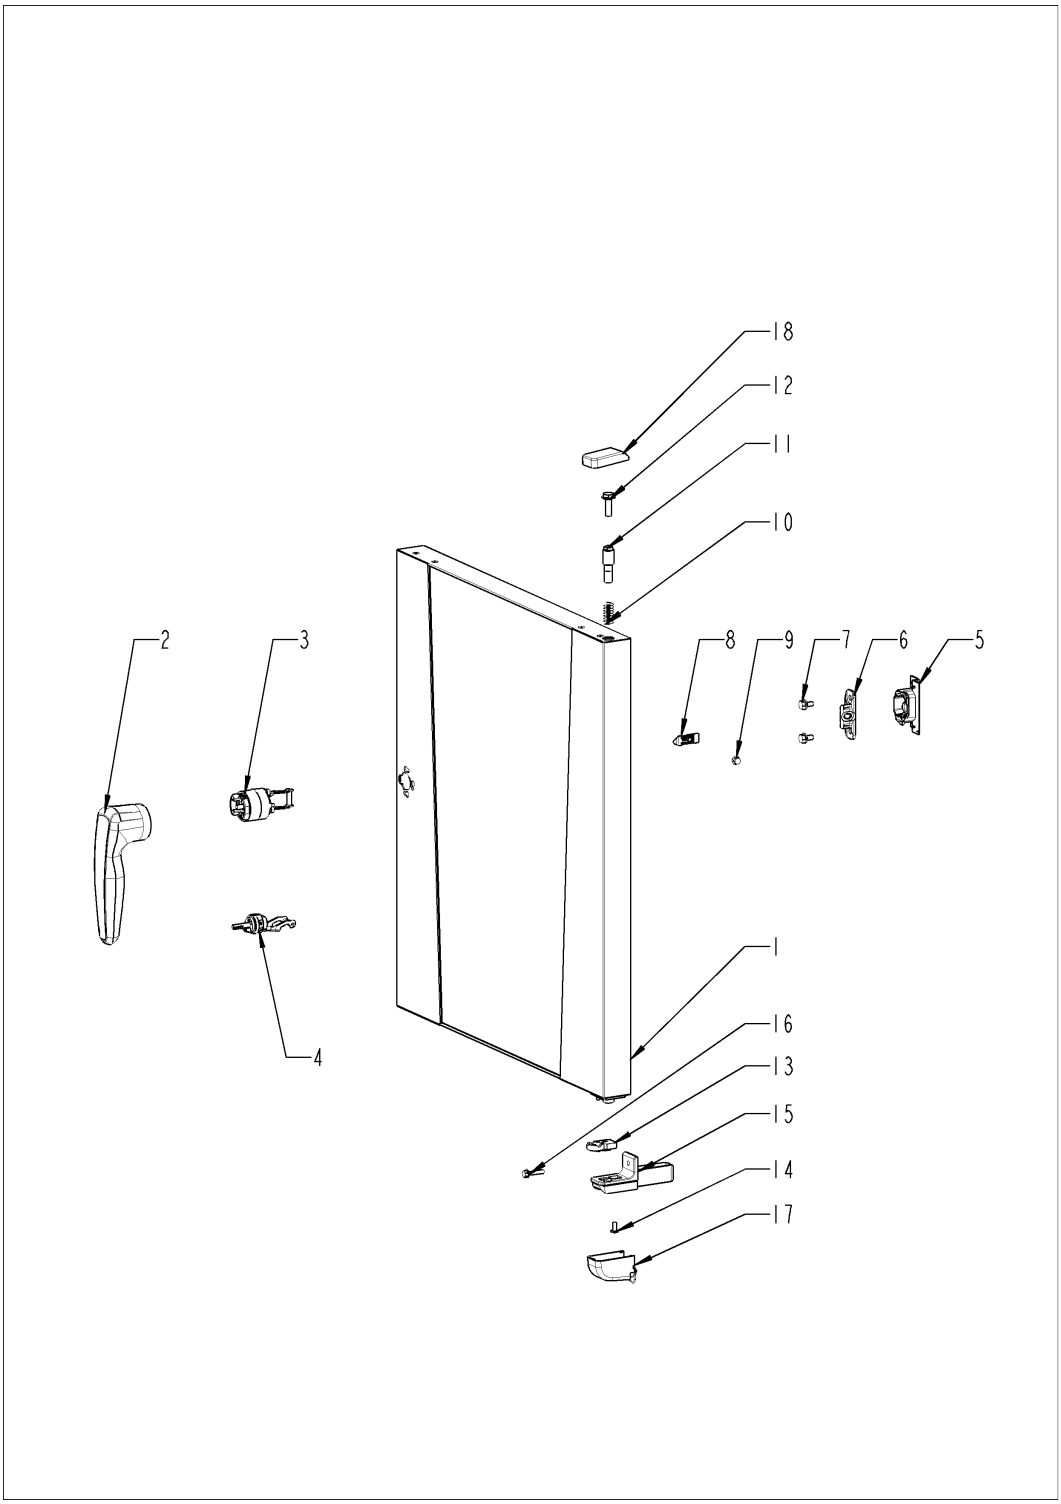

# Pos. 8 Door

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 24.04.099S | Door | 1 |
| 2 | 24.04.084P | Door handle | 1 |
| 3 | 24.03.041P | Door lock with spring U-bolt | 1 |
| 4 | 24.03.288P | Spring U-bolt for door lock | 1 |
| 5 | 24.04.211P | Lock cover | 1 |
| 6 | 24.02.958P | Holding bracket f. door catch | 1 |
| 7 | 10.01.719P | Hex screw M6x12 | 2 |
| 8 | 24.02.959P | Door catch | 1 |
| 9 | 24.02.960P | Interlocking tooth screw M5x6 | 1 |
| 10 | 2001.0109P | Compression spring | 1 |
| 11 | 24.03.040P | Door bolt | 1 |
| 12 | 1008.0768P | Ornamental screw M8x16 | 1 |
| 13 | 14.01.057P | Door bolt | 1 |
| 14 | 10.00.099P | Hex screw M8x12 | 1 |
| 15 | 14.01.056P | Door mounting support bottom | 1 |
| 16 | 10.01.755P | Countersunk screw M5x25 A2 | 1 |
| 17 | 56.01.429P | Cap for door mounting support bottom | 1 |
| 18 | 16.04.110P | Cover for door mounting support | 1 |


# Pos. 1 Door

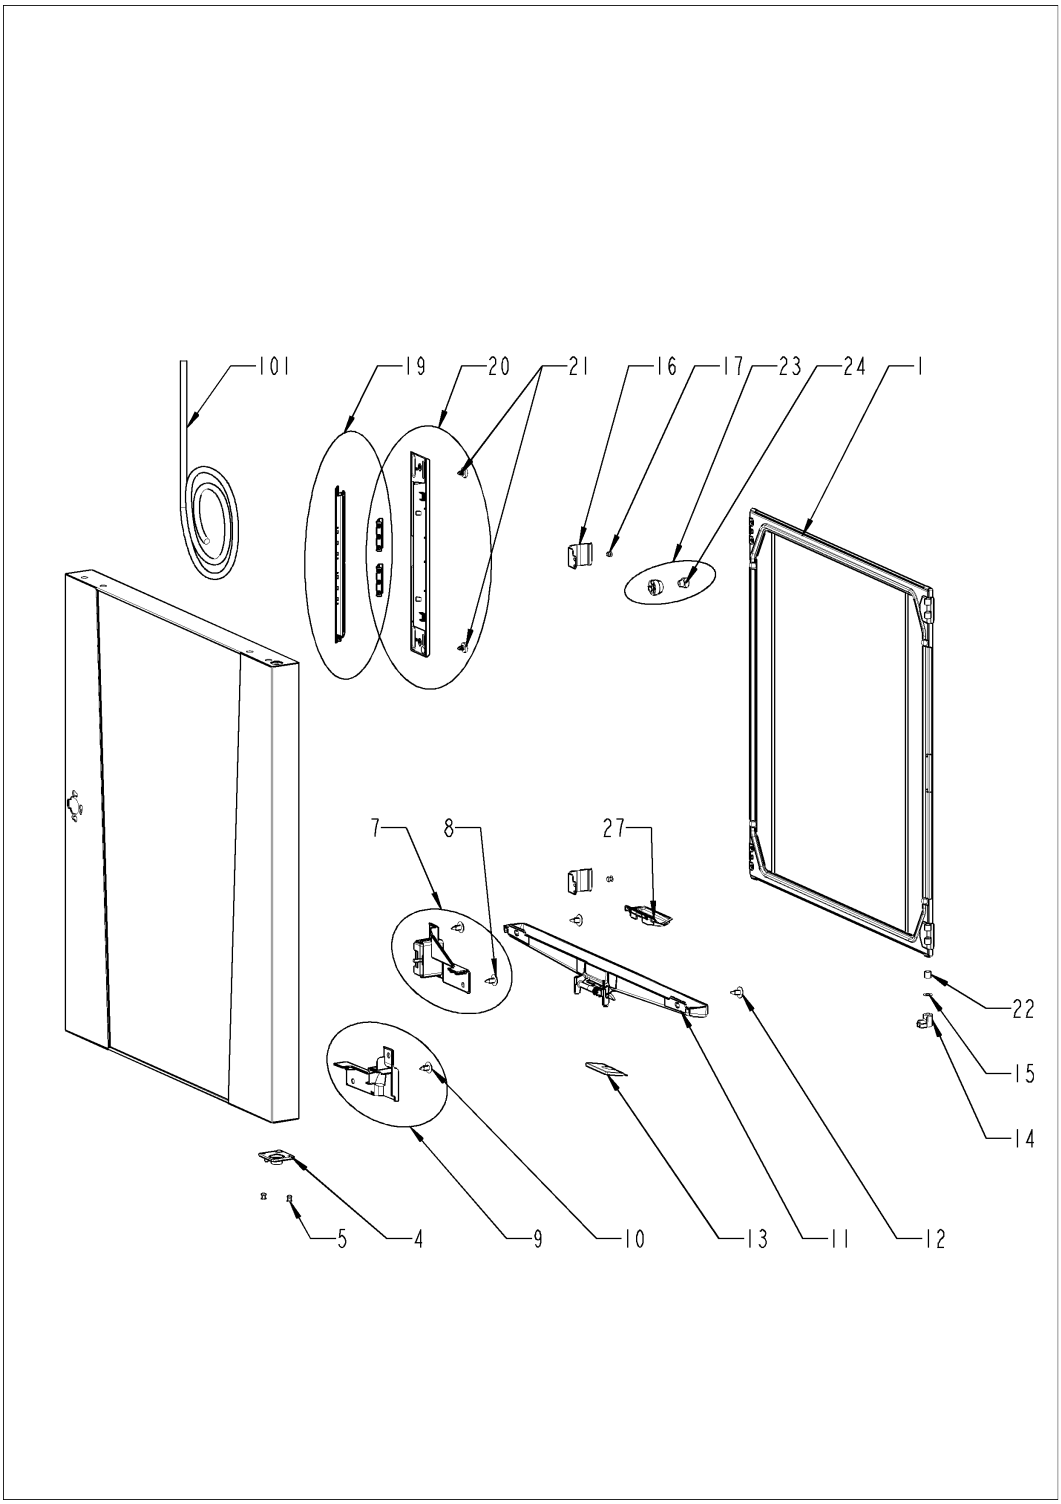

# Pos. 1 Door

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 24.04.329S | Inner door pane | 1 |
| 4 | 24.04.217P | Door setting bolt | 1 |
| 5 | 10.00.904P | Rivet B4x8 | 2 |
| 7 | 24.04.596S | Cover for door magnet with magnet | 1 |
| 8 | 10.02.008P | Rivet with screw | 2 |
| 9 | 24.05.303S | Hinge cover | 1 |
| 10 | 10.02.008P | Rivet with screw | 2 |
| 11 | 24.05.499S | Door drip collector | 1 |
| 12 | 10.00.989P | Rivet with screw | 2 |
| 13 | 24.05.345P | Drain seal  for door drip collector | 1 |
| 14 | 24.03.056P | Slide bush for door | 1 |
| 15 | 24.03.057P | Abrasion protection for glide socket | 1 |
| 16 | 24.03.787S | Fixing bracket kit for interior glass pane | 2 |
| 17 | 10.02.416P | Rivet Ø4x8, A2 | 2 |
| 19 | 87.01.578S | LED bar | 1 |
| 20 | 87.01.586S | LED optics | 1 |
| 21 | 24.05.458P | Plastic spreader rivet | 2 |
| 22 | 24.03.764P | Spacer for door | 1 |
| 23 | 87.01.438 | Spacer kit for glass pane | 1 |
| 24 | 24.00.171P | Silicone buffer 7mm for door | 6 |
| 27 | 24.05.501P | Slosh protection | 1 |
| 101 | 40.06.082P | Cable, interior light W40 *door lighting* | 1 |


# Pos. 9 Exterior cabinet

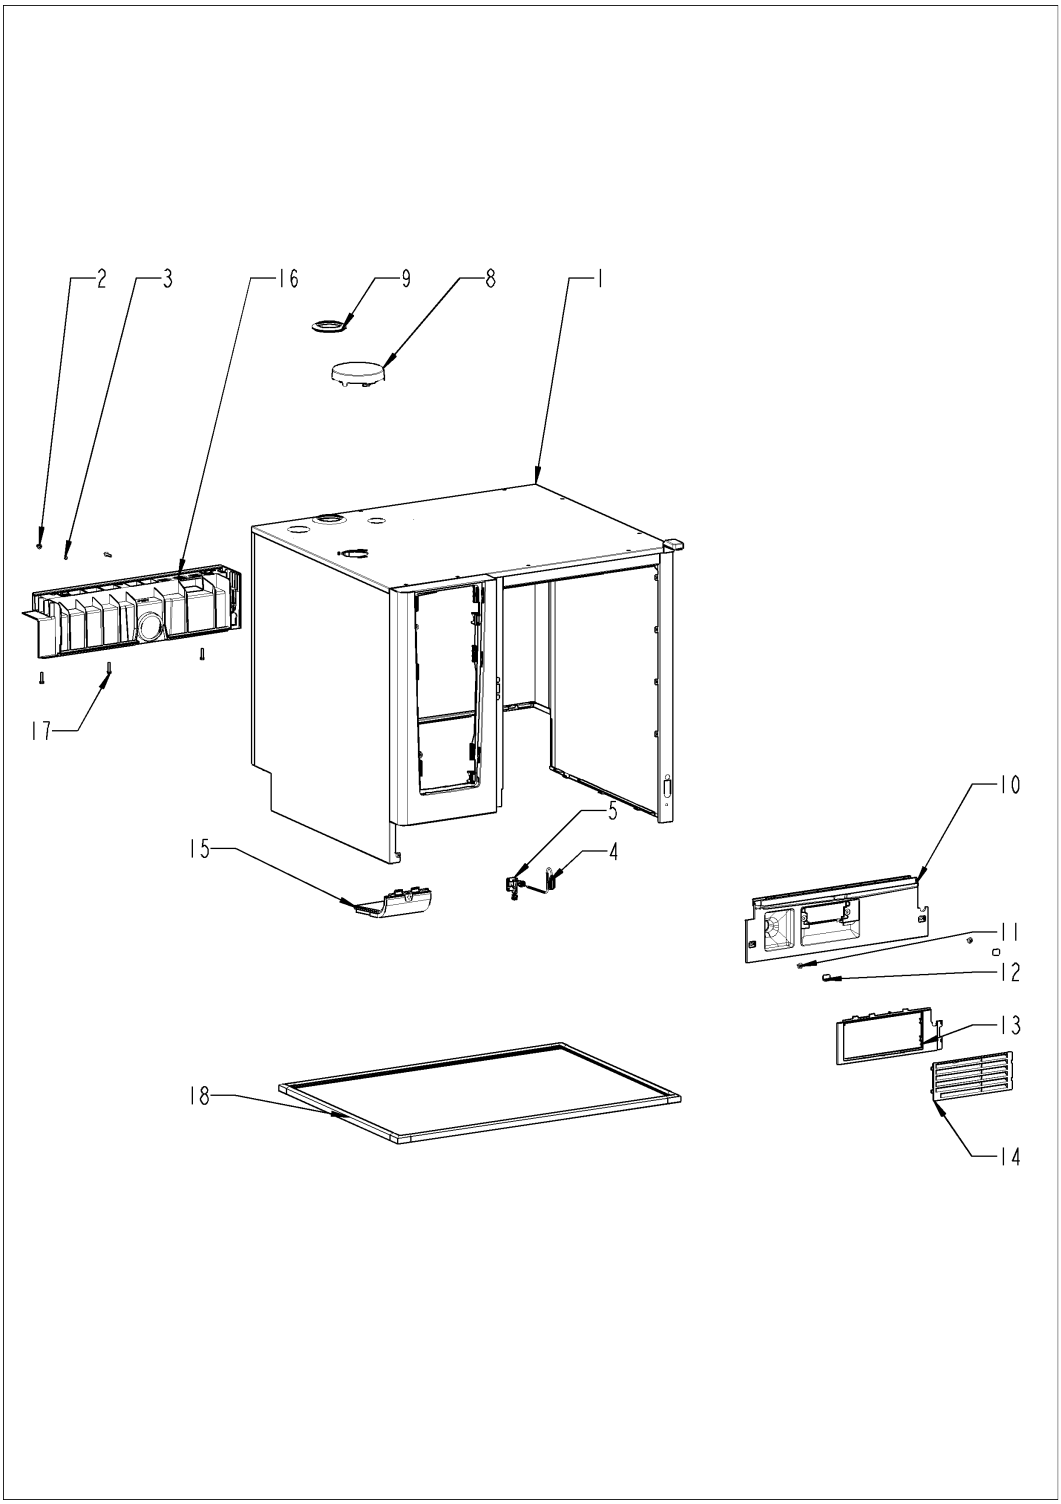

# Pos. 9 Exterior cabinet

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | | Exterior cabinet | 1 |
| 2 | 10.01.076P | Cap nut M5*A2 | 1 |
| 3 | 1205.0120P | Tooth lock washer A5,3 | 1 |
| 4 | 40.07.962P | Door switch | 1 |
| 5 | 14.00.937P | Bracket for door contact switch | 1 |
| 8 | 22.01.409P | Vent cover | 1 |
| 9 | 16.01.434P | Gasket for venting tube d=73mm | 1 |
| 10 | 56.01.208P | Base panel right | 1 |
| 11 | 10.02.008P | Rivet with screw | 4 |
| 12 | 56.01.419P | Plastic cap | 2 |
| 13 | 56.01.432P | Base panel left | 1 |
| 14 | 56.01.422P | Grid cover | 1 |
| 15 | 40.05.424P | Air inlet filter cpl. | 1 |
| 16 | 56.01.521P | Waste water cover | 1 |
| 17 | 10.01.755P | Countersunk screw M5x25 A2 | 3 |
| 18 | 12.02.664P | Gasket for base frame | 1 |


# Pos. 1 Exterior cabinet

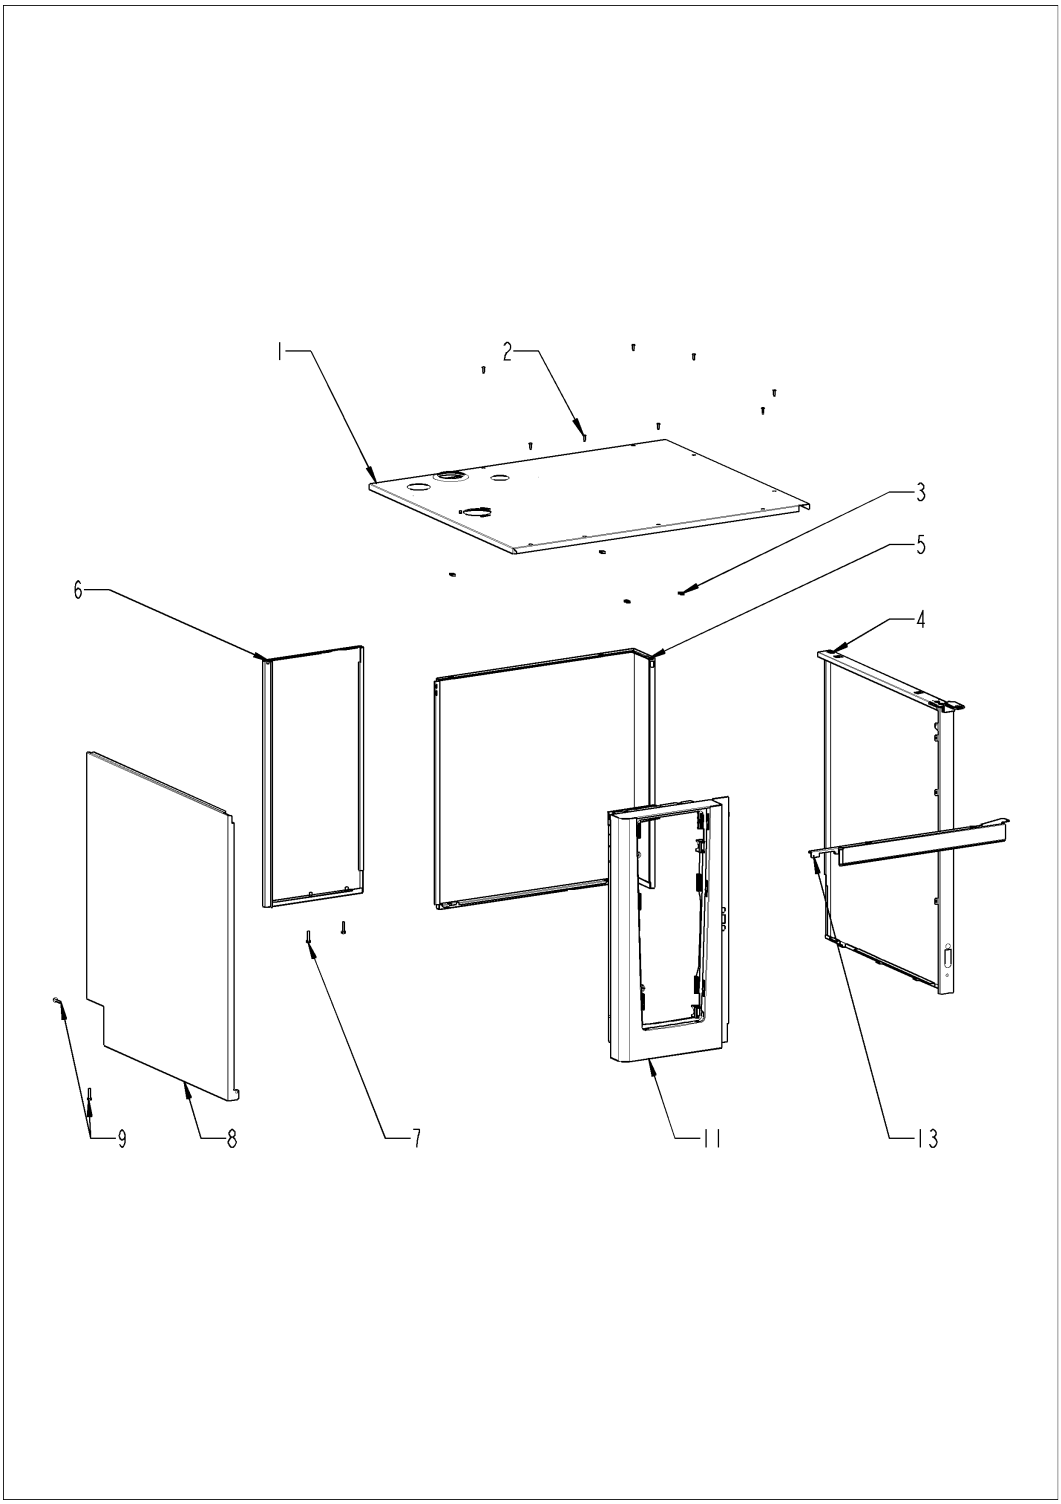

# Pos. 1 Exterior cabinet

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 16.03.382P | Top cover | 1 |
| 2 | 1003.2265P | Countersunk self tapping screw 4,2x16 | 8 |
| 3 | 1104.0820P | Snap nut 4,2mm | 8 |
| 4 | 16.04.073P | Side panel right | 1 |
| 5 | 16.04.083P | Back panel, right | 1 |
| 6 | 16.03.987P | Back panel, left | 1 |
| 7 | 10.01.755P | Countersunk screw M5x25 A2 | 2 |
| 8 | 16.03.539P | Side panel left | 1 |
| 9 | 10.01.755P | Countersunk screw M5x25 A2 | 2 |
| 11 | 16.03.339P | Front panel | 1 |
| 13 | 16.04.091P | Crossbar top | 1 |


# Pos. 10 Water

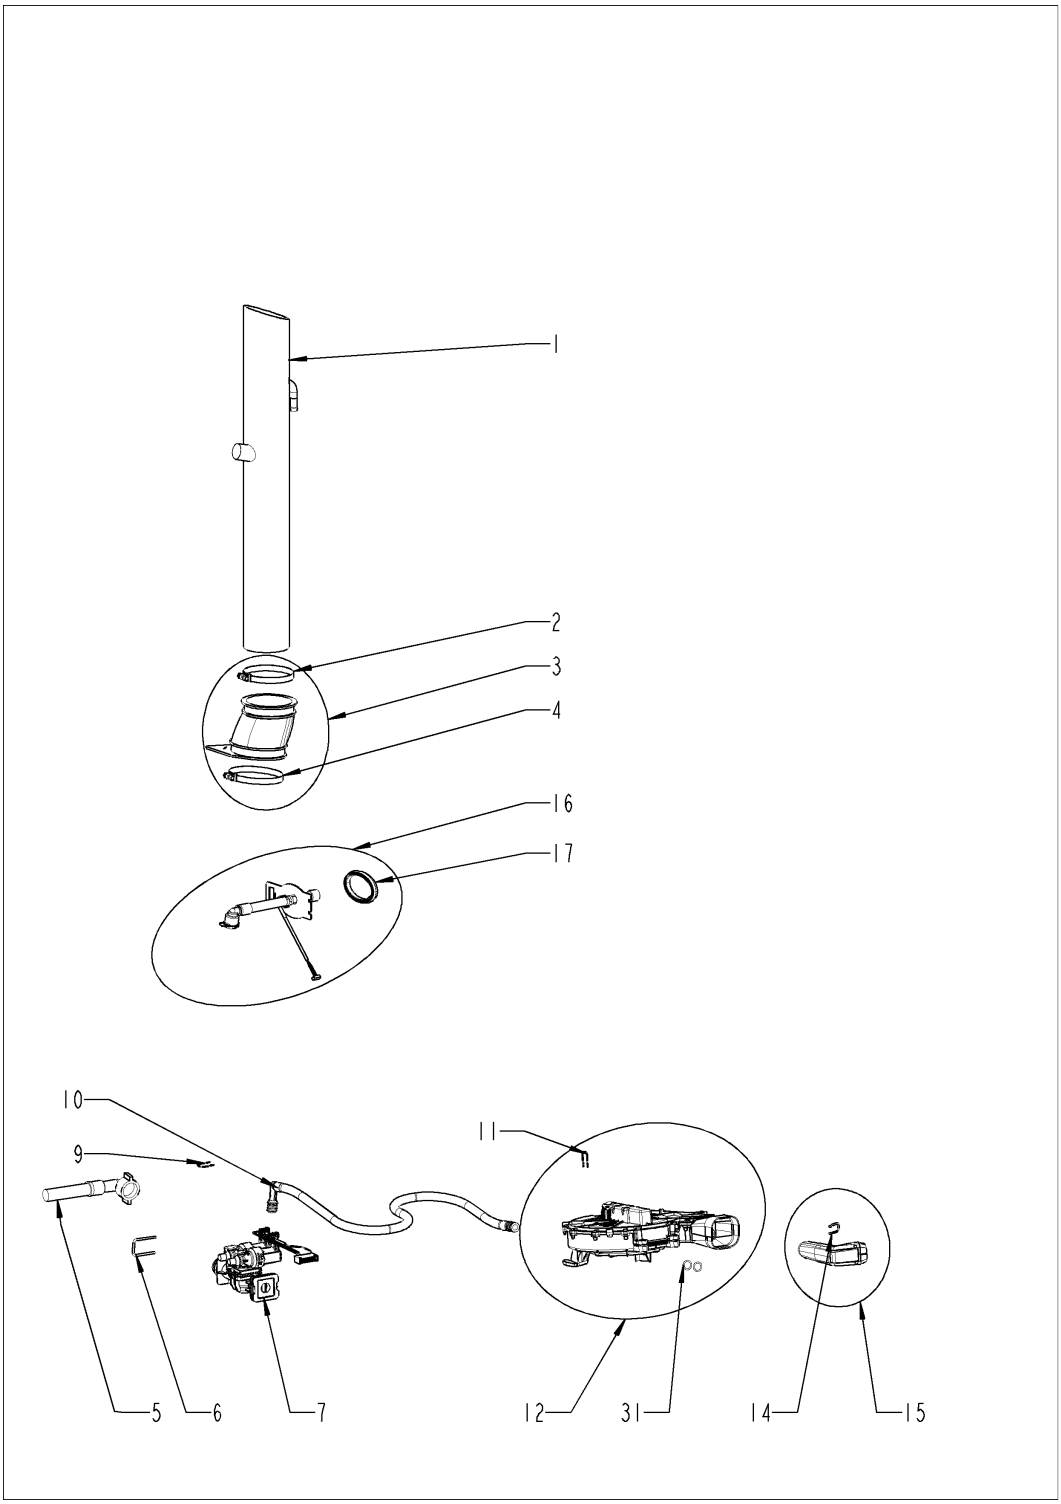

# Pos. 10 Water

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 54.01.927P | Ventilation pipe | 1 |
| 2 | 10.01.262P | Hose clamp 76 mm | 1 |
| 3 | 54.01.729S | Silicone form piece, venting pipe + hose clamp | 1 |
| 4 | 10.01.686P | Hose clamp Ø82mm | 1 |
| 5 | 2067.0709P | Hose for water supply 2500mm | 1 |
| 6 | 50.02.112P | Clamp for water distribution | 1 |
| 7 | 50.02.102P | Solenoid valve triple with flowmeter | 1 |
| 9 | 50.00.085P | Retractor locking spring | 1 |
| 10 | 52.00.106S | Connect. hose f. hand shower roll guide | 1 |
| 11 | 50.00.085P | Retractor locking spring | 1 |
| 12 | 52.00.096P | Hand shower roll guide | 1 |
| 14 | 50.00.156P | Clamp f. hand shower roll guide | 1 |
| 15 | 52.00.127S | Hand shower black | 1 |
| 16 | 54.01.895S | Inspection lid, B2 | 1 |
| 17 | 54.01.168P | Gasket f. inspection lid | 1 |
| 31 | 50.00.554P | O-ring for hand shower 11x2mm | 2 |


# Pos. 11 CleanJet + Care

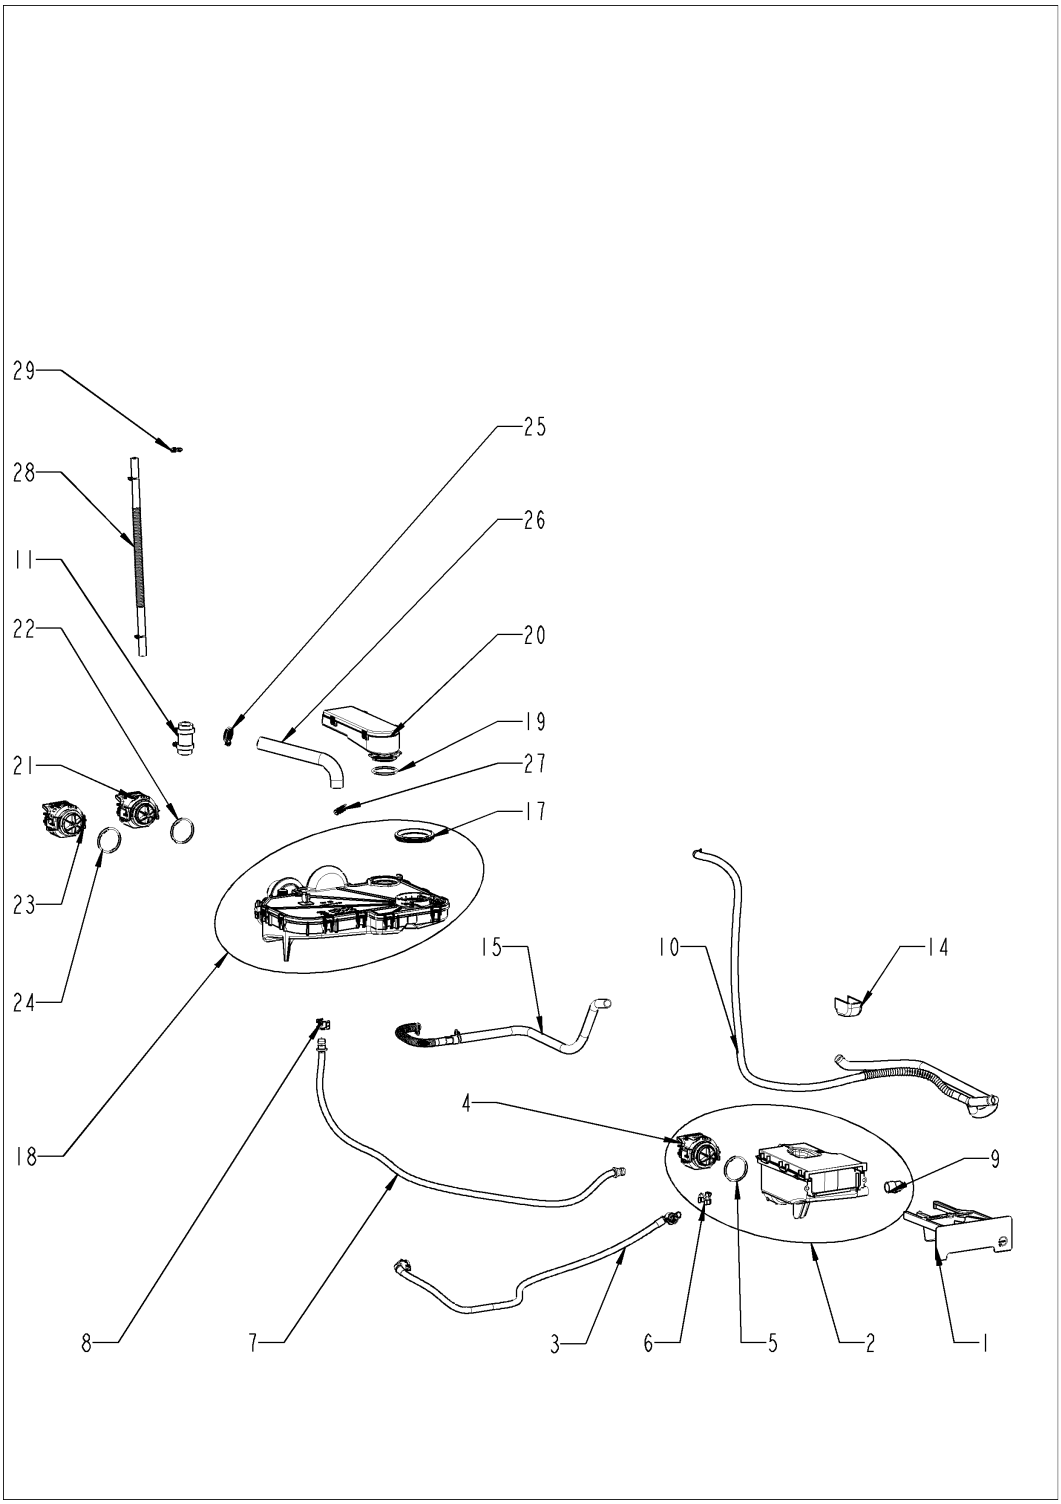

# Pos. 11 CleanJet + Care

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 56.00.952P | Drawer Care container | 1 |
| 2 | 56.01.466P | Care container with pump | 1 |
| 3 | 50.02.131P | Supply hose for "Care box" | 1 |
| 4 | 56.01.028P | Care Pump | 1 |
| 5 | 56.01.631P | O-ring for pump | 1 |
| 6 | 10.01.703P | Locking ring 16 mm | 1 |
| 7 | 56.01.506S | Care hose | 1 |
| 8 | 10.01.703P | Locking ring 16 mm | 1 |
| 9 | 56.00.752P | Hose fitting EPDM-70ShA | 1 |
| 10 | 56.01.517P | Drain hose set, humidity control, unit drip collector | 1 |
| 11 | 56.01.682S | Bushing CleanJet pipe | 1 |
| 14 | 56.01.245P | Cap for door mounting support bottom | 1 |
| 15 | 56.01.730P | Drain hose drip collector | 1 |
| 16 | 10.00.982P | Hose clamp D=18.2 | 2 |
| 17 | 56.01.461P | Gasket DN60 | 1 |
| 18 | 56.01.486P | Cleaning box | 1 |
| 19 | 56.01.481P | O Ring emergency overflow | 1 |
| 20 | 56.01.454S | Emergency overflow cleaning box | 1 |
| 21 | 56.01.017P | Drain pump Cleaning box | 1 |
| 22 | 56.01.631P | O-ring for pump | 1 |
| 23 | 56.01.020P | Recirculation pump | 1 |
| 24 | 56.01.631P | O-ring for pump | 1 |
| 25 | 2066.0521P | Hose clamp 27mm | 1 |
| 26 | 56.01.792P | CleanJet hose | 1 |
| 27 | 2066.0521P | Hose clamp 27mm | 1 |
| 28 | 56.01.688S | Silicone hose with hose clamps | 1 |
| 29 | 2066.0527P | Hose clamp ø14mm | 1 |


# Pos. 12 Gas parts

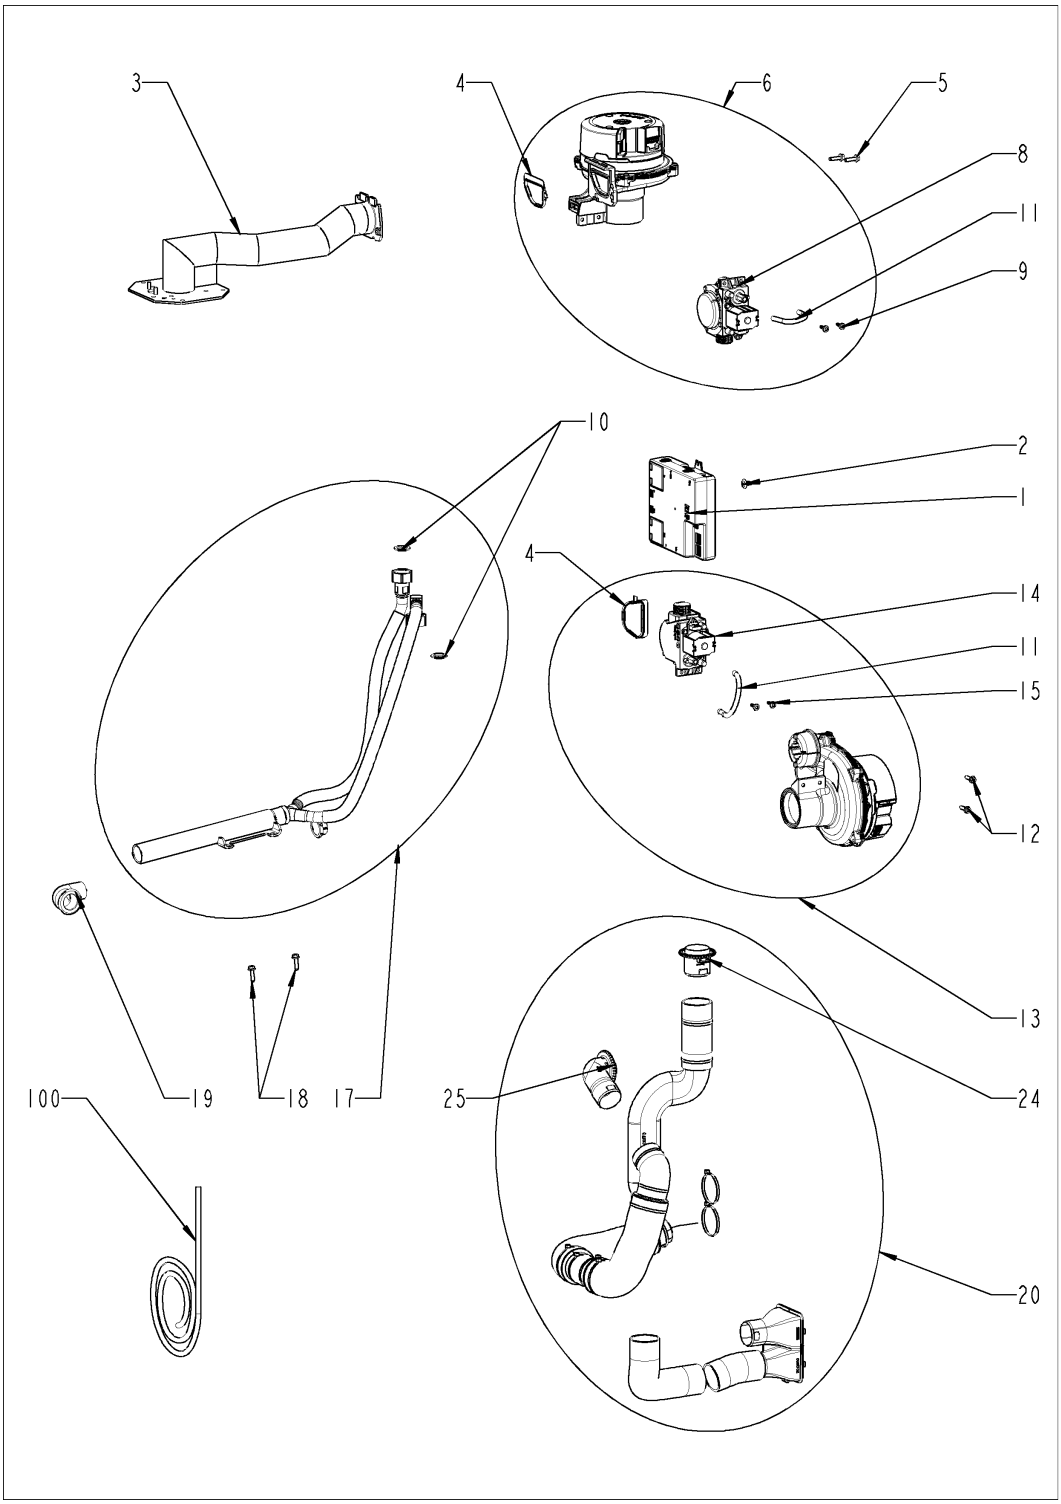

# Pos. 12 Gas parts

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 70.01.205S | Automatic ignition controller | 1 |
| 2 | 10.02.008P | Rivet with screw | 1 |
| 3 | 70.01.031P | Burner pipe | 1 |
| 4 | 70.01.148P | Gasket f. blower burner | 2 |
| 5 | 10.01.747P | Hex screw M5x19 Torx T20 | 2 |
| 6 | 70.01.674S | Gas blower / gas valve kit, steam | 1 |
| 8 | 87.01.838S | Gas valve LK1 | 1 |
| 9 | 10.01.902P | Truss head screw Torx M5X12 T25 | 2 |
| 10 | 70.01.622P | Gasket corrugated hose | 2 |
| 11 | 70.01.268P | Connection compensation tube | 1 |
| 12 | 10.01.747P | Hex screw M5x19 Torx T20 | 2 |
| 13 | 70.01.673S | Gas blower / gas valve kit, hot air | 1 |
| 14 | 87.01.838S | Gas valve LK1 | 1 |
| 15 | 10.01.902P | Truss head screw Torx M5X12 T25 | 2 |
| 17 | 70.01.605S | Gas connection manifold | 1 |
| 18 | 10.01.755P | Countersunk screw M5x25 A2 | 2 |
| 19 | 70.00.188P | Hose fitting 3/4"-3/4" | 1 |
| 20 | 70.01.326P | Air supply, hot air | 1 |
| 24 | 70.01.167P | Air hose adapter straight DN40 | 1 |
| 25 | 70.01.168P | Air hose adapter 90° DN40 | 1 |
| 100 | 87.01.735S | Wire set earth - ignition electrode | 1 |


# Pos. 13 Standard accessory

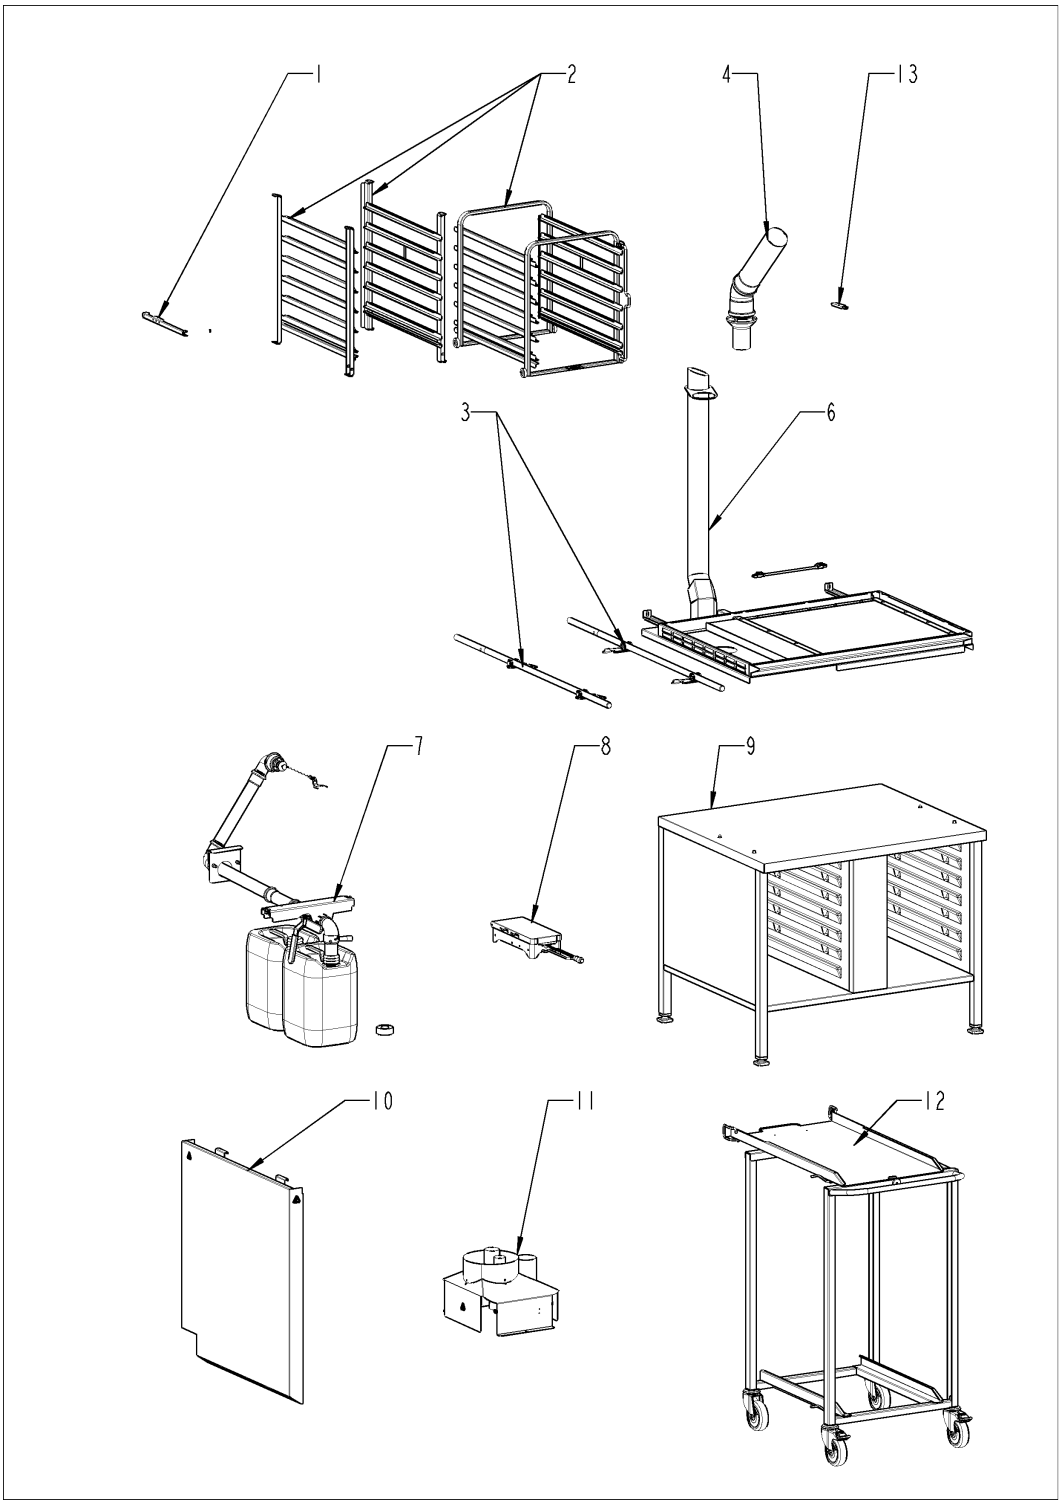

# Pos. 13 Standard accessory

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.71.022 | Positioning support for core sensor | 1 |
| 2 | 60.61.373 | Hinging rack type 6-1/1, | 1 |
| 3 | 87.01.918S | Lifting aid kit with bag | 1 |
| 4 | 60.72.592 | Condensation breaker | 1 |
| 6 | | CombiDuo | 1 |
| 7 | | Internal fat drain table unit | 1 |
| 8 | | VarioSmoker | 1 |
| 9 | | Stands | 1 |
| 10 | | Heat shield | 1 |
| 11 | | Flow guard | 1 |
| 12 | | Transport trolley | 1 |
| 13 | 87.01.757 | Memory-Stick USB *iCombi Pro & iCombi Classic* | 1 |


# Pos. 6 CombiDuo

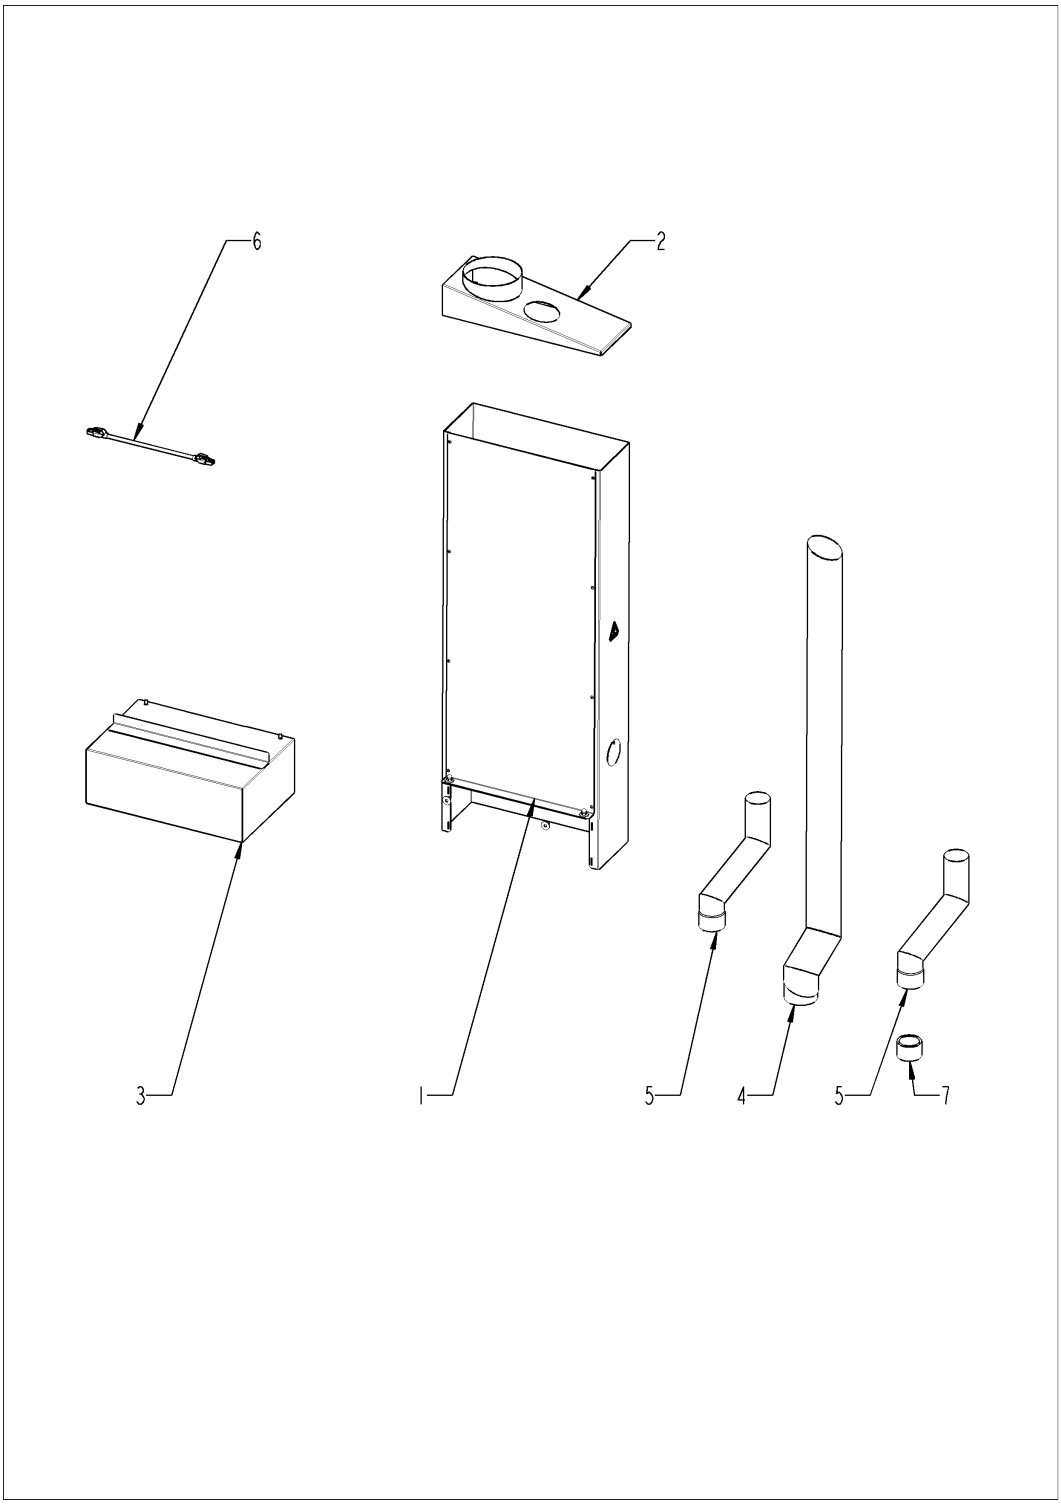

# Pos. 6 CombiDuo

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.74.761S | Exhaust gas Stack | 1 |
| 2 | 60.75.542P | Shaft cover | 1 |
| 3 | 60.74.760S | Head protection cover | 1 |
| 4 | 60.75.535P | Venting pipe for Combi-Duo | 1 |
| 5 | 60.75.490P | Flue riser | 1 |
| 6 | 40.05.839P | Bus cable RJ45 2.85m | 2 |
| 7 | 60.76.442P | Adapter Flue riser | 1 |


# Pos. 7 Internal fat drain table unit

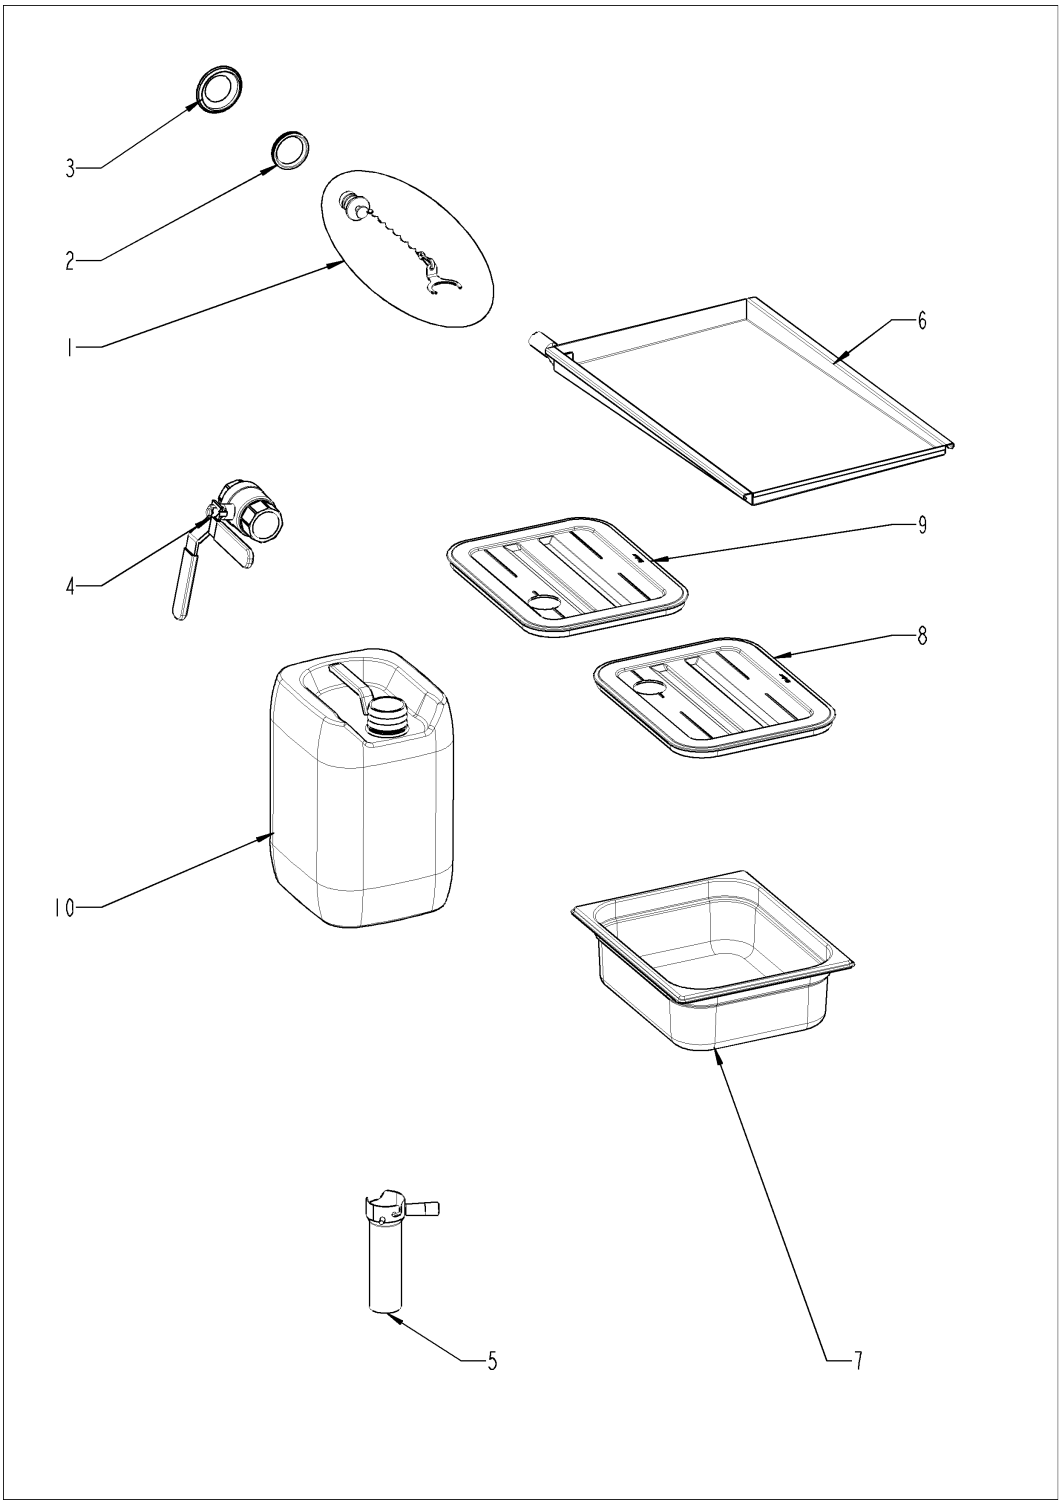

# Pos. 7 Internal fat drain table unit

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.76.409P | End cap for Internal fat drain | 1 |
| 2 | 60.74.564P | Gasket for int. fat drain | 1 |
| 3 | 56.00.874P | Gasket wastewater | 1 |
| 4 | 60.72.729P | Ball valve DN32 (1 1/4") | 1 |
| 5 | 60.72.609P | Drain pipe, bayonet with handle | 1 |
| 6 | 60.72.590 | Grease collector 1/1 *Hinging rack* | 1 |
| 7 | 6013.1210 | Tray, 1/2 GN, 100 mm (4") deep | 1 |
| 8 | 60.72.696P | Lid for tray, hole right side, GN1/2 | 1 |
| 9 | 60.72.745P | Lid for tray, hole left side, GN1/2 | 1 |
| 10 | 60.72.619 | Jerry can 10l (2,64USGAL) | 1 |


# Pos. 8 VarioSmoker

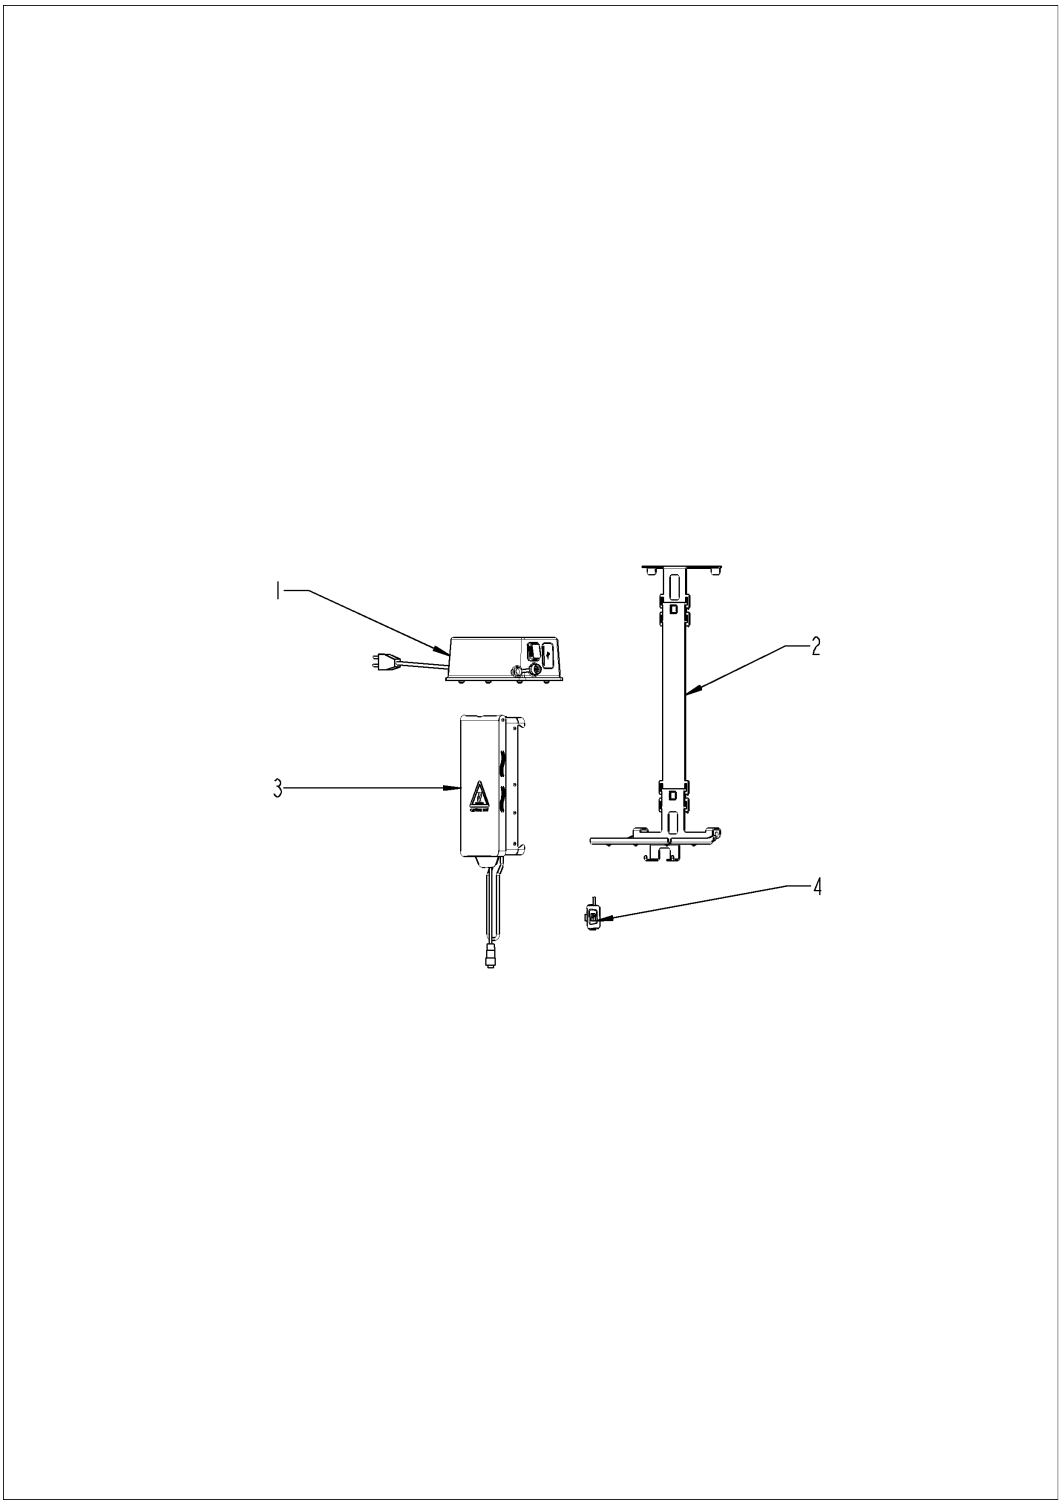

# Pos. 8 VarioSmoker

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.75.368P | Power supply for VarioSmoker *US* | 1 |
| 1 | 60.75.372P | Power supply for VarioSmoker *EU* | 1 |
| 1 | 60.75.374P | Power supply for VarioSmoker *UK* | 1 |
| 1 | 60.75.376P | Power supply for VarioSmoker *AU, NZ* | 1 |
| 1 | 60.75.378P | Power supply for VarioSmoker *CH* | 1 |
| 1 | 60.75.386P | Power supply for VarioSmoker *BRA* | 1 |
| 1 | 60.77.643P | Power supply for VarioSmoker *ARG* | 1 |
| 2 | 60.76.115S | Mounting device kit for VarioSmoker | 1 |
| 3 | 60.76.691P | Smoking box for VarioSmoker | 1 |
| 4 | 40.06.837P | Interface cable USB VarioSmoker | 1 |


# Pos. 9 Stands

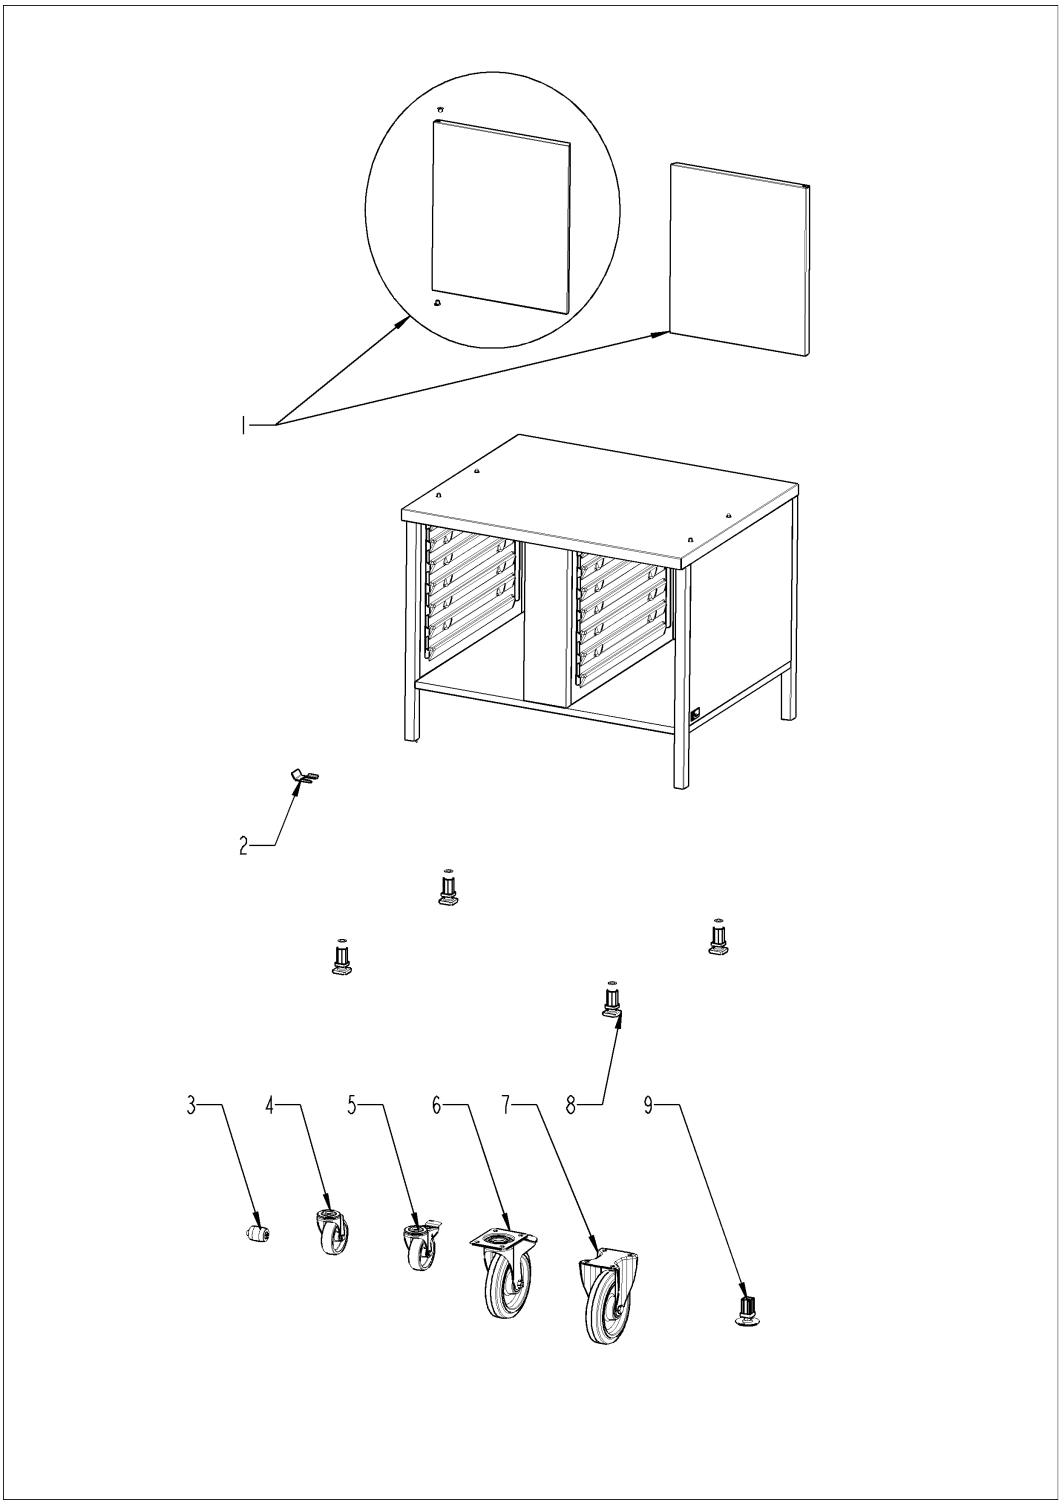

# Pos. 9 Stands

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.811S | Door 1/1 | 1 |
| 2 | 60.31.648P | Castor brake | 1 |
| 3 | 60.76.291P | Castor for levelling kit | 1 |
| 4 | 60.75.365P | Castor, 100mm without brake | 1 |
| 5 | 60.75.366P | Castor, 100mm with brake | 1 |
| 6 | 60.73.162S | Castor without brake D=200 | 1 |
| 7 | 60.73.163S | Castor with brake ø200mm | 1 |
| 8 | 60.31.283P | Foot adjustable,30x30 | 1 |
| 9 | 60.31.351P | Stainless steel base | 1 |


# Pos. 10 Heat shield

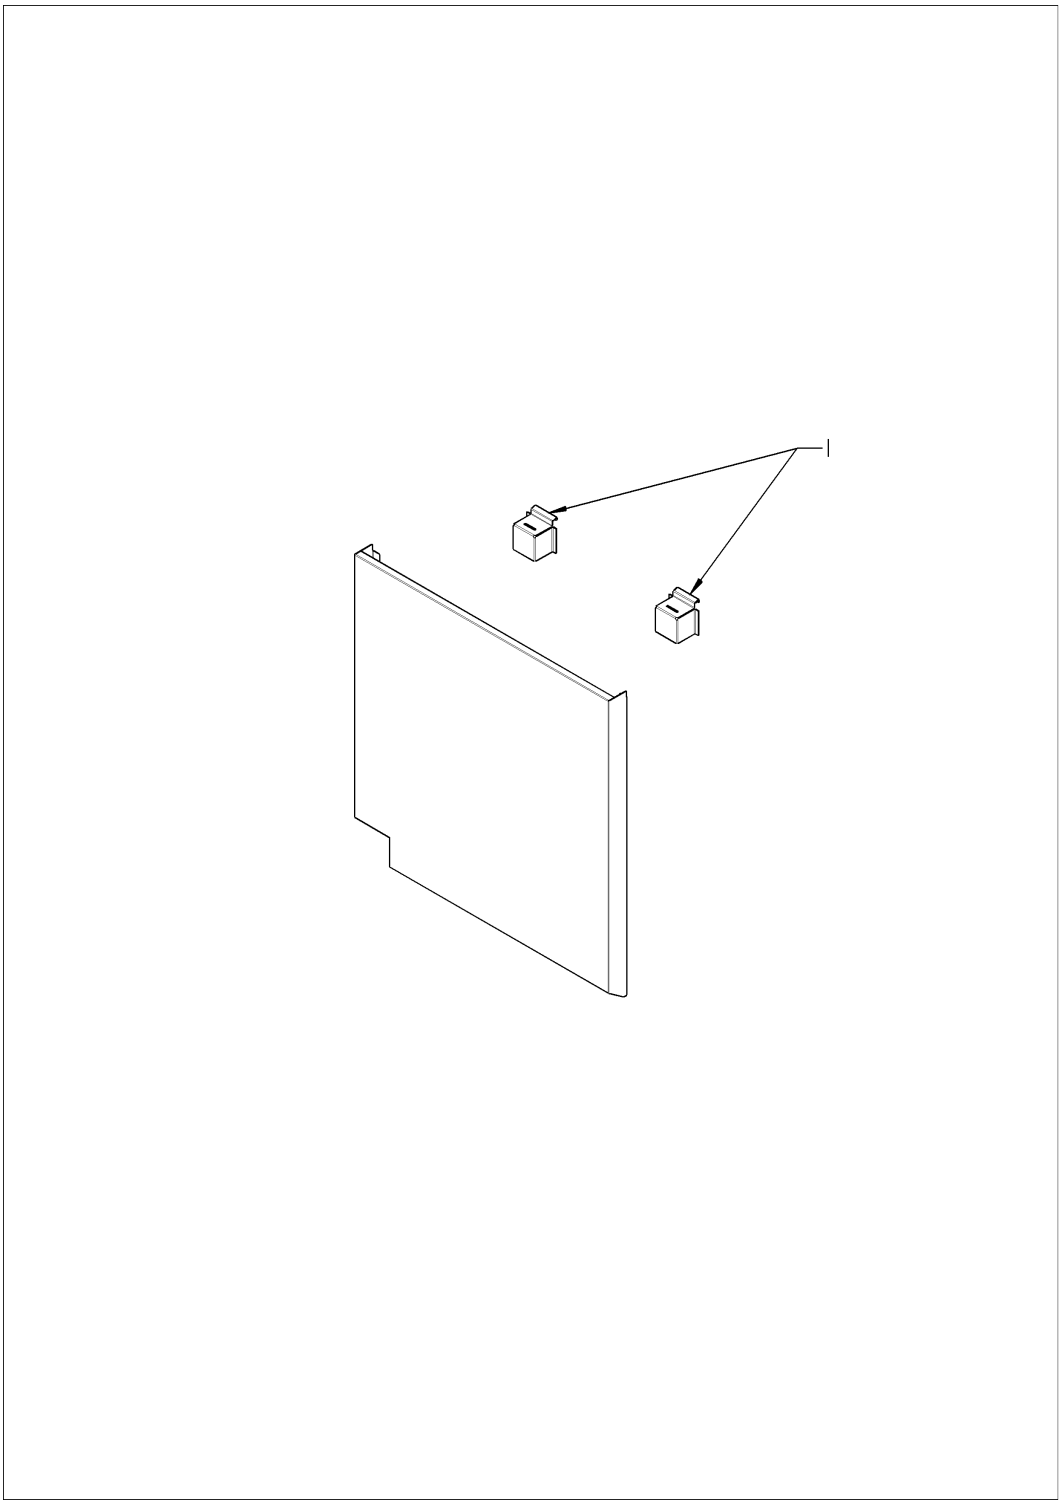

# Pos. 10 Heat shield

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.75.111P | heat shield holder top | 1 |


# Pos. 11 Flow guard

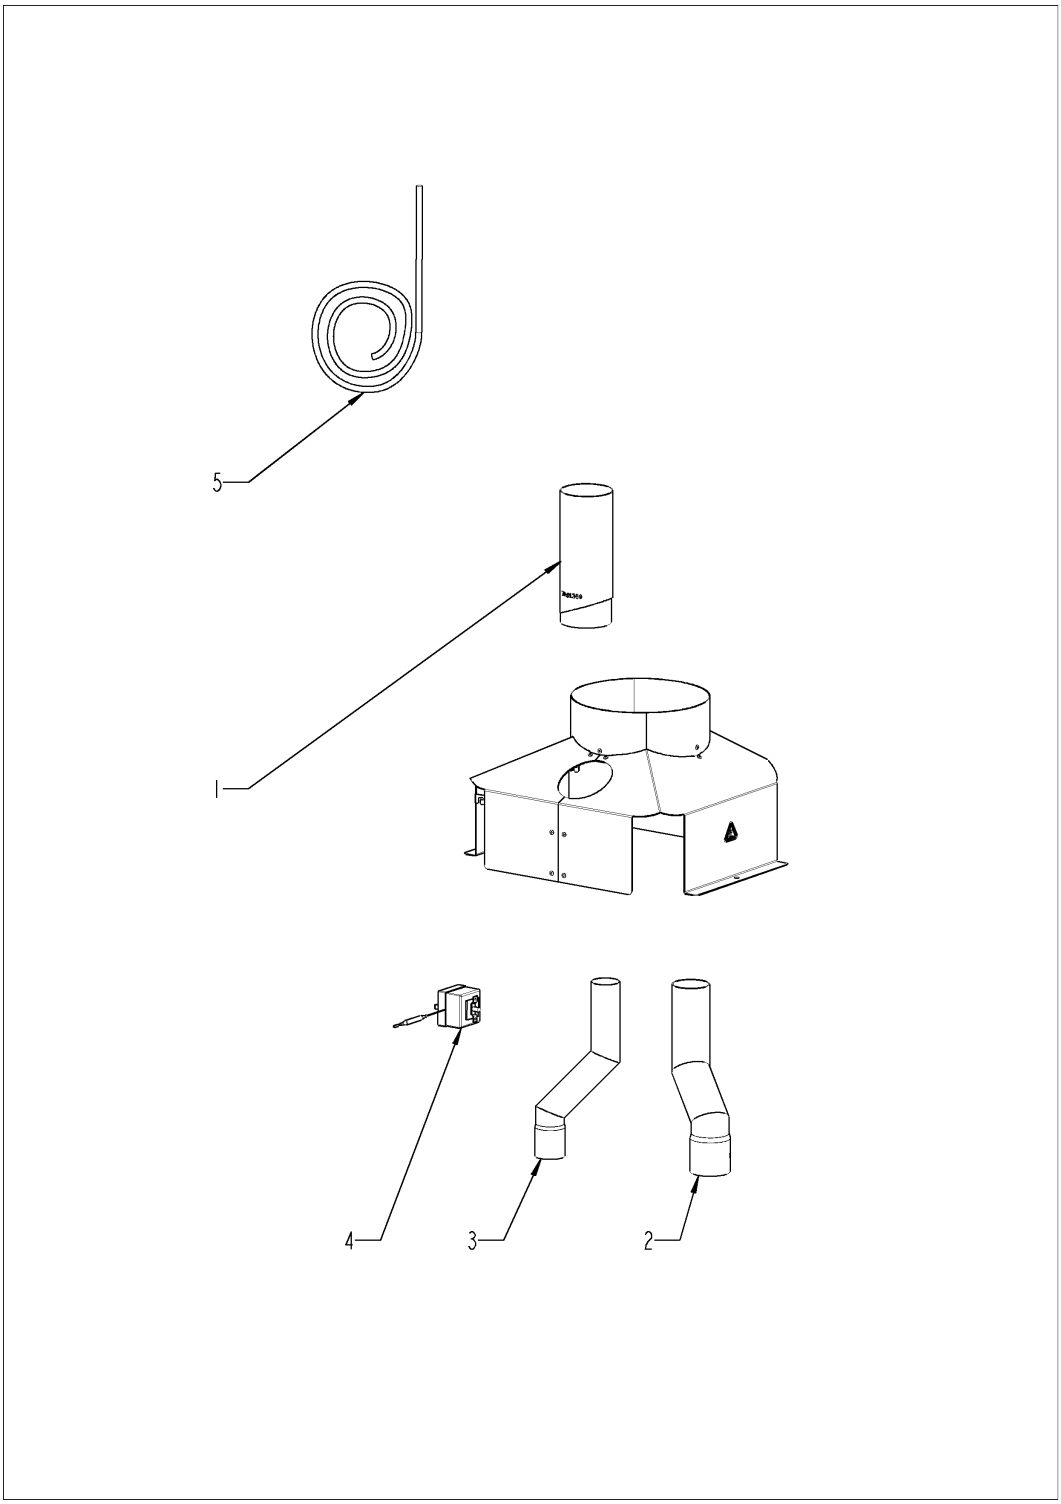

# Pos. 11 Flow guard

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 70.01.369P | Ventilation pipe extension | 1 |
| 2 | 70.01.372P | Exhaust pipe (Draft diverter) | 1 |
| 3 | 70.01.373P | Exhaust pipe (Draft diverter) | 1 |
| 4 | 40.04.158P | Safety temperature limiter 103°C | 1 |
| 5 | 40.07.249S | Cable draft diverter B13 | 1 |


# Pos. 12 Transport trolley

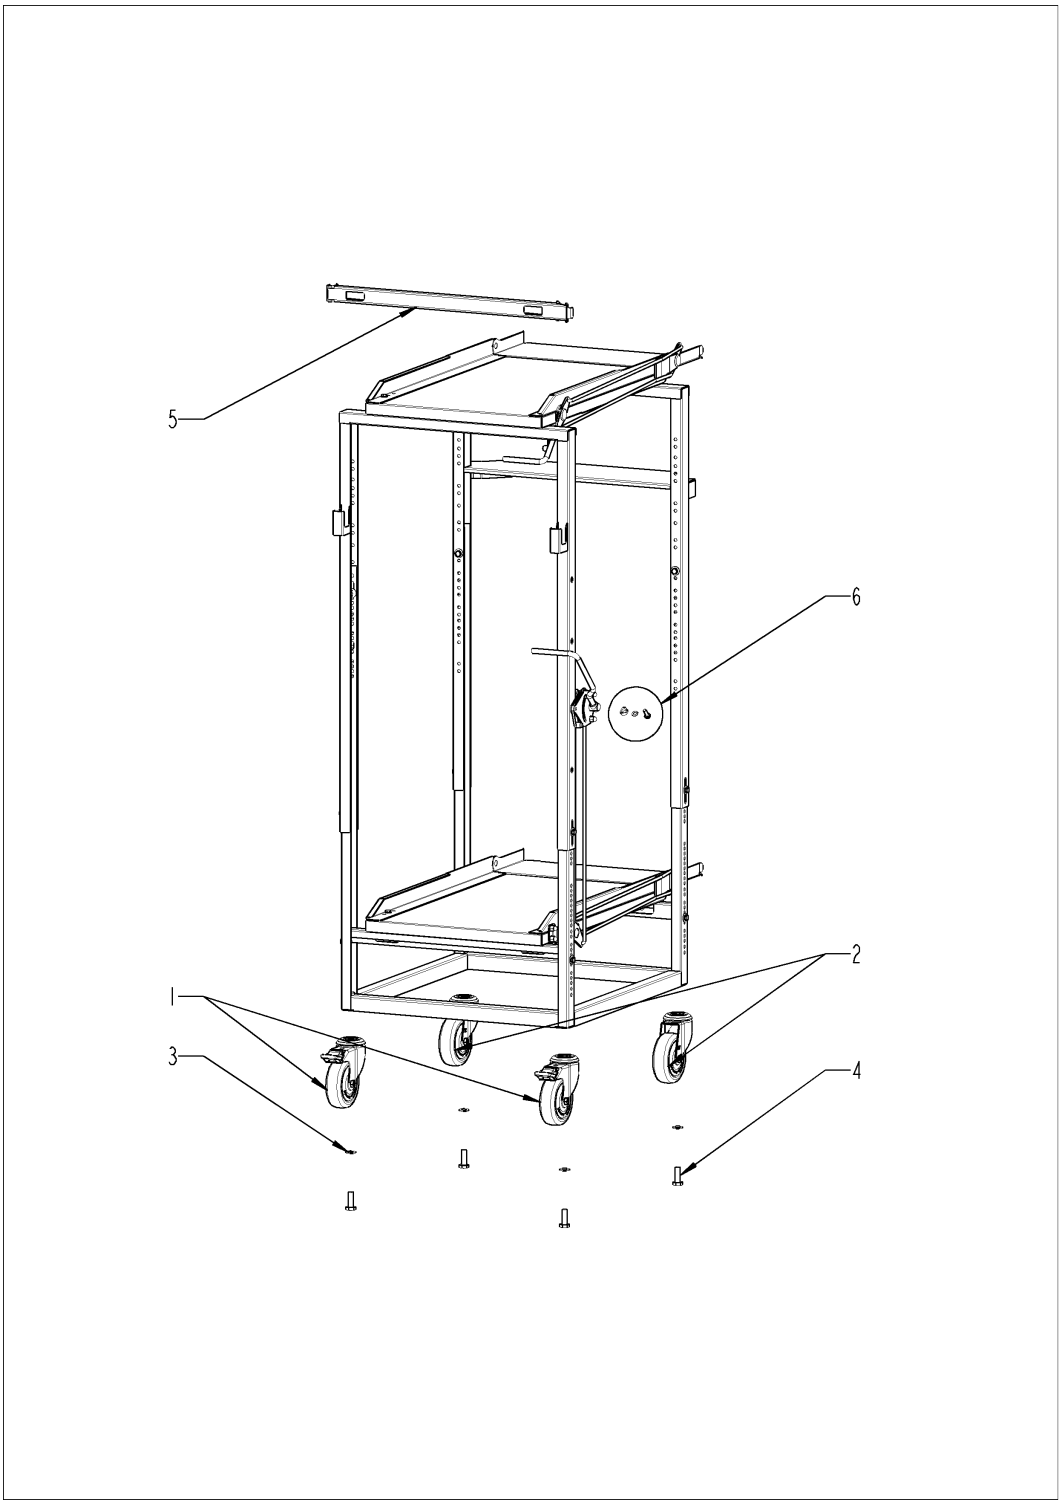

# Pos. 12 Transport trolley

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 60.73.531P | Castor with brake ø100mm | 2 |
| 2 | 60.73.532P | Castor without brake ø100mm | 2 |
| 3 | 1310.0160P | Washer A10,5 | 4 |
| 4 | 1010.0761P | Hex screw M10x30 | 4 |
| 5 | 60.75.060P | Handle for mobile oven rack | 1 |
| 5 | 60.77.486P | Handle for transport trolley | 1 |
| 6 | 60.76.540S | Bush for transport trolley | 1 |

# Pos. 20 Repair and retrofit kit

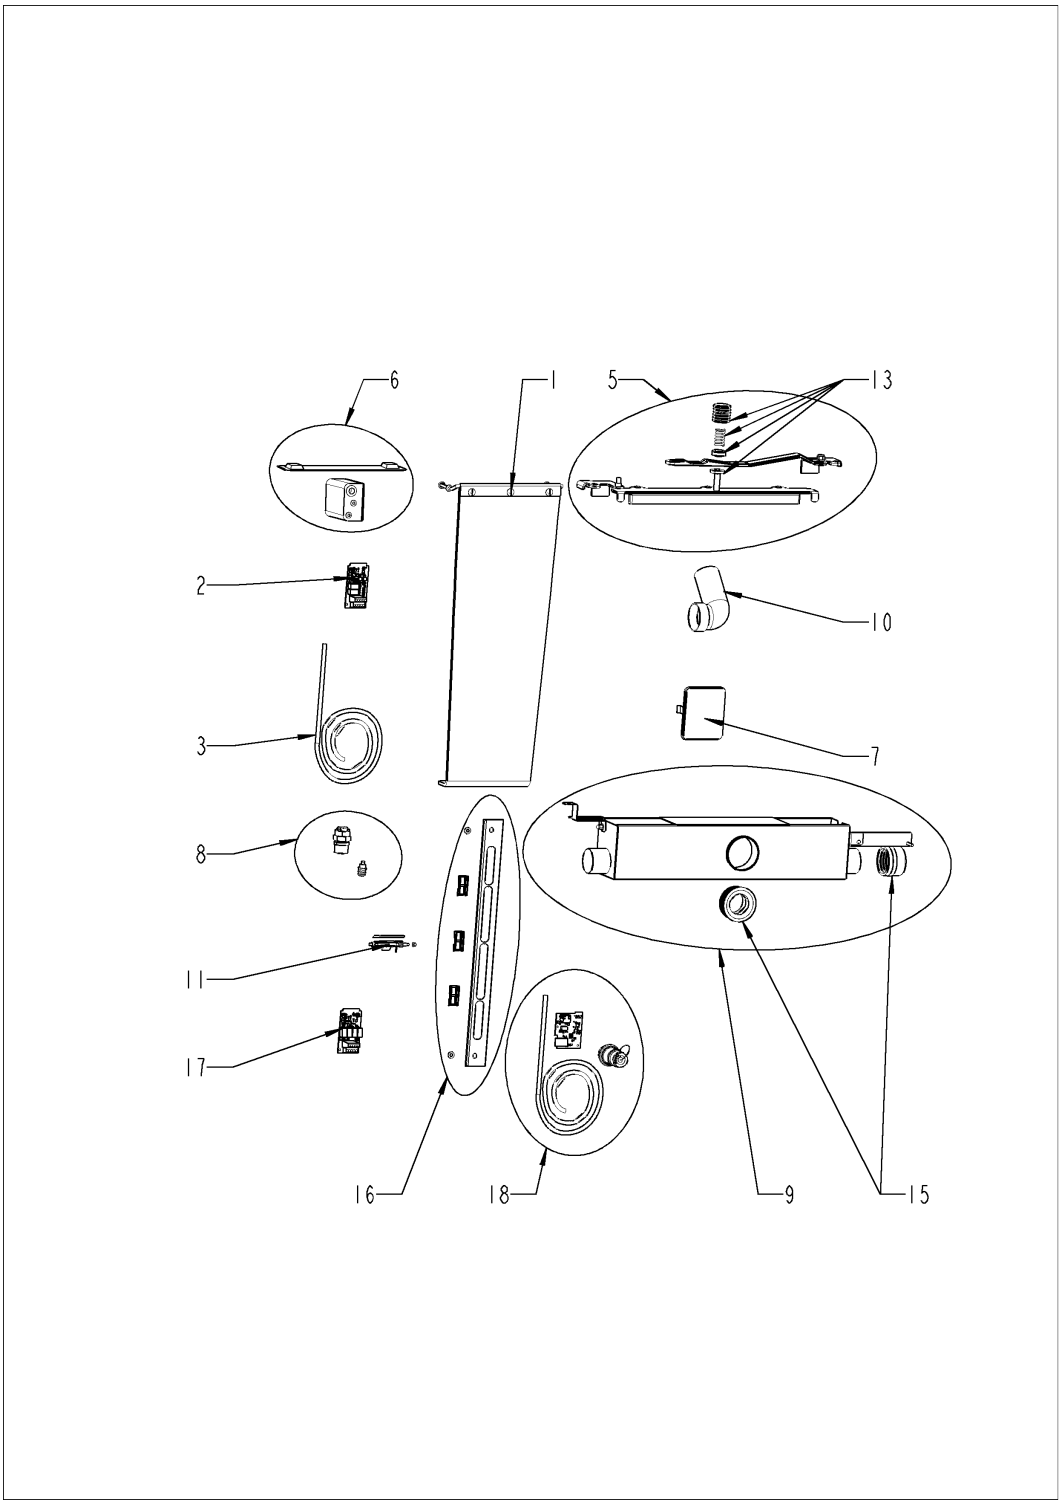

# Pos. 20 Repair and retrofit kit

| Pos. | Part no. | Description | Qty. |
|---|---|---|---|
| 1 | 87.01.866S | Retrofit kit *Collision protection* | 1 |
| 5 | 87.01.779S | Door arrester | 1 |
| 6 | 60.76.876 | Extension set for USB core temperature probe | 1 |
| 7 | 87.01.790S | Conversion kit blind cover for hand shower | 1 |
| 8 | 60.77.082 | Second water connection for filling the hand shower. | 1 |
| 9 | 56.01.809P | Waste water box | 1 |
| 10 | 87.01.897 | Retrofit kit waste water piping DN90 | 1 |
| 11 | 87.01.917S | Repair kit, drain valve | 1 |
| 13 | 87.01.996S | Door arrester service kit | 1 |
| 15 | 87.02.004S | Waste water box service kit | 1 |
| 16 | 40.07.586S | LED optics HD | 1 |
| 17 | 87.01.816S | Retrofit kit 4-fold relay | 1 |
| 18 | 87.02.032S | Retrofit kit interface Lan / Wlan | 1 |